

 


Attn: Christy

Dancin' Debbie

INSTRUCTIONS

Contents:

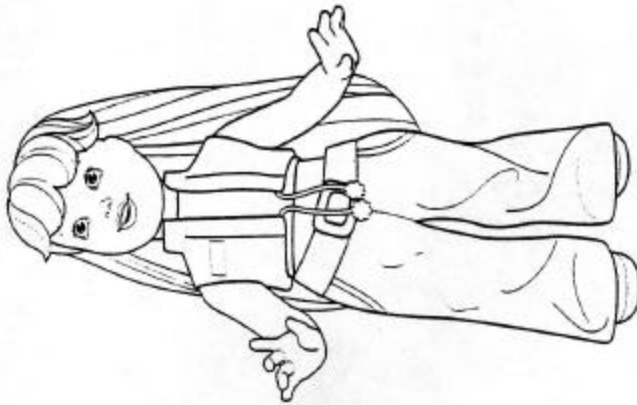

Please remove everything from the package and compare to the contents shown here. If any items are missing, please call 1-800-524-TOYS.

Keep these instructions for future reference as they contain important information. **ADULTS NOTE:** Cut the plastic attachments with scissors and discard pieces.

Requires 4 "AAA" and 4 "C" alkaline batteries (not included).

4+

© 2000 Mattel, Inc., El Segundo, CA 90245 U.S.A. All Rights Reserved

For best results:

1. Keep the controller at 10 feet or less from the doll for best performance.
2. Operating multiple dolls with the same frequency in close proximity will cause interference and poor performance.
3. Works best away from high voltage power lines, large buildings, and walls.
4. When the doll does not respond, slows down, or the volume decreases, replace the batteries.

THIS DEVICE COMPLIES WITH PART 15 OF FCC RULES. OPERATION OF THIS DEVICE IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE.

(2) THIS DEVICE MUST ACCEPT ANY HARMFUL INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

This device generates and uses radio frequency energy, and if not used properly, may cause interference to radio and television reception. It has been tested and found to comply with the limits set by the FCC, which are designed to provide reasonable protection against such interference.

Caution: FCC Regulations state that changes or modifications to this product not expressly approved by the party responsible for compliance may void the user's authority to operate the equipment.

90 DAY LIMITED WARRANTY

Mattel, Inc. warrants to the original consumer purchaser that this product will be free of defects in material or workmanship for ninety days (unless specified in alternate warranties) from the date of purchase. If defective, return the product along with proof of the date of purchase, postage prepaid, to Consumer Adjustment Center, 15930 E. Valley Boulevard, City of Industry, California 91744 for replacement or refund at our option. This warranty does not cover damage resulting from unauthorized modification, accident, misuse, or abuse. Valid only in U.S.A. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Send only the product to the address above. Send all correspondence to Consumer Relations, Mattel, Inc., 333 Continental Blvd., El Segundo, California 90245-5012, U.S.A. Or you may phone us toll-free at 1-800-524-TOYS, Monday - Friday, 8:00 a.m. - 6:00 p.m. Eastern Time. See telephone directory for Mattel listing.

WARNING:

CHOKING HAZARD - Small parts.
Not for children under 3 years.

CONSUMER INFORMATION

YOU CAN TELL IT'S MATEL! CALL us toll-free or write with any comments or questions about our products or service. Monday-Friday 8:00 a.m. - 6:00 p.m. Eastern Time. (Outside U.S.A. - see telephone directory for Mattel listing)



Consumer Relations, Mattel, Inc.
333 Continental Blvd.
El Segundo, CA 90245 USA

1 (800) 524-TOYS

WE ARE DEDICATED TO QUALITY PRODUCTS.

INSTALL BATTERIES

Controller Batteries

1. Swing belt clip up.
2. Unscrew battery door screw with Phillips screwdriver (not included), and remove door.
3. Insert four (4) "AAA" alkaline batteries as shown. Replace door.

 
Doll Batteries

1. Lift doll's pant legs to change batteries. Replace batteries when motion slows or sound becomes garbled.
2. Unscrew and remove battery door. Raise holder. Insert "C" alkaline battery.
3. Lower the holder and insert second "C" alkaline battery. Replace door. Repeat for other leg.

BATTERY SAFETY INFORMATION:

1. Non-rechargeable batteries are not to be recharged.
2. Rechargeable batteries are to be removed from the product before they are charged.
3. If removable rechargeable batteries are used, they are only to be charged under adult supervision.
4. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
5. Do not mix old batteries and new batteries.
6. Only batteries of the same or equivalent type as recommended are to be used.
7. Be sure to insert batteries with the correct polarities and always follow the toy and battery manufacturers' instructions.
8. Exhausted batteries are to be removed from the product.
9. The supply terminals are not to be short-circuited.
10. Dispose of batteries safely.

LET'S PLAY!

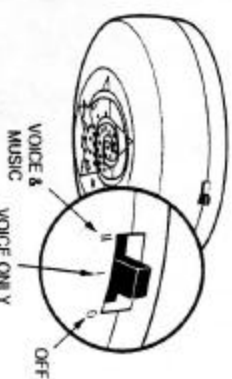

Be sure that controller is within 10 feet of doll.



 
ON/OFF BUTTON

Push button inward on back of doll to activate toy.


Doll will go into "sleep mode" after approximately 3 to 4 minutes of non-play. To re-animate doll, push button to "OFF" position, then push button once again to turn doll back on. Push button to "OFF" position if you expect to not play with the doll for an extended period of time. Take batteries out of doll in the event of an even longer period of non-play.



Clip controller to your waist and when you dance, Dancin' Debbi will dance. For best results, make sure the controller is clipped on horizontally straight as shown in the photo above.

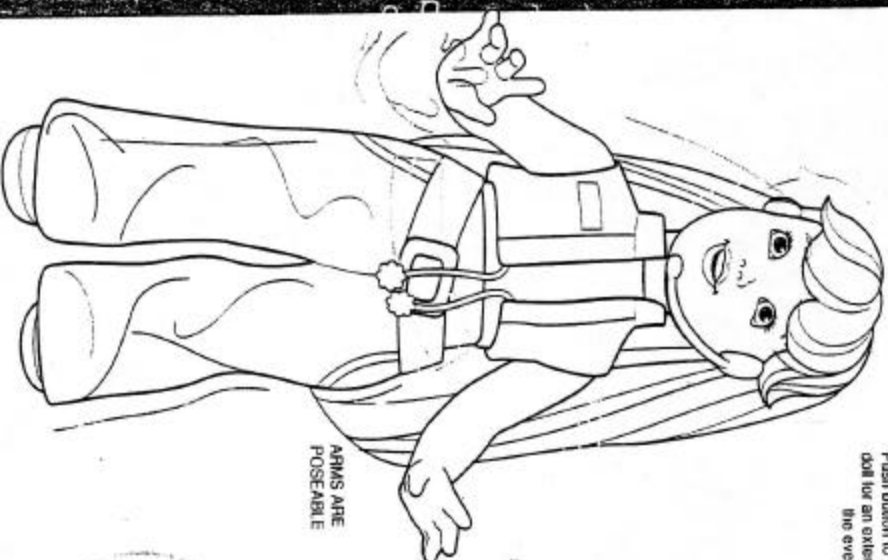

ARMS ARE POSEABLE

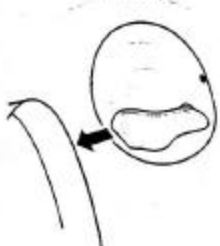 

CLIP TO YOUR PANTS, SKIRT OR BELT

