


FRONT OF MICROWAVE OVEN DOOR OPEN

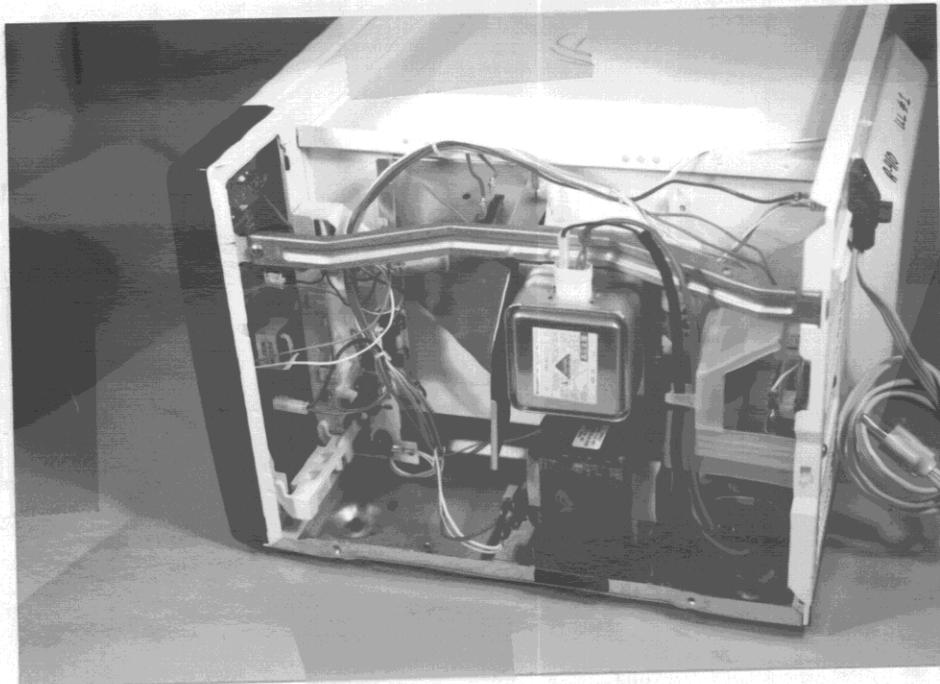

RIGHT SIDE OF MICROWAVE OUTERCASE REMOVED