

Draft

S1

INSTRUCTION MANUAL ' 16.●

Package Contents

↓ [Package Contents](#)

Package Contents

- Handset (S1)
 - Battery is built into handset.
 - Handset back cover is not removable.
- Warranty

Charging Handset

Battery is built into handset.

↓ [Internal Battery](#)

↓ [About Charging](#)

↓ [AC Charger](#)

↓ [Charging by PC](#)

Internal Battery

A lithium-ion battery is built into handset; it is not removable.



Recycling

This product requires a lithium-ion battery. Lithium-ion batteries are recyclable. To recycle a used lithium-ion battery, take it to any shop displaying the recycling symbol.



Li-ion00



モバイル・リサイクル・ネットワーク
携帯電話・PHSのリサイクルにご協力を。



Battery Cautions

Battery Care

To help maintain performance and life of Internal Battery, do not store in the following conditions (battery level should be at approximately 40% for optimal storage).

- Full (immediately after charging is complete)
- Exhausted (too low to power on handset)

Bulges of Internal Battery

Depending on usage, bulges may appear near end of battery life; this does not affect safety.

Internal Battery Replacement

Internal Battery is a consumable item; may need to be replaced if operating time shortens noticeably. Internal Battery is not user replaceable; its replacement incurs fees and requires handset submission to a Y! Mobile Shop or other appropriate servicer. For details, contact a Y! Mobile Shop or Y! Mobile Customer Support, [General Information](#).

About Charging

The following charging options are available.

Charging Option	Description
AC Charger	Connect handset and AC Charger (optional accessory) directly.
USB charging	Connect handset and a PC with Micro USB Cable (optional accessory).



Charging/Notification Lamp

Charging/Notification Lamp illuminates red while charging; illuminates green when charge is almost full.

Charging/Notification Lamp goes out when charge is full.

- If Charging/Notification Lamp is blinking, charging is not working properly. Make sure that you are using Charger and products specified by Y! Mobile Corp. If you are using specified products only, contact a Y! Mobile Shop or Y! Mobile Customer Support, [General Information](#).



Charging Cautions

Water Resistance

AC Charger (optional accessory) and Micro USB Cable (optional accessory) are not waterproof. Never connect Micro USB plug while handset or Charger is wet.

Handset is water resistant; however, if Micro USB plug is inserted while it is wet, liquid (tap water, beverage, sea water, pet urine, etc.) or a foreign object adhered to handset or Micro USB plug may cause overheating, burnout, fire, malfunction, burns, etc. due to electric shock, short-circuiting, etc.

Handling Cables

Do not pull, bend, or twist cable; may damage the cable.

About Charging Abroad

Y! Mobile Corp. is not liable for problems resulting from charging handset abroad.

 
AC Charger

AC Charger is an optional accessory. Be sure to use SB-AC12-HDQC (SoftBank SELECTION Qualcomm® Quick Charge™ 2.0 AC Adaptor for smartphones) or SB-AC13-HDMU (Micro USB, 1.0 A) specified by SoftBank Corp.

For information on other peripheral devices, see SoftBank Website.


The following explains how to charge handset using SB-AC12-HDQC (SoftBank SELECTION Qualcomm® Quick Charge™ 2.0 AC Adaptor for smartphones).

- See User Guide for corresponding AC Charger.
- Never connect Micro USB plug while handset or AC Charger is wet.

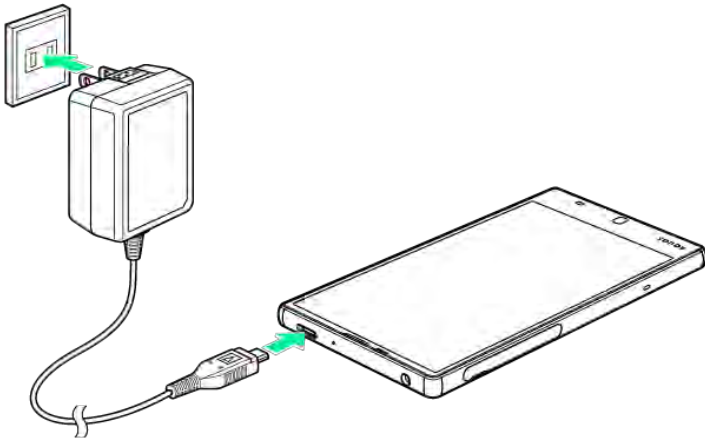

1

 Insert Micro USB plug of AC Charger into External Device Port

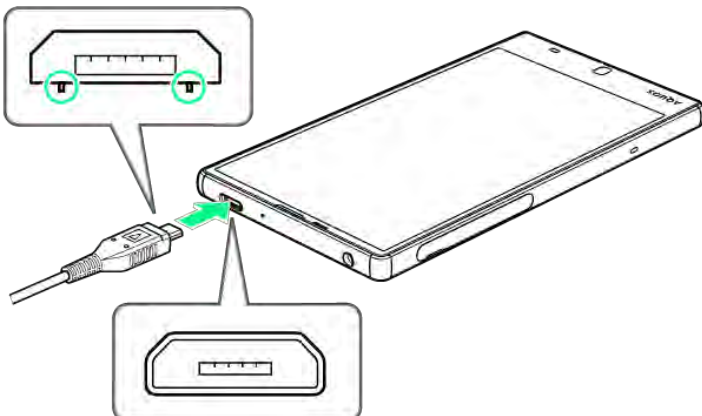

- Insert Micro USB plug in correct orientation; otherwise, External Device Port may be damaged. Check contours and orientation of Micro USB plug, then insert it with tabs (O) facing down.

2

Extend blades and plug AC Charger into AC outlet

 Charging starts and Charging/Notification Lamp illuminates.

- Charging/Notification Lamp goes out when charge is full.

 
3

After charging, remove Micro USB plug from External Device Port, then unplug AC Charger and retract blades

Charging by PC


Connect handset to a PC with Micro USB Cable (SHDDL1; optional accessory).

- Make sure that PC is turned on.
- Charging may not be possible/take a long time depending on connection and PC conditions.
- Never connect Micro USB plug while handset or Micro USB Cable is wet.

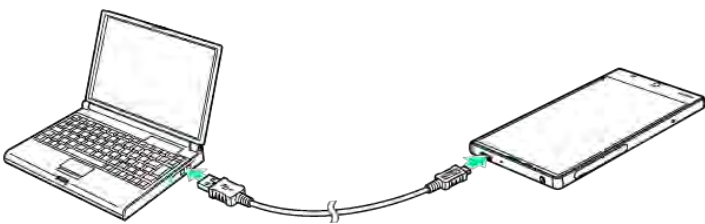

1

 
Insert Micro USB plug of Micro USB Cable into External Device Port

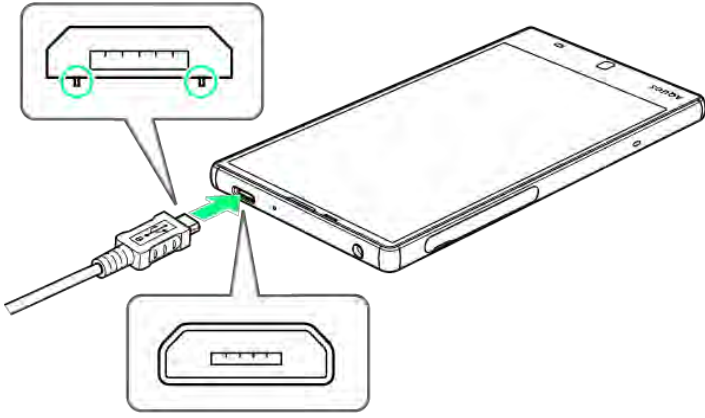

- Insert Micro USB plug in correct orientation; otherwise, External Device Port may be damaged. Check contours and orientation of Micro USB plug, then insert it with tabs (O) facing down.

2

 Insert USB plug of Micro USB Cable into PC USB port

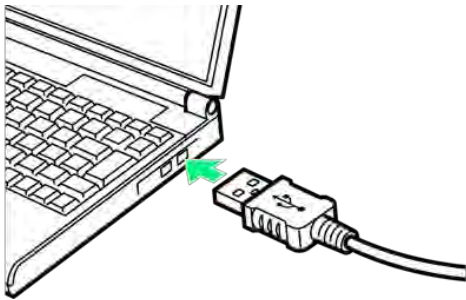

 Charging starts and Charging/Notification Lamp illuminates.

- Charging/Notification Lamp goes out when charge is full.

3

After charging, remove Micro USB Cable from handset and PC

Specifications

↓ Handset

↓ Materials

Handset

Handset specifications are as follows.

- Times in the table vary with location, status, settings, etc.
- Display employs precision technology; however, some pixels may remain on/off.

Item	Description
Dimensions (W x H x D)	Approx. * * mm x * * * mm x * . * mm (without protruding parts)
Weight	Approx. * * * g
Maximum Output	3G: 0.25 W GSM (850 MHz, 900 MHz): 2 W GSM (1800 MHz, 1900 MHz): 1 W 4G: 0.2 W
Internal Battery Capacity	2,400 mAh
Continuous Talk Time¹	3G: Approx. * * * minutes GSM: Approx. * * * minutes VoLTE: Approx. * * * minutes
Continuous Standby Time²	3G: Approx. * * * hours GSM: Approx. * * * hours 4G (AXGP Network): Approx. * * * hours 4G (FDD-LTE Network): Approx. * * * hours
Charging Time⁴	AC Charger (SB-AC12-HDQC) ⁵ : Approx. * * * minutes AC Charger (SB-AC13-HDMU; Micro USB, 1.0 A): Approx. * * * minutes
Maximum Transmission Speed⁶	SoftBank 4G: 165 Mbps in downlink, 10 Mbps in uplink SoftBank 4G LTE: 187.5 Mbps ⁷ in downlink, 37.5

Mbps in uplink

- 1 Average measured with handset fully charged, in strong signal conditions at rest.
- 2 Average measured with handset fully charged, without calls or operations, in strong signal conditions at rest, and with data communication and Urgent News disabled. May vary with battery strength, ambient temperature, settings, etc.
- 3 Calculated in full-screen landscape mode, with Brightness level set to medium, with Earphones with Mic (optional accessory), and volume at maximum, starting from handset fully-charged and continuing until 10% remaining battery charge.
Usable time may vary with radio signal conditions and the content played.
- 4 Measured with power off using AC Charger.
- 5 SB-AC12-HDQC (SoftBank SELECTION Qualcomm® Quick Charge™ 2.0 AC Adaptor for smartphones)
- 6 Provided on a best-effort basis; transmission speed may decrease or transmission may become unavailable due to traffic conditions, network environment, etc. In addition, transmission speed varies by area.
- 7 Scheduled to be available on an area-by-area basis. Depending on area, maximum downlink speed is set to 150 Mbps, 112.5 Mbps, 75 Mbps, or 37.5 Mbps or less.

Materials

Parts	Materials Used/Surface Finish
Display	Tempered glass
Shatterproof Film	Polyester/AF coating
Periphery of Display	Aluminum/anodizing
Cabinet for Black	PC resin/coating, UV top coating
Cabinet for Pink, White and Turquoise	PC resin/indium deposition, UV top coating

Periphery of Back Surface	PA resin + GF/UV top coating
Power Key	Aluminum/anodizing
Volume Up/Down Key	Aluminum/anodizing
Receiver Screen	SUS/electrophoretic coating
Camera Window	Tempered glass/AF coating
USIM/Micro SD Card Slot Tray	PC resin + TPU/UV top coating
Card Slot Tray Gasket	Silicone
IMEI Tray	PET
Speaker Screen	Nylon resin/water-repellent treatment
External Device Port	SUS/tin plating

Warranty & After-Sales Service

↓ [Warranty](#)

↓ [After-Sales Service](#)

Warranty

Handset purchase includes warranty.

- Check shop name and purchase date.
- Read warranty and keep in a safe place.
- Warranty period is given in warranty.

Cautions

Damages

Y! Mobile Corp. is not responsible for any damages for user or third party resulting from lost opportunities to make a call, etc. due to breakage, malfunction, or trouble of product.

Malfunction/Repairs

Information/settings on handset may be lost/changed due to malfunction or repairs. It is recommended that you keep a copy of Address Book contacts and other important information. Y! Mobile Corp. is not responsible for loss/change of data (contacts, images, sound, etc.) or settings due to malfunction, repairs, change of model, or any other handling.

Disassembly/Modification

Disassembly/modification of handset is prohibited under the Radio Law. Note that handset cannot be accepted for repairs if modified.

Adhering stickers, etc. on Display or Keys or adhering decorations with glue, etc. may be deemed to be modifications, and prevent acceptance of handset for repairs.

After-Sales Service

To request repairs, contact [Customer Service](#) or a nearby Y! Mobile Shop. Have details of symptoms ready.

- During the warranty period, repairs are made under the terms and conditions of the warranty.

- After the warranty period, if handset can be repaired, repairs will be made at cost.



Further inquiries

For more information on after-sales service, contact a nearby Y! Mobile Shop or [Customer Service](#).

Customer Service

For Y! Mobile handset or service information, call General Information. For repairs, call Customer Assistance.

↓ [Y! Mobile Customer Support](#)

↓ [Smartphone Technical Support Center](#)

↓ [Y! Mobile Global Call Center](#)

Y! Mobile Customer Support



General Information

From a Y! Mobile handset, dial toll free at 151

From a landline/IP phone, dial toll free at 0570-039-151



Customer Assistance (Repairs/Lost Handsets)

From a Y! Mobile handset, dial toll free at 116

From a landline/IP phone, dial toll free at 0570-039-151

Smartphone Technical Support Center

From a Y! Mobile handset, dial toll free at 151

From a landline/IP phone, dial toll free at 0570-039-151

Y! Mobile Global Call Center

From outside Japan, dial +81-4-4382-0800

If handset is lost/stolen, call this number immediately (international charges apply)

Safety Precautions

Read Safety Precautions before using handset.

Observe precautions to avoid injury to self or others, or damage to property.

Y! Mobile Corp. is not liable for any damages resulting from use of this product.

↓ [Safety Precautions](#)

↓ [Handset, USIM Card, Charger \(Optional Accessory\), Micro USB Cable \(Optional Accessory\), SD Card \(Optional Accessory\) \(Common\)](#)

↓ [Internal Battery](#)

↓ [Handset](#)

↓ [Charger \(Optional Accessory\)](#)

↓ [Handset Use & Electronic Medical Equipment](#)

Safety Precautions

These labels show degree of risk from improper use; learn them before reading on:

Label	Description
 DANGER	Great risk of death or serious injury
 WARNING	Risk of death or serious injury
 CAUTION	Risk of minor injury or damage to property

These symbols signify prohibited/compulsory actions; learn them before reading on:

Symbol	Description
 Prohibited	Prohibited actions
 Do Not Disassemble	Disassembly prohibited
 Avoid Liquids Or Moisture	Exposure to liquids prohibited

 Do Not Use Wet Hands	Use with wet hands prohibited
 Compulsory	Compulsory actions
 Disconnect Power Source	Unplug from outlet

Handset, USIM Card, Charger (Optional Accessory), Micro USB Cable (Optional Accessory), SD Card (Optional Accessory) (Common)

DANGER



Compulsory

Use specified Charger and Micro USB Cable only.

Non-specified equipment use may cause Internal Battery to leak, overheat, burst or ignite, and may cause Charger to overheat, ignite, malfunction, etc.



Do Not
Disassemble

Do not disassemble, modify or solder handset or related hardware.

May cause fire, injury, electric shock or malfunction. Internal Battery may leak, overheat, burst, ignite, etc.

Modifying handsets is prohibited by the Radio Law and subject to penalty.



Avoid Liquids
Or Moisture

Do not wet internal handset parts or Charger.

If liquid (water, pet urine, etc.) enters handset, leaving wet or charging while wet may cause overheating, electric shock, fire, injury, malfunction, etc.

Use only as directed.



Prohibited

Do not charge, use, or leave handset or related hardware in extreme heat (fire, heat sources, direct sunlight, inside vehicles in the hot sun, etc.).

Do not charge, leave, use, or be carrying handset or related hardware in a warm place or where

heat collects, such as under a kotatsu (blanketed warming table) or electric blanket, next to a kairo (worn warming patch), etc.

May cause warping/malfunction; Internal Battery may leak, overheat, ignite or burst. Handset or related hardware may become hot to the touch, leading to burns or other problems.



Prohibited

Do not force Charger into handset.

Check Micro USB plug orientation; retry.

Internal Battery may leak, overheat, burst, ignite, etc. May damage or burn out External Device Port.



Prohibited

When handset is connected to Charger, do not apply excessive force by stomping or in any other way.

When Port or connector is damaged, charging may cause malfunction or fire. Charge as directed.



WARNING



Prohibited

Do not place handset or Charger in/on ovens, microwave ovens, pressure cookers, induction stoves or other cooking appliances.

Internal Battery may leak, overheat, burst or ignite. Handset/Charger may overheat, emit smoke, ignite, malfunction, etc.



Compulsory

Keep handset off and Charger disconnected near gas stations or places with fire/explosion risk.

May ignite gas. Turn off any NFC (including Osaifu-Keitai®) compatible mobile phone when using gas station facilities (If NFC (including Osaifu-Keitai®) is locked, unlock before turning mobile phone off).



Prohibited

Do not drop/throw or subject to strong impact.

Internal Battery may leak, overheat, burst or ignite, resulting in fire, electric shock, malfunction, etc.



Compulsory

If you notice unusual sound/odor, smoke or any other abnormality, follow these steps.

1. Grasp plug and disconnect Charger.

Handset or related hardware may be hot to the touch; remove handset from Charger, being careful not to burn yourself.

2. Power off, being careful not to burn or injure yourself.

Use in an abnormal condition may cause fire, electric shock, etc.



Prohibited

Keep External Device Port or Earphones-Microphone Port away from liquids (tap water, beverage, sea water, pet urine, etc.) and conductive materials (pencil lead, metal strip/jewelry, hairpin, etc.).

Also, do not let liquids or conductive materials enter External Device Port or Earphones-Microphone Port.

May cause fire, burns, malfunction, etc. due to short-circuiting.

IPX is a standard for water/dust protection; however, compliance with this standard does not mean that short-circuiting due to adhesion of a foreign object or liquid can be prevented.

Handset water resistance does not provide protection from sea water, pool water, hot water, etc. When a foreign object or liquid adheres, remove it thoroughly before charging.



Prohibited

Never connect Micro USB plug while handset or Charger is wet.

Handset is water resistant; however, if Micro USB plug is inserted while it is wet, liquid (tap water, beverage, sea water, pet urine, etc.) or a foreign object adhered to handset or Micro USB plug may cause overheating, burnout, fire, malfunction, burns, etc. due to electric shock, short-circuiting, etc.



Prohibited

Do not expose handset or related hardware to hot air from dryers or other sources to dry them or for other purposes. Avoid saunas or hot water.

Internal Battery may leak, overheat, burst or ignite. Handset/Charger may overheat, emit smoke, ignite, malfunction, etc.



CAUTION



Prohibited

Do not place handset or related hardware on unstable surfaces; take added care when vibration is set or while charging.

Handset or related hardware may fall, resulting in injury, malfunction, etc. A fall while charging may cause damage to connector.



Prohibited

When removing Charger from handset, hold by Micro USB plug and do not pull cord/cable.
Pulling plug by cord/cable may damage cord/cable or connector and cause fire, electric shock, etc.



Compulsory

For any skin irritation associated with use, discontinue use and consult a doctor.
Metal and other materials may cause skin irritation, rashes, or itchiness depending on your physical condition.



Prohibited

Do not touch handset or Charger for long periods during charging.
May cause low-temperature burns.



Compulsory

Keep handset and related hardware away from infants and pets.
Infants and pets may choke from swallowing handset or related hardware or be injured, etc.



Compulsory

For use of handset/related hardware by child, explain instructions and supervise use.
Misuse may cause injury or other problems.

Internal Battery



DANGER

Confirm battery type; use/dispose of Internal Battery accordingly.

Symbol on Label	Battery Type
Li-ion00	Lithium-ion



Prohibited

Do not dispose of handset in fire.
Internal Battery may leak, burst, ignite, etc.



Prohibited

Do not damage (nail, hammer, stomp, etc.) handset or subject it to strong impact.

Internal Battery may leak, overheat, burst, ignite, etc.



Compulsory

If battery fluid gets in eyes, do not rub; rinse with clean water and consult a doctor immediately.

Eyes may be severely damaged.



WARNING



Compulsory

If battery fluid contacts skin or clothes, discontinue handset use and rinse with clean water immediately.

May cause skin damage.



Compulsory

If charging continues even after specified Charging Time, stop charging.

Internal Battery may leak, overheat, burst, ignite, etc.



Compulsory

For abnormal odor, excessive heat, discoloration or distortion, move handset away from sources of flame, being careful not to burn or injure yourself.

Continued use may cause Internal Battery to leak, overheat, burst, ignite, etc.



Compulsory

Do not let your pet bite handset; if this occurs, do not use that handset.

Pet bites may cause Internal Battery to leak, overheat, burst or ignite. May cause handset/related hardware to malfunction, or fire may result.



CAUTION



Prohibited

Do not dispose of handset with ordinary refuse.

Battery is built into handset; take handset to a nearest Y! Mobile Shop for appropriate disposal.

Handset

WARNING



Prohibited

Handset Display, back surface and Camera use tempered glass. Do not subject to shock (dropping, etc.) or excessive force.

May cause Display, back surface or Camera to break and scatter sharp pieces. If Display or Camera breaks, be careful not to directly touch shards or broken parts. May cause injury.



Prohibited

Do not use handset while driving or cycling.

Accidents may result.

Phone use while driving or cycling is prohibited by law and subject to penalty; park legally beforehand.



Compulsory

Power off near electronic devices that employ high precision control systems or weak signals.

May cause electronic malfunctions or other problems. Take added care near these devices: Hearing aids, implanted pacemakers/defibrillators and other electronic medical equipment; fire alarms, automatic doors and other automatic control devices.



Compulsory

Inside aircraft, follow airline instructions regarding handset use.

Radio waves from handset may interfere with flight safety.



Compulsory

Users with a heart condition should adjust ringtone vibration and volume as needed.

May cause heart damage.



Compulsory

If thunder is audible while outdoors, power off; find cover.

There is a risk of lightning strike or electric shock.



Prohibited

Do not shine Mobile Light in eyes.

May temporarily affect eyesight or startle, leading to accidents.



Prohibited

Do not cover/wrap handset with a cloth or blanket while charging. In addition, do not leave handset covered with a cloth or blanket when going to bed.

Heat may collect, resulting in fire, burns, malfunction, etc.

CAUTION



Prohibited

Do not use handset when it may affect a vehicle's electronic equipment.

Handset use inside vehicles may cause electronic equipment to malfunction, resulting in accidents.



Prohibited

Keep handset away from magnetic items (e.g., magnetic cards).

Data on bank cards, credit cards, telephone cards, floppy disks, etc. may be lost.



Compulsory

Handset may become hot during prolonged use in extreme heat (fire, heat sources, direct sunlight, inside vehicles, etc.), or in a warm place or where heat collects, such as under a kotatsu (blanketed warming table) or electric blanket, next to a kairo (worn warming patch), etc.

Prolonged contact with skin may cause low-temperature burns.



Compulsory

When using handset for an extended period (e.g., to play game applications) while charging, handset and Charger may become hot; avoid prolonged contact with hot parts.

May cause low-temperature burns or other problems.



Prohibited

Always maintain some distance from Speaker while ringtones, music or other handset sounds play.

Excessive volume may damage ears or hearing.



Compulsory

Moderate handset volume when using earphones.

Excessive volume may damage ears or hearing.

Charger (Optional Accessory)



WARNING



Prohibited

Do not cover/wrap Charger with a cloth or blanket while charging. In addition, do not leave Charger covered with a cloth or blanket when going to bed.

Heat may collect, resulting in fire, burns, malfunction, etc.



Prohibited

Use only the specified voltage.

Non-specified voltages may cause fire, malfunction, etc.

• AC Charger: AC 100 V - 240 V Input

Do not use power adapters designed for overseas travel. Transformer use may cause fire, electric shock or malfunction.



Disconnect
Power Source

Unplug Charger when not in use; grasp plug and disconnect it.

If a foreign object/liquid adheres to blades, or if blades get stomped while Charger is plugged in, electric shock, fire or malfunction may result.



Disconnect
Power Source

If liquid (water, pet urine, etc.) gets inside, grasp plug and disconnect Charger immediately.

May cause electric shock, smoke or fire.



Compulsory

To remove debris, grasp plug and disconnect Charger, then clean with a dry cloth.

Fire may result.



Compulsory

Plug Charger firmly into the outlet, keeping the plug and connector away from conductive material (pencil lead, metal strip/jewelry, etc.).

May cause fire, burns, malfunction, etc. due to electric shock or short-circuiting.



Do Not Use
Wet Hands

Do not touch Charger plug or connector with wet hands.

May cause electric shock, malfunction, etc.



Prohibited

Do not touch Charger if thunder is audible.

May cause electric shock or other problems.



Prohibited

Do not use Charger in high humidity or near water (in bathrooms, shower rooms, etc.).

May cause fire, electric shock or malfunction.



CAUTION



Disconnect
Power Source

Before cleaning, grasp plug and disconnect Charger.

May cause electric shock or other problems.



Compulsory

Always grasp plug (not cord/cable) to disconnect Charger.

Pulling plug by cord/cable may damage cord/cable and cause electric shock, fire, etc.



Compulsory

When Charger is connected to a power strip, do not apply excessive force by stomping or in any other way.

May cause fire or malfunction.



Prohibited

Do not subject Charger to strong impact while it is plugged in.

May cause malfunction or injury.



Prohibited

Keep hands and other body parts away from blades.

May cause burns, electric shock, injury or malfunction.

Handset Use & Electronic Medical Equipment

This section is based on "Guidelines for Use of Mobile Phones and Other Devices in Hospitals" (Electromagnetic Compatibility Conference, August 2014) and "Guidelines to safeguard implanted medical devices against radio emissions from the use of radio equipment" (Ministry of Internal Affairs and Communications).

WARNING



Compulsory

Persons with implanted pacemaker/defibrillator should keep handset more than 15 cm away.
Radio waves may interfere with implanted pacemakers or defibrillators.



Compulsory

Before using electronic medical equipment other than implanted pacemaker/defibrillator outside medical facilities, consult the vendor on radio wave effects.
Radio waves may interfere with electronic medical equipment.



Compulsory

If it may not be possible to keep handset 15 cm away from other persons (e.g., in a crowded situation where you cannot move freely), suspend signal-transmitting functions (e.g., by activating Airplane mode) or power off beforehand. If an application that automatically powers handset on is installed, disable that feature before powering off. Persons with implanted pacemaker/defibrillator may be near.
Radio waves may interfere with implanted pacemakers or defibrillators causing such devices to malfunction.



Compulsory

Observe these rules inside medical facilities to avoid effects of radio waves on electronic medical equipment:

- Follow instructions regarding mobile phone use within medical facilities.
- Always turn off handset within operating rooms, intensive care units (ICU), etc.
- Even in patient rooms, lobbies, or other locations where mobile phone use is permitted, keep handset at a reasonable distance away from electronic medical equipment.

Important Product Information

- ↓ [General Use](#)
- ↓ [Heat from Handset Use](#)
- ↓ [Camera](#)
- ↓ [In-Call/Transmission Cautions](#)
- ↓ [Urgent News \(Application\)](#)
- ↓ [Technical Regulations Conformity Certification](#)

General Use

- If your USIM Card or handset (with USIM Card inserted) is lost or stolen, suspend your service immediately. For details, contact Y! Mobile Customer Support, [General Information](#).
- Handset transmissions may be disrupted inside buildings, tunnels or underground, or when moving into/out of such places; may affect calls.
- Use handset without disturbing others.
- Handsets are radios as stipulated by the Radio Law. Under the Radio Law, handsets must be submitted for inspection upon request.
- Charging by USB takes longer than by household AC outlet. Charging may not be possible/take a long time depending on connection and computer conditions.
- Handset use near landlines, radios may cause interference.
- Beware of eavesdropping.

Because this service is completely digital, the possibility of signal interception is greatly reduced. However, some transmissions may be overheard.

 - Eavesdropping

Deliberate/accidental interception of communications constitutes eavesdropping.
- Beware of harmful/malicious websites. Take added care when posting personal information.
- Display uses liquid crystal.

When wearing polarized sunglasses and depending on the angle, the screen may appear dark or distorted.
- An export license may be required to carry handset into other countries if it is to be used by or transferred to another person. However, no such license is required when taking handset abroad for personal use on a vacation or business trip and then bringing it back.

Export control regulations in the United States provide that an export license granted by the US

government is required to carry handset into Cuba, Iran, North Korea, Sudan or Syria.

Heat from Handset Use

- Handset internal temperature may increase depending on usage or environment, causing handset to become warm. (Handset may stop charging or Display brightness may be adjusted for safety.) If handset continues to be used while warm, warning appears and handset powers off after approximately 3 minutes. Exit all applications and turn off Display to let handset cool down.
- Continuing to use Camera while handset is warm causes warning to appear, after which Camera saves captured image data and exits.

Camera

- Mind etiquette when using Camera.
- Test Camera before shooting special moments.
- Do not use Camera in places where shooting is prohibited.
- Shot images may not be used/transferred without copyright holder (photographer) permission, except for personal use.

In-Call/Transmission Cautions

- During calls/transmissions, calling/transmission charges/fees apply even if other functions or operations are simultaneously in use.
- Transmissions involving JavaScript may incur high charges.

Urgent News (Application)

- Handset receives alerts by default (Receive settings are enabled).

- Alert tones sound even in Manner mode.
- Alerts are not received during calls/transmissions or in poor signal conditions.
- Depending on usage/situation, handset may receive alerts for other areas or no alerts.
- Standby Time may decrease when Receive settings are enabled.
- Y! Mobile Corp. cannot be held liable for any damages associated with this service, including accidents resulting from received information, reception timing or reception failure.

Technical Regulations Conformity Certification

Handset conforms to technical regulations pursuant to the Radio Law and the Telecommunications Business Law. To check technical regulations conformity certification information (e.g., ):

In app sheet,  (Settings)  About phone  Regulatory Information

Handset & Hardware Care

- ↓ [Handset & Hardware Care](#)
- ↓ [USIM/SD Card Insertion/Removal](#)
- ↓ [Display \(Touchscreen\)](#)
- ↓ [Earphones-Microphone](#)
- ↓ [Self Check](#)
- ↓ [Forcing Power Off](#)
- ↓ [Bluetooth® Function](#)
- ↓ [Wi-Fi \(Wireless LAN\)](#)

Handset & Hardware Care

- Use handset within 5°C - 35°C and 35% - 90% humidity.
- Avoid extreme temperature or direct sunlight.
- Handset/Internal Battery may become warm during operation or while charging. This is normal.
- Warranty does not cover malfunctions resulting from misuse.
- Clean handset with a soft dry cloth. Alcohol/solvent use may fade color/print.
- Avoid scratching Display.
- Avoid heavy objects or excessive pressure. May cause malfunction or injury.
 - Do not sit on handset in back pants pocket.
 - Do not place heavy objects on handset inside handbags, packs, etc.
- Handset back cover is not removable. Do not try to remove it; may cause damage or malfunction, or affect water/dust resistance.
- Connect only specified products to Port. Other devices may malfunction or cause damage.
- Do not power off while using SD Card; may result in data loss or malfunction.
- When walking outside, moderate handset volume to avoid accidents.
- When holding handset, do not block Receiver, Mic, Speaker, or Recorder Mic.
- Proximity Sensor prevents Touchscreen misoperation during calls. Do not cover or place a sticker/label over Proximity Sensor; Display may remain off during calls, disabling handset operation.
- If your hair is between Receiver and your ear during calls, Proximity Sensor may not function properly.

Display may remain on; touching Display accidentally may end the call.

 
- Do not cover Light Sensor or place a sticker/label over it; may hinder ambient light detection, resulting in malfunction of Light Sensor.
- Handset Receiver is located at the center of Display upper end. If other party's voice is hard to hear during calls, hold handset so that Receiver is next to your earhole for better audibility.

USIM/SD Card Insertion/Removal

1


Open Card Slot Cover

- Use notch to pull Card Slot Cover toward you as shown (1), then rotate it in the direction of the arrow (2).

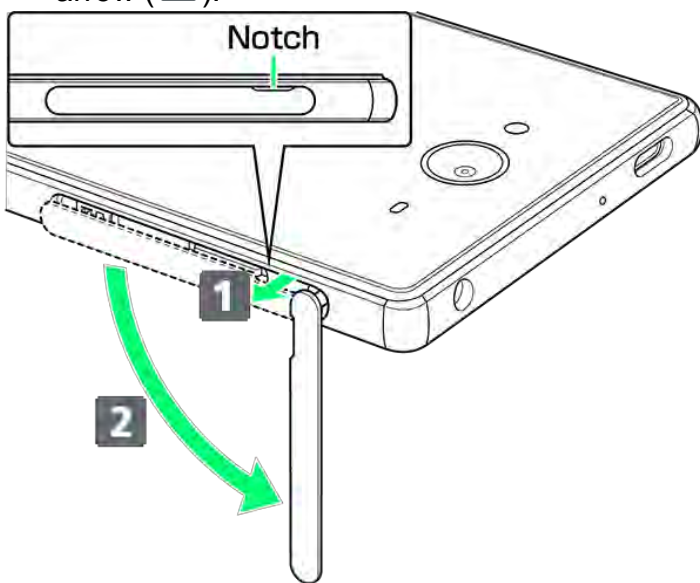


2

 Insert/remove USIM/SD Card

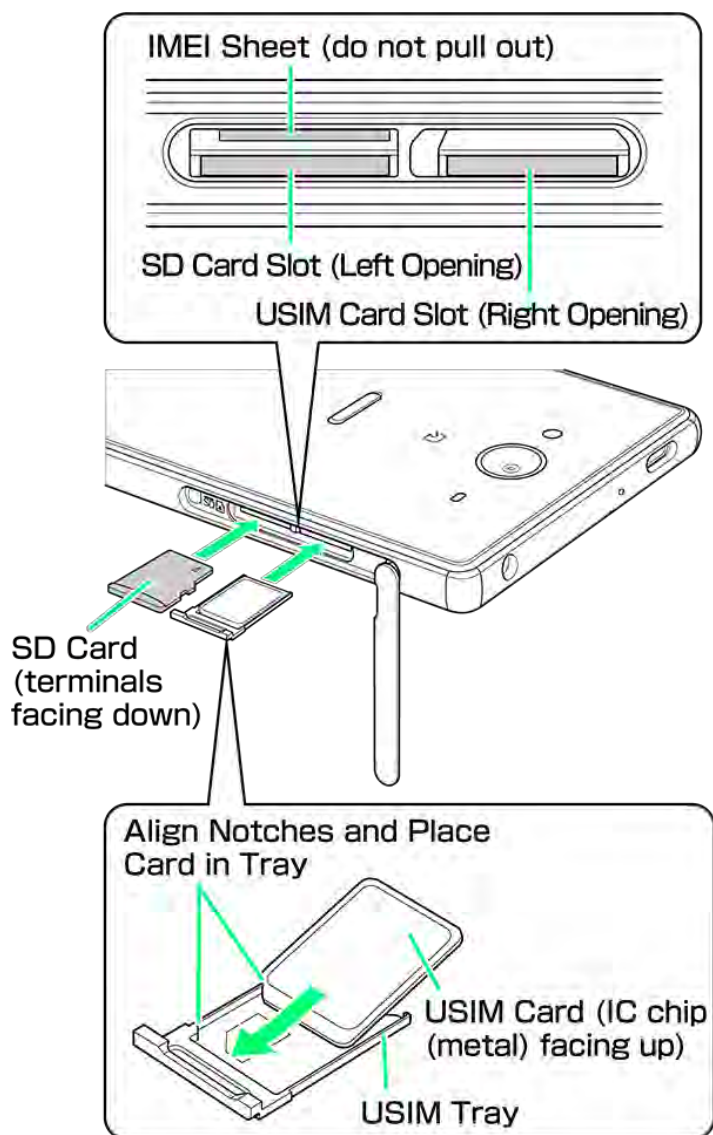

- Insert USIM Card and SD Card into correct openings in correct orientation.
- USIM Card Insertion/Removal
 - Always power off before insertion/removal.
 - Place USIM Card in USIM Tray beforehand.
 - When removing USIM Tray, do not pull it forcefully or at an angle; damage may result. Gently pull it out horizontally from the edge.
 - When inserting empty USIM Tray, do not insert it at an angle; damage may result. Check orientation of USIM Tray, then gently insert it all the way horizontally.
- SD Card Insertion/Removal
 - Unmount SD Card beforehand.
 - When removing SD Card, lightly push it in and release finger (SD Card pops out slightly); gently pull it out horizontally.

 Close Card Slot Cover

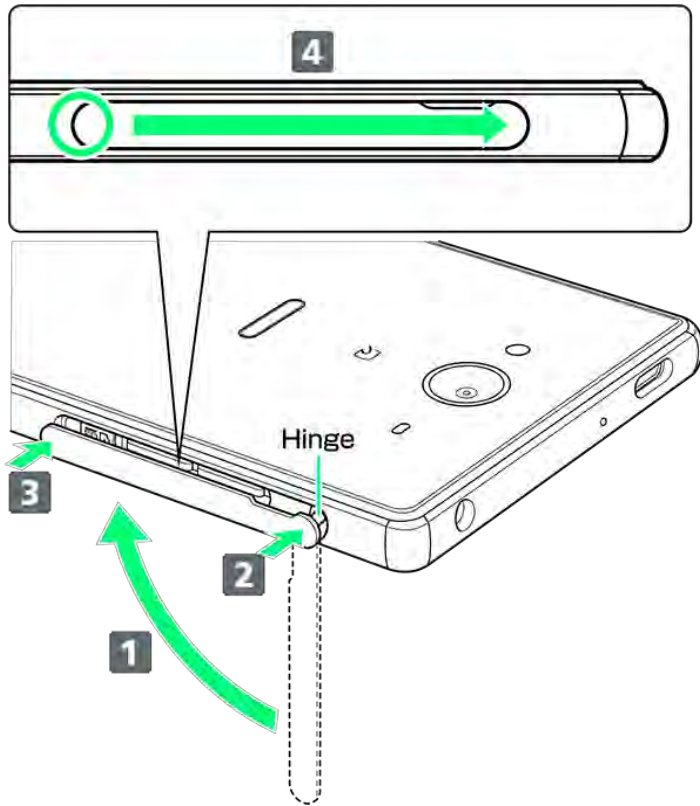

- Lift Card Slot Cover in the direction of **1** and reinsert hinge as shown (**2**); place Card Slot Cover over the slot so that there is no gap between handset and Card Slot Cover, then push it in the direction of the arrow (**3**) to close.
When closing Card Slot Cover, push it firmly all the way from O area to hinge as shown (**4**).

Display (Touchscreen)

Handset Display is Touchscreen.

If Display is wet, wipe it with a soft cloth.

- Touchscreen may not respond in these situations:
 - Use with gloves/long fingernails
 - Use of pens, pencils or sharp objects
 - Use with objects on/against Display
 - Use while wet
- To prevent malfunctions, do not:
 - Touch Display with wet fingers
 - Use if Display is wet

- Subject Display to force/pressure
- Place a sticker or shield (commercially-available protective film, privacy protector shield, etc.) on Display
- To improve response, calibrate Touchscreen as follows.
 - In app sheet,  (Settings)  About phone  Adjust touch panel  Follow onscreen prompts
- In the following cases, Press  to turn off Display, Press  again to turn on Display and then operate handset.
 - Handset operates automatically without touch input
 - Handset does not respond to touch input

Earphones-Microphone

Earphones with Mic (SHLDL1) are available for separate purchase. Other earphones-microphone

may not function properly on handset.

- Do not subject Earphones-Microphone Port to strong impact while using earphones-microphone; water/dust resistance may be affected.

Self Check

If handset is unstable, diagnose the cause as follows.

In app sheet,  (Settings)  Useful  Self check  Follow onscreen prompts

Forcing Power Off

If handset has stopped processing or won't respond to operation, power off forcibly as follows.

-  (Long Press for at least 8 seconds)
Release finger after vibration; handset powers off.

Bluetooth[®] Function

Y! Mobile Corp. is not liable for any damages resulting from data/information leakage due to use of handset Bluetooth[®] function.

■ Precautions

The frequency band utilized by handset Bluetooth[®] function is shared with industrial, scientific or medical equipment, including household microwave ovens, and used by radio stations, amateur radio stations, etc. (hereafter "other radio stations").

1. Before using Bluetooth[®], visually check that no other radio stations sharing the same frequency band are in use nearby.
2. Should interference occur between handset and other radio stations, move it to a different location or cancel Bluetooth[®] function immediately.
3. For additional information and support, contact Y! Mobile Customer Support, General Information: From a Y! Mobile handset, call toll free at 151. To call toll free from a landline/IP phone, see "[Customer Service](#)."

• Frequency Band

This radio station utilizes 2.4 GHz band.

FH1 indicates FHSS modulation with maximum transmission radius of 10 meters.

XX4 indicates a different modulation scheme with maximum transmission radius of 40 meters.

It is not possible for the radio station to avoid using the frequency band of a mobile unit identification

apparatus.



Wi-Fi (Wireless LAN)

Wireless LAN (hereafter "Wi-Fi") uses radio waves to enable communication between compatible devices within range. However, it is advisable for the user to configure security settings to avoid risk of data interception.

- Do not use Wi-Fi near electrical appliances, audiovisual equipment or office automation equipment; may affect Wi-Fi transmission speed, availability, clarity, etc. (Especially when a microwave oven is in use.)
- If there are multiple access points nearby, handset may not detect access points correctly.

■ Precautions

The frequency band utilized by handset Wi-Fi is shared with industrial, scientific or medical equipment, including household microwave ovens, and used by radio stations, amateur radio stations, etc. (hereafter "other radio stations").

1. Before using Wi-Fi, visually check that no other radio stations sharing the same frequency band are in use nearby.
2. Should interference occur between handset and other radio stations, move it to a different location or disable Wi-Fi immediately.
3. For additional information and support, contact Y! Mobile Customer Support, General Information: From a Y! Mobile handset, call toll free at 151. To call toll free from a landline/IP phone, see "[Customer Service](#)."

• Frequency Band

This radio station utilizes 2.4 GHz and 5 GHz band with DSSS-OFDM modulation. Maximum transmission radius is 40 meters.



• Channels in 5 GHz band

Three bands are available within 5 GHz frequency band: 5.2 GHz, 5.3 GHz, and 5.6 GHz (W52, W53, and W56).

- W52 (5.2 GHz band; channels 36, 38, 40, 44, 46, 48)
- W53 (5.3 GHz band; channels 52, 54, 56, 60, 62, 64)
- W56 (5.6 GHz band; channels 100, 102, 104, 108, 110, 112, 116, 118, 120, 124, 126, 128, 132,

134, 136, 140)

Use of 5.2 GHz or 5.3 GHz band (W52/W53) for outdoor communication is prohibited by the Radio Law.

■ Simultaneous Use with Bluetooth®

Wi-Fi (IEEE 802.11b/g/n) and Bluetooth® transmit on the 2.4 GHz band. Enabling handset Bluetooth® or using Bluetooth® devices near handset may affect Wi-Fi transmission speed, availability and clarity. Should interference occur, cancel handset Bluetooth® or discontinue Bluetooth® device use.

- Handset supports Wi-Fi channels 1 - 13. Handset does not connect to access points set to other channels.
- Available channels vary by country.
- For use of Wi-Fi aboard aircraft, check with airline beforehand.
- In some countries/regions, there are restrictions on the use of Wi-Fi. Check the local laws and regulations before using Wi-Fi on handset abroad.

General Notes

↓ [Portrait Rights](#)

↓ [Copyrights](#)

↓ [Radio Exposure and Specific Absorption Ratio \(SAR\) Information](#)

↓ [General Notes](#)

↓ [FCC Notice](#)

Portrait Rights

Portrait rights protect individuals' right to refuse to be photographed or to refuse unauthorized publication/use of their photographs. Portrait rights consist of the right to privacy, which is applicable to all persons, and the right to publicity, which protects the interests of celebrities. Therefore, photographing others including celebrities and publicizing/distributing their photographs without permission is illegal; use Camera responsibly.

Copyrights

Copyright laws protect sounds, images, computer programs, databases, other materials and copyright holders. Duplicated material is limited to private use only. Use of materials beyond this limit or without copyright holder permission may constitute copyright infringement, and be subject to criminal punishment. Comply with copyright laws when using images shot with Camera.

The software contained in handset is copyrighted material; copyright, moral right and other related rights are protected by copyright laws. Do not copy, modify, alter, disassemble, decompile or reverse-engineer the software; do not separate it from hardware in whole or part.

Radio Wave Exposure and Specific Absorption Rate (SAR) Information

■ Specific Absorption Rate (SAR) for This Product (for Japan)

This mobile phone [S1] meets the Japanese technical regulations* and international guidelines for exposure to radio waves.

The Japanese technical regulations for exposure to radio frequency energy established permitted levels of radio frequency energy, based on standards developed by independent scientific organizations through periodic and thorough evaluation of scientific studies.

The regulation employs a unit of measurement known as the Specific Absorption Rate, or SAR.

The SAR limit is 2 watts/kilogram (W/kg) averaged over ten grams of tissue.

The limit includes a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The value of the limit is equal to the value given in international guidelines recommended by ICNIRP**, which is in collaboration with the World Health Organization (WHO).

The highest SAR value for this mobile phone is

0.265 W/kg*** when tested for use at the ear, and

0.294 W/kg*** when worn on the body in the below manner****.

While there may be differences between the SAR levels of various phones and at various positions, all phones meet the Japanese technical regulations.

Although the SAR is determined at the highest certified power level, the actual SAR of the phone during operation can be well below the maximum value.

Use at positions other than at the ear***

This mobile phone may be used at positions other than at the ear. By using an accessory such as a belt clip holster that maintains a 1.5 cm separation with no metal (parts) between the body and the mobile phone, this mobile phone will comply with international guidelines for radio wave protection.

* The technical regulation is provided in Article 14-2 of the Ministry Ordinance Regulating Radio Equipment.

** International Commission on Non-Ionizing Radiation Protection

*** The value is under simultaneous transmission use conditions.

The World Health Organization has announced that “A large number of studies have been performed over the last two decades to assess whether mobile phones pose a potential health risk. To date, no adverse health effects have been established as being caused by mobile phone use.”

For more information about SAR, see the following websites:

Ministry of Internal Affairs and Communications (MIC)
<http://www.tele.soumu.go.jp/e/sys/ele/body/index.htm>

Association of Radio Industries and Businesses (ARIB)
<http://www.arib-emf.org/01denpa/denpa02-02.html>
(Japanese)

This mobile phone [S1] is confirmed to comply with guidelines relating to effects of radio wave exposure as set forth by the Council of Europe (CE) and the Federal Communications Commission (FCC). Refer to the following.

■ European RF Exposure Information

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health. The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2.0 W/kg and the highest SAR value for this device when tested at the ear is **0.265 W/kg***. As mobile devices offer a range of functions, they can be used in other positions, such as on the body. In this case, the highest tested SAR value is **1.230 W/kg*** at the separation distance of 0.5 cm from the body. For electoronic safety, maintain the separation distance with accessories containing no metal, that position handset a minimum of the above distance. Use of other accessories may not ensure compliance with RF exposure guidelines.

* The tests are carried out in accordance with international guidelines for testing.

■ FCC RF Exposure Information

Your handset is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The guidelines are based on standards that were developed by independent scientific organization through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless handsets employs a unit of measurement known as the Specific Absorption Rate, or SAR.

The SAR limit set by the FCC is 1.6 W/kg. The tests are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model handset as reported to the FCC when tested for use at the ear is **0.97 W/kg**, and when worn on the body in a holder or carry case, is **0.55 W/kg**.

Body-worn Operation; This device was tested for typical body-worn operations with the handset kept 1.0 cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.0 cm separation distance between the user's body and the handset. The use of beltclips, holsters and similar accessories should not contain metallic components in its assembly.

The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided. The FCC has granted an Equipment Authorization for this model handset with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model handset is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/ea/> after searching on FCC ID APYHRO00246.

Additional information on Specific Absorption Rates (SAR) can be found on the FCC website at <https://www.fcc.gov/general/radio-frequency-safety-0>.

FCC ID Location

The device is electronically labeled and the FCC ID can be displayed via **the Settings, About Phone & Regulatory Information under the Menu.**

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a hands-free device to keep the mobile phone away from the head and body.

World Health Organization
<http://www.who.int/emf>

General Notes

Handset

Do not disassemble or modify handset.

Regulatory information

In some countries/regions including Europe^{※1}, there are restrictions on the use of 5GHz WLAN that may limit the use to indoors only.

If you intend to use 5GHz WLAN on the device, check the local laws and regulations beforehand.

※1 The following EU and EFTA member countries:

Belgium (BE), Bulgaria (BG), Czech Republic (CZ), Denmark (DK), Germany (DE), Estonia (EE), Ireland (IE), Greece (EL), Spain (ES), France (FR), Croatia (HR), Italy (IT), Cyprus (CY), Latvia (LV), Lithuania (LT), Luxembourg (LU), Hungary (HU), Malta (MT), Netherlands (NL), Austria (AT), Poland (PL), Portugal (PT), Romania (RO), Slovenia (SI), Slovakia (SK), Finland (FI), Sweden (SE) and United Kingdom (UK), Switzerland (CH), Liechtenstein (LI), Iceland (IS), Norway (NO).

Hereby, SHARP CORPORATION declares that the radio equipment type S1 is in compliance with Directive 2014/53/EU.
The full text of the EU declaration of conformity is available at the following internet address:
(<http://www.sharp.co.jp/k-tai/>)

Manufacturer's Address:

Sharp Corporation, IoT Communication BU
2-13-1 Iida Hachihonmatsu
Higashihiroshima-City
Hiroshima,
739-0192
Japan

■ Description of accessories

Headset, Handsfree	φ3.5 audio jack, Bluetooth.
Micro USB cable	For charging, peripherals, etc.
microSD Card	microSD / microSDHC
nano USIM card	Y! Mobile USIM card / non-Y! Mobile USIM cards can be used after SIM-unlocking the handset.

■ Frequency range of supported bands in EU

GSM 900	Tx 880.2 to 914.8 MHz Rx 925.2 to 959.8 MHz
DCS 1800	Tx 1710.2 to 1784.8 MHz Rx 1805.2 to 1879.8 MHz
WCDMA FDD I	Tx 1922.4 to 1977.6 MHz Rx 2112.4 to 2167.6 MHz
WCDMA FDD VIII	Tx 882.4 to 912.6 MHz Rx 927.4 to 957.6 MHz
LTE Band 1	Tx 1922.5 to 1977.5 MHz Rx 2112.5 to 2167.5 MHz
LTE Band 3	Tx 1710.7 to 1784.3 MHz Rx 1805.7 to 1879.3 MHz
Bluetooth	Tx 2402 to 2480 MHz Rx 2402 to 2480 MHz
WLAN 2.4 GHz	Tx/Rx 2412 to 2472 MHz (Bandwidth: 20MHz only)
WLAN 5 GHz	W52(U-NII 1): TX/RX 5180 - 5240MHz (BW:20MHz) TX/RX 5190 - 5230MHz (BW:40MHz) W53(U-NII 2): TX/RX 5260 - 5320MHz (BW:20MHz) TX/RX 5270 - 5310MHz (BW:40MHz) W56(U-NII 2ext): TX/RX 5500 - 5700MHz (BW:20MHz) TX/RX 5510 - 5670MHz (BW:40MHz)
GPS	Rx L1 (1575.42 MHz)

■ Maximum transmit power

GSM 900	+32.5 dBm (Power Class4)
DCS 1800	+29.5 dBm (Power Class1)
WCDMA FDD I	+23 dBm (Power Class3)
WCDMA FDD VIII	+23 dBm (Power Class3)
LTE Band 1	+23 dBm (Power Class3)
LTE Band 3	+23.5 dBm (Power Class3)
Bluetooth	+9 dBm (Power Class1)
WLAN 2.4 GHz	+15 dBm
WLAN 5 GHz	+13 dBm

■ Battery Cautions

Use specified Charger only.

Non-specified equipment use may cause Internal Battery to leak, overheat, burst or ignite, and may cause Charger to overheat, ignite, malfunction, etc.

Battery is built into handset. Do not dispose of handset with ordinary refuse; take it to a Y!mobile Shop for appropriate disposal.

Charge handset in ambient temperature 5°C - 35°C; Internal Battery may leak/overheat and performance may deteriorate outside this range.

■ Mobile Light

Do not shine Mobile Light in eyes.

May temporarily affect eyesight or startle, leading to accidents.

■ Volume Level Caution



To prevent possible hearing damage, do not listen at high volume levels for long periods.

Headphone Signal Level

The maximum output voltage for Music Player function, measured in accordance with EN 50332-2, is **139 mV**.

■ Stand-by Mark



:This symbol means the stand-by on/off.

FCC Notice

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

■ **FCC Information to User**

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient/relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

Water & Dust Resistance

↓ [Handset Water & Dust Resistance](#)

↓ [Precautions](#)

↓ [Charging Cautions](#)

↓ [Care & Maintenance](#)

↓ [Washing Handset](#)

↓ [Drying Handset](#)

Handset Water & Dust Resistance

Handset complies with IPX5¹ and IPX8² water protection standards as well as IP5X³ dust protection standard, with Card Slot Cover closed firmly.

¹IPX5 compliant means that a handset continues to function as a phone after being subjected to a water jet (approximately 12.5 liters/min.) discharged from a nozzle (inner diameter: 6.3 mm), from all directions (approximately 3 m from handset) for at least 3 minutes.

²IPX8 compliant means that a handset continues to function as a phone after being gently submerged to the depth of 1.5 m in still tap water at room temperature, left there for approximately 30 minutes, then removed from it.

³IP5X compliant means that a handset continues to function as a phone and its safety is maintained after being agitated in a device containing dust of 75 µm or smaller in diameter for 8 hours, then removed from the device.

- Water/dust resistance may be affected under some circumstances. Warranty does not cover malfunctions resulting from misuse.
- Handset is compliant with IPX5 and IPX8 water protection standards as well as IP5X dust protection standard. However, ingress of dirt, sand, mud, metal powder, food, beverage, sea water, etc. may cause malfunction.

■ Handset Care

- Close Card Slot Cover firmly. Debris (hair, sand, fibers, etc.) trapped between gasket and Card Slot may allow ingress of liquid/dust.
- If handset is exposed to liquids with Card Slot Cover open, they may enter handset and cause electric shock or malfunction. Discontinue use and power off.
- If handset is wet, wipe it with a dry cloth.

- Never open/close Card Slot Cover with wet hands or while handset is wet or has a foreign object adhered to it.
- Do not use Earphones-Microphone Port or External Device Port while it is wet or obstructed by sand/dirt; water/dust resistance may be affected, or malfunction, burns or fire may result due to electric shock, short-circuiting, etc.
- Handset is only water resistant against fresh/tap water between 5°C - 35°C.

Precautions

- Do not subject handset to soap, detergent, bath powder/oil, sea/pool/spa water, hot water, etc.
- Rinse off sea/pool water, beverage, dirt, sand, mud, etc. immediately with fresh/tap water between 5°C - 35°C; residue may cause malfunction if allowed to dry.
- Do not soak handset in bath or pool; never use it in water (including key operation).
- Handset is not resistant to water pressure. Avoid high-pressure water/shower (over 6 liters/min.) and water immersion.
- Do not expose handset to high humidity for long periods; avoid prolonged use in bath/shower rooms.
- Volume may be low when an opening such as Mic, Recorder Mic, Receiver or Speaker is wet; dry handset before use (see "[Drying Handset](#)").
- Charger and other optional accessories are not water or dust proof. Do not use in high humidity or near water (outdoors, in bathrooms, shower rooms, etc.); may cause fire, electric shock or malfunction.
- Do not subject handset to strong impact (e.g., from a fall); do not poke Mic, Receiver, Speaker, Recorder Mic, Pressure Vent, etc. with a sharp object; water/dust resistance may be affected.
- Avoid placing handset directly on sand. Sand may penetrate Receiver, Speaker, etc., resulting in low volume.
- To prevent condensation, warm handset to room temperature before bringing it from a cold place into a warm place such as a bathroom. If condensation occurs, leave handset at room temperature until it is dry.
- Handset does not float on water.
- Keep handset out of heavy rain.

Charging Cautions

- Never connect Micro USB plug while handset or Charger is wet.
Handset is water resistant; however, if Micro USB plug is inserted while it is wet, liquid (tap water, beverage, sea water, pet urine, etc.) or a foreign object adhered to handset or Micro USB plug may cause overheating, burnout, fire, malfunction, burns, etc. due to electric shock,

short-circuiting, etc.

- Do not use Charger where water is regularly in use (kitchens, bathrooms, shower rooms, etc.); may cause fire or electric shock.

Care & Maintenance

- Proper care of Card Slot Cover gasket is crucial for continued handset water/dust resistance. Observe the following:
 - Do not remove or damage gasket. Keep it clean.
 - If Card Slot Cover is damaged or deformed, contact a Y! Mobile Shop.
- Do not insert a sharp object into Card Slot Cover gap, Earphones-Microphone Port or External Device Port.
- To maintain water/dust resistance, it is recommended to replace Card Slot Cover every 2 years regardless of its condition. Customer-requested Card Slot Cover replacement incurs fees and requires handset submission. For details, contact a Y! Mobile Shop or Y! Mobile Customer Support, [General Information](#).

Washing Handset

Wipe off dirt, sand, beverage, etc., gently with a cloth. Then hold handset approximately 10 cm below faucet or shower head and wash with low-pressure tap water (6 liters/min. or lower) at room temperature (5°C - 35°C). Wash with your hands, taking care not to open Card Slot Cover; do not use a brush or sponge. Dry handset before use; after drying it well, power on.

- Before washing handset, make sure that Card Slot Cover is closed firmly.
- Do not use a washing machine or ultrasonic cleaner.
- Earphones-Microphone Port and External Device Port tend to accumulate dust, sand, etc.; rinse and dry them completely before use. Any residue may cause malfunction, burns or fire.
- Do not put a cotton swab, cloth, etc. into Earphones-Microphone Port or External Device Port; water resistance may be affected causing malfunction.

Drying Handset

 
After exposing handset to water, be sure to dry Receiver, Power Key, Volume Up/Down Key, Mic, Recorder Mic, Pressure Vent, Speaker, Earphones-Microphone Port and External Device Port.

1

Wipe handset surface with dry cloth

2


Holding handset firmly by its sides, shake it about 20 times

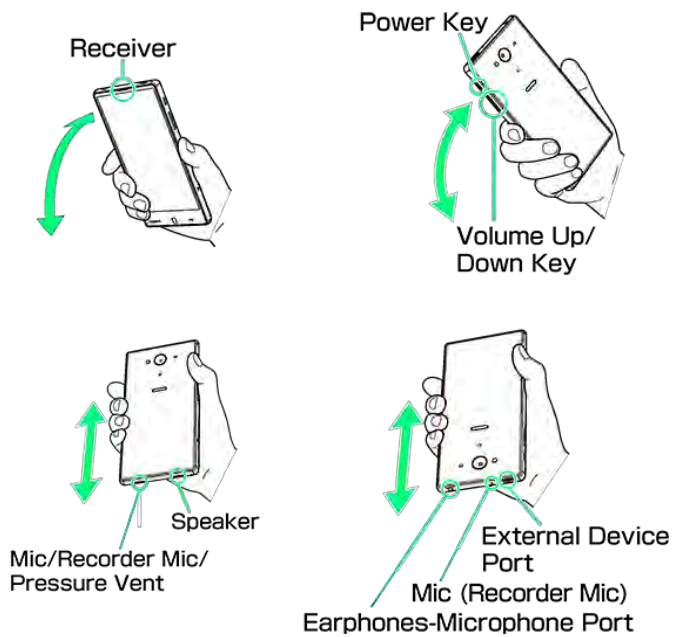

- When shaking handset, hold it firmly so as not to drop it.

3

 Pat against dry cloth to remove moisture from openings and grooves

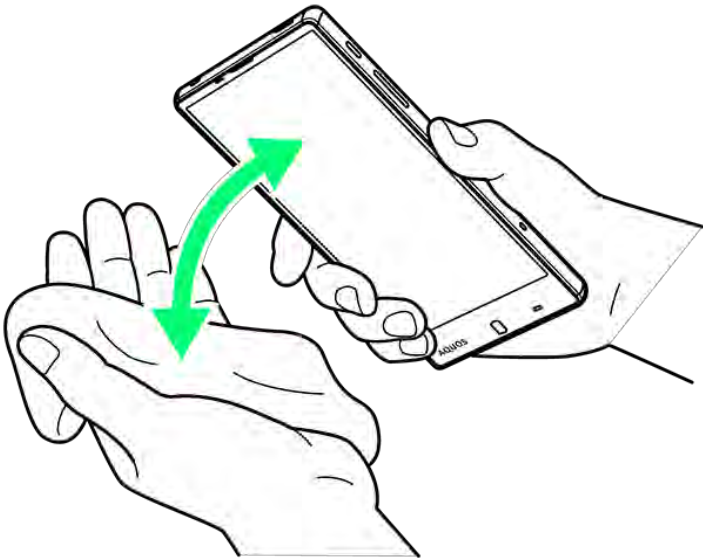

- Water may be trapped in openings; pat against a dry cloth to remove it.

4

Leave handset on dry cloth for approximately 2 - 3 hours at room temperature

Cautions

When Removing Moisture

Do not put a cotton swab, cloth, etc. into openings; water resistance may be affected.

After Drying Procedure

Do not use handset in wet conditions.

- Calls may fail, or moisture may transfer to clothes, bag, etc.
- Moisture may short-circuit Earphones-Microphone Port, External Device Port or other parts.
- Exposure to cold may freeze moisture and cause malfunction.