


Remote control

Remote Control Parts Description

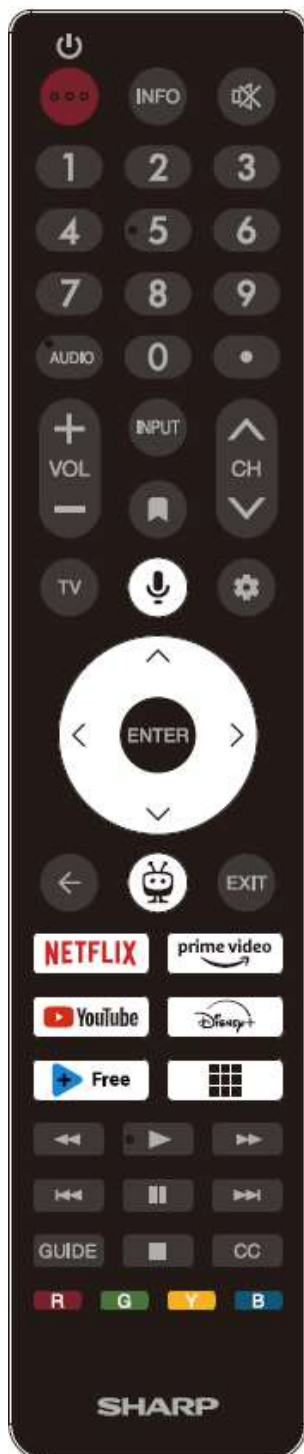

SHARP Confidential

1. **STANDBY** – Switch on the TV when in standby or vice versa.
2. **INFO** – Press once to view information about the program you are currently watching. Press again to display the TV channel list.
3. **MUTE** – Mutes the sound or vice versa.
4. **NUMBER BUTTONS** – 0–9 to select a TV channel directly.
5. **AUDIO** – Opens audio track menu.
6. **● (surround)** – Changes audio channel settings (e.g., 2.0, 5.1, 22.2), when available.
7. **INPUT** – Displays the input/source menu.
8. **VOL +/-** – Increases/decreases the sound level.
9. **CH +/-** – Switches to the next/previous channel in the sequence.
10. **📌 (watchlist)** – Displays the watchlist.
11. **TV** – Switches the TV to the last watched input.
12. **MIC** – Search for content and control the TV by voice. Press and hold the button, then speak into the microphone.
13. **⚙️ (settings)** – Opens the Settings menu.
14. **(▲/▼/◀/▶/OK)** – Allows you to navigate the on-screen menus and adjust the system settings to your preferences.
15. **BACK** – Step back in the menu.
16. **📺 (TiVo)** – Displays the TV's home screen.
17. **EXIT** – Exit the currently displayed menu or application.
18. **NETFLIX** – Access to the Netflix app.
19. **PRIME VIDEO** – Access to the Prime Video app.
20. **YOUTUBE** – Access to the YouTube app.
21. **DISNEY+** – Access to the Disney+ app.
22. **Free** – TiVo+, 160+ Free channels, live and on demand.
23. **📺 (apps)** – Opens the apps menu.
24. **REWIND** – Playback in rewind mode. Press multiple times to change the rewind speed.

- 25. PLAY/PAUSE** – Play/pause media.
- 26. FAST FORWARD** – Playback in fast forward mode. Press multiple times to change the playback speed.
- 27. CHAPTER BACK** – Skip to the previous track.
- 28. CHAPTER FORWARD** – Skip to the next track.
- 29. GUIDE** – Opens the 7 day TV guide (digital TV mode).
- 30. STOP** – Stop playback.
- 31. CC** – Turns on/off subtitles at the bottom of the screen.
- 32. COLOUR BUTTONS** – Execute corresponding function at that time.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.