

QUICK GUIDE
TABLE OF CONTENTS


DOORS AND LOCKS	2
SEATS AND CONTROLS	7
OCCUPANT CLASSIFICATION SYSTEM	18
IGNITION	25
INSTRUMENTS	26
DRIVING	34
AIR CONDITIONING	46
ON THE FORECOURT	55

QUICK GUIDE DOORS AND LOCKS

Unlocking and locking

The car can be unlocked or locked either using the keyless entry feature or by pressing the appropriate button on the key fob.

Keyless entry

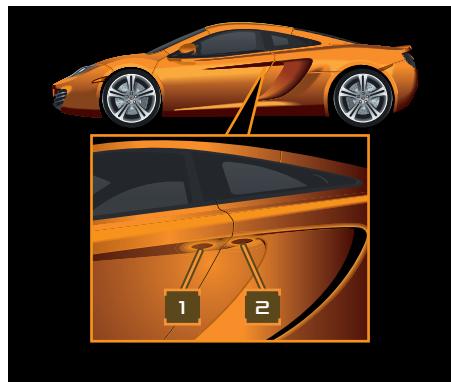

Touch the underside of the door panel (1); slowly move your hand from front to rear. The indicators flash and alarm is deactivated.

i *NOTE: The door needs to sense movement in the direction described to release the door latch. The sensor will not be activated if it is just touched or the hand is moved from the rear to the front.*


2

QUICK GUIDE DOORS AND LOCKS

The door latch will then release, allowing the door to be partially raised before it automatically swings outwards and upwards.

To lock, close the door, touch the underside of the door panel **(2)**. The car will lock and the alarm will be armed.

Using the key fob

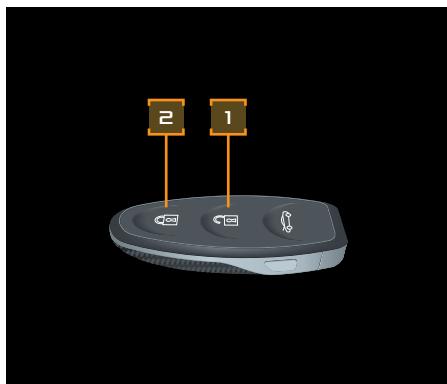

Press button **(1)** to unlock. Indicators flash and the alarm is deactivated.

The door latch will then release, allowing the door to be partially raised before it automatically swings outwards and upwards.

Press button **(2)** to lock. The alarm is armed.

3






QUICK GUIDE

DOORS AND LOCKS




If the key fob batteries become discharged. Place the key fob on the section of the cup holder housing immediately behind the switch panel, to drive the car.

Configurable features

Auto door lock	Doors lock when vehicle drives away.
Door unlock	Only driver's door unlocks when an unlock request is received.

   


4

   

QUICK GUIDE DOORS AND LOCKS

Luggage compartment

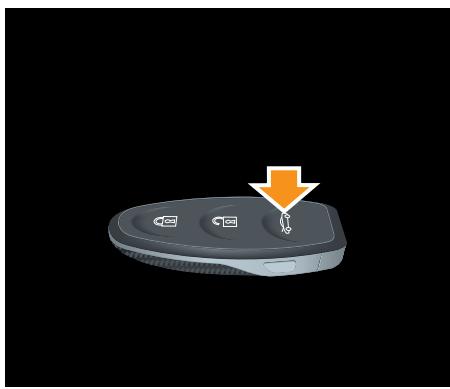

From outside: Press and hold the button (arrowed) on the key fob. Release the safety latch and open the luggage compartment.

QUICK GUIDE
DOORS AND LOCKS



From inside: Press the button (arrowed) on the centre console.
Release the safety latch and open the luggage compartment.

QUICK GUIDE SEATS AND CONTROLS

Seats

Manual seat adjustment




1. Height (driver seat only)
2. Forward/backward
3. Backrest angle

i NOTE: Do not recline the seat backrest so that it repeatedly contacts the rear bulkhead as this could lead to damage over a period of time.

QUICK GUIDE SEATS AND CONTROLS

Electric seat adjustment

The seat adjustment switch is on the front of the seat base.

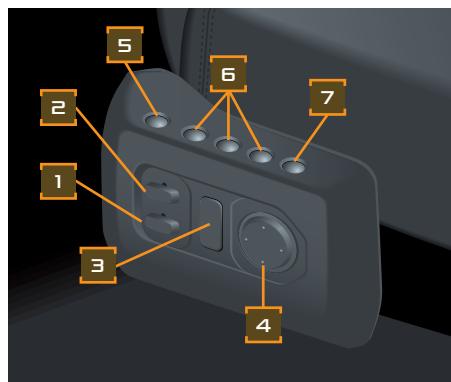

1. Forward/backward
2. Backrest angle
3. Height
4. Lumbar adjustment
5. Seat heater
6. Memory position buttons
7. Memory set button


Configurable features

Comfort exit

With ignition off and driver's door open, the driver's seat will move fully rearwards and to the lowest setting.

QUICK GUIDE SEATS AND CONTROLS

Seat belts

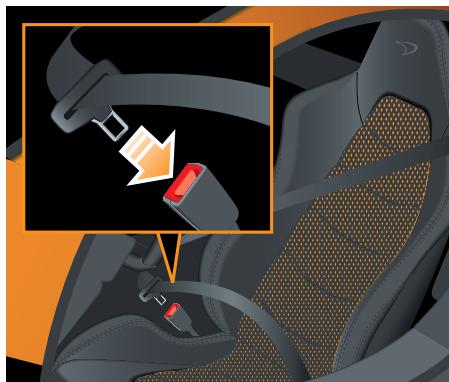

Pull the belt smoothly from the reel and pass the belt over your shoulder.

Push the belt latch into buckle and check that it is fully engaged. Pull up on the shoulder belt to tighten the belt across your lap if necessary.

Seat belt warning light

The seat belt warning light and a warning tone reminds vehicle occupants to fasten their seat belts.

QUICK GUIDE
SEATS AND CONTROLS

Steering wheel




Release the lever (highlighted) and position the steering wheel to suit your ideal driving position.

When adjustments are complete, ensure the lever is returned to its locked position.

QUICK GUIDE SEATS AND CONTROLS

Lights

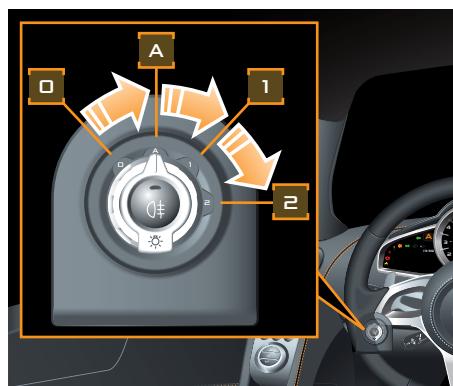

Light switch

- Position (0), lights are off.
- Position (A), automatic lighting.
- Position (1), sidelamps.
- Position (2), headlamps.

Daytime running lamps will operate whenever the engine is running.

QUICK GUIDE
SEATS AND CONTROLS


Main and dip beams



Push the stalk away from you to select main beam. Pull towards you to return to dipped beam.

QUICK GUIDE SEATS AND CONTROLS

Direction indicators

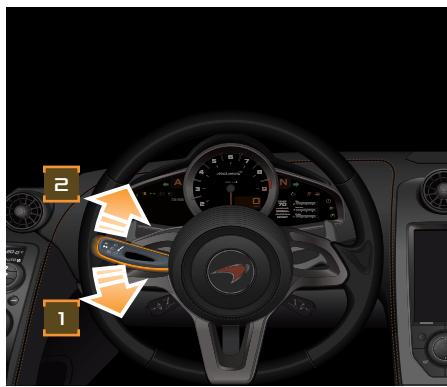

Push the stalk down (1) to indicate a left turn or push the stalk up (2) to indicate a right turn.

QUICK GUIDE SEATS AND CONTROLS

Windscreen wipers



1. Windscreen wipers off
2. Auto wipe
3. Slow wipe
4. Fast wipe


Configurable features

Wiper mode Position (2) can be configured as Auto wipe or
intermittent wipe.

QUICK GUIDE SEATS AND CONTROLS

Windows

Switches for both windows are on the driver door console. A switch for the passenger window is on the passenger door console.

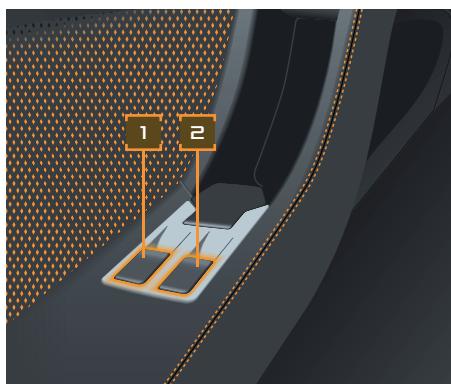

Press switch **(1)** or **(2)**. The window will open for as long as the switch is pressed

Pull switch **(1)** or **(2)**. The window will close for as long as the switch is pressed.

To open or close a window fully, press or pull switch **(1)** or **(2)** beyond the pressure point and release.

i *NOTE: To stop a window opening or closing, press or pull the appropriate switch.*