


QUICK GUIDE DRIVING

Applying the parking brake

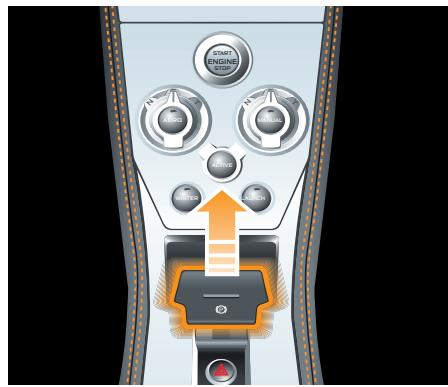


Pull the parking brake switch upwards, the parking brake engages and the light illuminates in the switch.

 The status light illuminates in the instrument cluster.

 **WARNING:** When parking on steep downhill slopes, turn the front wheels towards the kerb. When parking on steep uphill slopes, turn the front wheels away from the kerb.


 **NOTE:** If the parking brake is not applied and the driver's door is opened, the parking brake will apply automatically.

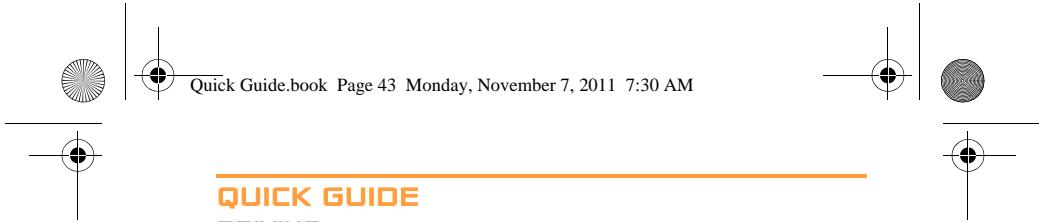

QUICK GUIDE DRIVING

Driving away

1. Depress the brake pedal and keep it depressed.
2. Select drive (**D**) or reverse (**R**).
3. Release the brake pedal.
4. Carefully depress the accelerator pedal.

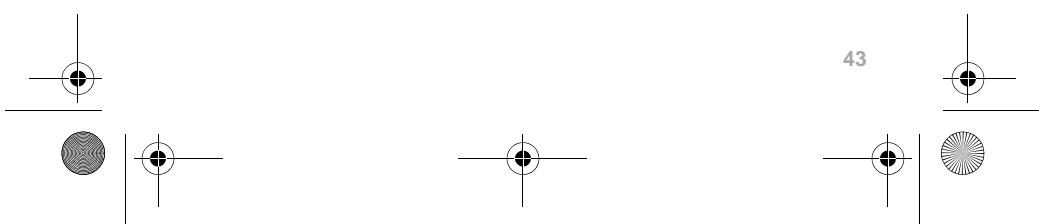

QUICK GUIDE DRIVING

Parking sensors

The parking sensors provide the driver with an audible alert to any obstructions while manoeuvring at low speeds.

The sensors are fitted in both front and rear bumpers.



The front parking sensors are automatically switched on when the ignition is switched on. The rear parking sensors are switched on when reverse gear is selected. The light around the parking sensors button will illuminate red to indicate that parking sensors are active.

The front parking sensors can be switched off manually by pressing the button.

QUICK GUIDE DRIVING

Cruise control



All cruise control functions are operated by the cruise control stalk.

- Push the stalk up or down to set desired speed.
- Push the stalk away from you to cancel cruise.
- Pull the stalk towards you to resume cruise.
- Push the stalk up briefly to increase speed.
- Push the stalk down briefly to decrease speed.
- Press the button on the end of the stalk to set ASL (Active Speed Limiter).

QUICK GUIDE AIR CONDITIONING


Control panel




The air conditioning system is operated using controls located on the driver and passenger door consoles.

QUICK GUIDE

AIR CONDITIONING

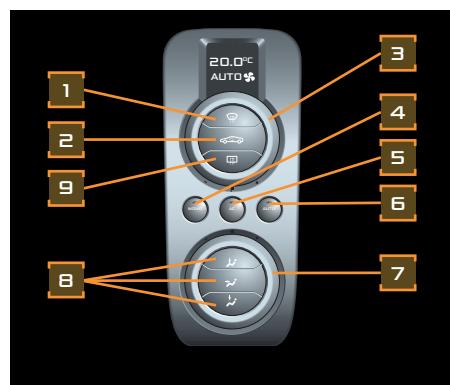

 1. Demist button
2. Air recirculation button
3. Temperature control
4. MONO button
5. Air conditioning (AC) button
6. AUTO button
7. Blower speed control
8. Air distribution controls
9. Heated rear screen button



QUICK GUIDE

AIR CONDITIONING

Automatic mode

 
 
 
 
 
 
 The air conditioning system maintains the set interior temperature using a combination of blower speeds, air recirculation and air distribution.

Air conditioning button

 Press the AC button to switch the system on or off.

MONO button

 MONO mode allows the driver to transfer their air temperature settings directly over to the passenger air conditioning control panel



QUICK GUIDE AIR CONDITIONING


Temperature settings



Rotate clockwise to increase the temperature, or anti-clockwise to decrease.

QUICK GUIDE AIR CONDITIONING

Blower speed

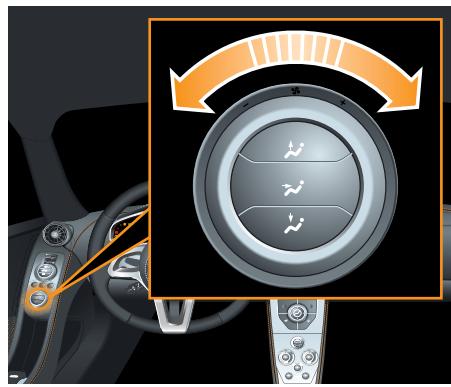


Rotate clockwise to increase or anti-clockwise to decrease blower speed.

Press the AUTO button to return to automatic mode.

QUICK GUIDE

AIR CONDITIONING

Air distribution settings

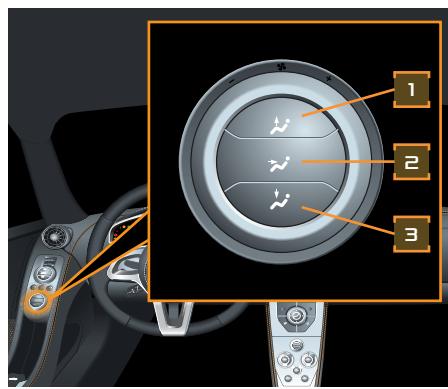

Press button (1) to direct air to the windscreen, press button (2) to direct air to the centre air vents, press button (3) to direct air to the footwell vents.

All three buttons or a combination of any two, or just one button can be selected at any time.

QUICK GUIDE
AIR CONDITIONING

Dashboard air vents



Turn the dial a 1/4 turn in either direction until the vent is open or closed.

QUICK GUIDE AIR CONDITIONING

Demisting



Press the demist button (arrowed). The air conditioning switches on if previously off. The blower will operate at full speed and the air temperature will be set to 'HI'.

Press the demist button again to exit the demist mode. The air temperature and blower speed return to their original settings.

QUICK GUIDE AIR CONDITIONING

Heated rear screen



Press the button (arrowed), to heat the rear screen and the exterior mirrors.


To switch off, press the button again.

The rear screen heating switches off automatically after a set time, depending on the outside air temperature.

QUICK GUIDE ON THE FORECOURT

Filling with fuel

The fuel filler flap is at the rear on the left-hand side.

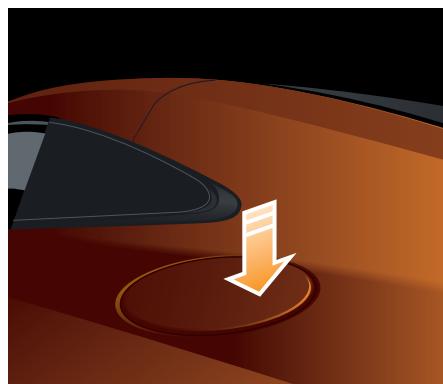

1. Switch off the engine.

i NOTE: The fuel filler flap will remain in locked if the engine is running.

2. Press the rear edge of the fuel filler flap, to release.
3. Open the flap.

i NOTE: No fuel filler cap is fitted.

4. Insert the nozzle and dispense fuel.
5. Do not continue to fill the tank after the pump nozzle switches off.
6. Remove the nozzle.
7. Close the fuel filler flap.

QUICK GUIDE ON THE FORECOURT

Tyre pressures

The tyre pressures are printed on a label attached to the underside of the fuel filler flap.



© McLaren Automotive Limited.
Printed in United Kingdom, 11Q0051CP.01