

# BreezeAIR B-STD-MK – Pole Mounting Kit

## Specifications

<b>Kit Weight</b>	0.75 Kg
<b>Diameter Range</b>	1"-2" (standard package) 2.5"-6" (* optional)
<b>Movement Range</b>	± 45°

## Packing list

Item	Qty	Description
1	1	Radio unit
2	1	B-MK1 (End Mounting Member)
3	4	5/16-18UNC combination screw
4	1	B-MK2 (Middle Mounting Member)
5	4	M6XL12 combination screw
6	2	Square hoop (U bolts)
7	1	B-MK3 (Back Mounting Member)
8	4	M6-Frank nut
9	2	Clamp 102-152mm (* optional)

## Installation

- **STEP 1:**
  - Place B-MK1 (2) on the radio unit (1), as illustrated in the picture. Align the holes with the screw studs.
  - Connect B-MK1 (2) to the radio unit (1) with 4 screws (3). Tighten the screws at a torque of 46 Lbs-In.
- **STEP 2 (pole mount only, for wall mount please skip to step 3-C):**
  - Connect B-MK2 (4) to B-MK1 (2) with 4 screws (5). Leave the screws slightly loose.
- **STEP 3-A | U bracket (pole up to 2"):**
  - Place U bolts (6) to B-MK2 (4)
  - Place B-MK3 (7) on pole and the U bolts (6) and tighten using 4 nuts (8).
  - Adjust the desired angle, and fully tighten the 4 loose screws (5) and 4 nuts (8) at a torque of 46 Lbs-In.
- **STEP 3-B | Band (pole 2.5"-6", \* not included in standard package):**
  - Thread the 2 clamps (9) in the 4 slots of B-MK2 (4)
  - Adjust the desired angle, and fully tighten the 4 loose screws (5) and the 2 screws on clamps (9)
- **STEP 3-C | Wall mount:**
  - Place B-MK2 (4) to the wall.
  - Connect B-MK2 (4) to B-MK1 (2) with 4 screws (5). Leave the screws slightly loose.
  - Adjust the desired angle, and fully tighten the 4 loose screws (5) at a torque of 46 Lbs-In.

