



G-PROJECT®

G-GO

BLUETOOTH WIRELESS BOOMBOX
WITH FM RADIO



Bluetooth
Wireless



Rechargeable
Battery



FM Radio



IPX4
Water Resistant

G-500



G-PROJECT®

Welcome to G-PROJECT®

Thanks for purchasing G-GO and joining G-Project.
For more info, please visit our website at **www.gprojectgear.com**

HAVE AN ISSUE?

E-MAIL

support@gprojectgear.com

CALL

855-896-1795

MONDAY - FRIDAY 9AM - 5PM EST

PACKAGE CONTENTS:

- G-GO Bluetooth Wireless Boombox
- USB-C Charging Cable
- User Guide

G-PROJECT is a registered trademark of Goodhatch, LLC.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Life Lab International LTD. is under license. Other trademarks and trade names are those of their respective owners.



BLUETOOTH WIRELESS BOOMBOX

GETTING STARTED

CHANGING THE INPUT SOURCE

When the G-GO powers “ON”, the default audio input source is Bluetooth. To switch to Radio, press the FM Radio button once and G-GO will enter FM Radio mode.

NOTE: If inserting audio cable into the Line-In Jack, G-GO will change to Line-In mode automatically regardless of the current input source.

VOLUME CONTROL


Press the VOLUME + or VOLUME - buttons to increase or decrease the volume.



G-PROJECT®

LOCATION OF CONTROLS

1. Power ON / OFF Button
2. FM Radio
3. Bluetooth PAIR Button
4. Tune Down Button
5. Play / Radio Preset Button
6. Tune Up Button

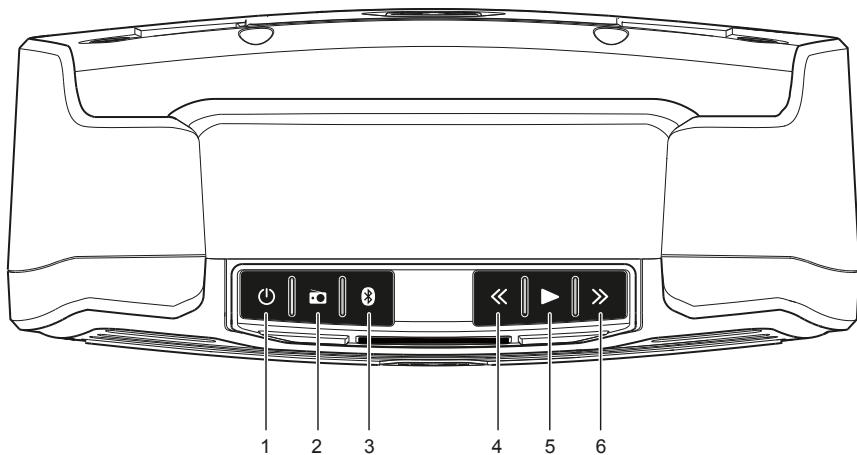

G-GO

BLUETOOTH WIRELESS BOOMBOX

LOCATION OF CONTROLS

7. Volume – Down Button

8. LCD Display


9. Volume + Up Button

10. Reset Button

11. LINE-IN Jack

12. Type-C USB Jack

13. USB Charging Port

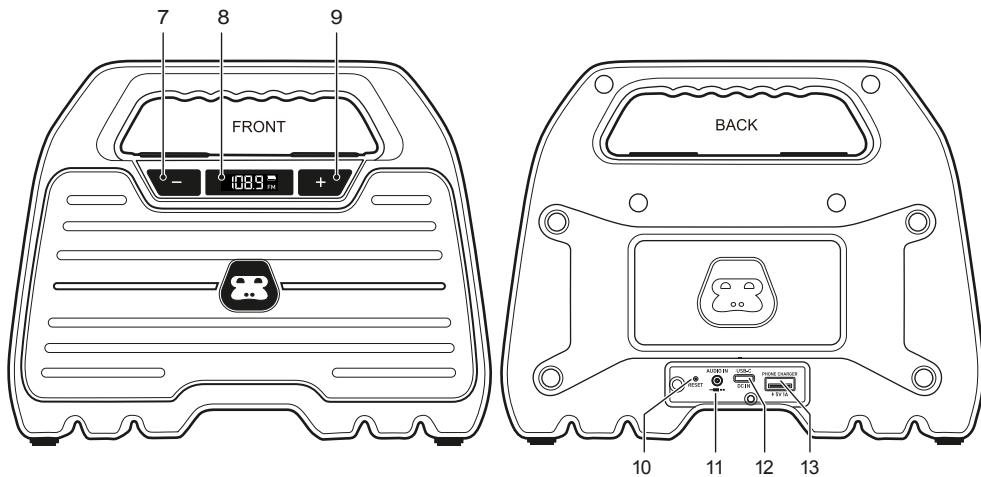



G-PROJECT®

POWER SOURCE

The G-GO is designed to operate using the built-in rechargeable battery.

RECHARGE BATTERY

Connect G-GO with a USB charging adapter or any other USB charging device through the supplied Type-C USB charging cable. The battery icon on the display will appear and the battery level bars will be moving to indicate charging process. When the battery is fully charged, the battery level bars will change to be full .

NOTES: The battery level bar on the display is only to indicate battery power condition for the built-in rechargeable battery.

WHEN TO RECHARGE BATTERY

Please refer to the battery level bar of the battery level indicator on the display for the battery percentage.

- The battery is internal and cannot be replaced
- Actual battery life varies with use, settings, and environmental conditions
- Rechargeable batteries have a limited number of charge cycles
- Charge the rechargeable battery at least biannually
- The battery life will decrease when listening to the G-GO at louder volumes or with songs that are more bass intensive

NOTES

USB CHARGING PORT

G-GO includes a USB charging port (DC 5V, 1A) for charging most devices, including iPhone, iPod, Android devices and other compatible USB devices (USB cable sold separately).

We recommend charging when the G-GO is plugged into with power so that the battery is not drained. You can charge your devices when G-GO is running from battery power, but it will quickly drain the G-GO battery.



G-PROJECT®

PLAYING THE RADIO

- 1 With G-GO powered “ON”, press the FM RADIO button. The current FM station and FM icon will appear on the display.
- 2 **For manual tuning**, repeatedly press the TUNE UP or TUNE DOWN button to manually adjust the tuning on the LCD display until the desired station appears.
- 3 **For auto tuning**, press and hold the TUNE UP or TUNE DOWN button until the display starts to scan, then release the button. The tuner will search and stop on the next strongest station signal it finds. Repeat this process until the desired station appears on the LCD display.

NOTE: G-GO features a built-in internal FM antenna. For best reception please place the unit close to window or open area to improve reception quality. Keep digital music players or mobile phones away from G-GO as this may cause interference. Do not place G-GO near the AC power adapter as this may lead to reception interference.

SETTING RADIO PRESETS

- 1 To preset a radio station to memory, first follow the previous steps to tune in the desired station.
- 2 Press and hold the PLAY / RADIO PRESET button to create a preset for the current station. “P” will appear and “##” (the preset number) will blink on the LCD display.
- 3 Press the TUNE UP or TUNE DOWN button to select a preset number (01- 10). Press the PLAY / RADIO PRESET button again to confirm the setting and the station will be saved into memory.
- 4 Repeat these steps for up to 10 presets, as desired.
- 5 To recall a preset station, repeatedly press the PLAY / RADIO PRESET button until the desired preset number appears in the display and the station tunes in.

NOTES: Saving a new station preset in the same position as a previously saved station will replace the previously stored station for that preset number.



G-PROJECT®

BLUETOOTH OPERATION

You can stream audio wirelessly to G-GO from up to 33' away using your iPhone, iPad, iPod, Android, laptop, or other A2DP Bluetooth enabled device.

- 1 Press the POWER ON/OFF button to turn on G-GO.
- 2 The speaker will be entered to Bluetooth mode. The Bluetooth icon will flash on the LCD display.
- 3 Turn on your compatible A2DP Bluetooth device and enable Bluetooth.
- 4 Search for Bluetooth devices and select “**G-GO**”.
- 5 The Bluetooth icon on the LCD display will change from flashing to solid, indicating that your Bluetooth device is connected to G-GO.

- Press and hold the Bluetooth PAIR button for 3 seconds to disconnect the current Bluetooth connection.

NOTES

- The unit will return to pairing mode and Bluetooth icon on the LCD display will flash.
- If asked for a password, enter “**0000**”.

G-GO

BLUETOOTH WIRELESS BOOMBOX

RECONNECTING YOUR BLUETOOTH DEVICES

Once your Bluetooth device has been paired with G-GO, it is simple to reconnect them.

- 1 Make sure that G-GO is powered on and within range.
- 2 Select “**G-GO**” from the list on your Bluetooth device.
- 3 The Bluetooth icon on the LCD display will change from flashing to solid, indicating that your Bluetooth device is reconnected to G-GO.

NOTES

- For best audio performance, turn the volume on your Bluetooth source device all the way up.
- G-GO can only play audio from one source at a time. If G-GO is connected to LINE IN source, Bluetooth will not function. Simply unplug the 3.5mm LINE IN audio cable and press the Bluetooth PAIR button to switch to Bluetooth (if necessary, select “**G-GO**” on your Bluetooth device).



G-PROJECT®

AUX-IN CONNECTION

You can also play audio from other Line-In digital sources using a standard 3.5mm Line-In audio cable (sold separately).

- 1 Press the POWER ON/OFF button to turn on G-GO.
- 2 Insert one end of the 3.5mm audio cable into the Line-In jack on the rear of G-GO.
- 3 Insert the other end of the 3.5mm audio cable into the Line-Out or headphone jack of your external audio device (e.g. iPad, mobile phone, digital media player, etc.)
- 4 Input source will be switched to LINE-IN mode automatically.
LINE-IN icon will appear on the LCD display.
- 5 Select the music you wish to listen to on your external audio device
then press play and sound will be projected through G-GO speakers.

NOTE: For best audio performance and minimal distortion, avoid turning the volume all the way up on your external audio source.

G-GO

BLUETOOTH WIRELESS BOOMBOX

SPECIFICATIONS

| | |
|-------------------------------|---|
| Output Power | 2 x 5W |
| Battery | 3.7V, 2500mAh, Rechargeable Li-ion |
| Battery Recharging Time | approximately 3 hours |
| Battery Playback Time | Up to 12 hours (varies by volume level and audio content) |

BLUETOOTH:

| | |
|----------------------------------|--------------------------|
| Bluetooth specification | v5.1 |
| Supported Bluetooth Profile..... | A2DP |
| Range..... | 33ft (10m) line of sight |

RADIO:

| | |
|----------------------------|----------------|
| Frequency range (FM) | 87.5 ~ 108 MHz |
|----------------------------|----------------|

Specifications are subject to change without notice.



G-PROJECT®

FAQs

Q: Why can I not pair my Bluetooth device?

A: Occasionally the Bluetooth may need to be reset on your G-GO, and/or your Bluetooth streaming device(s).

First you will want to go into the Bluetooth settings menu on your audio streaming device and delete / '**forget this device**' from the list completely.

Next, you will want to clear the Bluetooth memory on your G-GO which can be done by pressing and holding the Pairing button for 3 seconds or until the Bluetooth icon on the LCD display starts flashing, indicating that G-GO is searching for a compatible Bluetooth device.

Now with your Bluetooth streaming device and G-GO both powered on, try searching for compatible devices under the Bluetooth settings menu of your audio streaming device. After a few seconds it should detect G-GO, at which time you can select "**G-GO**" and establish a new connection.

Q: Why do I not hear any music when I play the radio?

A: Make sure that a 3.5mm Line-In cable is not plugged into the Line-In jack of G-GO as this will automatically switch the unit to AUX even if there is no external audio device connected.

Q: FM radio station not playing clear?

A: For best reception please place the unit close to window or open area to improve reception quality. Keep digital music players or mobile phones away from G-GO as this may cause interference. Do not place G-GO near the AC power adapter as this may lead to reception interference.

G-GO

BLUETOOTH WIRELESS BOOMBOX

IMPORTANT SAFETY NOTIFICATIONS



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



DANGEROUS VOLTAGE: The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



ATTENTION: The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

NOTE: Any unapproved changes or modifications will void the warranty.



G-PROJECT®

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

ATTENTION: POUR ÉVITER LES CHOC ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISES ET POUSSER JUSQU'AU FOND

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Compliance information: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

SURGE PROTECTORS: It is recommended to use a surge protector for AC connection. Lightning and power surges ARE NOT covered under warranty for this product.

WARNING: The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

WARNING: The mains plug is used as a disconnect device, the disconnect device shall remain readily operable.

G-GO

BLUETOOTH WIRELESS BOOMBOX

IMPORTANT SAFETY NOTIFICATIONS

Some of the following information may not apply to your particular product; however, as with any electronic product, precaution should be observed during handling and use.

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all Instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



G-PROJECT®

ADDITIONAL SAFETY PRECAUTIONS

- a. Do not expose this unit or the AC/DC adapter to dripping or splashing water. Keep liquid-filled objects, such as vases, away from this unit and AC/DC adapter.
- b. To ensure that this unit is completely disconnected, unplug it from the wall.
- c. Ensure that the AC/DC adapter is easily accessible.
- d. Please note the information printed underneath the unit.
- e. Batteries should not be exposed to excessive heat such as direct sunshine, fire, etc.
- f. Do not impede the ventilation of this unit by covering the ventilation openings with items such as newspapers, table-cloths, curtains, etc.
- g. Keep open flames, such as lighted candles, away from this unit.
- h. Do not place this unit in closed bookcases, racks, or other spaces without proper ventilation.
- i. Use only the same or equivalent type batteries as there is a danger of explosion if the incorrect batteries are used or they are installed incorrectly.
- j. Dispose of batteries properly according to environmental regulations

Limited 1 Year Warranty

Life Lab International Ltd. (hereafter referred to as Life Lab), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase.

If you are experiencing any problems with the operation or function of your product, please make sure you have downloaded our full owners manual from our website for reference or email us at support@gprojectgear.com for additional troubleshooting assistance. Should this fail to resolve the matter and service is still required by reason of any defect or malfunction during the warranty period, Life Lab will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to a designated factory service center. The product must include proof of purchase, including date of purchase.

Before returning this product for service:

1. Contact customer service to receive a Return Authorization number (RA#).
2. Remove the batteries (if applicable) and pack the unit in a well padded, heavy corrugated box.
3. Enclose a photocopy of your sales receipt, credit card statement, or other proof of original date of purchase, if within the warranty period.
4. Write issued RA# on the top of shipping box.
5. Ship the package from shipping company of your choice, prepaid and insured, to the Life Lab Service Center address supplied by the Customer Service Representative. Be sure to save your tracking number

Disclaimer of Warranty

This warranty is valid only if the product is used for the purpose for which it was designed. It does NOT cover:

- (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons;
- (ii) cracked or broken cabinets, or units damaged by excessive heat;
- (iii) damage to digital media players;
- (iv) the cost of shipping this product to the Consumer Repair Department.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will Life Lab or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgment and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your G-Project product.

For customer support, please e-mail us at: support@gprojectgear.com

For replacement parts, please call us at: [1-855-896-1795](tel:1-855-896-1795)

Questions? Visit www.gprojectgear.com



G-PROJECT®

G-PROJECT is a registered trademark of Goodhatch, LLC.

G-GO is distributed by

LifeLab International LLC • 3471 North Union Drive, Olney, IL 62450 • (855) 896-1795

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Life Lab International LTD. is under license. Other trademarks and trade names are those of their respective owners.