
CROSLEY

CR3029A-TN Retro Bluetooth Speaker Instruction Manual

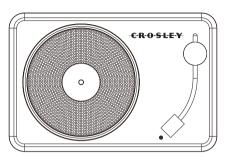

Questions, problems, missing parts?
Before returning to the store, call Customer Service
8 a.m. – 6 p.m., EST, Monday – Friday
1-888-CROSLEY
www.crosleyradio.com

Safety Instructions

Read and understand this entire manual before using this product. Keep these instructions for future reference.

- Do not use this product near water.
- 2. This product should be operated only by the type of power source indicated on the marking label or in this instruction manual.
- 3. Do not defeat the safety purpose of the polarized plug. A polarized plug has two blades with one blade wider than the other. This plug will fit into the power outlet only one way. If you are unable to insert the plug fully into the outlet try reversing the plug. If the plug should still fail to fit, contact your electrician.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the product.
- Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
- Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- Do not use attachments not recommended by the product manufacturer as they
 may cause hazards.
- A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
- 11. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating. Do not block or cover these openings.
- 12. Unplug the product during lightning storm or when unused for long periods of time.

Items in this package

Before throwing away any packaging materials, please check thoroughly and make sure you find the following items that come along with this package:

- Speaker
- USB charging cable
- Strap

Please contact Crosley customer service if there is any accessory missing from the package. Retain the original packaging materials for exchange or return purposes.

Specifications

Power Source

Micro USB Cable, DC output 5V, 1A


Power consumption 3WOutput Power 3W

• Speaker 3Ω 3W

Charging Time
 Playing Time
 Battery capacity
 Charging Time
 About 100 minutes
 Up to 3 hours
 400mAh

• Bluetooth version 5.1

Product Description

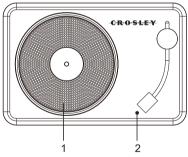

- Speaker
- 2. Microphone
- 3. Hanging hole
- 4. Indicator LED
- 5. USB charging port
- 6. Power/Play/Pause button

Bluetooth Operation

- 1. Long press the Power/Play/Pause button to turn it ON, and the indicator LFD will flash blue.
- 2. Turn on the Bluetooth feature of your audio device, search for "CROSLEY CR3029A" and pair.
- 3. Once your device is successfully paired with the unit, you will hear a short confirmation sound from the unit.
- 4. Play and stream music from your device to the unit.

Twins Connected Mode

- 1. Turn on both sets of speakers by long pressing the Power/Play/Pause button
- Quickly double-click the Power/Play/Pause button on each speaker separately.
- 3. You will hear a confirmation notification showing they are paired.
- 4. Connect your Bluetooth.
- There will be a confirmation notification from one speaker showing they are paired with your Bluetooth device.

Note:

This speaker will be the Primary and the other will be secondary. The primary speaker indicator LED will flash blue

To Disconnect

To disconnect the speakers from the Twins Connected Mode, double-click the Power/Play/Pause button quickly on one of twins-connected speakers. You will hear a confirmation notification showing they are disconnected.

Other Operation

Bluetooth Calling

When your smartphone is paired with speaker, the speaker will ring when an incoming call is received. Press Power/Play/Pause button to answer the call, and speak through the microphone on the unit. Press and hold the Power/Play/Pause button to reject incoming call.

Standby Function

If not connected to Bluetooth, the unit will automatically shut down after five minutes.

FCC Statements

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

名 称	127 说明书	版本	1.2	绘	制		工利	呈确认	
物料编号		比 例	1:1	市场	确认		审	核	
工艺要求	270x95mm, 80g书写纸,双面黑色印刷, 风琴折, 折后尺寸90x95			日	期	2021-12-9	GXTSONIC 格信通		