

# CROSLEY®

**CR3050A**  
**Bluetooth Speaker**  
**Instruction Manual**

---



Questions, problems, missing parts?  
Before returning to the store, call Customer Service  
8 a.m. – 6 p.m., EST, Monday – Friday  
1-888-CROSLEY  
[www.crosleyradio.com](http://www.crosleyradio.com)

## **Safety Instructions**

---

Read and understand this entire manual before using this product. Keep these instructions for future reference.

1. Do not use this product near water.
2. This product should be operated only by the type of power source indicated on the marking label or in this instruction manual.
3. Do not defeat the safety purpose of the polarized plug. A polarized plug has two blades with one blade wider than the other. This plug will fit into the power outlet only one way. If you are unable to insert the plug fully into the outlet try reversing the plug. If the plug should still fail to fit, contact your electrician.
4. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the product.
5. Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
6. Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
7. Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
8. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
9. Do not use attachments not recommended by the product manufacturer as they may cause hazards.
10. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
11. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating. Do not block or cover these openings.
12. Unplug the product during lightning storm or when unused for long periods of time.

## Items in this package

---

Before throwing away any packaging materials, please check thoroughly and make sure you find the following items that come along with this package:

- Speaker
- USB-C Cable
- Silicone Strap

Please contact Crosley Customer Service if there is any accessory missing from the package. **Retain the original packaging materials for exchange or return purposes.**

## Specifications

---

Power Source	DC Output 5V 1A
Power consumption	3W
Speaker	3Ω 3W
Playing Time	Up to 17 hours (50% volume and lights off)
Charging Time	1 hour
Battery Capacity	500 mA/h
Bluetooth Version	5.3


*Note:*

- *Design and specifications are subject to change without notice.*
- *Use protective pads, such as felt, cork, or non-reactive mat, under equipment with “rubber” cushioning feet. Some chemical compounds used in the feet of electronics equipment may leave permanent stains or marks on your surfaces. Surfaces such as but not limited to solid wood, wood veneer, and painted wood.*


## Product Description

---

1. Multifunction Button
2. Volume Up
3. Volume Down
4. Speaker

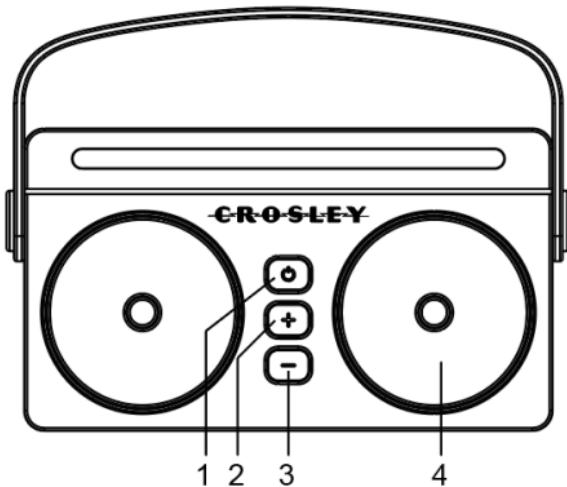

5. LED Indicator
6. USB-C Charging Port

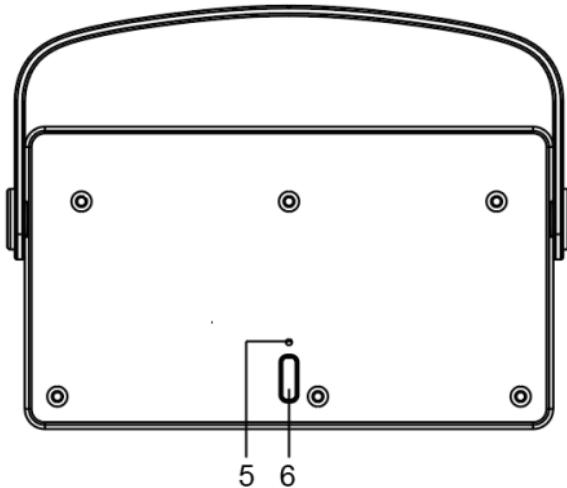

## Initial Setup

---

### Essential Setup

1. Place the unit on a flat and level surface. The selected location should be stable and free from vibration.
2. Connect the USB-C Cable to the Charging Port of the unit.
3. To turn the unit on and off, long-press the Multifunction button.

## Charging/Power Source

---

1. This unit has a built in rechargeable battery.
2. Connect to a PC, Laptop or 5V USB adaptor with the provided USB-C cable.
3. The LED Indicator will be red when charging and will go off when fully charged.

## Bluetooth Operation

---

1. Long press the Multifunction button to turn on the unit. The LED indicator will start flashing blue.
2. Turn on the Bluetooth feature of your audio device, search for “CROSLEY CR3050A” and pair.
3. Once your device is successfully paired with the unit you will hear a short confirmation sound from the unit.
4. Play and stream music from your device to the unit.

*Note: Bluetooth version – 5.3*

## **Twin Connected Mode**

---

### **To Connect**

1. Turn on both sets of speakers by long pressing the Multifunction button.
2. Quickly triple-click the Multifunction button on one of the speakers.
3. You will hear a confirmation notification showing they are paired.
4. Connect your Bluetooth.
5. There will be a confirmation notification from one speaker showing they are paired with your Bluetooth device.

*Note: This speaker will be the Primary and the other will be secondary. The primary speaker indicator LED will flash blue.*

### **To Disconnect**

To disconnect the speakers from the Twin Connected Mode, triple-click the Multifunction button quickly on one of the twins-connected speakers. You will hear a confirmation notification showing they are disconnected.

## **Other Operation**

---

### **Standby Function**

If not connected to Bluetooth, the unit will automatically shut down after fifteen minutes.

### **LED Lights**

Quickly double-click the multifunction button to change the LED lights, there are total of 5 effects.

## Troubleshooting

---

### There is no power

- No power at the power outlet.
- The battery needs to be charged.

### There is no sound

- Make sure the volume on your third party device is turned up.

## FCC Statements

---

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. such modifications

could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.

### **SIMPLIFIED EU DECLARATION OF CONFORMITY**

Hereby, Modern Marketing Concepts Inc. dba Crosley Brands, declares that the radio equipment type is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:  
<http://crosleybrands.com/euDoC>