

Bluetooth speaker

Model Name: TRX570

FCC ID: AXE-TRX570



USER GUIDE



Rocking Sound Bomb The world!

Set your IBOMB TURBO wireless Bluetooth

2

PAIR DEVICE

Turn on Bluetooth on your device and search the "IBOMB TURBO", Select it to connect.

1

PAIRING MODE

Switch to the "ON" Posting ,LED Light indicator light will flash blue indicating that the Ibomb Thunder Ball is in pairing mode.

TURN ON/OFF

ON/OFF switch is located at the bottom of the device.

3

PLAY

If you are prompted to enter a password to complete pairing,enter"0000"

If a device is not connected after 30 seconds; it will enter sleep mode automatically. Turn the speaker OFF and then ON again to re-enter pairing mode.

If the IBOMB TURBO is moved out of rang start again to re-enter the connection.

IBomb

Enjoy music, Enjoy life

Change function mode

Shor press of " " Button is switching mode between TF card ,AUX and Bluetooth.

wired

Playing music with a 3.5mm Cable

Plug the provided 3.5mm audio cable into the IBOMB TURBO And Then connect your source and then your source.

How to use?

SHORT PRESS	LONG PRESS
	Play / Pause
	Change play music mode (Bluetooth/TF card/Wired)
	Next song
	Volume up
	Previous song
	Volume down

Note:NFC feature only applies to models with NFC-enabled phone. (NFC compatible handset models see the official website of the corresponding product information)

Turn the power switch on the Bluetooth speaker "ON" at the voice prompt "enter Bluetooth - waiting for connection."

NFC-enabled phone turn on Bluetooth and NFC function, let the phone NFC antenna (antenna position different NFC phone is not the same) touch speaker's NFC antenna very closely, you can quickly realize the phone and Bluetooth speaker connection or disconnection. (First connection time of 20 seconds or so)

NFC Features



Embedded microphone for handsfree conversation.



TROUBLESHOOTING

Fail to pair

Make sure the device is in pairing mode and the blue light is flashing. Please reset (on/off)the power switch again.

Fail to find TRX570

Check that the speaker is in pairing mode. Ensure your device is within Wireless use range. Reset your device to activate Wireless. Ensure that your device is not connected /paired to any other Wireless devices as Wireless can only be paired to one device at a time



Charging FIRST TIME

Make sure the device is turned OFF. Plug the speaker to a powered USB port. While charging the Indicator LED light will be red. Once fully charged ,the red LED light will turn OFF.

To avoid damage to your battery only charge them when flat.



Device only works with Micro SD cards up to 32 GB.



Play your music anywhere you go; directly from the device using the micro sd slot.

Web: WWW.I-BOMB.COM
More question please mail to :INFO@I-BOMB.COM



Important Regulatory Information

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.