

IBomb Party



Amp up your party anywhere



USER GUIDE

FCC ID:AXE-XL750
IC:11118A-XL750

Model:XL750

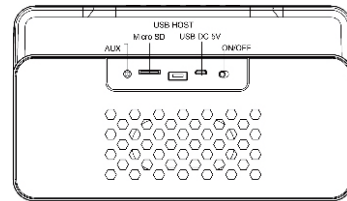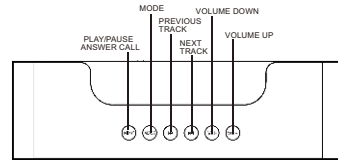

Bluetooth The Bluetooth® wordmark and logo are registered trademarks owned by Bluetooth SIG, Inc.

Setup your

IBomb Party wireless



What's in the box?

- 1 IBomb Party
- 1 User Guide

2

PAIR DEVICE



Turn on bluetooth on your device and search for the "IBomb Party", select it to connect to play music.

1

PAIRING MODE

Switch to the "ON" position, the LED Display will show "Blue", indicating that IBomb Party is in pairing mode.

If you are prompted to enter a password to complete pairing, enter "0000"



**TURN ON
LED display HI**



3

PLAY

If a device is not connected after 30 seconds, it will enter sleep mode automatically. Turn the speaker OFF and then ON again to re-enter pairing mode.



If the IBomb Party is moved out of range, start again to re-enter the connection.

CHANGE INPUT MODE

Press "MODE" button to switch/change play music mode among TF card, U-disk, AUX FM and bluetooth.

wired

Plug the included 3.5mm audio cable into the IBomb Party and then connect your source (e.g: MP3 player, Tablet, Computer, etc.)

How to use?



Play/Pause/Answer call

MODE

Change play music mode (Bluetooth/TF card/U-disk/Aux)



Short press to previous track
Long press to fast backward



Short press to next track
Long press to fast forward

Vol-

Volume down

Vol+

Volume up



When your call coming, please press " " button to pick up your call.



Embedded microphone for handsfree conversation.

FAIL TO PAIR

TROUBLESHOOTING

Make sure the device is in pairing mode and the Bluetooth is working. Please reset (ON/OFF) the power switch again.

Check that the speaker is in pairing mode.

Ensure your device is within Wireless use range.

Reset your device to activate Wireless.

Ensure that your device is not connected /paired to any other Wireless devices as Wireless can only be paired to one device at a time.

Fail to find IBomb Party



Charging FIRST TIME

Make sure the device is turned OFF. Plug the speaker to a powered USB port. While charging the Indicator LED light will be red. Once fully charged, the red LED light will turn OFF.

⚠ To avoid damage to your battery only charge them when flat.



Device only works with Micro SD card up to 32GB



**Play your music
anywhere you go**

directly from the device
using the micro sd slot/U-disk.



WWW.I-BOMB.COM

More question please mail to :INFO@I-BOMB.COM

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.