

IBomb®
Enjoy music, Enjoy life


Cobble

Model: IBomb Cobble



USER GUIDE

Controls

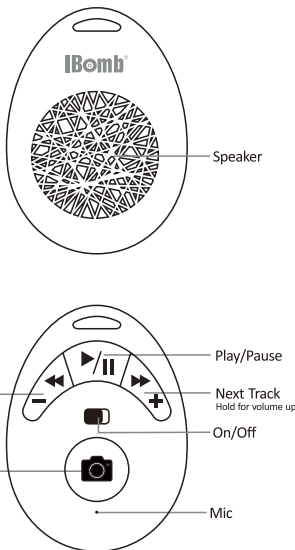

**The Music
Lover and
Photographer's Best Friend**

Design Patent NO: 201430416107.5

Setup your

IBomb Cobble

wireless



INSTRUCTIONS

Switch on the IBomb Cobble. The LED will flash blue and you will hear a voice indicating the speaker is ready for pairing.

When the IBomb Cobble is in pairing mode, search for Bluetooth devices from your smartphone. Select "IBomb Cobble". If you are prompted to enter a password, enter, "0000". The IBomb Cobble will announce that it is connected

QUICK SETUP Turn on the IBomb Cobble, then search for Bluetooth connections using your device. Connect to "IBomb Cobble".



1 **TURN ON
IBomb Cobble**

2 **SEARCH FOR
CONNECTIONS**
Connect to "IBomb
Cobble" from your
Bluetooth device

3 **PLAY**

If a device is not connected after 30 seconds, it will enter into sleep mode automatically. Turn the speaker off and then ON again to re-enter pairing mode.

If the speaker is moved out of range (10m), bring the IBomb Cobble closer to your device and restart the process to reconnect

- 1 IBomb Cobble
- 1 USB Cable
- 1 User Manual
- 1 Lanyard


What's in the box?

Remote Shutter

After the IBomb Cobble is paired, press and hold the IBomb Cobble Camera button to enter "Camera Mode". Open a photo-taking app on your phone and press the camera button on the IBomb Cobble to take a picture. Now you can trigger your smartphone to take a picture, from up to 10m away!

Hands-free

If you receive a phone call, press any button to answer the call.

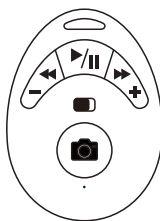

Embedded microphone for handsfree conversation.

Note: Support Apple iOS, Android only.

TROUBLESHOOTING

My Bluetooth device can't find the IBomb Cobble



Check that the speaker is in pairing mode.
Ensure your device is within wireless use range.
Reset your device and ensure Bluetooth is searching

Bluetooth pairing fails

Ensure the speaker is in pairing mode (flashing blue light.)
If not, turn the speaker off then on to reset it. Ensure the speaker isn't already connected to another device. You can only pair the speaker with one device at a time.



Charging the battery

The IBomb Cobble will notify you when the battery is low by playing a voice prompt. You must turn the speaker off in order for it to charge. Plug the speaker into a powered USB port. The LED will turn red to indicate it is charging. When fully charged, the LED will turn off.

FCC

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



WWW.I-BOMB.COM

More questions Email us at info@i-bomb.com