



# Quick Start



## More HP resources

### Resource

#### HP support:

For U.S. support, go to <http://www.hp.com/go/contactHP>.

For worldwide support, go to [http://welcome.hp.com/country/us/en/wwcontact\\_us.html](http://welcome.hp.com/country/us/en/wwcontact_us.html).

### Serial number, product number, and model number

#### Google

For Google support, go to <http://www.google.com/mobile/android>.

#### Limited Warranty

This document is provided in the box. You can also go to <http://www.hp.com/go/orderdocuments>.

### Contents

- Online chat with an HP technician.
- Email support.
- Find telephone numbers.
- Locate HP service center locations.
- Access User Guide.

- Back of tablet

- Access Google online help and support.

- Warranty information about this tablet.

## Software terms

By installing, copying, downloading, or otherwise using any software product preinstalled on this computer, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a full refund subject to the refund policy of your seller. For any further information or to request a full refund of the purchase price of the tablet, please contact your seller.

## Specifications

The tablet operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated at 100—240 V, 50—60 Hz.

**Note:** The tablet can operate on DC power using an industry-standard micro-A or micro-B USB cable. The HP SV 1A adapter included with your tablet is recommended for charging the tablet.

**Temperature** Operating: Metric, 0°C to 40°C; U.S., 32°F to 104°F

**Relative humidity (noncondensing)** Operating: 10% to 90%

© Copyright 2013 Hewlett-Packard Development Company, L.P. Google, Android, and Google Play are trademarks of Google Inc. The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical and editorial errors or omissions contained herein. First Edition: July 2013.

## Regulatory information

Regulatory markings for your country or region may be located on the back of the tablet or may be displayed electronically. If the markings for your country are not on the back of the tablet, please check the electronic labeling. To display the regulatory e-labels:

1. Touch All apps, touch Settings, and then touch About tablet.
2. Touch Regulatory Information, and then the label icons are displayed.

**Regulatory model identification number**  
For regulatory identification purposes, your product is assigned a Regulatory Model Number. The Regulatory Model Number for your product is HSTNH-B14C. This regulatory number should not be confused with the marketing name (if any, etc.) or product numbers (HP PIN, etc.).

#### Regulatory notices

This section provides country- and region-specific non-wireless and wireless regulatory notices and compliance information for the tablet product. One or more integrated wireless devices may be installed. In some environments, the use of wireless devices may be restricted. Such restrictions may apply on-board airplanes, in hospitals, near explosives, in hazardous locations, and so on. If you are uncertain of the policy that applies to the use of this product, ask for authorization to use it before you turn it on.

Regulatory markings for your country or region may be located on the bottom of the product, either under the battery, under a user-removable door for some other user-accessible location, or on the wireless or modem module.

The FCC has granted an Equipment Authorization for this model device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on the model is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/eet/ea/cfid>.

**CAUTION:** Devices not for sale or use in the United States may not have an FCC ID.

#### Federal Communications Commission notice

The United States Federal Communications Commission (in 47 CFR 15.105) has specified that the following notice be brought to the attention of users of this product:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio or television technician for help.

#### Modifications

The FCC requires the user to be notified that any changes or modifications to this device that are not expressly approved by HP may void the user's authority to operate the equipment.

#### Cables

To maintain compliance with FCC Rules and Regulations, connections to this device must be made with shielded cables having metallic RF/EMI connector hoods.

#### Declaration of Conformity for products marked with the FCC logo (United States only)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following 2 conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

For further information, contact:

**Hewlett-Packard Company**, 1501 Page Mill Road, Palo Alto, California, United States

To identify your product, refer to the part, series, or model number located on the product.

#### Products with wireless LAN devices or HP Mobile Broadband Modules

This device must not be co-located or operating in conjunction with any other antenna or transmitter.

**WARNING:** Exposure to Radio Frequency Radiation: The radiated output power of this device is below the FCC radio frequency exposure limits. Nevertheless, the device should be used in such a manner that the potential for human contact is minimized during normal operation. The exposure standard for wireless devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. To avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna should be minimized. This device has been tested and demonstrated compliance when Bluetooth and Wi-Fi are transmitting simultaneously.

#### Airline travel notice

Use of electronic equipment onboard commercial aircraft is at the discretion of the airline.

#### Potential safety conditions notice

If you notice any of the following conditions (or if you have other safety concerns), do not use the tablet computer: crackling, hissing, or popping sound, or a strong odor or smoke coming from the tablet computer. It is normal for these conditions to appear when an internal electronic component fails in a safe and controlled manner. However, these conditions may also indicate a potential safety issue. Do not assume it is a safe failure. Turn off the tablet computer, disconnect it from its power source, and contact technical support for assistance.

#### Headset and earphone volume level notice

**WARNING:** Listening to music at high volume levels and for extended durations can damage one's hearing. To reduce the risk of hearing damage, lower the volume to a safe, comfortable level and reduce the amount of time listening at high levels.

For your own safety, before using headsets or earphones, always reset the volume. Some headphones are louder than other headphones, even if the volume control setting is the same. For your own safety, headsets or earphones used with this product should comply with the headphone limits in EN 50332-2. If the tablet computer includes a headset or earphones, this combination is in compliance to EN 50332-1.

#### Power connection notices

**WARNING:** To reduce the risk of electric shock or damage to the equipment: Plug the AC adapter into an AC outlet that is easily accessible at all times. Disconnect power from the tablet computer by unplugging the AC adapter from the AC outlet (not by unplugging the power cord from the tablet computer).

**WARNING:** To reduce potential safety issues, only the AC adapter provided with the tablet computer, a replacement AC adapter provided by HP or an AC adapter purchased as an accessory from HP should be used with the tablet computer.

#### Travel notice

**WARNING:** To reduce the risk of electric shock, fire, or damage to the equipment, do not attempt to power the tablet computer with a voltage converter kit sold for appliances.

#### Environmental notices for tablet computers

This section provides country- and region-specific environmental notices and compliance information. Some of these notices may not apply to your product.

#### Battery notice

Do not attempt to remove or replace the factory-sealed battery. Removing or replacing the battery could affect your warranty coverage. If the battery is no longer holding a charge, contact support. When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for computer battery disposal.

#### Electronic hardware and battery recycling

HP encourages customers to recycle used electronic hardware. HP original print cartridges, and rechargeable batteries. For more information about recycling programs, see the HP Web site at <http://www.hp.com/recycle>.

#### California Rechargeable Battery Take-back Notice

HP encourages customers to recycle used electronic hardware, HP original rechargeable batteries. For more information about recycling programs, go to <http://www.hp.com/recycle>.

## View photos

To view the photos in your Gallery, touch the **All apps** icon, and then touch the **Gallery** app.

## Display apps, widgets, and notifications

**Apps**—Touch the **All apps** icon, and then touch the **Apps** tab to see a list of all apps.

**Widgets**—Touch the **All apps** icon, and then touch the **Widgets** tab to see a list of all widgets.

**Notifications**—Swipe down from the top of the screen to see your notifications.

## Organize the Home screen

- To add an app or a widget to the Home screen, touch the **Apps** tab or the **Widgets** tab, and then tap and hold an app or widget until it is added to the Home screen.
- To remove an app or widget from the Home screen, drag it to the X at the top of the screen.

#### IC Notice

This complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

IC: 3905A-HHB14C

#### IC Radiation Exposure Statement

This EUT is compliance with SAR for general population/uncontrolled exposure limits in IC RSS-102 and had been tested in accordance with the measurement methods and procedures specified in IEEE 1528 and IEC 62209. This equipment should be installed and operated with minimum distance 0 cm between the radiator and your body. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.


Cet appareil est conforme aux limites d'exposition DAS incontrolée pour la population générale de la norme CNR-102 d'Industrie Canada et a été testé en conformité avec les méthodes de mesure et procédures spécifiées dans IEEE 1528 et IEC 62209.

Cet appareil doit être installé et utilisé avec une distance minimale de 0 cm entre l'émetteur et votre corps. Cet appareil et sa ou ses antennes ne doivent pas être co-localisées ou fonctionner en conjonction avec tout autre antenne ou transmetteur.



737968-001

## Getting to know your tablet

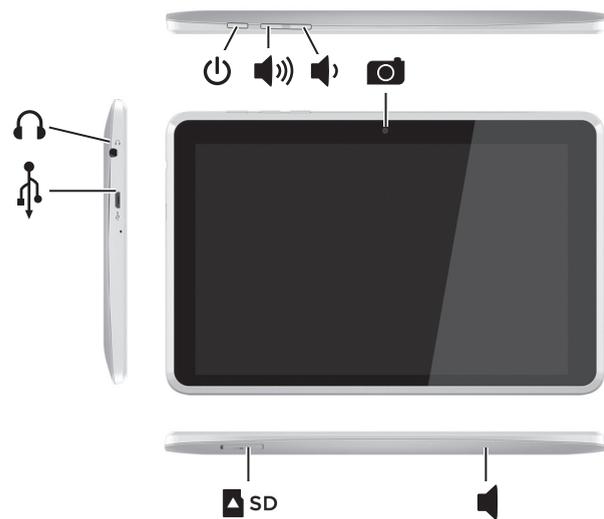

**IMPORTANT:** Before using the tablet for the first time, connect it to external power, and then charge the battery for at least 15 minutes.

## Setting up your tablet



- 1 After charging the battery, and while the battery image is displayed on the screen, press and hold the power button about 5 seconds until the HP logo is displayed.

**IMPORTANT:** If the battery image is not displayed on the screen, press the power button briefly to display the image, and then press and hold the power button until the HP logo is displayed.

- 3 Follow the on-screen instructions to select a language, a wireless network, and a Google™ account.

**Note:** If you do not have a Google account, you can create one now.

### Lock and unlock


**Lock**—Press the power button.

**Unlock**—Press the power button to turn on the tablet, then place your finger on the lock icon  and slide your finger to the unlock position.

### Turn off the tablet

Press and hold the power button, touch **Power off**, and then touch **OK**. If your tablet becomes unresponsive, press and hold the power button for several seconds to turn off the tablet.


## Using the Home screen

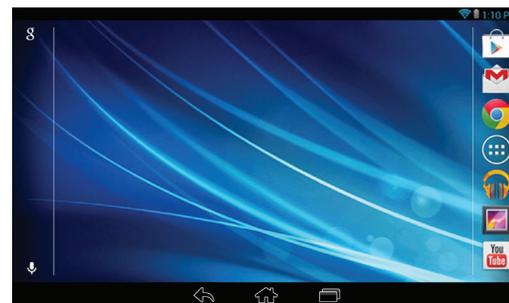

-  **Search**—Type one or more keywords to search with Google.
-  **All apps**—Displays a list of all apps installed. To configure your preferences, touch the **All apps** icon, and then tap the **Settings** icon.
-  **Recent apps**—Opens a list of apps used recently.
-  **Home**—Opens the Home screen.
-  **Back**—Opens the previous screen.
-  **Voice search**—Speak one or more keywords to search with Google.

**Note:** The appearance of the Home screen may vary.

### Use gestures

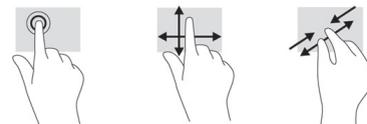

### Return to the Home screen

To quickly return to the Home screen, touch the **Home** icon.

### Use the on-screen keyboard

Touch a text field to open the on-screen keyboard. Some apps may open the keyboard automatically.

### Change your tablet's view

The Auto-rotate feature allows you to change your tablet's view. For landscape view, hold the tablet horizontally. For portrait view, hold the tablet vertically.

**Note:** Some apps do not rotate automatically.

To change the Auto-rotate setting, swipe down from the top of the screen to display notifications, and then touch the Screen rotation icon to lock  or unlock  the screen rotation.

### Download apps from the Google Play™ Store

You must be connected to a wireless network and signed into a Google account before you can access the Play Store to download apps.

1. On the Home screen, touch **All apps**, and then touch the **Play Store** app.
2. To search for an app, touch the **Search** icon, and then type a keyword, or touch a category.
3. Scroll down to see the available apps, and then touch an app to select it.
4. Touch **Install**, and the app begins to download and install.