

User Manual


Model: HSTNH-B407D



CE0560



Product Overview

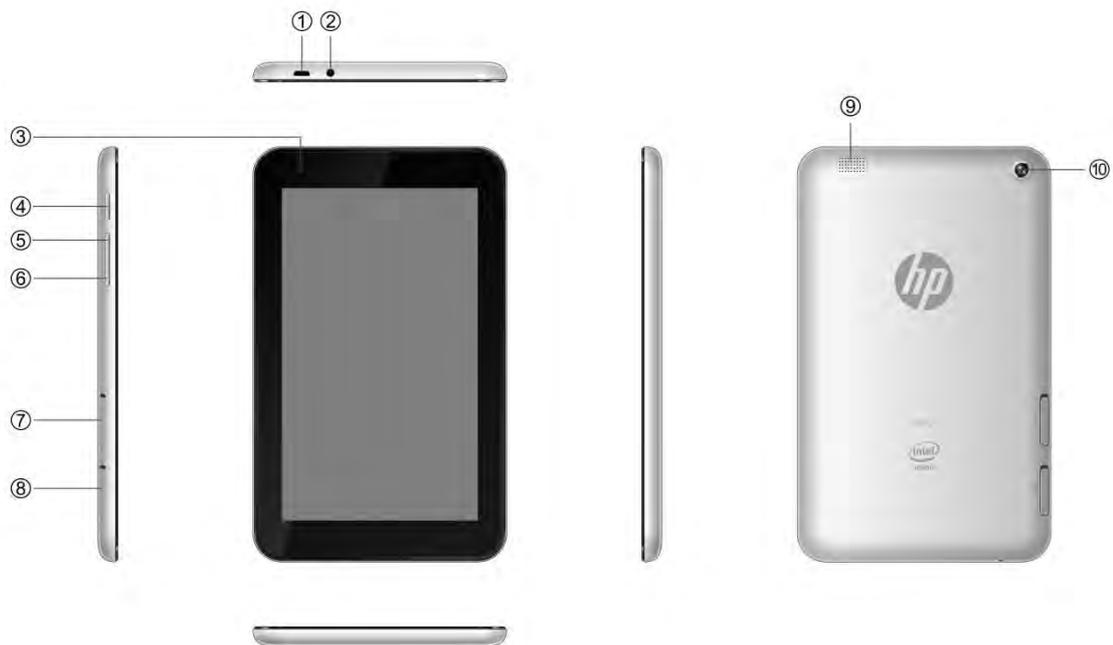

①	Micro USB 2.0 HS	②	Earphone 3.5mm Slot
③	Front-Camera	④	Power Key
⑤	Volume Key +	⑥	Volume Key-
⑦	Micro SD Slot	⑧	SIM Card Slot
⑨	Speaker	⑩	Rear-Camera

Getting Started

Turning the tablet On/Off

To turn On the tablet

1. Press and hold the PWR key for a few seconds.
2. Unlock the screen with your finger.

To turn Off the tablet

1. Press and hold the PWR key, select Power Off;
2. Tap OK. The tablet will be off in a few seconds.

Unlocking screen

The screen is locked by default when you turn on the tablet. To unlock the screen,

1. Press the PWR key.
2. Drag the inner ring to the edge of the circle to unlock the screen. Draw a pattern if the screen is protected by pattern lock. Enter a PIN or a password if the screen is locked by a PIN or a password.



Locking screen

To lock the screen, press the PWR key. It is recommended to lock the screen to protect information in the tablet and reduce battery usage.

You can also configure your tablet to automatically lock after a certain period of time. Tap  → Settings → Display → Sleep to set the sleep time from 15 seconds, 30 seconds, 1 minute, 2 minutes, 5 minutes, 10 minutes, or 30 minutes.

Using touch screen

All of the functions of the tablet, except for power and volume, are performed on the touch screen. Therefore, it is essential to know how to use the touch screen.

The following finger actions might help you easily understand how to use the touch screen.

- **Tap:** Touch an item (e.g. application or widget) once that appears on the screen with your finger to run it or access a menu or an option
- **Double tap:** Tap an item twice with your finger
- **Drag:** Tap and hold your finger on an item and move it without losing contact with the screen
- **Flick:** Place a finger on an empty space of the screen and move the screen up or down, or left or right
- **Pinch:** Place two fingers on the screen and move them apart to zoom in a picture, a document or a web page, or move them together to zoom out
- **Select and tap:** Tap an item in the list of options available
- **Press and hold:** Press a key or any item for a few seconds until a list of options appears

Cautions:


- Do not use sharp tools that can scratch the touch screen.
- Do not allow the touch screen to come in contact with chemicals. The screen may malfunction in chemicals.
- Do not sit on the tablet: the touch screen can be damaged.

Status bar


The status bar at the top of the screen notifications from various apps, time, and the states of various devices such as battery status, WIFI status, Signal status and so on.



1. Notification panel displays notification icons to inform you of new Email, messages, and so on. Slide the panel down to view the notifications and then tap a notification icon to view details of the notification.

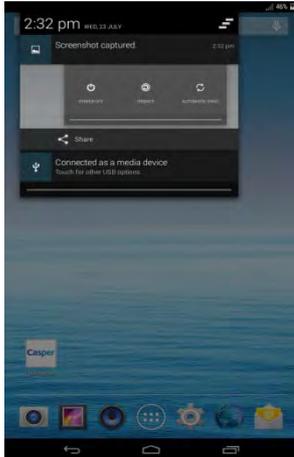

2. Status panel displays status icons to show the current state of your tablet, such as battery charging progress, alarms, Bluetooth, and so on. Slide the panel down to access more settings and configuration options

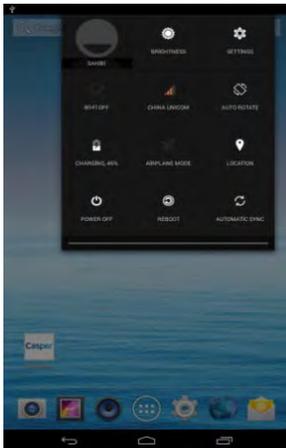

Screen orientation

For optimal viewing experience, the screen orientation changes automatically depending on how you hold the tablet.

NOTE: To enable or disable auto-rotate, slide down the status panel and tap the Auto-rotate icon.

Keys and functions



1. **Back key**
 - Tap to return to the previous screen and exit the running application.
 - Tap to close the on-screen keyboard in text input mode.
2. **Home key**
 - Tap to return to the main screen.
 - Tap and hold to open the Google search.

3. Menu key

- Tap to open the applications list used recently.

Apps and widgets


Apps: Software that allows you to perform a specific task. Your tablet is preloaded with a variety of applications, and additional applications can be downloaded from the Play Store.

Widgets: A small application which resides on the home screen and provides quick and easy access to information.

Connecting to the Internet using WiFi

NOTE: The range and quality of the WIFI signal is affected by the distance between the tablet and the wireless router, the number of connected devices, infrastructure, and objects through which the signal is transmitted.

1. Tap  → Settings → WIRELESS & NETWORKS → WIFI.
2. Enable WIFI by moving the slider to On position. The tablet scans for WIFI networks in range.
3. Tap the network you want to connect to.
4. Type a password (if connecting to a secure network) and tap Connect to connect to the selected WIFI network.

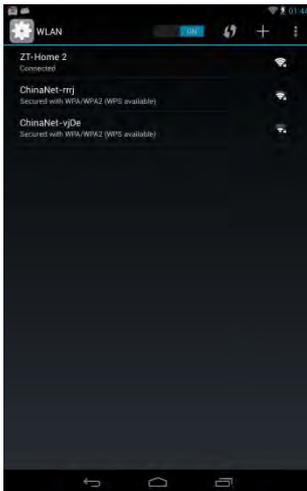

NOTE: To connect to a secured WIFI network, you must provide the security key. If you do not have the security key, contact the person who manages your WIFI network or the router manufacturer.

NOTE: To start a new search for available WIFI networks, on the WIFI screen, tap  → Scan

Connecting to the Internet using mobile broadband

1. Tap  → Settings → WIRELESS & NETWORKS → WIFI, then touch WIFI to disable it.
2. The tablet automatically searches for the carrier signal and connects to the network. When the tablet is connected to a mobile broadband network, the network type appears in the status bar.

NOTE: Make sure you have a valid SIM/USIM IN the tablet

On the mobile broadband model, if both WIFI and mobile broadband networks are available, the tablet gives priority to WIFI connection.

Safety Information

The following list shows how to maintain your tablet, together with precautions to take.

- Keep your tablet and its accessories out of the reach of pets.
- Do not allow children to use your tablet. If children use the device, make sure that they use the tablet properly.
- Maintain your tablet in dry conditions and keep it within normal operating temperatures. Temperatures higher than **55°C (131°F)** or lower than **-20°C (-4°F)** may damage your tablet.
- Do not try to dry your tablet in a microwave oven. If you do, sparks can occur and cause an explosion or fire.
- Do not use or store your tablet in dusty or dirty areas.
- Do not attempt to disassemble your tablet.
- Do not drop or cause severe impact to your tablet.
- Do not use chemical products, cleaning solvents or detergents to clean your tablet.
- If your tablet does not work properly, contact your dealer immediately.
- Use only authorized batteries, battery chargers and accessories. Any malfunction or damage caused by the use of unauthorized batteries, battery chargers and accessories will void the limited product warranty.

Ensure that the battery charger does not come in contact with conductive objects.

CE Marking

This device has been tested to and conforms to the regulatory requirements of the European Union and has attained CE Marking. The CE Mark is a conformity marking consisting of the letters "CE". The CE Mark applies to products regulated by certain European health, safety and environmental protection legislation. The CE Mark is obligatory for products it applies to: the manufacturer affixes the marking in order to be allowed to sell his product in the European market.

This product conforms to the essential requirements of the R&TTE directive 1999/5/EC in order to attain CE Marking. A notified body has determined that this device has properly demonstrated that the requirements of the directive have been met and has issued a favorable certificate of expert opinion. As such the device will bear the notified body number **0560** after the CE mark.

The CE Marking is not a quality mark. Foremost, it refers to the safety rather than to the quality of a product.

Secondly, CE Marking is mandatory for the product it applies to, whereas most quality markings are voluntary.

Federal Communications Commission (FCC) Statement

15.21

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

15.105(b)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- 1) this device may not cause harmful interference and
- 2) this device must accept any interference received, including interference that may cause undesired operation of the device.

FCC RF Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

End users must follow the specific operating instructions for satisfying RF exposure compliance.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

SAR Information

- FCC: 1.35 W/Kg @ 1g