 
 


Quick Start

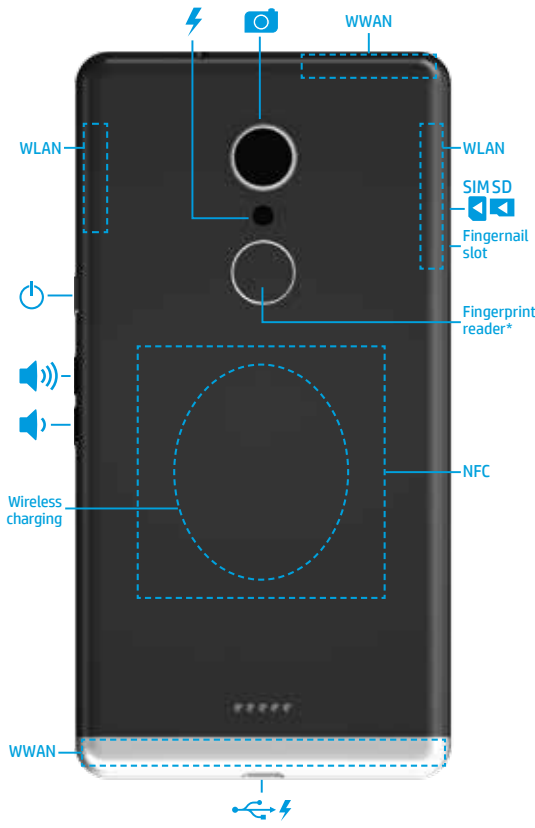

* Additional software may be required to use the fingerprint reader. For more information, go to <http://www.hp.com/support>.

Replace this box
with PI statement
as per spec.

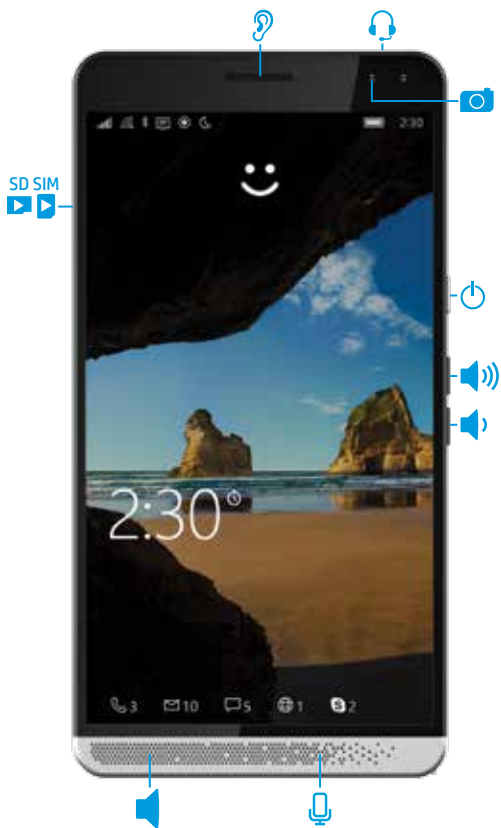

 
855136-001

NOTE: Features may vary by model and country.

Setup

- 1 Place your fingernail in the fingernail slot and pull the tray out to remove it. Then insert a nano SIM card (purchased separately) into the tray.

NOTE: Your device supports two nano SIM cards or one nano SIM card and one microSD card.

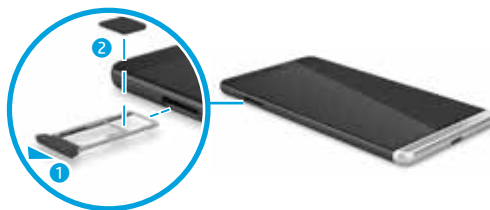



- 2 To insert a second nano SIM card (purchased separately), place the card in the tray's second slot.

Replace the tray.

— or —


- To insert a microSD card (purchased separately), place the card in the tray's second slot.

  Replace the tray.

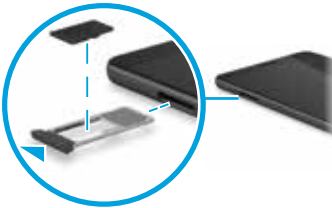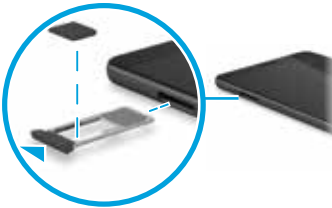

- 3 After charging the battery,* press the power button for about 5 seconds until you feel the device vibrate.

 *The battery is fully charged when the status light changes from red to green.

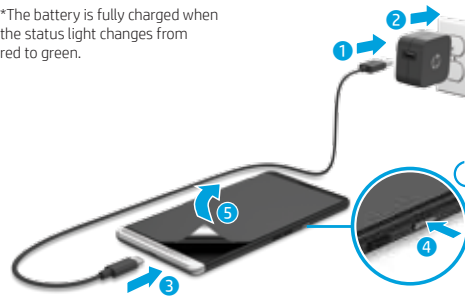

- 4 Follow the on-screen instructions to select a language, a wireless network, a Microsoft® account,* storage options, and other settings.

If the screen switches off, press the power button, and then slide up from the bottom of the screen.

*If you do not have a Microsoft account, you can create one now.

LOCK SCREEN SIGN-IN

You can set up a sign-in lock screen to make sure no one else can unlock your device using a sign-in PIN, iris scan, or fingerprint reader.

To set a sign-in PIN, slide down from the top of the screen, tap **Settings**, tap **Personalization**, tap **Lock screen**, tap **Sign-in options**, and then follow the on-screen instructions.

For more sign-in options, see the "Security and backup" section of this document.

Power off

Press and hold the power button, and then slide down on the screen when prompted.

NOTE: If your device becomes unresponsive, press and hold the power button until the device turns off.

Basic tasks

UNLOCK THE SCREEN

Press the power button, and then slide up from the bottom of the screen.

DISPLAY THE START SCREEN

Tap **Start**.

ACCESS SETTINGS AND NOTIFICATIONS

Slide down **Notifications** from the top of the screen.

DISPLAY THE NAVIGATION BAR

Slide up **Navigation bar** from the bottom of the screen.

SEARCH

Tap **Search**, tap the search box at the bottom of the screen, and then begin typing the name of an app, setting, file, or Internet topic.

—or—

Tap **Search**, tap the search box at the bottom of the screen, tap **Search**, and then speak the name of an app, setting, file, or Internet topic.

DISPLAY THE PREVIOUS SCREEN

Tap **Back**.

LIST YOUR APPS

Slide left **Apps** on the screen.

ADD APPS

Tap **Start**, tap **Store**, tap **Search** at the top of the screen, type your search term, tap **Search**, and then follow the on-screen instructions.



NOTE: The appearance of the screen may vary.

CREATE NEW CONTACTS

 
Tap **Start**, slide left on the screen to display all apps, tap **People**, tap **+**, and then follow the on-screen instructions.

SET UP EMAIL AND SOCIAL NETWORK ACCOUNTS

Slide down from the top of the screen, tap **Settings**, tap **Accounts**, tap **Your email and accounts**, and then follow the on-screen instructions.

SEND EMAIL

Tap **Start**, tap **Outlook Mail**, select your account, and then follow the on-screen instructions.

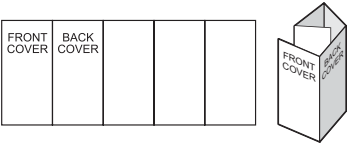

Calls and texts*

MAKE A CALL

Tap , tap , tap  to enter the phone number, and then tap .

ANSWER A CALL

Tap . If the device is locked, slide up from the bottom of the screen, and then tap .

IGNORE A CALL

Tap .

END A CALL

Tap .

*A nano SIM card is required.

RETURN A RECENT CALL

Tap , tap , and then tap a recent call.

IGNORE A CALL WITH A TEXT MESSAGE

Tap , and then text a response.

CHECK VOICEMAIL

Tap , and then tap .

TEXT

Tap , tap , and then tap + to start a new text message.

Accessories

DESK DOCK

Using the desk dock (purchased separately), you can connect your device to a keyboard, display, and a mouse. Place your device in the dock, and then follow the Continuum app instructions to continue. For more information, tap , slide left on the screen to display all apps, and then tap [Continuum](#).

For more information about the desk dock, refer to the documentation provided with it.

WIRELESS CHARGING PAD

Using the wireless charging pad (purchased separately), you can charge your device by placing the charging area of your device on the pad.

For more information about the pad, refer to the documentation provided with it.



Camera

USE THE CAMERA

Slide down from the top of the screen, and then tap the  app.

- 1 Switch between front and back cameras
- 2 Flash
- 3 HDR for better pictures
- 4 More options
- 5 Take picture
- 6 Video
- 7 Camera settings
- 8 Iris scanner status light

NOTE: The appearance of the camera screen may vary.

Security and backup

SECURITY

There are several options for securely signing in to your device. After a sign-in PIN is set, you can also set up the iris scanner or the fingerprint reader* to unlock your device.

To set up the fingerprint reader or iris scanner, tap , slide left, tap [Windows Hello](#), tap [Set up](#), and then follow the on-screen instructions. See the user guide for more information.

To locate the user guide, see the "More resources" section of this document.

BACKUP

HP strongly encourages you to periodically back up the personal data on your device.

To store and even share your files using OneDrive,* tap , slide left on the screen to display all apps, tap [OneDrive](#), and then follow the on-screen instructions.

To store files, pictures, or apps on a microSD card, tap , slide left, and then tap [Storage](#).

*Additional software may be required to use the fingerprint reader. For more information, go to <http://www.hp.com/support>.

More resources

RESOURCE	LOCATION
HP support • Online chat with an HP technician • Support telephone numbers • HP service center locations	Go to http://www.hp.com/support . -or- Tap  , slide up on the screen, tap HP Device Hub , and then tap Contact Support for Assistance .
Windows® help	Tap  , slide left on the screen to display all apps, and then tap Get Started . -or- Go to http://www.windowsphone.com .
Product Notices, Warranty, and User Guide • Safety and regulatory information • The expressly provided HP Limited Warranty applicable to your product • Product documentation	Tap  , slide up on the screen, tap HP Device Hub , tap User Guide , select your language, and then select the document you want.
OS updates and diagnostics • Warranty information • Diagnostics • Support information	Tap  , slide up on the screen, tap HP Device Hub , and then follow the on-screen instructions.
Serial number, product number, model number, and IMEI number	See the back of the product, the product box, or the electronic regulatory labels.
Electronic regulatory labels Regulatory markings for your product.	Tap  , slide up on the screen, tap HP Device Hub , and then select Regulatory .

© Copyright 2016 HP Development Company, L.P. Inc. Bluetooth is a trademark owned by its proprietor and used by HP Inc. under license. Microsoft, OneDrive, and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical and editorial errors or omissions contained herein.

First Edition: June 2016

REGULATORY INFORMATION

For regulatory identification purposes, your product is assigned a Regulatory Model Number (RMN), HSTNH-F606. The RMN should not be confused with the marketing name (if any, etc.) or product numbers (HP P/N, etc.).

If required, regulatory markings for your country or region are located on the back of the unit, on the electronic regulatory labels, under the removable battery (if equipped), on the packaging, or elsewhere in this document. For more safety and regulatory information, refer to the Product Notices included with your product, accessible via the [HP Device Hub](#) app.

REGULATORY MODEL NUMBER AND SIMPLIFIED DECLARATION OF CONFORMITY

The Regulatory Model Number (RMN) for this equipment is HSTNH-F606. The RMN is located on the back of the product.
Hereby, HP declares that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. To view the Declaration of Conformity for this equipment, go to www.hp.eu/certificates and search using this equipment's RMN.

LIMITED WARRANTY

You can find your HP Limited Warranty located with the user guides on your product. In some countries or regions, HP may provide a printed warranty in the box. For countries or regions where the warranty is not provided in printed format, you can request a copy from <http://www.hp.com/go/orderdocuments>. For products purchased in Asia Pacific, you can write to HP at PO Box 161, Kitchener Road Post Office, Singapore 912006. Include your product name, and your name, phone number, and postal address.

PRODUCT NOTICES

Some notices may not apply to your product. One or more integrated wireless devices are installed in this product. In some environments, the use of wireless devices may be restricted. Such restrictions may apply aboard airplanes, in hospitals, near explosives, in hazardous locations, and so on. If you are uncertain of the policy that applies to the use of this product, ask for authorization to use it before you turn it on.

PRODUCT DESCRIPTION

This product is a lightweight device and features a thin-panel display, processor, RAM, integrated battery pack, and an external AC adapter. This printed Quick Start guide identifies the hardware components of your product. The AC adapter has a rating of 100–240 V ac, 50/60 Hz, 0.3–1.0 A. You can access the latest user guide from the [HP Device Hub](#) app.

SPECIFICATION

The device operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated at 100–240 V, 50/60 Hz.

NOTE: The HP adapter included with your product is recommended for charging the product.

Temperature, operating:
0°C to 35°C (32°F to 95°F)
Relative humidity (noncondensing) operating: 10% to 90%

WARNING: To reduce the risk of electric shock or damage to the equipment, plug the AC adapter into an AC outlet that is easily accessible at all times.

WARNING: To reduce potential safety issues, only the AC adapter provided with the product, a replacement AC adapter provided by HP, or an AC adapter purchased as an accessory from HP should be used with the product.

WARNING: To reduce the possibility of heat-related injuries or of overheating the device, do not place the device directly on your lap. Do not allow a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The device and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1).

WARNING: To reduce the risk of fire or burns, do not disassemble, crush, or puncture; do not short external contacts; do not dispose of in fire or water.

WARNING: To prevent possible hearing damage, do not listen at high volume levels for long periods.

IMPORTANT: The battery(ies) in this product cannot be easily replaced by users themselves. Removing or replacing the battery could affect your warranty coverage. If a battery is no longer holding a charge, contact support. When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.