

HP iPAQ  
Product Guide



© Copyright 2007 Hewlett-Packard  
Development Company, L.P.

HP iPAQ products are powered by  
Microsoft® Windows Mobile® 6 Professional  
with Messaging and Security Feature Pack.

Microsoft Windows, the Windows logo,  
Outlook, Windows Mobile Device Center,  
and ActiveSync are trademarks of Microsoft  
Corporation in the U.S. and other countries.



**Java**

POWERED Java and all Java-based  
trademarks and logos are trademarks or  
registered trademarks of Sun Microsystems,  
Inc. in the U.S. and other countries.



SD Logo is a trademark of its  
proprietor.

Bluetooth® is a trademark owned by its  
proprietor and used by Hewlett-Packard  
Development Company, L.P. under license.

All other product names mentioned herein  
may be trademarks of their respective  
companies.

Hewlett-Packard Company shall not be liable  
for technical or editorial errors or omissions  
contained herein. The information is  
provided "as is" without warranty of any kind  
and is subject to change without notice. The  
warranties for Hewlett-Packard products are  
set forth in the express limited warranty  
statements accompanying such products.  
Nothing herein should be construed as an  
additional warranty.

This document contains proprietary  
information that is protected by copyright. No  
part of this document may be photocopied,  
reproduced, or translated to another  
language without the prior written consent of  
Hewlett-Packard Development Company,  
L.P.

August 2007

Document Part Number: 455719-001

---

# Table of contents

## 1 Register your HP iPAQ

## 2 Box contents

## 3 Components

Front panel components .....	3
Top and bottom panel components .....	4
Left and right side components .....	5
Back panel components .....	6

## 4 Set up your HP iPAQ

Step 1: Remove the battery cover and insert the SIM card .....	7
Step 2: Install the battery and replace the battery cover .....	8
Step 3: Charge the battery .....	9
Step 4: Turn on your HP iPAQ .....	9
Protect your HP iPAQ with a password .....	9
Find the serial and model number .....	10
Status Icons .....	10

## 5 Learn the basics

The Today screen .....	12
TodayPanel Lite .....	12
Enter text .....	13
Customize your HP iPAQ .....	14
Device information .....	14
Enter owner information .....	14
Change the regional settings .....	14
Adjust the volume .....	15
Change the power management settings .....	15
Dim or adjust the brightness of the backlight .....	15
Install and remove programs .....	16
Open and close programs .....	16
Set alarms and clocks .....	16
Shortcut menus .....	17
Display the clock in title bar .....	17
Create and assign a category .....	17
Adjust the speed for scrolling through items in a list .....	17
View the Operating System (OS) information .....	17
Lock and unlock your HP iPAQ .....	18
Battery saving tips .....	18

## 6 Use your Business Navigator

Use the keypad .....	19
Smart-Touch Navigation wheel .....	19
Answer/Send key .....	19
End key .....	19
Enter key .....	19
Back space key .....	19
Softkeys .....	19
3-Way Thumb-Wheel .....	19
Call features .....	20
Make a call .....	20
Answer a call .....	20
Call waiting .....	20
Redial a number .....	20
Call a contact .....	20
Make a call from the Today screen .....	21
Make a call from the contacts .....	21
Change the default number for a contact .....	21
Make emergency calls .....	21
Make calls using speed dials .....	21
Voice mail .....	22
Handsfree function .....	22
Monitor phone usage .....	22
Make data calls .....	22
Mute a call .....	23
Put a call on hold .....	23
Make a conference call .....	23
Make a call from a hyperlink phone number .....	23
Dial international numbers .....	23
Call history .....	24
Manage calls using call history .....	24
Make calls using call history .....	24
View call details .....	24
Voice commands .....	24
Check connection and signal strength .....	25
Change the SIM PIN .....	25
Change service settings .....	26
Change phone service settings .....	26
Forward calls .....	26
Configure caller ID .....	26
Block calls .....	26
Set up voice mail or text messaging center number .....	26
Limit calls to specific area codes or phone numbers .....	27
Change network settings .....	27
Change phone network settings .....	27
View available phone networks .....	27
Set preferred networks .....	27
Manually selecting a phone Network .....	28
Change the ring tone and ring type .....	28
Take notes during a call .....	28
Select a frequency band automatically .....	29

Copy a contact from a SIM to a device .....	29
Add Tele-typewriter (TTY) functionality .....	29
Add TTY functionality for people who are deaf or hard-of-hearing .....	29
Enable TTY support .....	30
Make a phone call using the TTY enabled HP iPAQ .....	30
Disable TTY support .....	30
Voice notes .....	31
Create voice notes .....	31
Delete voice notes .....	31
Listen to voice notes .....	31
Rename voice notes .....	32
Configure channels .....	32
HSDPA .....	32
Differences between GSM and GPRS/EDGE/WCDMA/3G technology .....	32

## 7 Camera

Use the camera .....	33
Capture photos .....	33
View photos .....	33
Change camera settings .....	33
Change brightness settings .....	33
Change resolution settings .....	33
Change mode settings .....	34
Video recorder .....	34
Record videos .....	34
Configure video format .....	35
Transfer images .....	35
Use GPRS .....	35
Use Bluetooth .....	35

## 8 HP Photosmart Mobile

HP Photosmart Mobile .....	36
Attach a voice note to a picture .....	36
E-mail pictures .....	36
Snapfish .....	37
View a slideshow .....	37

## 9 Notes

Write a note .....	38
Create a copy of a note .....	38
Create a voice note .....	38

## 10 Storage cards

Use storage cards .....	40
Insert a storage card .....	40
Remove a storage card .....	40
View content of a storage card .....	41

## 11 Synchronization

Synchronization software .....	42
Copy files .....	42
Migrate data from Palm Desktop to Microsoft Windows Mobile 6 .....	42
Wireless Synchronization Cost Saving Tips .....	43
Troubleshoot synchronization Issues .....	43
Customized links in WMDC .....	45

## 12 Tasks

Set start and due dates for a task .....	46
Show start and due dates in the task list .....	46
Set options for displaying tasks on the Today screen .....	46
Mark a task as completed .....	46

## 13 Messaging

Understand messages .....	47
Folder types .....	47
Synchronize E-mail .....	48
Set up messaging accounts .....	48
Set up e-mail using exchange server .....	48
Internet E-mail .....	49
Create a new POP3 or IMAP4 account .....	49
Change E-mail download options .....	50
Delete an account .....	50
Text messaging .....	51
MMS .....	51
MMS composer .....	51
Receive attachments .....	52
Receive meeting requests .....	52
Create or change a signature .....	53
Use messaging .....	53
Compose and send messages .....	53
Reply or forward a message .....	54
Add an attachment to a message .....	54
Download messages .....	54
Download messages from a server .....	54
Install an online address book .....	55

## 14 Calendar

Access calendar .....	56
Change the display of the work week .....	56
Set a default reminder for all new appointments .....	56
Update an appointment .....	56
Cancel an appointment .....	57

## 15 Contacts

Create a contact .....	58
Delete a contact .....	58
Change contact information .....	58

Copy a contact .....	58
Find a contact .....	59
Send an E-mail message to a contact .....	59
Send a text message to a contact .....	59
Add and remove a picture .....	60
Use the contact list .....	60

## 16 Connections

iPAQ Wireless .....	61
WLAN .....	62
WLAN Terms .....	62
Automatically connect to a WLAN network .....	62
Manually connect to a WLAN network .....	63
Find an IP address .....	63
Delete a wireless network .....	63
Configure 802.1x authentication settings .....	64
Bluetooth .....	64
Bluetooth terms .....	64
Bluetooth manager .....	65
Connect to a computer via Bluetooth .....	65
Use your HP iPAQ as a wireless modem with Bluetooth .....	65
Bluetooth device profiles .....	66
Create, end, and accept a Bluetooth partnership .....	66
Rename a Bluetooth partnership .....	67
Pair and unpair devices .....	68
Make a device discoverable .....	69
Open Bluetooth settings .....	69
Authorization to access services .....	69
Use a passkey or bond .....	69
Set a Bluetooth shared folder .....	70
Set up an incoming or outgoing Bluetooth COM port .....	70
GPRS/EDGE .....	70
GPRS/EDGE .....	70
Change GPRS network settings .....	71
Edit network parameters .....	71
Edit an Internet connection .....	71
Edit MMS multimedia messages settings .....	72
Edit WAP information settings .....	72
Troubleshoot automatic detection .....	72
Advanced settings .....	72
Connect to intranet URLs .....	72
Change an intranet URL .....	73
Set up an automatic choice for connections .....	73
Set up proxy server settings .....	73
Set up a WAP gateway .....	73
Configure advanced proxy settings .....	74
Advanced connection settings .....	74
Set up a VPN server connection .....	75
Change a connection group name .....	75
End a connection .....	75

Configure VoIP .....	76
----------------------	----

## 17 GPS navigation

Google Maps .....	77
Install Google Maps .....	77
Launch and navigate Google Maps .....	77
Uninstall Google Maps .....	77

## 18 Applications

HP applications .....	78
HP Help and Support .....	78
HP Voice Reply .....	78
HP iPAQ Setup Assistant .....	79
HP iPAQ Shortcuts .....	80
Use HP iPAQ Shortcuts .....	80
Edit HP iPAQ Shortcuts .....	80
HP iPAQ DataConnect .....	80
HP Asset Viewer .....	81
Certificate Enroller .....	81
Manage certificates .....	82
HP iPAQ Tips .....	82
HP Voice Commander .....	82
HP iPAQ Mobile Broadband Connect .....	82
HP Enterprise Mobility Agent (mProveDM) .....	83
HP iPAQ File Store .....	83
HP PrintSmart Mobile .....	83
HP Keyguard .....	83
HP SecureConnect Mobile .....	84
HP iPAQ Ring Tone Manager .....	84
HP iPAQ Audio Applet .....	84
Pocket Internet Explorer (PIE) .....	85
Remote Desktop Mobile .....	85
Windows Media Player .....	86
Clear the Now Playing List .....	86
Update a Library .....	86
Use HP Voice Commander to play media files .....	86
MS Office applications .....	86
Word Mobile .....	86
Excel Mobile .....	87
PowerPoint Mobile .....	87
Games .....	88
Bubble Breaker .....	88
Solitaire .....	88
Internet Sharing .....	89
To connect to a laptop using a USB data connection .....	89
To connect to a laptop using Bluetooth data connection .....	90
Internet Explorer .....	90
Windows Live Messenger .....	90
Sign in and out of messenger .....	91
Send instant messages .....	91

Change your status .....	91
OMA DRM Client .....	92
Pocket Panel Lite .....	92
SMS cell broadcast .....	92
SIM Toolkit .....	92
Sim Manager .....	92
iPAQ power .....	92
iPAQ backlight .....	92
TTY .....	92

## 19 Product specifications

System specifications .....	93
Physical specifications .....	93
Operating environment .....	94

## 20 Regulatory notices

Federal Communications Commission Notice .....	95
Modifications .....	95
Cables .....	95
Declaration of Conformity for Products Marked with the FCC Logo (United States Only) .	95
Canadian Notice .....	96
Avis Canadien .....	96
European Union Notice .....	96
Products with 2.4–GHz Wireless LAN Devices .....	97
France .....	97
Italy .....	97
Battery Warning .....	97
Battery Recycling .....	97
Battery Disposal .....	97
Equipment Warning .....	98
Acoustics Warning .....	98
Class 1 LED Product .....	99
Airline Travel Notice .....	99
Medical Electronic Equipment .....	99
SAR Notice .....	99
Wireless Notices .....	99
U.S. Regulatory Wireless Notice .....	100
Canadian Regulatory Wireless Notice .....	100
Brazilian Notice .....	100
Singaporean Wireless Notice .....	100
Japanese Notice .....	101
Wireless LAN 802.11b Devices .....	101
Wireless LAN 802.11g Devices .....	101
Bluetooth Devices .....	101
Taiwan DGT Notice .....	101
Korean Notice .....	102

## 21 Frequently Asked Questions

I am having trouble turning on my HP iPAQ. What should I do? .....	103
--	-----

I am unable to make or receive calls. How do I fix this? .....	103
I have trouble connecting to the Internet. What should I do? .....	103
I am unable to hear voices clearly. How do I resolve this? .....	103
I cannot use certain call functions. What should I do? .....	103
Why do I hear disturbing noises during a phone call? .....	104
Why are the standby and talk time shorter at times? .....	104
Why does the HP iPAQ operate slowly at times? .....	104
Why do I see the Today screen layout error message on my HP iPAQ display screen? .....	104
I have trouble charging my battery. What should I do? .....	104
I am unable to use the ActiveSync feature. What should I do? .....	104
My HP iPAQ was not connected during WMDC installation? .....	104
Which factors degrade the GPS signal and affect accuracy? .....	105
My HP iPAQ was not connected during WMDC installation? .....	105
My HP iPAQ was connected while I was installing but WMDC does not launch even after installation? .....	105
Can I connect for the first time via Bluetooth? .....	105

## **22 Guidelines for care and maintenance**

Use your HP iPAQ .....	106
Cleaning your HP iPAQ .....	106
Carrying or storing your HP iPAQ .....	106
Use accessories .....	106
Use your HP iPAQ in public places .....	106

---

# 1 Register your HP iPAQ

You need to register your HP iPAQ with Hewlett-Packard to be able to:

- Access support and services, and get the most out of your HP products.
- Manage your profile.
- Sign up for free support alerts, software updates, and personalized newsletters.

After registering your HP iPAQ, you will receive an e-mail message regarding special offers and promotions. Visit <http://www.register.hp.com> to register your HP iPAQ or update your mail or e-mail address after registration. You are required to enter your user ID and registration password to edit your profile online.




**NOTE:** Registration is not supported in all countries/regions.

---

## 2 Box contents

This illustration depicts the items that come in the box with your HP iPAQ.

 **NOTE:** Box contents vary by model.

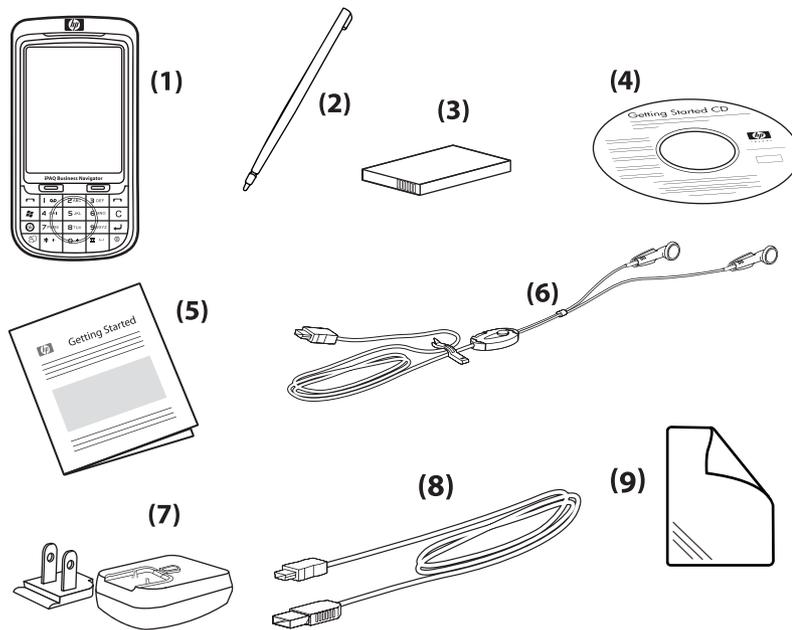


(1)	HP iPAQ
(2)	Stylus
(3)	1590 mAh Li-Ion removable/rechargeable battery
(4)	<i>Getting Started</i> CD with additional software
(5)	HP iPAQ documentation
(6)	Wired stereo headset  <b>NOTE:</b> Listening to personal stereo equipment at full volume for long periods can damage hearing. To reduce the risk of hearing loss, do not spend much time listening to personal stereo equipment at full volume. HP recommends use of the headset manufactured by Merry, part number XXX, that is included with your HP iPAQ.
(7)	AC adapter with interchangeable plug  <b>NOTE:</b> The AC adapter is provided with one or more interchangeable plug, which might not be attached. Attach the correct plug for your country/region.
(8)	Mini-USB charging/synchronization cable
(9)	Screen protector film

# 3 Components

 **NOTE:** Not all models or features are available in all countries/regions.


## Front panel components

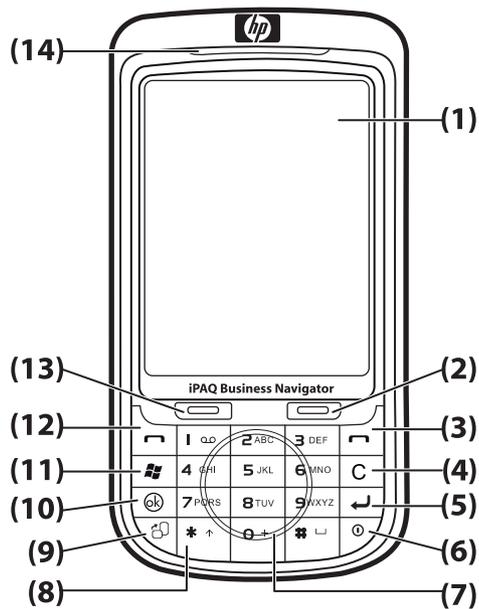

Component		Function
(1)	Touch Screen Display	Use to view the contents on the screen. Use stylus to select items, navigate menus, change feature settings, and play games.
(2)	Right Softkey	Press to launch <b>Messaging</b> from the <b>Today</b> screen.
(3)	End Key	Press to end a phone call.
(4)	Back Space Key	Press back space and clear text one at a time.
(5)	Enter Key	Press to open an application or insert a line break while typing messages.
(6)	Power Key	Press and hold to switch your HP iPAQ on or off.
(7)	Smart-Touch Navigation Wheel	Use to navigate and scroll through items on the screen.
(8)	Keyboard	Use keys on the keyboard to enter text, dial numbers, or navigate menus.
(9)	Landscape/Portrait Key	Press to switch between the landscape and portrait views.


Component		Function
(10)	ok Key	Press to confirm your selection.
(11)	Windows Key	Press to display the <b>Start</b> menu.
(12)	Answer/Send Key	Press to answer a call or to view the on-screen keypad.
(13)	Left SoftKey	Press to launch <b>HP iPAQ Shortcuts</b> from the <b>Today</b> screen.
(14)	LEDs	<ul style="list-style-type: none"> <li>• Solid Red – Charging</li> <li>• Flashing Amber – One or more notifications received</li> <li>• Solid Green – Full Charged</li> <li>• Flashing Red – Low battery warning</li> <li>• Flashing Green – Within GPRS/GSM/EDGE/WCDMA/3G coverage area</li> <li>• Flashing Blue – WLAN or Bluetooth on</li> <li>• Blue Off – WLAN and Bluetooth off</li> </ul>

## Top and bottom panel components

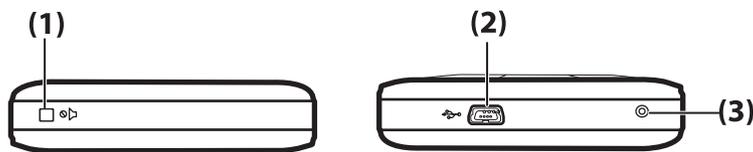


Component		Function
(1)	Vibrate key	Use to set your HP iPAQ in vibration mode.
(2)	Charging/Communications Port	Use to connect the mini-USB charging/synchronization cable.
(3)	Reset	Use to soft reset your HP iPAQ. <b>WARNING!</b> Resetting your HP iPAQ before turning it off might corrupt data present on your HP iPAQ.

## Left and right side components

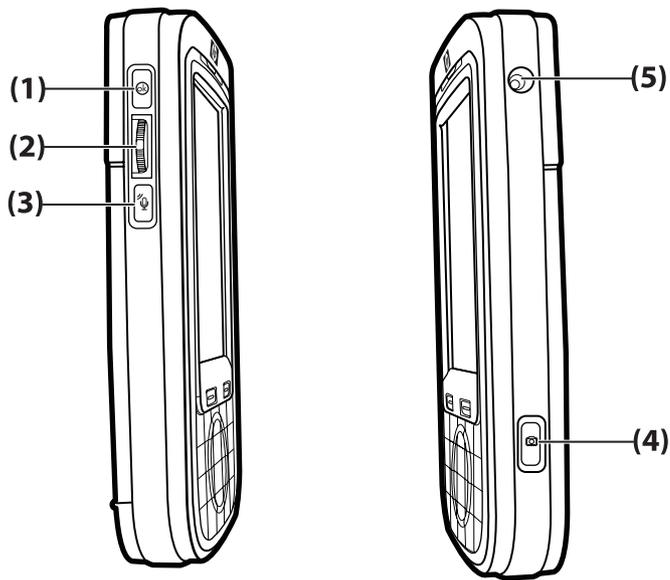

Component		Function
(1)	ok Key	Press to confirm your selection.
(2)	3-Way Thumb-Wheel	Use to navigate and scroll through items on the screen and confirm your selection.
(3)	HP Voice Commander Key	Press to launch the <b>HP Voice Commander</b> application.
(4)	Camera Key	Press to use the camera and click pictures.
(5)	Test Port	Use to receive GPS signal.

# Back panel components

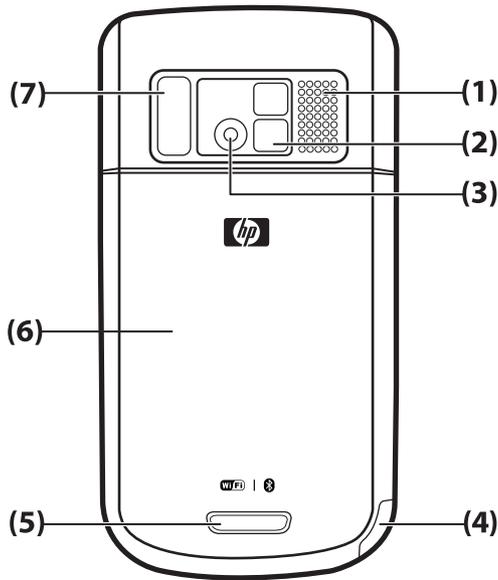


Component		Function
(1)	Back Speaker	Use the speaker to listen to music or as a speakerphone.
(2)	Self Portrait Mirror	Use the mirror lens to center your own image for a self-photograph.
(3)	Camera	With the camera turned on, frame the subject in the camera lens and view it on your HP iPAQ screen before capturing the photo.
(4)	Stylus	Remove and use to select elements on the screen and input information. Slide down to remove the stylus. Slide up to replace the stylus.
(5)	Cover Latch	Press the cover latch on the battery cover and slide the cover down and away from the HP iPAQ.
(6)	Battery Cover	Remove to insert or remove the battery and/or the SIM card.
(7)	Flash Light	Turn on the flash light while capturing pictures in dim light.

---


## 4 Set up your HP iPAQ

### Step 1: Remove the battery cover and insert the SIM card

1. Press the cover latch on the battery cover and slide the cover down and away from the HP iPAQ.

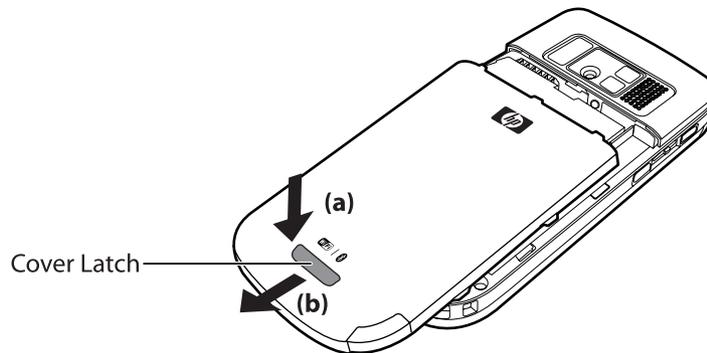


2. Slide the SIM card slot cover and open it.

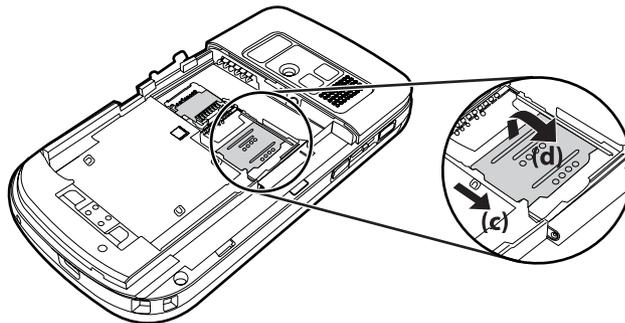



3. Place the SIM card into the SIM card slot.

 **NOTE:** Make sure that the metal contacts are facing down and the notched corner is in the correct position.

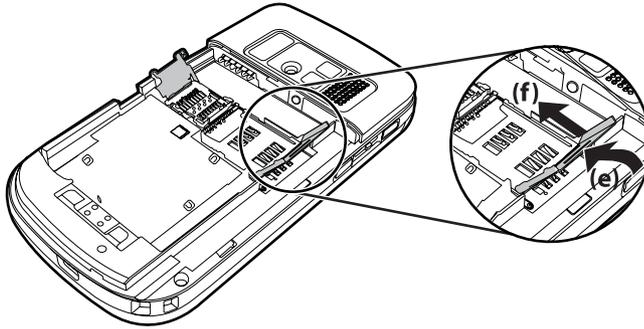


4. Slide back the SIM card slot cover until it locks into place.

## Step 2: Install the battery and replace the battery cover

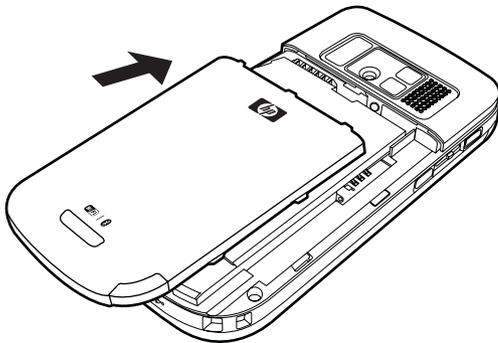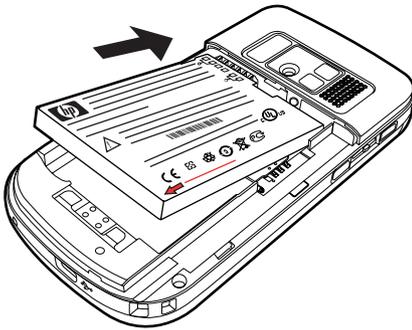

1. Align the battery connectors on the battery with the housing pins in the battery compartment, and insert the battery.
2. Place the battery cover down and slide up until it locks into place.

## Step 3: Charge the battery

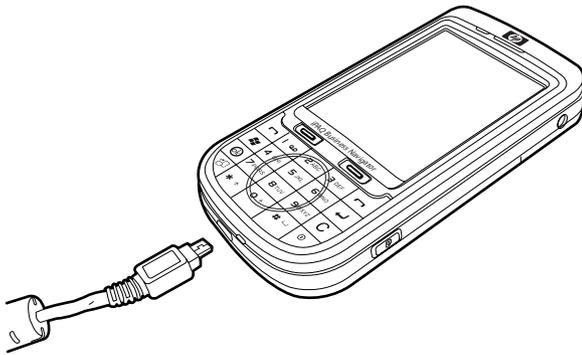

△ **CAUTION:** To avoid damaging your HP iPAQ or the AC adapter, make sure all connectors are properly aligned before connecting.

The battery provides power for your HP iPAQ to operate. Use the mini-USB synchronization cable, that comes with your HP iPAQ, to charge the device.

It takes approximately 2–4 hours to fully charge the battery for the first time. Subsequent charges might take longer.

1. Insert the USB end of the mini-USB synchronization cable into the port on the AC adapter.
2. Connect the AC adapter to an electrical outlet.
3. Connect the mini-USB synchronization cable to the charging/communications port on your HP iPAQ. The cable connector only fits one way. If the connector does not insert easily, turn it over.

💡 **TIP:** You can also charge the battery by connecting your HP iPAQ to a USB port on your computer using the mini-USB synchronization cable.

📝 **NOTE:** Whenever a replacement battery is inserted into your HP iPAQ, press the **Power** key for at least two seconds. In case the device does not turn on, attach an AC adapter to turn on your HP iPAQ.

## Step 4: Turn on your HP iPAQ

Press and hold the **Power** key to turn on your HP iPAQ. Next, follow the instructions on the screen to complete the setup. Use the on-screen keypad to enter information.

## Protect your HP iPAQ with a password

You can secure data on your HP iPAQ by setting a password. Each time you turn on your HP iPAQ, you will be prompted to enter the password.

To set a password:

1. Tap **Start > Settings > Lock**.
2. Select the **Prompt if device unused for** check box. Then, select the amount of time your HP iPAQ should remain unused before you are prompted to enter the password.
3. In the **Password type** list, select the type of password you would like to use. Next, enter the password, and then confirm the password.

4. On the **Hint** tab, enter a phrase to help you remember your password. Make sure that your hint does not allow others to guess your password. The hint is displayed after the wrong password is entered five times in a row.
5. When prompted, tap **ok**. The next time your HP iPAQ is unused for the specified amount of time, you are prompted to enter your password.

 **TIP:** Use the same steps as above to change or reset your password.

## Find the serial and model number

Locate the serial and model numbers before contacting HP Customer Support, particularly if you are calling for in-warranty support.

View the serial number and model ID by tapping **Start > Programs > HP Help and Support > Serial and Model Number**.

To locate the serial and model number:

1. Remove the battery cover.
2. Remove the battery from the unit.
3. Locate the label containing the product ID and serial number underneath the battery.

 **NOTE:** Tap **Start > Settings > System > HP Asset Viewer > Identity** to view the serial number and tap **Start > Settings > System > HP Asset Viewer > System** to view the model number on your HP iPAQ.

## Status Icons

The following table lists the common status indicators and their meanings.

Icon	Status	Icon	Status
	Missed call		Call forwarding active
	Voice call active		Call on hold
	No SIM card installed		SIM card fault
	New Voice mail		New e-mail or SMS
	Instant message received		Battery level
	Battery level low		Battery charging
	Vibrate mode on		Sync error

Icon	Status	Icon	Status
	Ringer off		Speaker phone on
	Wi-Fi on		Bluetooth
	Roaming		General Packet Radio Service (GPRS) available
	GPRS available in roaming		GPRS in use
	Enhanced Data Rates for GSM Evolution (EDGE) available		EDGE available in roaming
	EDGE in use		Signal strength
	Phone connection unavailable or network error		Radio off

# 5 Learn the basics

Get started with your HP iPAQ by learning basic functions such as knowing the **Today** screen, entering text, and synchronizing data.

## The Today screen

The **Today** screen displays the date and time and provides a quick status of the remaining battery capacity, upcoming appointments, your current profile, and the number of unread text messages. At the top of the **Today** screen, connectivity icons, volume indicator, and clock are displayed.

To customize the **Today** screen:

1. Tap **Start > Settings > Personal > Today**.
2. On the **Appearance** tab, select the required theme for the background of the **Today** screen.
3. On the **Items** tab, select the items to appear on the **Today** screen.

 **TIP:** To move the order in which the items appear, tap **Start > Settings > Personal > Today**. On the **Items** tab, tap **Move Up** or **Move Down**.

 **NOTE:** There are two default softkeys on the bottom of the **Today** screen: **Shortcuts** and **Messaging**. On the **Today** screen, the **Messaging** softkey is also the **Notification** softkey. Any type of alert, such as a meeting reminder, is displayed on the **Today** screen as a notification.

## TodayPanel Lite

Icon	Name	Description
	TodayPanel Lite	Use to change the TodayPanel Lite options or the <b>Today</b> screen settings.
	Battery power	Use to view the amount of remaining battery turn on your HP iPAQ. Set the standby period, time duration for turning off the HP iPAQ, and USB charging method.
	Main memory	Use to view the amount of available main memory on your HP iPAQ. View, activate, and stop all running programs from this screen.
	Storage memory	Use to view the amount of available storage memory on your HP iPAQ. View, activate, and stop all running programs from this screen.
	Backlight	Use to view and change the backlight options on your HP iPAQ.

To use TodayPanel Lite, tap the required icon, make the necessary changes, and tap **ok**.

You can change the TodayPanel Lite icons to compact mode, which allows more space on the **Today** screen. You can also change the memory and storage settings to display as percentages instead of file sizes.

To change the TodayPanel Lite icons to compact mode:

1. Tap the  (TodayPanel Lite) icon > **Options** to open the TodayPanel Lite application.
2. Tap the **Display Mode** list and select **Compact**.

To display memory and storage as percentages:

1. Tap the  (TodayPanel Lite) icon > **Options** to open the TodayPanel Lite application.
2. Tap the **Display Memory as** list or the **Display Storage as** list and select the percentage listed.
3. Tap **ok**.

To remove the TodayPanel Lite application from the **Today** screen:

1. Tap **Start > Settings > Personal > Today > Items**.
2. Clear the **TodayPanel** check box and tap **ok**.

For more options, visit <http://www.rhinocode.com> to upgrade to TODAYPANEL.PRO.

## Enter text

Based on your preference, you can use the on-screen keypad or a handwriting recognition feature such as **Block Recognizer**, **Keyboard**, **Letter Recognizer**, or **Transcriber** to enter text.

1. Tap **Start > Settings > Personal > Input**.
2. On the **Input method** tab, select a text input method and change options as appropriate.
3. Tap **ok**.

You can now go to a program (such as Notes) and start entering text.

Text-Input Method	Definition
<b>Block Recognizer</b>	Use a single stroke to write letters, numbers, symbols, and punctuation marks that get converted into typed text.
<b>Keyboard</b>	Tap keys on the keyboard to enter text.
<b>Letter Recognizer</b>	Write individual letters, numbers, and punctuation marks that are converted into typed text.
<b>Transcriber</b>	Write in cursive, print, or mixed handwriting (consisting of both cursive and print), and convert your writing into typed text.

 **TIP:** Change the text-input method from within any program by tapping the **Input Selector** arrow and tapping an input method. To switch between T9 and multipress mode while entering text, press and hold \* key on the keypad.

 **NOTE:** To disable the Smart-Touch Navigation wheel while entering text, press and hold the **ok** key on the left panel of your HP iPAQ.

# Customize your HP iPAQ

## Device information

To get detailed information about your HP iPAQ:

- ▲ Tap **Start > Settings > System > About**.

The **Version** tab displays important device information, including the type of processor and the amount of memory installed.

The device name is used to identify the HP iPAQ in the following situations:

- Synchronizing with a computer
- Connecting to a network



---

**NOTE:** If you synchronize multiple devices with the same computer, each device must have a unique name.

---

To change the device name:

1. Tap **Start > Settings > System > About > Device ID**.
2. Enter a name for the device. The device name must begin with a letter, consist of letters from A to Z and numbers from 0 to 9, and cannot contain spaces.

## Enter owner information

Enter your personal information, such as your name and address, so that the HP iPAQ can be returned to you if it is lost.

1. Tap **Start > Settings > Personal > Owner Information**.
2. On the **Identification** tab, enter your personal information.



---

**TIP:** You can edit the owner information directly from the **Today** screen.

---

## Change the regional settings

The style in which regions, numbers, currency, time, and date are displayed is specified in regional settings.

To change the regional settings:

1. Tap **Start > Settings > System > Regional Settings > Region**.
2. Select a region.

The region you select determines the options available on the other tabs.
3. To customize additional settings, tap the appropriate tabs and select the required options.
  - On the **Region** tab, select the required region display options.
  - On the **Number** tab, select the required number display options.
  - On the **Currency** tab, select the required currency display options.
  - On the **Time** tab, select the required time display options.
  - On the **Date** tab, select the required date display options.

## Adjust the volume

You can change the volume for various sounds, such as the sound you hear when you tap program names and menu options.

1. Tap  (Speaker) icon at the top of the screen.
2. Move the system volume slider on the screen using the stylus, 3-Way Thumb-Wheel, or the Smart-Touch Navigation wheel of your HP iPAQ to the required volume level.
3. To mute system sounds, tap **Off**.

---

 **TIP:** To switch to silent mode, press the **Vibrate** key on the top of your HP iPAQ.

---

You can also set a specific sound for a specific event.

1. Tap **Start > Settings > Personal > Sounds & Notifications**.
2. On the **Sounds** tab, choose how you want to be notified by selecting the appropriate check boxes.
3. On the **Notifications** tab, in the **Event** list, tap an event name and choose how you want to be notified by selecting the appropriate check boxes. You can choose from several options, such as a special sound, a message, or a flashing light.

---

 **NOTE:** Turning off sounds and the LED notification helps conserve battery power.

---

## Change the power management settings

1. Tap **Start > Settings > System > Power**.
2. Tap **Advanced** and select the length of time the HP iPAQ stays on when using battery power or AC power.

## Dim or adjust the brightness of the backlight

You can set the backlight to dim after a specified amount of time has elapsed.

1. Tap **Start > Settings > System > Backlight**.
2. Tap **Battery power** or **External Power**.
3. Select the backlight options of your choice.

You can also increase or decrease the brightness of the backlight.

1. You can also change the brightness by tapping **Start > Settings > System > Backlight > Brightness**.
2. Move the slider on the **Backlight** screen up or down to set the required level of brightness.



**NOTE:** You can also change the brightness setting from the **Today** screen by tapping the  (Backlight) icon.



**TIP:** You can also use the 3-Way Thumb-Wheel or the Smart-Touch Navigation wheel to move the slider.

---

## Install and remove programs

To install programs on your HP iPAQ:

1. Use the mini-USB synchronization cable to connect your HP iPAQ to your computer.
2. Follow the instructions in the Installation Wizard provided with the program you want to install.
3. Check the screen of your HP iPAQ to see if any further steps are necessary to complete the program installation.

To remove programs from your HP iPAQ:

1. Tap **Start > Settings > System > Remove Programs**.
2. Select the check box for the program(s) you want to remove, and then tap **Remove**.



**NOTE:** By removing a program from your HP iPAQ, you might increase available memory on the device. You can also remove the unused programs from your device to increase the available memory.

If programs are lost from your HP iPAQ for any reason, most of them can be re-installed using any synchronization software. On your computer, click **Options > Add/Remove Programs >** check the program to be added > click **OK**.

## Open and close programs

You do not need to exit a program to open another or to conserve memory. The system manages memory automatically.

To open a program, tap **Start**, and then tap the program you want from the list. If you do not see the program you want, tap **Start > Programs**.

In most cases, programs automatically stop to free required memory. However, you can choose to close programs manually.

1. Tap **Start > Settings > System > Memory > Running Programs**.
2. In the **Running Programs** list, tap the program you want to close, and then tap **Stop**.

## Set alarms and clocks

To set alarm on your HP iPAQ:

1. Tap **Start > Settings > System > Clock & Alarms > Alarms**.
2. Tap **<Description>** to enter a name for the alarm.
3. Tap the day of the week for the alarm. You can select multiple days by tapping each required day.
4. Tap the **Time** tab and set the time for the alarm.
5. Tap (Alarm) icon to specify the type of alarm. You can choose single sound or a repeating sound.
6. If you choose to play a sound, tap the list next to the **Play sound** check box, and then tap the sound you want to set.

To set time on your HP iPAQ:

1. Tap **Start > Settings > System > Clock & Alarms > Time**.
2. Select **Home** to set the time zone, local time, and date when you are in your home country. Select **Visiting** to set these options while traveling.

## Shortcut menus

A shortcut menu is displayed when you tap and hold an item. This menu displays the most common commands for a specific item. For example, you can delete an appointment or send a text message to a contact by using commands on a shortcut menu.

When the shortcut menu displays, tap the action you want to perform.

To close a shortcut menu without performing an action, tap anywhere outside the menu.

## Display the clock in title bar

When viewing certain programs, the clock might not be displayed in the title bar. To display the clock in the title bar of all programs:

1. Tap **Start > Settings > System > Clock & Alarms**.
2. On the **More** tab, tap to select the **Display the clock on the title bar in all programs** check box.

## Create and assign a category

In the **Calendar**, **Contacts**, and **Tasks** programs, you can use categories to organize and group your appointments, contacts, and tasks.

1. From the list, select an existing item or create a new one.
2. Do one of the following:
  - For an existing item in **Calendar**, open the appointment and tap **Menu > Edit > Categories**.
  - For an existing item in **Tasks**, open the task and tap **Edit > Categories**.
  - For an existing item in **Contacts**, open the contact and tap **Menu > Edit > Categories**.
3. Select the required check box (**Business**, **Holiday**, **Personal**, or **Seasonal**) and tap **ok** to assign the category.
4. Tap **ok** to return to the appointment, task, or contact.



---

**NOTE:** To assign a category to a contact, the contact should be saved on the phone memory.

---

- For a new item in **Calendar**, **Contacts**, and **Tasks**, select **Categories**.



---

**NOTE:** To create a new category, tap **New** and assign a name to the category for a contact, task, or an appointment. The new category is assigned automatically to the item.

---

## Adjust the speed for scrolling through items in a list

To change the speed at which scrolling occurs:

1. Tap **Start > Settings > Personal > Buttons > Up/Down Control**.
2. Under **Delay before first repeat**, move the slider to reduce or increase the time that elapses before scrolling begins.
3. Under **Repeat rate**, move the slider to change the time it takes to scroll from one item to the next.

## View the Operating System (OS) information

- ▲ Tap **Start > Settings > System > About**.

The OS version gets displayed on the screen.

## Lock and unlock your HP iPAQ

To lock the phone:

1. Press  (Answer/Send) key on the keyboard.
2. Tap **Menu > Options...**
3. On the **Phone** screen, select the **Require PIN when phone is used** check box.
4. Tap **Change PIN**.
5. Enter a Personal Identification Number (PIN) and tap **Enter**.
6. Reenter the new PIN for confirmation and tap **Enter** for verification.

---

 **NOTE:** You can also access the **Phone** screen by tapping **Start > Settings > Personal > Phone**.

---

To unlock the phone:

1. Enter the PIN to access your device.
2. Press  (Answer/Send) key on the keyboard.
3. Tap **Menu > Options**.
4. Clear the **Require PIN when phone is used** check box and tap **ok**.

---

 **NOTE:** You can place an emergency call at anytime, without entering the PIN.

---

## Battery saving tips

You can adjust the settings on your HP iPAQ to fit your individual needs and to help your battery last as long as possible between charges. Here are some recommendations to conserve battery life:

- **Sounds** – Every time you are notified of an event, battery power is consumed. Tap **Start > Settings > Personal > Sounds & Notifications** to turn off any unnecessary notifications.
- **Auto Turn Off the Backlight** – Tap **Start > Settings > System > Backlight**. Specify a short amount of wait before turning off the backlight. On the **Battery Power** tab, set **Turn off backlight if device is not used for** to 10 seconds.
- **Turn off Bluetooth and WLAN** – Always turn off Bluetooth and WLAN when not in use.

HP also offers a variety of accessories to keep your HP iPAQ charged when you are out of the office for extended time periods. These include the mini-USB synchronization cable and travel adapter. Use original HP batteries and chargers to charge your HP iPAQ.

To check the battery power, tap **Start > Settings > System > Power**.

---

 **NOTE:** In case of a battery drain out, you will lose any unsaved data on your iPAQ.

---

 **WARNING!** Removing the battery from your HP iPAQ before turning it off might corrupt data present on your HP iPAQ.

---

---

# 6 Use your Business Navigator

## Use the keypad

### Smart-Touch Navigation wheel

Use the Smart-Touch Navigation wheel to navigate through on-screen menus, play songs, change settings, and view information. Move your finger lightly around the Smart-Touch Navigation wheel to scroll through a list.

To disable Smart-Touch Navigation wheel:

1. Tap **Start > Settings > System > Keyboard**.
2. Select the **Disable Smart Wheel function** check box and tap **ok**.

 **NOTE:** To disable the Smart-Touch Navigation wheel, press and hold the **ok** key on the left panel of your HP iPAQ. Once you disable the Smart-Touch Navigation wheel, the  (Wheel Lock) icon displays on the top of the screen. To enable the Smart-Touch Navigation wheel, press and hold the **ok** key on the left panel of your HP iPAQ.

---

### Answer/Send key

Press the  (Answer/Send) key to access the **Dialer** screen as well as make and receive calls.

### End key

Press the  (End) key to end a call and quit the **Dialer** screen.

### Enter key

Press the  (Enter) key to open an application from any screen. You can also make a call or move on the next line while entering text by pressing the  (Enter) key.

### Back space key

Press the  (Back space) key to back space and clear text or characters one at a time. When browsing, when the cursor is not in the input-field, pressing the key takes you to the previous web page.

### Softkeys

Press the left softkey to open the **HP iPAQ Shortcuts** application and the right softkey to open the **Messaging** application.

## 3-Way Thumb-Wheel

Use the 3-Way Thumb-Wheel to navigate through on-screen menus, play songs, change settings, and view information. Press the 3-Way Thumb-Wheel to select an application. You can also use the 3-Way Thumb-Wheel to increase or decrease the speaker volume during a call by moving it up and down.

# Call features

## Make a call

1. Press the  (Answer/Send) key.
2. Use the on-screen keypad to enter the number you want to call.
3. Tap **Talk**.



---

**TIP:** You can also make a call by dialing the numbers using the keypad, and then pressing the  (Enter) key.

---

## Answer a call

To answer a call, press the  (Answer/Send) key.

When you receive a call, you can answer or ignore the call. When the phone stops ringing, the caller might be sent to Voice Mail, depending on the settings provided by your mobile phone service provider. To ignore the call, tap **Ignore** on the on-screen keypad or press the  (End) key.



---

**NOTE:** To switch to silent mode during an incoming call, press the **Vibrate** key on the top of your HP iPAQ.

---

## Call waiting

Use Call Waiting to be notified of incoming calls when you are on another call.

To turn on Call Waiting:

1. Press the  (Answer/Send) key.
2. Tap **Menu > Options... > Services**.
3. Tap **Call Waiting > Get Settings...**
4. Under **When calls are waiting**, tap **Notify me**.

To use Call Waiting to answer an incoming call during a phone conversation:

1. Press the  (Answer/Send) key to move the current phone call to call waiting.
2. Press the  (Answer/Send) key to answer the incoming call or tap **Ignore** if you do not want to answer the call.
3. Tap **Swap** to switch between the calls.

## Redial a number

To redial the last number, press the  (Answer/Send) key twice.

## Call a contact

You can call a number stored in the contact list. As you enter a contact's name, the HP iPAQ searches the **Contacts**, **Call History**, **Speed Dial** lists, and the SIM card to find a matching name and number.

## Make a call from the Today screen

To make calls from the **Today** screen:

1. Use the keyboard to enter the contact name.
2. In case there is more than one contact with the same name, scroll to select the required contact.
3. Press the  (Answer/Send) key to make the call.

## Make a call from the contacts

You can select a person's name from your contact's list and press the  (Answer/Send) key to place the call. If a contact has more than one phone number, such as **Work**, **Home**, and **Fax**, do the following:

1. Tap **Start > Contacts**.
2. Scroll to the contact name.
3. Scroll to the required number and press the  (Answer/Send) key to place a call.

---

 **TIP:** If you have a long list of contacts, enter the first few letters of a contact's name. Your HP iPAQ searches the entire contact's list to display the name.

---

## Change the default number for a contact

The **Mobile** phone number is set as the default number for a contact.

1. Tap **Start > Contacts**.
2. Scroll to the required contact number.
3. Scroll and select to change the default number.

## Make emergency calls

You can make calls to emergency service numbers, even if you have locked the SIM card and/or the HP iPAQ.

Your service provider programs one or more emergency phone numbers, such as 911 or 112, which you can call under any circumstances, even when your HP iPAQ is locked or the SIM card is not inserted.

To dial an emergency number:

1. Press the  (Answer/Send) key.
2. Use the on-screen keypad to dial the local emergency number.
3. Press the  (Answer/Send) key to place the call.

---

 **NOTE:** Emergency numbers vary by country/region. Your HP iPAQ's preprogrammed emergency number(s) might not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

---

## Make calls using speed dials

You can dial phone numbers quickly by assigning speed dial numbers. You can choose speed dial entries from 2-99. The speed dial entry 1 is often reserved to set up or dial your Voice Mail after the initial setup.

---

 **NOTE:** The **Speed Dial** feature is available only for phone numbers stored in the contact's list.

---

To create a speed dial shortcut:

1. Press the  (Answer/Send) key > **Speed Dial**.
2. Scroll to the required contact and tap the contact.
3. On the screen, tap **Menu > Add to Speed Dial...**
4. Select a speed dial number from 2-99 in the **Location** box and tap **ok**.

---

 **NOTE:** You can also assign speed dial by tapping **Start > Contacts**, select a contact and tap **Menu > Add to Speed Dial...**

 **TIP:** You can also assign speed dial numbers to Web addresses and e-mail addresses that are stored in the **Contacts** on your HP iPAQ.

---

To make a speed dial call:

1. Press the  (Answer/Send) key.
2. On the screen keypad, tap and hold the number you assigned as a speed dial entry. For two-digit speed dial numbers, press the first digit and press and hold the second digit of the number.

## Voice mail

1. Press the  (Answer/Send) key.
2. On the screen keypad, tap and hold **1** to automatically call Voice Mail.

---

 **NOTE:** You might need to set up the Voice Mail shortcut.

---

## Handsfree function

You can turn the speaker on during a call to use the handsfree function.

- ▲ On the screen, tap **Speaker On** to turn the earpiece off.

## Monitor phone usage

Call history stores the duration of your last call, the total number of calls made and received, calls by type, and a lifetime counter. You can use call history to keep track of your calling patterns, to help you choose a calling plan, or estimate your monthly billing.

1. Tap **Start > Phone > Call History**.
2. Tap the icon next to the required number to view the call details.

## Make data calls

Use connections settings to set up General Packet Radio Service (GPRS), dial-up, Virtual Private Network (VPN), proxy, and WLAN connections to connect to the Internet or your corporate network. With a data connection, you can browse the Web, download e-mail, or synchronize with the server without using wires.

---

 **NOTE:** Your HP iPAQ has already been configured to allow you to browse and chat. Contact your service provider for information on mobile Internet plans, configuring e-mail or wireless synchronizing with the server.

---

## Mute a call

You can mute the microphone during an active call. On making a call the other party will not be able to hear anything you say, but you can still hear the other party.

To mute the microphone during a call:

- ▲ Tap **Mute** on the **Dialer** screen.

## Put a call on hold

During a call, you can put the call on hold and dial another number or answer an incoming call. If you have more than one call on the line, you can switch between calls.

- To put a call on hold, tap **Hold**.
- To switch between calls, tap **Swap**.

## Make a conference call

To make a conference call:

1. Press the  (Answer/Send) key.
2. On the screen keypad, dial the required number.
3. Tap **Talk**.
4. Once you are connected, tap **Hold**.
5. Dial the second number, and then tap **Talk**.
6. Once you are connected, tap **Menu > Conference**.

---

 **NOTE:** To add more parties to the conference call, dial each number, connect, and then tap **Menu > Conference**.

---

## Make a call from a hyperlink phone number

Use a hyperlinked phone number to quickly dial a phone number from an e-mail or text message. A hyperlinked phone number is underlined in the same manner as a Web site address.

From an e-mail or text message containing a hyperlinked phone number:

1. Tap the phone number.
2. Tap **Call** to dial the number.

## Dial international numbers

To make an international call, enter a country code before the phone number.

1. On the screen, tap and hold **0** until the plus (+) sign displays.
2. Enter the country code and phone number.

---

 **NOTE:** You can also insert a plus (+) sign into a contact's phone number for quick dialing.

---

# Call history

## Manage calls using call history

Call history provides the time and duration of all incoming, outgoing, and missed calls, a summary of total calls, and has easy access to notes taken during a call.

- On the screen tap **Start > Phone > Call History** to view the history of all dialed and received calls.
- Tap **Menu > Filter** and select a different view to change the call history view.



**NOTE:** Tap **Menu > Call Timers...** to view call durations. The **All Calls** timer cannot be reset.

- Tap **Call History > Menu > Delete All Calls** to clear the entire Call History.

## Make calls using call history

Use call history to quickly call someone whom you recently called or someone who recently called you.

1. Press the  (Answer/Send) key.
2. On the screen keypad tap **Call History**.
3. Tap the required number to place a call.

## View call details

1. On the screen, tap **Call History**.
2. Tap the phone number of the contact to view the details.

The date and timestamp, as well as the duration of the call, are displayed.

## Voice commands

Use voice commands to look up contacts, dial a contact by name, get calendar information, play and control your music, as well as launch applications on your HP iPAQ.

Press the **HP Voice Commander** key to launch the **HP Voice Commander** application. Wait for the audio cue to say **Say command**, and then begin saying a command into the microphone.



**NOTE:** You can also launch the **HP Voice Commander** by pressing the hookswitch on your HP iPAQ headset.

To...	Say...
Call a contact saved in the contact list	<b>Call</b> followed by the name of the contact and home/work/mobile
Find a contact saved in the contact list	<b>Find</b> followed by the name of the contact
To call numbers not stored in the contact list	<b>Digit Dial</b> followed by the digits in the number, <b>Redial</b> to redial the number, and <b>Callback</b> to call the last dialed number  <b>Important!</b> The <b>Digit Dial</b> feature might not be available in all countries/regions.
To play, pause, and/or resume music	<b>Play Music/Pause/Resume</b>
To play an existing music file	<b>Play</b> followed by the name of the music file

To play the previous or the next song in the playlist	Previous/Next
To open an application	Start followed by the application name
View appointments	<Today's/Tomorrow's/This Week's appointments> to list the appointments for the day, next day, or the present week
Read messages, e-mails, check Call History	Read<SMS/E-mail>/Call history
View time	What time is it?
View the different set of commands	What can I say?
To close HP Voice Commander application	Goodbye
To compose an e-mail	Compose E-mail To (Contact)
To compose an audio e-mail	Compose Audio E-mail To (Contact) to start recording an audio message
To change profiles	Set followed by the name of the profile to set the profile
To dial a number using speed dial	Speed Dial followed by the digit assigned to the number
To record an audio note	Start Recording to open the voice recorder and start recording
To see all reminders	Reminder
To schedule a call	Schedule A Call To (Contact) to call a contact

## Check connection and signal strength

When you slide your SIM card into your HP iPAQ, your unit automatically connects to your mobile phone service provider's network. The  (Signal strength) icon indicates that you are connected. The more the vertical bars, the better the connection.

## Change the SIM PIN

For security purposes, the SIM PIN protects your HP iPAQ against unauthorized access. You can assign a password to protect your device and information. Your first PIN comes from your wireless service provider.

1. Press the  (Answer/Send) key.
2. Tap **Menu > Options...**
3. Under **Phone**, tap **Change PIN**.
4. Enter your current PIN.
5. Tap **Enter**.
6. Enter and confirm your new PIN.
7. Tap **ok**.

To enter a PIN before you make calls, check **Require PIN when phone is used**.



**NOTE:** Emergency calls can be placed at any time, without entering a PIN.

# Change service settings

## Change phone service settings

Once your phone service is set up through your mobile phone service provider, you can change service settings on your HP iPAQ. For example, you might want to block certain types of incoming and/or outgoing calls, forward incoming calls to a different phone number, be notified of incoming calls when you are already in a phone session, or let others know your identity when making calls.

To change phone service settings:

1. Press the  (Answer/Send) key.
2. On the screen, tap **Menu > Options... > Services**.
3. Tap the service you want to change, and then tap **Get Settings**.
4. Make appropriate changes and tap **ok**.

## Forward calls

1. On the screen, tap **Menu > Options... > Services**.
2. Tap **Call Forwarding > Get Settings**.
3. Select the **Forward all incoming phone calls** check box.
4. Enter the phone number that is to receive the forwarded calls.

You can set numbers for the following:

- **No answer** – phone cannot be answered.
- **Unavailable** – phone is off.
- **Busy** – line is busy.

## Configure caller ID

1. On the screen, tap **Menu > Options... > Services**.
2. Tap **Caller ID > Get Settings**.
3. Tap **Everyone**.
4. Tap **ok**.

To prevent your identity from being displayed to others, tap **No one**.

## Block calls

1. On the screen, tap **Menu > Options... > Services**.
2. Tap **Call Barring > Get Settings**.
3. Select the type of calls you want to block.

## Set up voice mail or text messaging center number

To use voice mail or send text messages (SMS), enter the correct voice mail or text message phone number in phone settings.

---

 **NOTE:** Sending text messages is not included in all network service plans. Ask your mobile service provider if your plan includes this service.

---

1. On the screen, tap **Menu > Options... > Services**.
2. Tap **Voice Mail and Text Messages > Get Settings**.
3. Enter the voice mail or text message center number in the appropriate box.
4. Tap **ok**.

If you do not know the correct voice mail or text message phone numbers, contact your mobile phone service provider.

## Limit calls to specific area codes or phone numbers

Placeholder- more information required.

# Change network settings

## Change phone network settings

In phone network settings, you can:

- View available wireless phone networks.
- Determine the order in which your phone accesses other phone networks (if the current one is unavailable).
- Specify whether you want to change networks manually or automatically.

To change network settings:

1. Tap **Start > Settings > Personal > Phone > Network**.
2. Select the network setting options you want to change.

---

 **NOTE:** The current phone network your HP iPAQ is using is listed at the top of the screen and remains active until you change it, lose your signal, or change your SIM.

---

## View available phone networks

To view all mobile phone networks available to you:

1. On the screen, tap **Menu > Options... > Network**.
2. In the **Network selection** list, tap **Manual**.
3. Tap **Find Network** to display all of the available mobile phone networks.
4. Tap **ok**.

## Set preferred networks

You can set preferred phone networks in the order you want your HP iPAQ to access them. For example, if your first preferred network is unavailable, your HP iPAQ tries to access your second preferred phone network.

To assign network preferences:

1. On the screen, tap **Menu > Options... > Network**.
2. Tap **Set Networks** and select your preferred networks.
3. To set the network preference order, tap **Move Up** or **Move Down**.
4. Tap **ok**.
5. In the **Network** screen, tap the **Network selection** list.
6. Tap **Automatic**.

## Manually selecting a phone Network

Sometimes you might want to control costs by knowing when connectivity for your current, selected network is unavailable.

To manually select a network:

1. On the screen, tap **Menu > Options... > Network**.
2. In the **Network selection** list, tap **Manual**.
3. Select the network you want to use and then tap **ok**.
4. If your current network is unavailable, tap **Select**, and then manually select a different network.

## Change the ring tone and ring type

Change the ring tone and type to select a different sound to notify you of incoming calls.

To change ring tone and ring type:

1. Press the  (Answer/Send) key.
2. On the screen, tap **Menu > Options... > Phone**.
3. Tap the **Ring type** or **Ring tone** list.
4. Select the sound you want to use.

## Take notes during a call

To create a note during a call:

1. On the screen keypad, tap **Menu > Create Note**.
2. Enter your text.

To access a note you created during a call:

1. Tap **Phone > Call History** on the screen.
2. Tap and hold the name or number for the phone call entry containing the note.
3. Tap **View Note**.

A note created during a call can also be accessed from the **Notes** application. The note title is the phone number you were connected to when writing the note.

## Select a frequency band automatically

Your HP iPAQ has an integrated GSM/GPRS/EDGE feature that supports four different frequency bands (850/900/1800/1900) for international roaming. When traveling between countries and/or wireless network operators, this feature automatically changes the connection settings for frequency bands if the home band is unavailable. This feature is the default setting on the HP iPAQ.

To avoid problems once you are out of the country, follow these tips before you leave:

- Visit your mobile phone service provider's Web site to see if their service is available where you are traveling.
- Verify if your mobile phone account is set up for international roaming and if additional charges apply.

## Copy a contact from a SIM to a device

When using the SIM card in multiple devices, you can copy contacts from the SIM to the new device.

1. Tap **Start > Contacts**.
2. Tap **Menu > Copy to Memory**.
3. Tap **OK** to copy the contacts or **Cancel** to go back to the previous screen.
4. Tap **Start > Contacts** and search for the added contacts to verify if you copied the contacts to your HP iPAQ.

## Add Tele-typewriter (TTY) functionality

### Add TTY functionality for people who are deaf or hard-of-hearing

HP iPAQ products support Tele-typewriter (TTY) functionality, which allows people who are deaf or with hearing limitations to communicate using existing telephony infrastructure, including cell phones. To achieve this, separately purchased TTY devices must be connected to the telephones on both ends of a telephone call session, and the HP iPAQ must be configured for TTY use. The sending TTY device generates a distinct audio tone for every supported character, and these tones are decoded and converted back into text on the receiving TTY device.

Due to the use of audio compression codecs in modern digital cell phones, these TTY audio tones might be unintentionally distorted while being transmitted through cell phones. Therefore, in order for TTY devices to continue to work in cellular networks, the cell phone must be set into a mode that optimizes the compression codec to handle TTY tones instead of the human voice.

To use TTY with the HP iPAQ, an optional TTY audio adapter must be plugged into the HP iPAQ earbud jack (also called the earbud connector). This TTY audio adapter converts the pin-out of the earbud jack, which is designed for a wired earbud and stereo headphones, to the pin-out required by most TTY devices. To purchase the TTY audio adapter (part number: FA709BAC3), visit <http://www.hp.com> > **Handhelds & Calculators > Options and Accessories**.



**NOTE:** Because the HP iPAQ does not support internal Cellular Text Telephone Modem (CTM) conversion, the TTY device you use must contain CTM conversion, or you must use an external CTM adapter between the HP iPAQ and the TTY device.

For information on connecting TTY devices or CTM adapters to the HP iPAQ, refer to the TTY device or CTM adapter manufacturer's documentation.

HP is committed to developing products, services and information that are accessible to everyone, including people with disabilities or age-related limitations. For more information, visit <http://www.hp.com/accessibility>.

## Enable TTY support

 **NOTE:** Before enabling TTY (Tele-typewriter) support on the HP iPAQ, connect a 2.5 mm connector into the earbud jack or the setting reverts back to disabled. For example, plug in the optional TTY audio adapter into the earbud jack first, as described below. Once you enable TTY support, you can remove the 2.5 mm connector and TTY remains enabled on the HP iPAQ until you disable it.

1. Connect the TTY device to the TTY audio adapter.
2. Connect the TTY audio adapter to the earbud jack (earbud connector) on the bottom of the HP iPAQ.
3. Press the **Answer/Send** key on the front of the HP iPAQ to launch the screen keypad.
4. Tap **Menu > Options... > TTY**.
5. Tap **On**.
6. Tap **ok**. The  icon displays in the Navigation bar when it is enabled. Now you are in TTY audio mode.
7. Connect the optional TTY device cable to the TTY audio adapter as stated in the TTY manufacturer's documentation.

 **NOTE:** Do not activate TTY audio mode while a telephone call is already in progress.

## Make a phone call using the TTY enabled HP iPAQ

1. Press the  (Answer/Send) key.
2. Dial the phone number of the person you are trying to reach who also has a Tele-typewriter (TTY) device connected to his phone. If you are asked if you want to turn on the phone, tap **Yes**.

 **NOTE:** Install a SIM card before making your first phone call.

3. When the phone call is answered, start typing on the TTY keyboard.  
  
The letters typed into the TTY device are turned into electrical signals that travel over regular telephone lines. When the signals reach their destination (another TTY device), they are converted back into letters that appear on a display screen, are printed out on paper, or both.  
  
When you are finished typing your phone conversation, the person on the other end of the line might begin typing their answers or comments to you.
4. To end the phone call, press and hold the  (End) key.

 **NOTE:** If a normal headset is connected while TTY support is enabled, the audio quality might decrease. Also, if you make a phone call using a Bluetooth headset while in TTY mode and insert a plug into the headphone jack, TTY audio mode activates thereby decreasing the quality of voice calls.

## Disable TTY support

1. Press the  (Answer/Send) key to launch the screen keypad.
2. Tap **Menu > Options... > TTY**.

3. Tap **Off**.
4. Tap **ok**.

---

 **NOTE:** If you plan to use the HP iPAQ in both normal and Tele-typewriter (TTY) audio mode, HP recommends disabling TTY support when the HP iPAQ is not being used for TTY to allow the special network resources to be used by others.

---

## Voice notes

### Create voice notes

To create a stand-alone recording (voice note) or add a recording to a note:

1. Tap **Start > Programs > Notes**.
2. Do one of the following:
  - To create a stand-alone recording, record from the note list.
  - To add a recording to a note, create or open a note.

---

 **NOTE:** If the Recording toolbar does not appear, tap **Menu > View Recording Toolbar**.

---

3. Tap the  (Record) button.
4. Speak into the microphone located at the bottom of the unit.
5. When you have finished recording the note, tap the  (Stop) button on the recording toolbar.

---

 **NOTE:** If you are recording in an open note, an icon displays in the note. If you are creating a stand-alone recording, an displays in the note list.

---

Also, you can create a voice note in **HP Photosmart Mobile** and attach the note to a picture.

### Delete voice notes

To delete a stand-alone recording voice note:

1. Tap **Start > Programs > Notes**.
2. From the note list, tap and hold the note.
3. Tap **Delete**.

To delete a recording within a note:

1. Tap **Start > Programs > Notes**.
2. Open a note.
3. Tap and hold the  (Voice Note) icon.
4. Tap **Clear**.

### Listen to voice notes

1. Tap **Start > Programs > Notes**.
2. Tap the  (Recorded voice note) icon to hear the note.

## Rename voice notes

1. Tap **Start > Programs > Notes**.
2. Tap and hold the note to rename.
3. Tap **Rename/Move**.
4. Enter the new name in the **Name** box.
5. Tap **ok**.

## Configure channels

Enable this feature to receive real-time news and information such as traffic news and weather reports. Check with your mobile phone service provider for availability in your area.

To configure the phone broadcast channels:

1. Tap **Start > Settings > Personal > Phone > More**.
2. Select the **Cell Broadcast** check box.
3. Tap **Setting...**
4. Tap **Add...**, and then enter the channel name and number.
5. Tap **ok**.

## HSDPA

High Speed Download Packet Access (HSDPA) is an enhancement of Wideband Code Division Multiple Access (WCDMA) which is based on 3G technology, and offers better compression and codecs. Your HP iPAQ supports HSDPA 3.6 to 7.2 mbps that uses WCDMA for high speed downloads. HP iPAQ also supports WCDMA over three different frequency bands (850/1900/2100). When WCDMA or HSDPA is available, the device uses the technology and reverts back to GSM/GPRS/EDGE if WCDMA or HSDPA is unavailable.

## Differences between GSM and GPRS/EDGE/WCDMA/3G technology

GSM technology is typically used for voice calls and text messaging, whereas GPRS/EDGE/WCDMA/3G technology provides a connection to the Mobile Phone Network that can be used for Web browsing, Multimedia Messaging Service (MMS), or accessing your corporate network.



---

**NOTE:** Using GPRS/EDGE/WCDMA/3G data services are typically an additional charge to your standard mobile phone service. Check with your mobile phone service provider for data services and cost.

---

---

# 7 Camera

## Use the camera

Use the built-in digital camera on your HP iPAQ to capture and view photos.

### Capture photos

You can capture photos and store them in your HP iPAQ or storage card.

1. Press the **Camera** key or tap **Start > Programs > Camera**.
2. Use the 3-Way Thumbwheel key to zoom in or zoom out.
3. To decrease or increase brightness, move the horizontal slider at the bottom of the screen.
4. Press the **Camera** key to capture a photo and automatically save it in **File Explorer > My Documents > My Pictures**.



---

**NOTE:** Tap the  (Flash) button to enable flash while taking pictures.

---

### View photos

To view photos captured on your HP iPAQ:

1. Tap **Start > Programs > Photosmart Mobile**.
2. Navigate to a required folder.
3. Tap the folder to open it and tap the required photo.

## Change camera settings

### Change brightness settings

1. Tap **Start > Programs > Camera**.
2. Tap the  (Settings) button.
3. On the **Basic** tab, select **Brightness** from the **White Balance** list.
4. Select the required value for brightness from the adjacent list and tap **ok**.

You can adjust the brightness within a range of -10000 to +10000.

### Change resolution settings

1. Tap **Start > Programs > Camera**.
2. Tap the  (Settings) button.
3. On the **Photo** tab, select the required settings from the **Resolution** list.
4. Make the necessary changes and tap **ok**.

The Resolution settings can be changed to:

- QVGA – 320 X 240
- VGA – 640 X 480
- 1M – 1280 X 960
- 1.3M – 1280 X 1024
- 2M – 1600 X 1200
- 3M – 2048 X 1536

---

 **NOTE:** The larger the resolution you choose, the more the storage space required and it might take longer to send such photos by Multimedia Messaging Service (MMS), e-mail, or Bluetooth.

---

## Change mode settings

1. Tap **Start > Programs > Camera**.
2. Tap the  (Settings) button.
3. On the **Photo** tab, select the required setting from the **Capture mode** list.
4. Make the necessary changes and tap **ok**.

Mode settings can be changed to:

- **Normal** – Set this default mode when you capture photos.
- **Timer** – Set the self-timer to the time duration after which the camera captures photo on pressing the **Camera** key.
- **Burst** – Set the maximum number of photos that can be taken at a time.
- **Frame** – Set the type of frame.
- **Panorama horizontal** – Set to panorama horizontal to capture vast landscapes, city skylines, and other landscapes.
- **Panorama vertical** – Placeholder- more information required.

---

 **NOTE:** You can also tap the  (Frame) button to change the frame type.

---

## Video recorder

### Record videos

You can use the built-in camcorder on your HP iPAQ to create short videos and share them with your friends and family.

1. Tap **Start > Programs > Camera**.
2. Tap  (Video) button to go into the video mode.
3. Press the **Camera** key to start recording. Press the **Camera** key again to stop recording.

## Configure video format

Tap **Start > Programs > Camera**, and then tap the  (Settings) button.

- On the **Video** tab, change one of the following:
- Select resolution from the **Resolution** list. You can change the settings to:
  - QCIF(176 X 144)
  - QVGA(320 X 240)

---

 **NOTE:** Select the **Record voice** check box to record voice while recording videos.

---

## Transfer images

### Use GPRS

When the phone radio is turned on for the first time, the **HP iPAQ DataConnect** application detects the mobile phone service provider and automatically populates the MMS settings on the HP iPAQ.

To transfer pictures using MMS:

1. Tap **Start > Messaging > MMS**.
2. Tap **Menu > New**.
3. Tap the picture or the video you want to attach.
4. Tap **Send**.

### Use Bluetooth

You can do the following to transfer images from your HP iPAQ to other devices:

1. Tap **Start > Programs > Photosmart Mobile**.
2. Scroll and select a picture.
3. Tap **Menu > Beam picture...** Select the device and tap **Tap to send**.

---

 **NOTE:** You should have the Bluetooth connection on to transfer images.

---