


### (c) Receiving on the Bluetooth phone

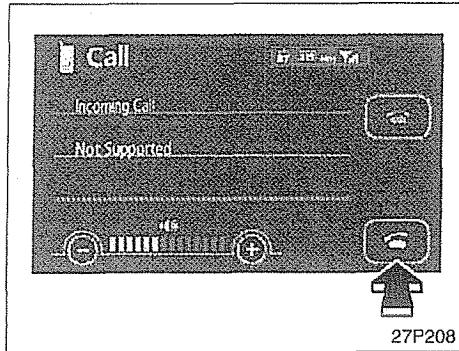

When a call is received, this screen is displayed with a sound. Touch "Call" or push the  button of the steering wheel to talk on the phone.

To hang up the phone:

Touch "End" or push the  button of the steering wheel again.


To refuse to receive the call:

Touch "End" and hold it.

To adjust the volume of received call:  
Touch “-” or “+” or use the volume switch of the steering wheel.

On the international phone call, the other party's name may not be displayed correctly depending on the cellular phone which you have.

### (d) Talking on the Bluetooth phone

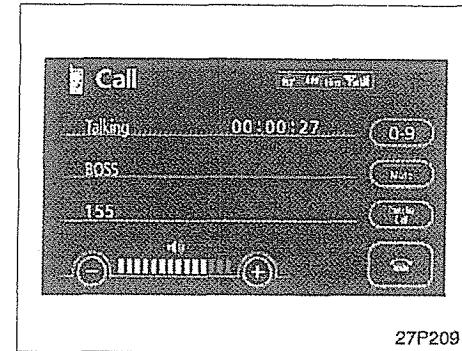

While you are talking on the phone, this screen is displayed. You can do the operations below on the screen.

To adjust the volume of the other party's voice:

Touch “-” or “+” or use the volume switch of the steering wheel.

To hang up the phone:

Touch the "End" switch or push the  button of the steering wheel

To mute your voice:

Touch the "Mute" switch.

To input a Key:

Touch the "0-9" switch.

To transfer the call


Touch the "Transfer Call" switch.

You cannot change from hands-free call to cellular phone call while you are driving.

When you change from cellular phone call to hands-free call, the hands-free screen will be displayed and you can operate it on the screen.

Transferring method and behavior are different depending on the cellular phone which you have.

For the operation of the phone, see the manual that comes with your cellular phone.

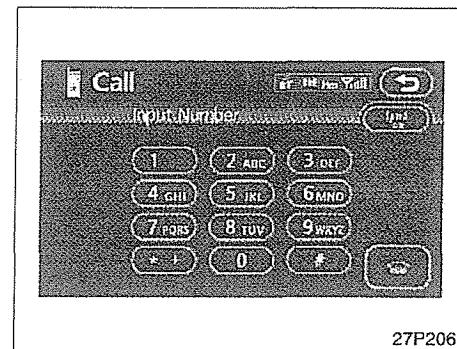


Touch the desired number to input the key.

To hang up the phone:

Touch "■" or push the  button of the steering wheel.

This cannot be operated while you are driving.

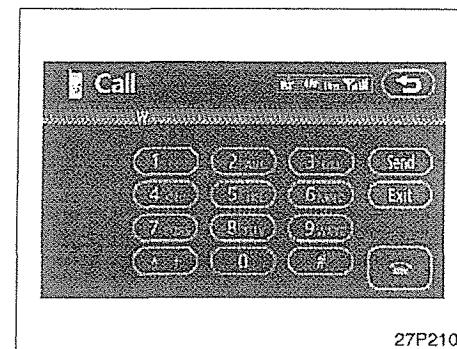

If the continuous tone signal is registered in a phone book, this screen appears. (If not registered, "Send" and "Exit" are not displayed.)

Confirm the number displayed on the screen and touch "Send". The number before marked sign will be sent.

When you touch "Exit", this function will be finished and normal tone screen appears.


To hang up the phone:

Touch "■" or push the  button of the steering wheel.

The continuous tone signal is the marked sign (p or w) and the number following telephone number. (ex. 056133p0123w#1:)


You can do this operation when you want to operate an answering machine or use a telephone service in bank for example. You can register the phone number and the code number in the phone book.

◎ Sending a tone by the speed tone  
You can send a tone by the speed tone. (For registering the speed tone, see "Registering the speed tone" on page 196.)

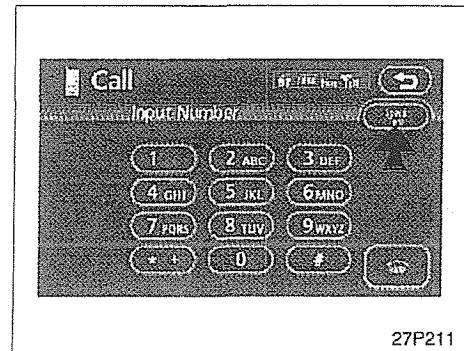

27P211


1. Touch the "Speed Tone" switch.

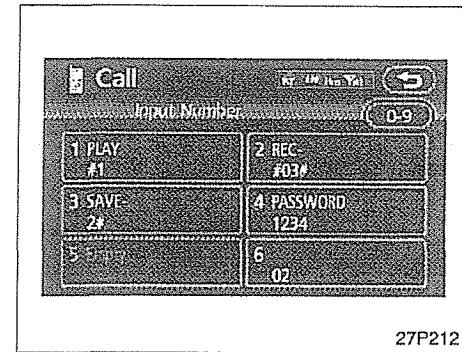


27P212

2. Touch the desired switch to send a tone.

**(e) Changing the settings of the Bluetooth phone**

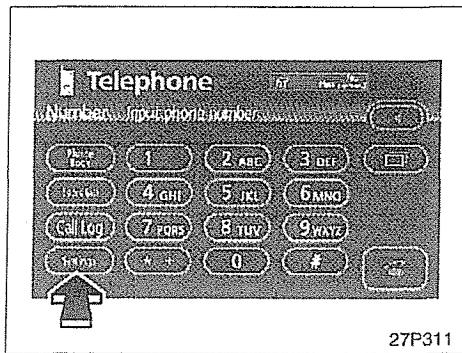

Touch the "Settings" switch to display "Settings" screen.

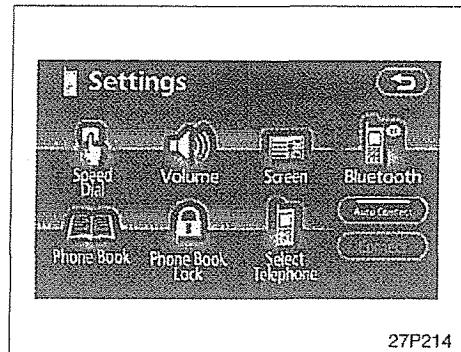


You can change the settings of the phone.




**(i) (a) Registering the speed dial**

You can register the desired telephone number from phone book, dialed numbers and received calls. Up to 17 speed dial numbers can be registered.

The 6th entry is the speed dial for redialing.

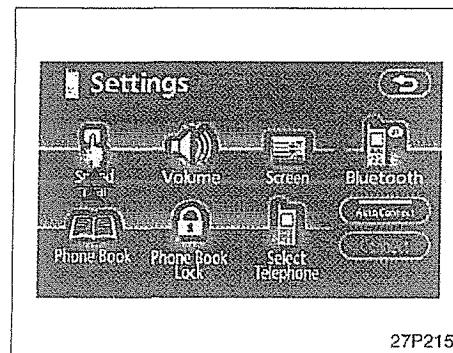


1. Touch the "Speed Dial" switch to display the "Speed Dial Settings" screen.

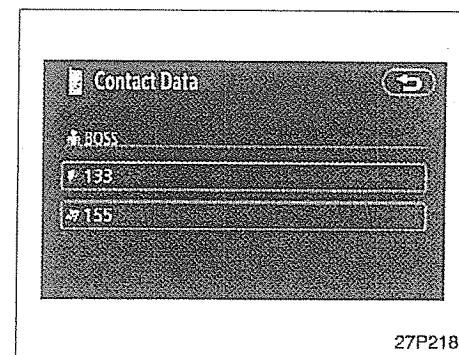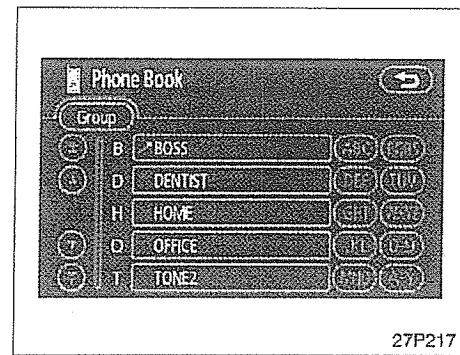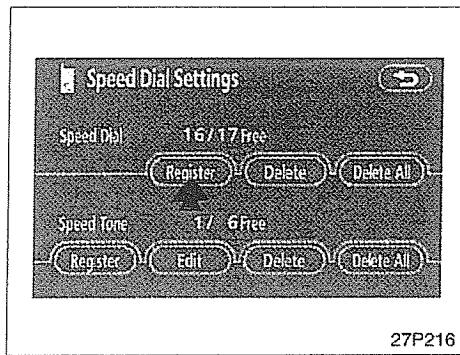

2. Touch the "Register" switch of "Speed Dial".


3. Select the data you want to register.

4. Touch the desired telephone number.

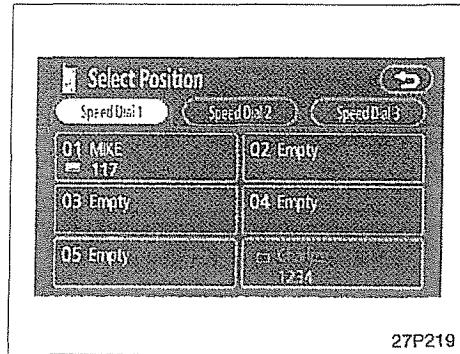

5. Touch the switch you want to register in.

The latest dialed number is registered in the 6th item (speed redial).

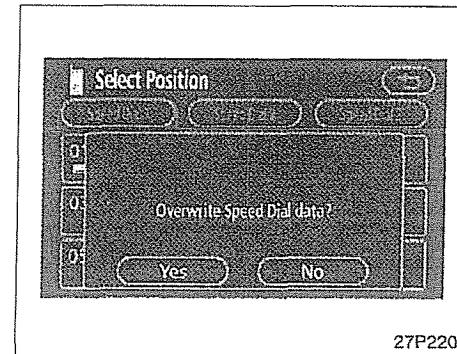


6. If you select a switch you registered before, this screen is displayed.



Touch the "Yes" switch if you want to overwrite it.

- Deleting the speed dial individually  
You can delete "01" - "17" of the speed dial individually.

If you delete them all at once, all of 17 numbers are deleted.

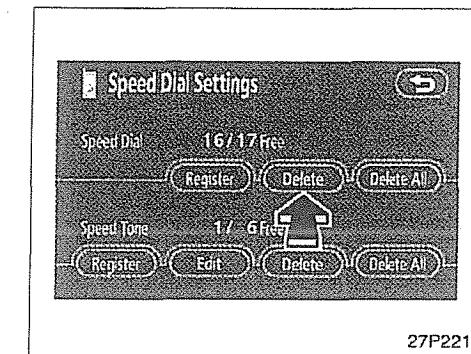


1. Touch the "Delete" switch of "Speed Dial".

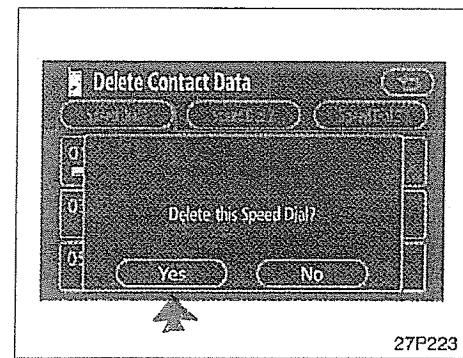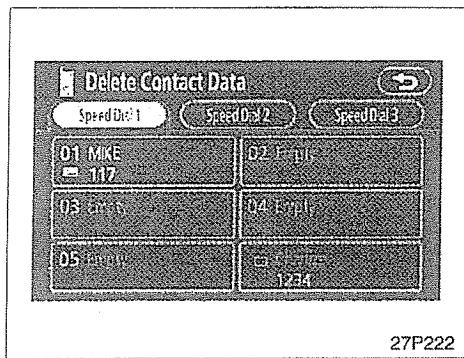


2. Touch the switch you want to delete.

3. Touch the "Yes" switch.

• Deleting all of the speed dial

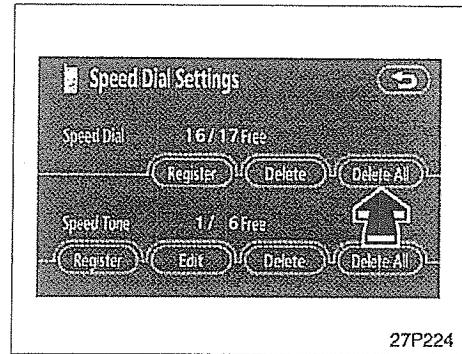

1. Touch the "Delete All" switch of "Speed Dial".

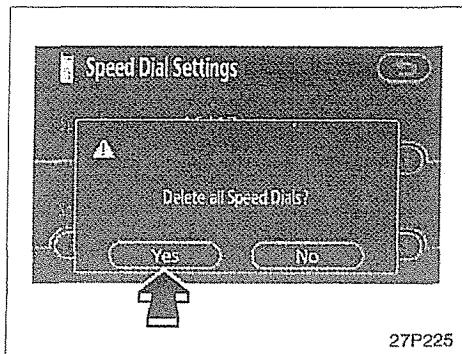


2. Touch the "Yes" switch.

27P225


**(b) Registering the speed tone**

You can register the desired tone number. Up to 6 speed tone numbers can be registered.

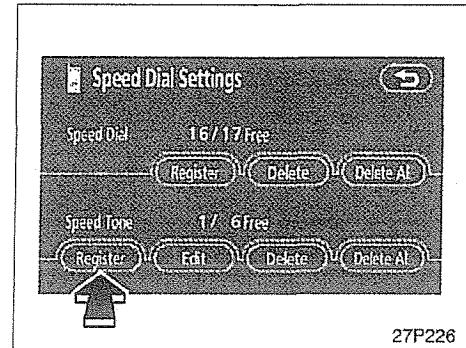


1. Touch the "Register" switch of "Speed Tone".

27P226

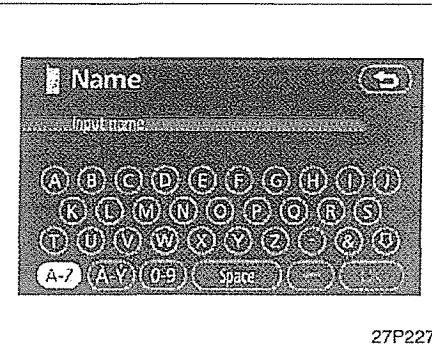


2. Use the software keyboard to input the name.


27P227

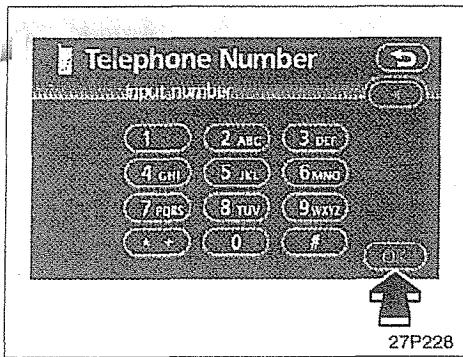

3. Input the number and touch "OK".

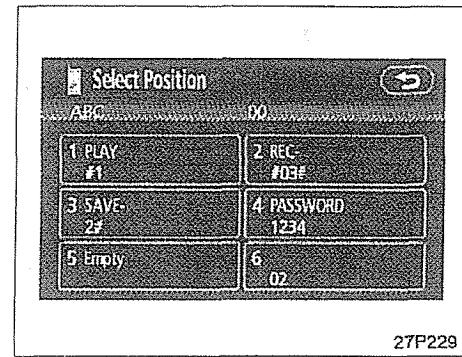


4. Touch the desired switch you want to register in.

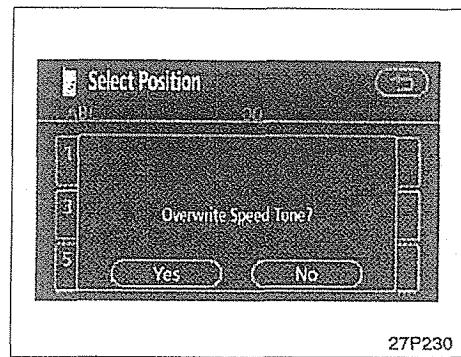


5. If you select a switch you registered before, this screen is displayed. Touch the "Yes" switch if you want to overwrite it.

● Editing the speed tone.


You can edit the speed tone.

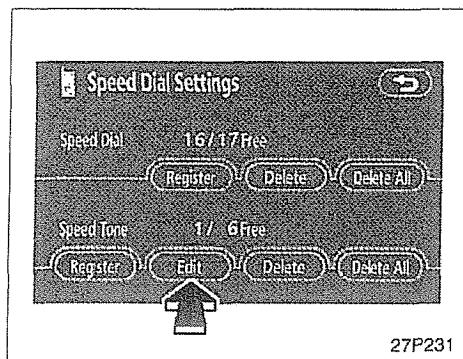


1. Touch the "Edit" switch of "Speed Tone".

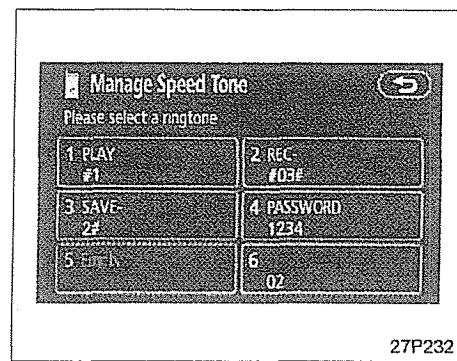

2. Touch the switch you want to edit.

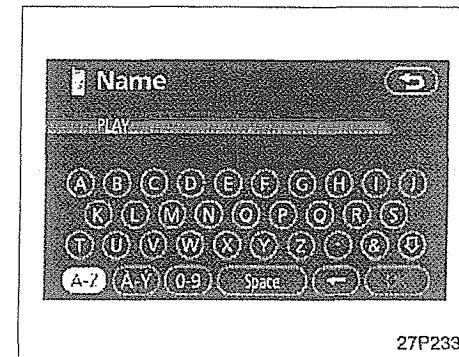


3. Use the software keyboard to input the name.

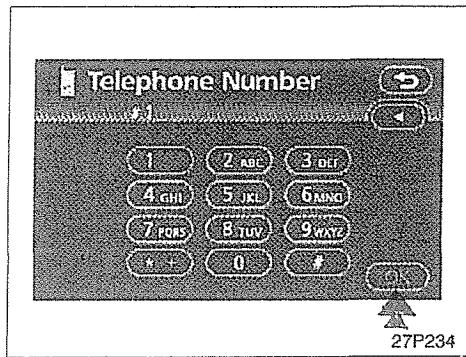


4. Input the number and touch "OK".

• Deleting the speed tone individually.  
You can delete "1" to "6" of the speed tone.


If you delete them all at once, all of 6 numbers are deleted.

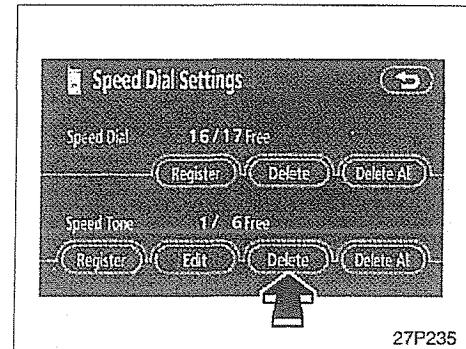

1. Touch the "Delete" switch of "Speed Tone".

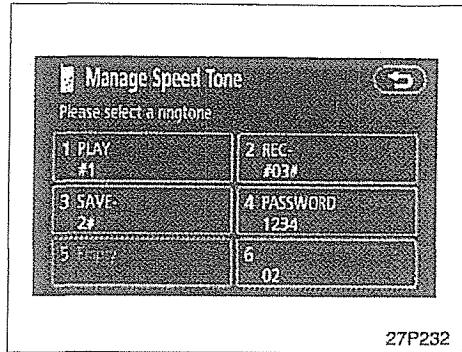


2. Touch the switch you want to delete.

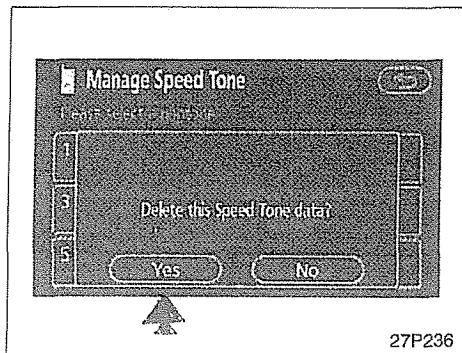


3. Touch the "Yes" switch.

200

• Deleting all the speed tone

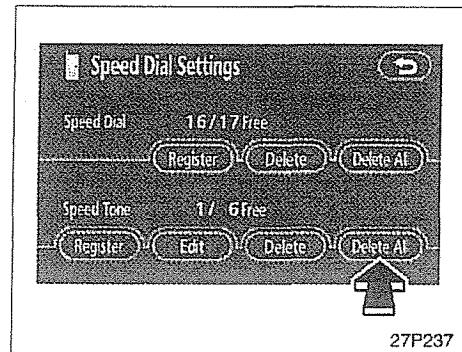


1. Touch the "Delete All" switch of "Speed Tone".

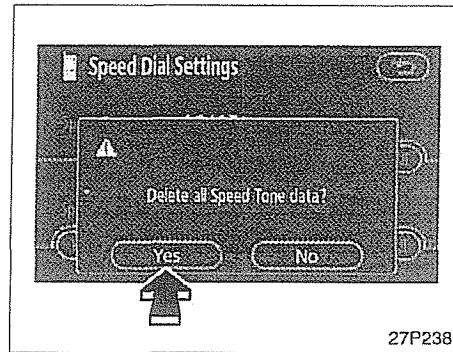


2. Touch the "Yes" switch.

(ii) Setting the volume

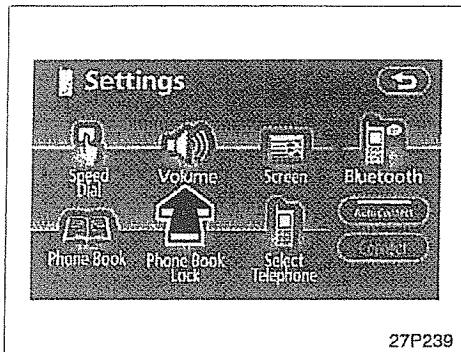

1. Touch the "Volume" switch to display the "Volume Setting" screen.

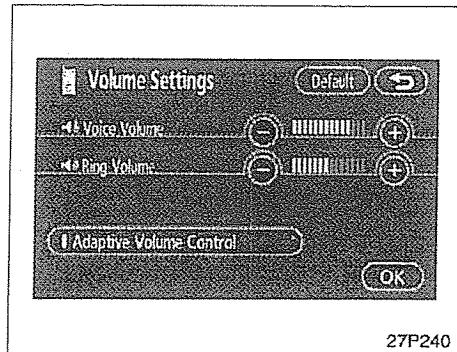

2. Touch the “-” or “+” switch to adjust the “Voice Volume” or “Ring Volume”.

Voice Volume ... adjusting the other party's voice.

Ring Volume ... adjusting the ring volume.


- Automatic volume settings for high speed

You can set the volume one step up when the vehicle speed is over 80 km/h. (When it is under 70 km/h, previous volume is back.)


Each time you touch the "Adaptive Volume Control" switch, you can switch on or off.

● Initializing the settings

You can initialize the settings.

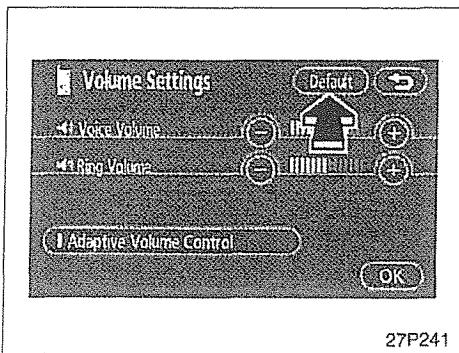


Touch the "Default" switch.

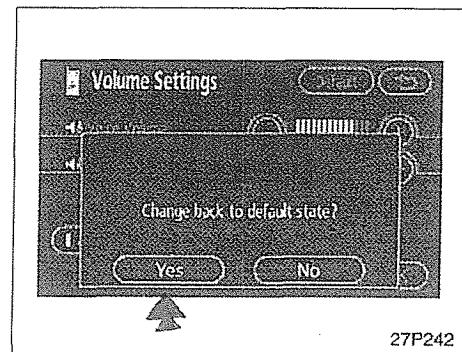


Touch the "Yes" switch.

(iii) Setting the screen

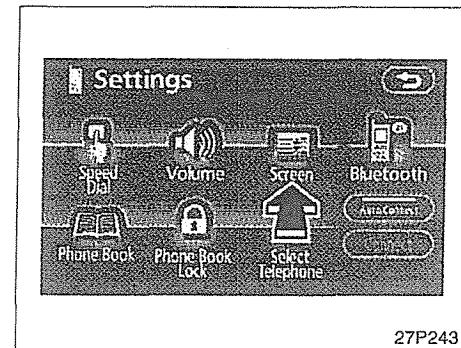


1. Touch the "Screen" switch to display the "Screen Settings" screen.

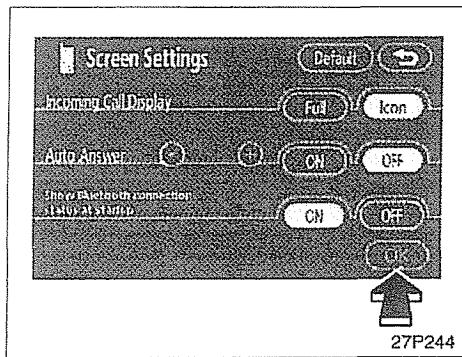

2. Do the detailed settings of the screen and touch "OK".

#### ● Receiving Call Display

You can select the method of the receiving call display.

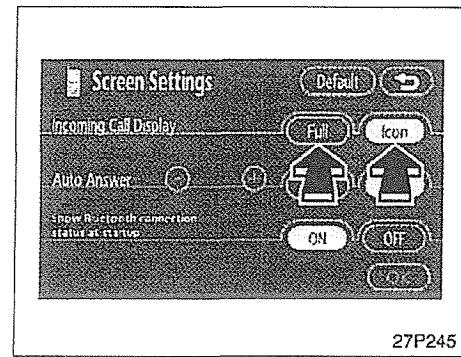


Touch the "Full" or "Icon" switch.

Full mode..... When a call is received, the hands-free screen is displayed and you can operate it on the screen.

Icon mode..... The message is displayed on the upper side of the screen. You can only operate the steering switch.

#### ● Auto answer

When a call is received, the display automatically changes to the talking screen and you can start to talk on the phone (without touching any switch) after the preset time.

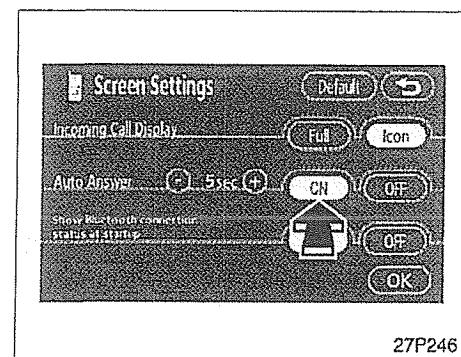

Touch the "ON" switch of "Auto Answer" and "-" or "+" switch to adjust the waiting time of auto answer within 1 - 60 seconds.