

Cobra

TrailBlazer 500
Two-way radio



TWO WAY GMRS RADIO
LAND MOBILE RADIO



Before operating the radio, please read all safety and operating instructions. Save all instructions in a safe place for future reference.

Warning: Important Safety Information

1. Only accessories included in this package or specified by the manufacturer should be used with the radio. The USB-C charging input is compatible with most high quality USB Type C chargers that fully conform to the USB standards.
2. Do not use cleaners or solvents to clean the exterior of the radio. Use only a damp or dry cloth.
3. Do not attempt to service the receiver yourself. Removing the cover will void the warranty. Changes or modifications not expressly approved by Cobra may void the user's authority granted by the FCC to operate this device and should not be made.
4. Do not plug the wall adaptor into the power outlet if the outlet is wet.
5. Do not use any portable radio that has a damaged antenna. If a damaged antenna comes into contact with your skin, a minor burn can result.

WARNING: Important Safety Instructions for Battery and Chargers

Read All Instructions:

- Do not incinerate the battery even if it is severely damaged or is completely worn out.
- Do not discard the battery in a fire. The battery pack can explode in a fire.
- Do not replace the battery in any area labeled "Hazardous Atmosphere". Any sparks created in a potentially explosive atmosphere can cause an explosion or fire.
- Do not disassemble, crush, puncture, shred, or otherwise attempt to change the form of the battery.
- Do not dry a wet or damp battery with an appliance or heat source, such as a hair dryer or microwave oven.
- A small leakage of liquid from the battery cells may occur under extreme usage or temperature conditions. Do not open, deform or mutilate the battery as there may be corrosive materials which can cause damage to eyes or skin and may be toxic if swallowed.
- Never alter the AC cord or plug provided with the unit. If the plug will not fit in the outlet, have the proper outlet installed by a qualified electrician. An improper installation can result in a risk of electric shock.

However, if the outer seal is broken and this leakage gets on your skin:

- a. Wash quickly with soap and water.
- b. Neutralize with a mild acid such as lemon juice or vinegar.
- c. If battery liquid gets into your eyes, flush them with clean water for a minimum of 10 minutes and seek immediate medical attention.

This product contains a Lithium Polymer Battery which is subject to certain transport restrictions. Inspect the product and product packaging prior to transport. Do not transport this product if the battery is damaged.

Recycle Battery

Local, state or federal laws may prohibit disposal of batteries in ordinary trash. Consult your local waste authority for information regarding available recycling and/or disposal options.



SAFETY INFORMATION	A1
INTRODUCTION.....	3
PRODUCT FEATURES	4
INSTALLATION	6
-Installing and Charging Batteries	6
-Quick Start	6
OPERATION	7
-Turning the Radio On and Off	7
-Battery Low.....	7
-Communicating with Another Radio	7
-Changing Channels.....	7
-Monitor.....	7
-Call Button	8
-Lock Function	8
-Channel Banks.....	8
-Find Function	8
-Weather (WX)	9
-NOAA Emergency Weather Alert	9
-Emergency Alert.....	9
-Flashlight & Flashlight S.O.S.....	10
-Menu	10
-Menu/Power Button.....	11
-Privacy Codes (CTCSS & DCS)	12
-CTCSS Privacy Code & Set DCS Privacy Code	12
-Voice Activated Transmit (VOX) On/Off & VOX Sensitivity	12
-Repeaters On/Off.....	12
-Call Tones 1-10	12
-Roger Beep On/Off	12
-Key Tones On/Off.....	12
CHANNEL FREQUENCIES.....	13
-Bank 1	13
-Bank 2.....	14
-Bank 3.....	15
-Bank 4.....	16
-Weather Channels.....	16
-CTCSS Codes.....	16
-DCS Codes	17
LIMITED 2-YEAR WARRANTY AND TRADEMARK INFORMATION.....	18
SOFTWARE, FCC AND SAFETY STATEMENT.....	19



Staying in touch with your family and friends is convenient and easy when using your TrailBlazer 500. Some of the many uses you will discover include:

Communicating with others while hiking, biking, and working; keeping track of family and friends at a crowded public event; checking with travel companions in another car; talking with neighbors; arranging meeting spots with others while shopping at the mall.

In this user's guide, you should find all the information you need to operate your TrailBlazer 500 radio. If you require further assistance after reading this guide, Cobra offers the following customer assistance services:

For Assistance In The U.S.A.

For any questions about operating this new Cobra product, PLEASE CONTACT COBRA FIRST. The contact information for Cobra will vary depending on the country in which you purchased and uses the product. For the latest contact information, please go to www.cobra.com/support or call 1-800-543-1608.

If your product should require factory service, please go to www.cobra.com/support and follow the instructions.

Operational Cautions

Exposure to high volume sound levels may cause temporary or permanent damage to your hearing. Although there is no single volume setting that is appropriate for everyone, you should always use your radio with the volume set at low level and avoid prolonged exposure to high volume sound levels.

1. Set the volume control in a low position and use as low a volume as possible.
2. Avoid turning up the volume to block out noisy surroundings. Whenever possible, use your radio in a quiet environment with low background noise.
3. Limit the amount of time you use headsets or earpiece at high volume levels.
4. When using the radio without a headset or earpiece, do not place the radio's speaker directly against your ear.
5. Observe all signs and instructions that require an electrical device or RF radio product to be switched off in designated areas, such as gas/refueling stations, hospitals, blasting areas, potentially explosive atmospheres, or aircraft.
6. If you experience a skin irritation after using this product, discontinue use and seek medical attention.
7. If the product or charger: overheats; has a damaged cord or plug; has been dropped or damaged; has been dropped into water, disconnect any charger from its power supply, discontinue use of the product.

Electromagnetic Interference

Nearly every electronic device is susceptible to electromagnetic interference (EMI) if inadequately shielded, designed, or otherwise configured for electromagnetic compatibility. Turn off your radio in any facility where posted notices instruct you to do so. These facilities may include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

- When instructed to do so, turn off your radios when on board an aircraft. Any use of a RF device must be in accordance with applicable laws, regulations, and airline crew instructions.
- Some radios may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer or physician to discuss alternatives.



PRODUCT FEATURES



- | | |
|------------------------|-----------------------|
| 1. PTT Button | 7. USB-C Port |
| 2. Emergency Button | 8. Up/Down Button |
| 3. Bank & Channel Knob | 9. Charging Dock Pins |
| 4. Power & Volume Knob | 10. Menu |
| 5. Speaker | 11. Microphone |
| 6. Headset Jack | |



TrailBlazer 500 Keypad



Letter Label	Button	Press	Press and Hold
A.	MENU	Menu	Find
B.	UP	Channel Up	Hi/Low Power
C.	DOWN	Channel Down	Monitor
D.	CALL	Call	Key Lock



Installing and Charging Batteries

1. Insert the included rechargeable Nickle Metal Hydride (NiMH) batteries into the radio. Check to see that the batteries have been inserted properly.
2. To charge the batteries in the radio insert the USB cable into the charge jack located at the right side of the radio.
3. Plug the cable into a USB-compatible power port.
4. The radio will display a flashing battery icon while charging.

NOTES:

- Cobra recommends your radio is turned off while being charged.
- Please charge new batteries for 14 hours for first time of use.
- Only charge NiMH batteries in the radio. If higher capacity batteries are used it will take longer to charge.
- For best performance use a dedicated battery charger to charge your AA rechargeable batteries.
- Non-Rechargeable alkaline batteries can also be used.

WARNING: Do not attempt to charge alkaline batteries. Do not mix old and new batteries or battery types in the radio (alkaline, rechargeable (NiCD, NiMH, Li-Ion, etc.)

Quick Start

1. Turn ON/OFF/Volume Knob clockwise to turn the radio on and counter clockwise to turn the radio off.
2. Select a desired channel.

NOTE: Both radios must be tuned to the same channel/privacy code to communicate.

3. Press and hold the Talk button while speaking into the microphone.
4. When finished talking, release the Talk button and listen for a response.



Turning the Radio On and Off

- To power ON turn Power Knob clockwise
- To power OFF turn Power Knob counter-clockwise

Battery Low

When battery power is low, the final bar in the Battery icon will blink and an audible tone will sound twice indicating that the batteries are low. Insert new batteries into the radio or recharge the batteries in the radio if rechargeable batteries are being used.

Communicating with Another Radio

1. Press and hold the Push-To-Talk (PTT) button on the side of the radio
2. With the microphone about two inches (5 cm) from your mouth, speak in a normal voice.
3. Release the PTT button when you are finished talking and listen for a response.

You cannot receive incoming calls while pressing the PTT button.

Both radios need to be on the same frequency and privacy code to communicate.

- Turn the power/volume knob clockwise to increase the volume.
- Turn the power/volume knob counter clockwise to decrease the volume.

Tip: It is recommended to wait a short time after pressing the PTT before speaking to avoid cutting off the beginning of the message.

Changing Channels

To change channel, turn the channel knob clockwise or counterclockwise until you reach your desired channel. To program alternate frequencies or privacy codes, use the advanced programming menu or the Cobra Computer Programming Software.


Monitor

Your TrailBlazer 500 will automatically shut off weak transmissions and unwanted noise due to terrain, conditions or if you've reached your maximum range limit.

You can turn on the Monitor function to turn off the automatic squelch, allowing all signals to be received. This is also an effective way to hear audio from the radio speaker in order to adjust the volume.

- Press and hold the Monitor button for 2 seconds to turn the monitor on to open the squelch and allow all signals and noise to be received. Adjust the volume and listen for any weak signals. The monitor will turn off when the button is released.
- Press and hold the Monitor button for 5 seconds to continuously monitor a selected channel. The squelch will open allowing all signals and noise to be received. To turn off monitor and return to automatic squelch press and hold the monitor button.

Set the volume control in a low position and use as low a volume as possible. Do not hold the radio speaker close to your ear. If the volume is set to a high level, it could damage your hearing.

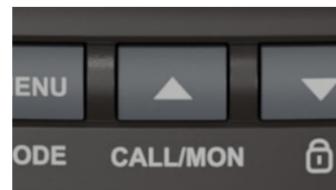

Call button

Press and release the Call button to alert others that you are calling. The other person will hear a two second call tone. This tone is only used to alert others of incoming voice communications.

Lock Function

The lock function locks the radio controls to prevent accidental operation.

Channel Banks

The TrailBlazer 500 comes equipped with multiple channel banks to provide compatibility with Cobra GMRS radios. If repeaters are turned on an additional 8 repeater channels 15RP-22RP are available. By default the channel banks are:
To change the bank, press Bank and Channel Knob.

1. **Bank 1:** 22 GMRS channels +8 GMRS repeater channels.
2. **Bank 2:** 60 GMRS channels compatible with Midland 50 channel GMRS radios.
 - a. Channels 1-22 (and +8 repeater channels if turned on) are the standard GMRS channels compatible with all GMRS radios
 - b. Channels 23-60 have preset privacy codes
3. **Bank 3:** 22 GMRS channels with preset privacy codes.
4. **Bank 4:** Blank by default. Bank 4 is used for the Frequency Find function. When channels are found with the find function they will be stored in bank 4.

In addition to setting privacy codes, channel banks can be further customized with the Cobra Programming Software (CPS). The Cobra Programming Software allows you to enable or disable channels to customize the channel banks. Instead of a 22 or larger channel bank a radio can be programmed on only have 1 or 2 channels. The CPS also allows for changing the radio settings and adjusting all of the channels in a easy and convenient user interface.

Find Function

The Find function allows your TrailBlazer 500 to scan the entire frequency band and lock onto the strongest nearby signal. This is a convenient way to:

- Locate any nearby GMRS radios transmitting on any station
- Identify what channel a radio is transmitting on if it does not have a display
- Connect multiple radios to the same channel and privacy code

Press the Find button to initiate a signal find. The radio will flash '88' on the channel indicator. If a strong signal is found the radio will lock onto the signal and show the channel and privacy code. The TrailBlazer radio will be on Bank 4 with this channel information and you can now receive and transmit to other radios on that channel.

The TrailBlazer 500 can also perform a standard channel scan of all of the channels in the selected channel bank. Press and hold the Find button to initiate a channel scan. The radio will advance through each of the channels in the selected channel bank and stop if a strong signal is found. To continue the scan press the up or down buttons. To stop the scan and communicate on the selected channel press the PTT button.





Weather (WX)

The TrailBlazer 500 has 10 NOAA weather channels and a weather alert feature. The National Oceanic and Atmospheric Administration (NOAA) provides continuous around-the-clock broadcasts of the latest weather conditions. Recorded weather messages run every 4-6 minutes and are revised every 2-3 hours as needed.

NOAA Emergency Weather Alert

In the event of a major storm or other weather condition, NOAA broadcasts a 1050 Hz tone that receivers such as the TrailBlazer 500 radio can detect and warn you of a weather alert condition. When the Weather Alert mode on your radio is set to On, this signal will produce a loud tone from the speaker in the radio and will automatically switch to the alerting weather channel so the alert broadcast can be heard.

NOTE: Typically only one or two weather channels will be operating in a given location. Select the channel with the strongest signal for your location. This weather channel will also be used to for detecting a emergency weather alert.

To test this system, NOAA broadcasts the 1050 Hz signal every Wednesday sometime between 11 a.m. and 1 p.m. in each local time zone. Any receiver that can detect the weather alert tone may use this service to verify that this system is functioning properly.

To enter the WX mode press and hold the WX key. The weather channel will be shown on the display.

To set WX Alert to On or Off press and release the WX key while in WX mode. Use the up and down keys to select WX Alert On or Off. Press PTT or wait 6 seconds to confirm and exit the menu

Emergency Alert

The Emergency Alert feature can be used to signal members in your group of your need for urgent help. The TrailBlazer series radios will operate in an automatic hands-free emergency mode.

All Cobra RX380, RX680, PX650, & CXY900 series FRS radios and TrailBlazer 250, 450, & 500 series GMRS radios are compatible with the Emergency Alert Feature.

Radios other than these Cobra series radios can receive the emergency alert signal, but may not respond to the emergency alert in the same way as a compatible Cobra series radio.

To signal an Emergency Alert press and hold the Emergency Alert button for 3 seconds

- The backlight will flash and an alert tone will sound.
- After the alert tone ends you may speak into the microphone to make a transmission.
 - You do not need to continue to hold the emergency alert button and do not need to press and hold the PTT button for your message to be transmitted.
 - This hands-free emergency alert transmission mode will last for 22 seconds.
- After a total of 30 seconds your radio will sound a beep tone and the backlight will stop flashing. Your radio will return to its normal two-way radio function.
- Turning off the radio will cancel the Emergency Alert.

NOTE: In order to receive an emergency alert a receiving radio(s) must be set to the same channel and privacy code.



Emergency Alert continued

A compatible Cobra radio receiving an emergency alert will respond by:

- Sounding an 8 second alert tone at maximum volume.
- After 8 seconds the radio buttons and controls will be locked so the incoming emergency message can be received
- After a total of 30 seconds your radio will sound a beep tone and your radio will return to its normal two-way radio function.

WARNING: The Emergency Alert feature should only be used in the event of an actual emergency. Cobra is not responsible if there is no response to the emergency alert from the receiving group.

Menu


By scrolling through the Menu, you will be able to select or turn on preferred features of your TrailBlazer 500. When scrolling through the Menu, the radio features will be displayed in the same predetermined order:

- 
- Set Vox On/Off**
 - Set Vox Sensitivity 1-5**
 - Set Roger Beep On/Off**
 - Set Repeater On/Off**
 - Set Weather Alert On/Off**



Menu/Power Button

Press and hold **Menu** button for 3 seconds to turn the radio on or off. There are 8 options you may set to your preferences. Each press of the **Menu** button advances you to the next option setting. Press the UP or DOWN buttons to change the setting, you may also press **Talk** button to enter new setting and return to **standby** mode.

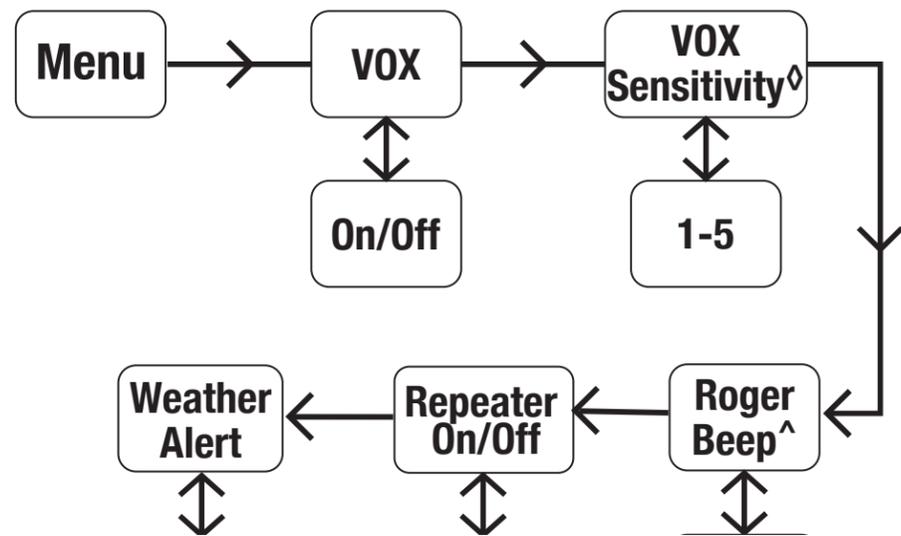

* Ch1-22 will be shown on display as the selected channel mode for two seconds once activated.

#Your radio incorporates two advanced coded squelch systems that can help to reduce interference from other users on any given channel. CTCSS (Continuous Tone Coded Squelch System) and DCS (Digitally Coded Squelch) provide 38 or 83 privacy codes respectively. Either system can be used on any channels, but cannot be used on the same channel at the same time

◇With level 1 being the least sensitive level.

§Press Call or Talk button to exit channel scanning mode.

^The Roger Beep confirmation tone alerts the other party that you have finished talking and it is OK for them to speak, after you release the Talk button.

‡Press and hold Menu/Power button to turn the keypad lock off.

When changing a setting in the menu, select the desired setting and choose one of the following:

- a. Press the Menu button to save the new setting and proceed to other menu settings.
- b. Press the Push-to-Talk button to save the new setting and return to Standby mode.
- c. Do not press any buttons for 6 seconds to save the new setting and return to Standby mode.



Privacy Codes (CTCSS & DCS)

Your TrailBlazer 500 radio incorporates two advanced coded squelch systems that can help to reduce interference from other users on any given channel.

CTCSS (Continuous Tone Coded Squelch System) provides 38 privacy codes and DCS (Digitally Coded Squelch) provides 83 privacy codes. Either system can be used on channels 1-22, but only one system can be used on a channel at a given time.

NOTE: To successfully communicate using a privacy code, both the sending and receiving radios must be tuned to the same channel and to the same privacy code system (CTCSS or DCS) and privacy code number. Each channel will remember the last privacy code system and number you select.

NOTE: The privacy code 00 is not a privacy code, but allows all signals to be heard on a channel that is set to 00 on both the CTCSS and DCS systems.

CTCSS Privacy Code & Set DCS Privacy Code

Press the Up or Down button to select a privacy code. You can hold the Up or Down button for fast advance. The privacy code 0 turns the privacy code off and allows all signals to be heard on a channel. When setting the privacy codes for a repeater channel separate selections can be made for the Transmit Privacy Code and the Receive Privacy Code. These can even have one privacy code using CTCSS and the other using DSC.

Voice Activated Transmit (VOX) On/Off & VOX Sensitivity

In VOX mode, your radio can be used “hands-free”, automatically transmitting when you speak. You can set the VOX sensitivity level to fit the volume of your voice and avoid transmissions triggered by background noise. Level 1 is the setting which will only activate the voice activated transmit with the loudest sound. Level 5 is the highest sensitivity and the easiest to activate the voice activated transmit. The VOX function is most effective when using a speaker/microphone headset or lapel speaker/microphone.

Repeaters On/Off

Turning repeaters On will add the 8 repeater channels 15RP-22RP to the channel list on Banks 1, 2, & 3.

Call Tones 1-10

The current Call Tone is sounded from the radio. Press the up and down buttons to scroll through the ten available call tones (1-10)

Roger Beep On/Off

A receiving radio will hear an audible tone when you release the Talk button. This alerts the other party that you are finished talking and it is OK for them to speak.

The roger beep will also sound from your radio as an indication that roger beep is on.

Key Tones On/Off

When Key Tones are On the radio will give a confirmation beep when buttons are pressed.



CTCSS Codes

Code	Tone Code	Code	Tone Code
1	67	20	131.8
2	71.9	21	136.5
3	74.4	22	141.3
4	77	23	146.2
5	79.7	24	151.4
6	82.5	25	156.7
7	85.4	26	162.2
8	88.5	27	167.9
9	91.5	28	173.8
10	94.8	29	179.9
11	97.4	30	186.2
12	100	31	192.8
13	103.5	32	203.5
14	107.2	33	210.7
15	110.9	34	218.1
16	114.8	35	225.7
17	118.8	36	233.6
18	123	37	241.8
19	127.3	38	250.3

DCS Codes

Code	Octal								
1	023	2	134	41	306	6	503	8	734
2	025	22	143	42	311	62	506	82	743
3	026	23	152	43	315	63	516	83	754
4	031	24	155	44	331	64	532		
5	032	25	56	45	343	65	546		
6	043	26	162	46	346	66	565		
7	047	27	165	47	351	67	606		
8	051	28	172	48	364	68	612		
9	054	29	174	49	365	69	624		
10	065	30	205	50	371	70	627		
11	071	31	223	51	411	71	631		
12	072	32	226	52	412	72	632		
13	073	33	243	53	413	73	654		
14	074	34	244	54	423	74	662		
15	114	35	245	55	431	75	664		
16	115	36	251	56	432	76	703		
17	116	37	261	57	445	77	712		
18	125	38	263	58	464	78	723		
19	131	39	265	59	465	79	731		
20	132	40	271	60	466	80	732		

NOTE: CTCSS & DCS code numbers may vary across radio brands. These 38 Cobra CTCSS codes and 83 DCS codes are shared across all Cobra FRS and GRMS radios and also used by most radios from Midland, Motorola, Uniden, Backcountry Access, and Rocky Talkie.

Warranty Terms:

Cobra warrants your product against all defects in materials and workmanship for a period of two (2) years from the date of original purchase.

Cobra, at our sole discretion, will repair or replace your product (with the same or comparable product) free of charge.

Cobra will not pay shipping charges that you incur for sending your product to us. Products received COD will be refused.

To make a warranty claim, we will require proof of purchase in the form of an invoice or receipt. No proof of purchase is required for factory direct purchases.

Warranty Exclusions: Warranty does not apply to your product under any of the following conditions:

1. The serial number has been removed or modified.
2. Your product has been subjected to misuse or damage (including water damage, physical abuse, and/or improper installation).
3. Your product has been modified in any way.
4. Your receipt or proof-of-purchase is from a non-authorized dealer or internet auction site including E-bay, U-bid, or other non-authorized resellers.

LIMITATION OF WARRANTY: EXCEPT AS EXPRESSLY PROVIDED HEREIN, YOU ARE ACQUIRING THE PRODUCT “AS IS” AND “WHERE IS”, WITHOUT REPRESENTATION OR WARRANTY. COBRA SPECIFICALLY DISCLAIMS ANY REPRESENTATION OR WARRANTY INCLUDING, BUT NOT LIMITED TO THOSE CONCERNING THE MERCHANTABILITY AND SUITABILITY OF THE PRODUCT FOR A PARTICULAR PURPOSE. COBRA SHALL NOT BE LIABLE FOR CONSEQUENTIAL, SPECIAL OR INCIDENTAL DAMAGES INCLUDING, WITHOUT LIMITATION, DAMAGES ARISING OUT OF THE USE, MISUSE OR MOUNTING OF THE PRODUCT.

The above limitations or exclusions shall be limited to the extent they violate the laws of any particular state. Cobra is not responsible for products lost in shipment between the owner and our service center.

General Warranty Information

Each product we manufacture is covered by our factory warranty. While each product may have unique components and policy, the general guideline below will apply to most Cobra products.

All Cobra products purchased factory-direct or from our Authorized Resellers will come with a two (2) year warranty from the date of the original retail purchase (see policy statement above for full warranty details and exclusions).

Standard accessories packaged with each model will have a one-year factory warranty.

Accessory items have a one-year factory warranty.

Shipping to our facility is not covered in our warranty. Return shipping is included within the US.

This warranty is non-transferrable.

For the sake of clarity, ‘repair or replace the Product or its defective part’ does not include removal or installation work, costs or expenses which include but are not limited to labor costs or expenses.

Cobra will not be responsible for lost packages.

©2024 Cobra Electronics Corporation. Cobra and the snake design are proprietary trademarks of Cobra Electronics Corporation, USA. Other trademarks and trade names are those of their respective owners.

Cobra Electronics Corporation™ is a trademark of Cobra Electronics Corporation, USA.



Cobra Radio Programming Software

Please visit Cobra.com to download the software allowing the ability to fully customize your radio and save Profiles to be used on your radios. See additional help for frequencies, licensing, and computer programming help on Cobra.com.

Transmit and Receive Procedure

Your two-way radio contains a transmitter and a receiver. To control your exposure and ensure compliance with the General Population/Uncontrolled environment exposure limits, always adhere to the following procedures:

- Transmit no more than 50% of the time.
- To transmit (talk), press the Push to Talk (PTT) button.
- To receive calls, release the PTT button.

Transmitting 50% of the time, or less, is important because the radio generates measurable RF energy exposure only when transmitting (in terms of measuring standards compliance).

FCC Statement

IMPORTANT NOTICE: WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with parts 15 FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation. **NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Safety Information for Performa™ Radios

Your wireless handheld portable transceiver contains a low power transmitter. When the talk button is pushed, it sends out radio frequency (RF) signals. The device is authorized to operate at a duty factor not to exceed 50%. In August 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless devices.

Disposal of Electroic Equipment This product may contain hazardous substances that could impact health and the environment if not disposed of properly.

The product should not be disposed of along with household waste. It should be handed over to an applicable collection point for the recycling of electrical equipment. By ensuring that this product is disposed of correctly you will help/prevent potential negative impact on the environment.

If you need more information on the collection, reuse and recycling systems, please contact your local civic office or the shop where it was originally purchased.



Important FCC RF Exposure Requirements:

For body-worn operation, this radio has been tested and meets the FCC RF exposure guidelines when used with Cobra accessories supplied or designated for this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. Use only the supplied antenna. Unauthorized antennas, modifications or attachments could damage the transmitter and may violate FCC regulations. Normal Position: Hold the transmitter approximately **at least one inch (2.5 cm) from your face and speak in a normal voice**, with the antenna pointed up and away. **DO NOT** hold the antenna when the radio is "in use". Holding the antenna affects the effective range. Do not hold the antenna when the radio is in use. Holding the antenna affects the effective range.

Licensing

the radios operate on radio frequencies that are regulated by the Federal Communications Commission (FCC). In order to transmit on these frequencies, you are required to have a license issued by the FCC. Before filling out your application, you must decide which frequency(ies) you can operate on. See Default Frequencies on page 14. For questions on determining your radio frequency, please call Cobra Customer Support at 800-543-1608 .

Changes or modifications not expressly approved by Cedar Electronics may void the user's authority granted by the FCC to operate this radio and should not be made. Replacement of any transmitter component (crystal, semiconductor, etc.) not authorized by the FCC equipment authorization for this radio could violate FCC rules.

NOTE: Use of this radio outside the country where it was intended to be distributed is subject to government regulations and may be prohibited.