
TABLE OF CONTENTS

How to Read the Manual	2
Important Safety Instructions	4
ENERGY STAR Program	6

1. Guide to Components

2. Setting up the Printer

Unpacking.....	9
Opening the Paper Feed	10
Attaching the Paper Tray	10
Loading Paper	10
Connecting the Printer to a Power Socket	12
Starting the Printer.....	12
Installing Printer Drivers and Neo Printing Software.....	14
Printing a Test Page	20
Printing a Configuration Page.....	20

3. Print Media

Supported Paper	21
Non-Recommended Paper Types	21
Print Area	22

4. Printing

Print Jobs	23
Canceling Print Jobs.....	24

5. Drivers

Supported System Environment.....	26
Drivers Used in Windows.....	26
Drivers Used in Mac	40

6. Keys and Indicators

Introduction.....	44
LED Indicator and Status Description.....	45

LED Indicator Status and Operation Guide	47
--	----

7. Machine Maintenance

Maintaining the Toner Cartridge.....	49
Replacing the Toner Cartridge	50
Cleaning the Printer	52

8. Troubleshooting

FAQs.....	54
Paper Feed Problems	54
Removing Paper Jams	55
Print Quality Problems	62
Printing Problems.....	63
LED Indicator Status for Errors and Operation Guide	64

9. Appendix

Precautions about Toner	66
Moving and Transporting the Machine	66
Toner Cartridge	67
Specifications of the Machine	67
Trademark	68

How to Read the Manual

Symbols Used in the Manual

The symbols used in this manual have the following meanings.

Important

Indicates an explanation containing points to pay attention to when operating the software, restrictions, or other information. Be sure to read the explanation.

Note

Indicates an explanation containing information that is useful to know, a supplementary operating procedure, or other information.

Reference

Indicates reference information that may be helpful.

[]

Indicates a screen item or button name.

Introduction

This manual contains detailed instructions and notes on the operation and use of this machine. For your safety and benefit, read this manual carefully before using the machine. Keep this manual in a handy place for quick reference.

Legal Prohibition

Do not copy or print any item for which reproduction is prohibited by law.

Copying or printing the following items is generally prohibited by local law:

bank notes, revenue stamps, bonds, stock certificates, bank drafts, checks, passports, driver's licenses.

The preceding list is meant as a guide only and is not inclusive. We assume no responsibility for its completeness or accuracy. If you have any questions concerning the legality of copying or printing certain items, consult with your legal advisor.

This machine is equipped with a function that prevents making counterfeit bank bills. Due to this function the original images similar to bank bills may not be copied properly.

Disclaimer

Contents of this manual are subject to change without prior notice. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

To the maximum extent permitted by applicable laws, in no event will the manufacturer be liable for any damages whatsoever arising out of failures of this machine, losses of the registered data, or the use or non-use of this product and operation manuals provided with it.

Make sure that you always copy or have backups of the data registered in this machine. Documents or data might be erased due to your operational errors or malfunctions of the machine.

In no event will the manufacturer be responsible for any documents created by you using this machine or any results from the data executed by you.

For good output quality, the manufacturer recommends that you use genuine toner from the manufacturer.

The manufacturer shall not be responsible for any damage or expense that might result from the use of parts other than genuine parts from the manufacturer with your office products.

Two kinds of size notation are employed in this manual.

Some illustrations or explanations in this guide may differ from your product due to improvement or change in the product.

Important Safety Instructions

User Information on Electrical & Electronic Equipment

Users in the countries where this symbol shown in this section has been specified in national law on collection and treatment of E-waste

Our Products contain high quality components and are designed to facilitate recycling.

Our products or product packaging are marked with the symbol below.



The symbol indicates that the product must not be treated as municipal waste. It must be disposed of separately via the appropriate return and collection systems available. By following these instructions you ensure that this product is treated correctly and help to reduce potential impacts on the environment and human health, which could otherwise result from inappropriate handling. Recycling of products helps to conserve natural resources and protect the environment.

For more detailed information on collection and recycling systems for this product, please contact the shop where you purchased it, your local dealer or sales/service representatives.

All Other Users

If you wish to discard this product, please contact your local authorities, the shop where you bought this product, your local dealer or sales/service representatives.

Environmental Advice for Users

Users in the EU, Switzerland and Norway

Consumables yield

Please refer to either the User's Manual for this information or the packaging of the consumable.

Recycled paper

The machine can use recycled paper which is produced in accordance with European standard EN 12281:2002 or DIN 19309. For products using EP printing technology, the machine can print on 64g/m² paper, which contains less raw materials and represents a significant resource reduction.

Duplex printing (if applicable)

Duplex printing enables both sides of a sheet of paper to be used. This saves paper and reduces the size of printed documents so that fewer sheets are used. We recommend that this feature is enabled whenever you print.

Toner and ink cartridge return program

Toner and ink cartridge for recycling will be accepted free of charge from users in accordance with local regulations.

For details about the return program, please refer to the Web page below or consult your service person.

<https://www.ricoh-return.com/>

Energy efficiency

The amount of electricity a machine consumes depends as much on its specifications as it does on the way you use it. The machine is designed to allow you to reduce electricity costs by switching to Ready mode after it prints the last page. If required, it can immediately print again from this mode.

If no additional prints are required and a specified period of time passes, the device switches to an energy saving mode.

In these modes, the machine consumes less power (watts). If the machine is to print again, it needs a little longer to return from an energy saving mode than from Ready mode.

For maximum energy savings, we recommend that the default setting for power management is used.

Products that comply with the Energy Star requirement are always energy efficient.

Note for the Battery and/or Accumulator Symbol (For EU countries only)



In accordance with the Battery Directive 2006/66/EC Article 20 Information for end-users Annex II, the above symbol is printed on batteries and accumulators.

This symbol means that in the European Union, used batteries and accumulators should be disposed of separately from your household waste.

In the EU, there are separate collection systems for not only used electrical and electronic products but also batteries and accumulators.

Please dispose of them correctly at your local community waste collection/recycling centre.

ENERGY STAR Program

ENERGY STAR® Program Requirements for Imaging Equipment



The ENERGY STAR® Program Requirements for Imaging Equipment encourage energy conservation by promoting energy efficient computers and other office equipment.

The program backs the development and dissemination of products that feature energy saving functions.

It is an open program in which manufacturers participate voluntarily.

Targeted products are computers, monitors, printers, facsimiles, copiers, scanners, and multifunction devices. Energy Star standards and logos are internationally uniform.

This machine is equipped with the following Energy Saver modes: Energy Saver mode 1 and Energy Saver mode 2. The machine recovers from Energy Saver mode when it receives a print job, prints a received fax, or when any key is pressed.

Energy Saver mode 1

This machine automatically enters Energy Saver mode 1 about 30 seconds after the last operation is completed.

Energy Saver mode 2

This machine automatically enters Energy Saver mode 2 1 minute after the last operation is completed.

Specifications

Energy Saver mode 1	Power Consumption ^{*1}	xx.x W
	Default Interval	xx seconds
	Recovery Time ^{*1}	xx seconds
Energy Saver mode 2	Power Consumption ^{*1}	xx.x W
	Default Interval	x minute
	Recovery Time ^{*1}	xx seconds


^{*1} Recovery time and power consumption may differ depending on the conditions and environment of the machine.

1. Guide to Components

1

This section introduces the names of the parts in front, at the back and inside the machine.


Exterior

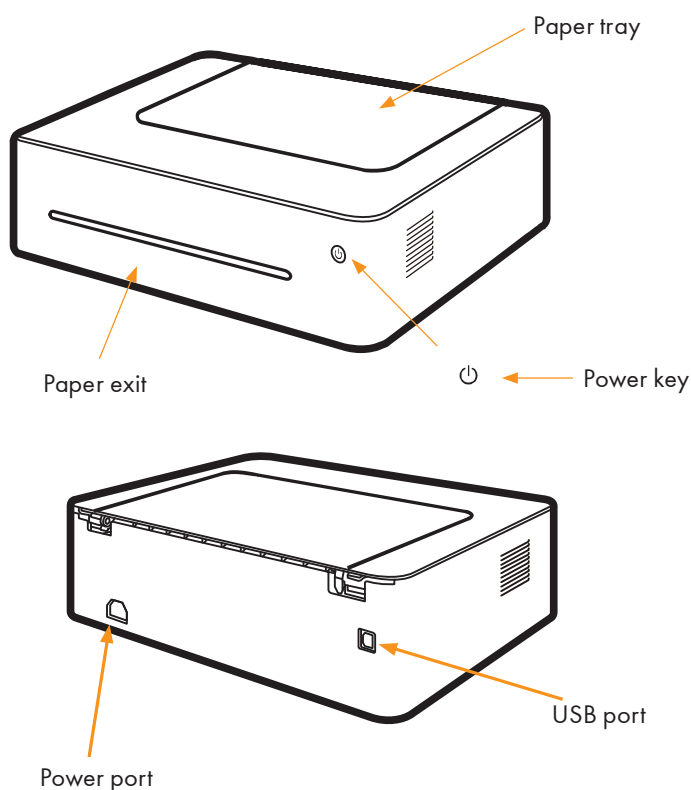

Note

- Please see "6. Keys and Indicators" for details of key functions and how indicators display the printer device status.

Interior

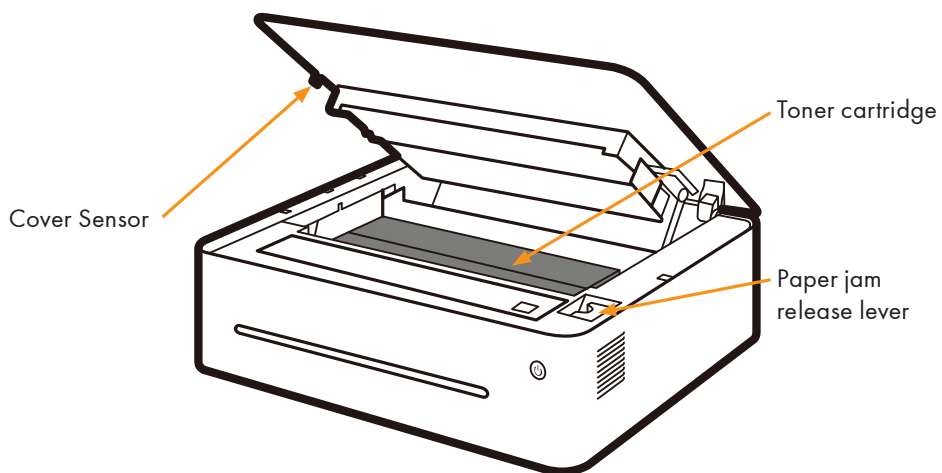

1


2. Setting up the Printer

Unpacking

2

1. Take the printer and all accessories out of the packaging.


Check you have all the accessories listed below.

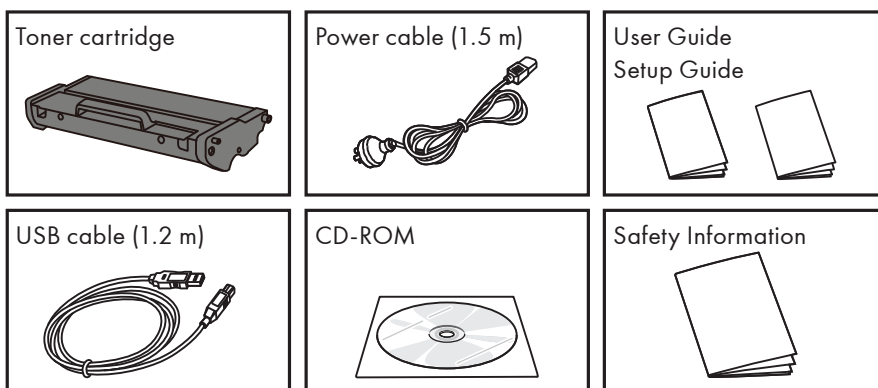

Note


- If you find any accessories or parts missing or defective, please notify your reseller immediately.
- The toner cartridge has been installed in the printer.
- Some parts may be not used in other countries.
- Printer driver and user manual are in the CD-ROM.

2. Carefully remove the packing tape from the outside and inside of the printer.

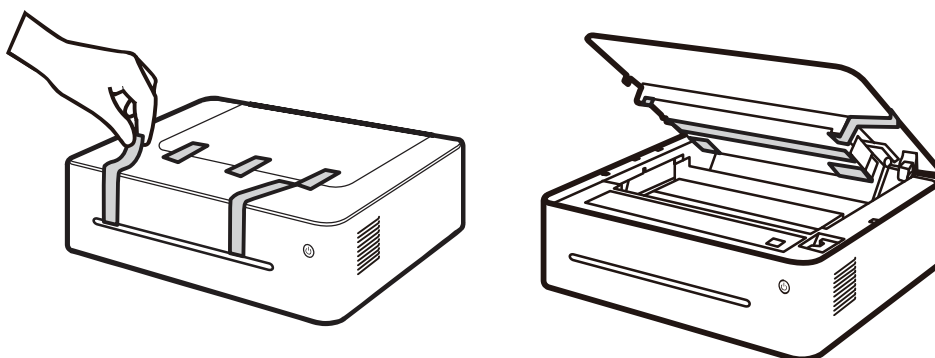

Opening the Paper Feed

1. Open the feed tray.

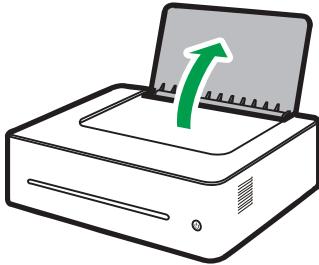

DPJ014


2

Attaching the Paper Tray

★ Important

- Please be sure to place this machine on a flat surface.
- If you lift this machine, the paper tray will fall off.

1. Locate the tray guides on the bottom of the printer.
2. Insert the paper tray along the guides.

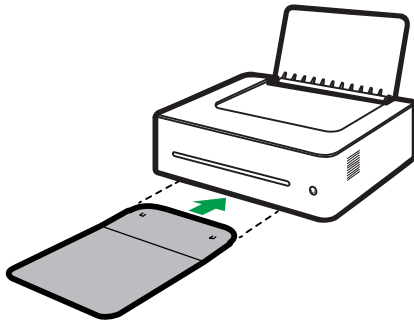

DPJ200


Loading Paper

This section explains how to load paper into the paper feed.

↓ Note

- Please see "3. Print Media" for details of print media.

1. **Before loading the paper, bend the sheets back and forth and fan the stack.**
Use a flat surface such as a desk to line up the edges of the sheets.

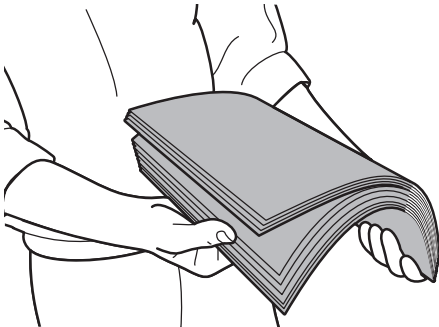


DPJ103

Note


- Doing this helps to prevent paper jams.

2. **Load the paper with the front side facing up.**

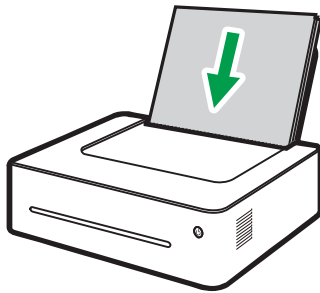

DPJ027

3. **Do not load too much paper at a time. The feed tray can hold 50 sheets (A4 70g/m²) maximum.**
4. **Pinch the paper guide clip and slide it to fit the paper size.**

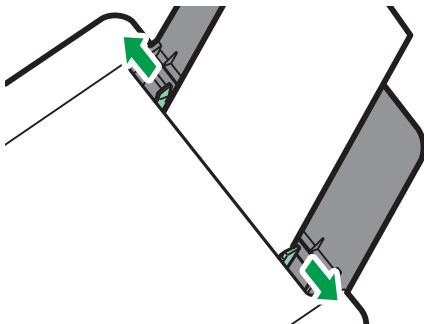

DPJ202

★ Important


- Please make sure to set the paper size and type when loading paper. When printing, please specify the paper size and type in the printer driver so the settings can be used for printing the loaded paper.

↓ Note

- Please see "3. Print Media" for how to specify the paper size and type in the printer driver.
- Curled paper may cause paper jams. Please flatten curled paper before loading it.
- Do not push the paper guide too far. This may cause the paper to bend.
- Failure to adjust the paper guide may cause a paper jam.
- If you need to add paper to the paper feed while printing, remove any remaining paper in the paper feed first and then add new paper. Adding new sheets to the feed tray while there is paper remaining may cause paper jams or concurrent feeding of multiple sheets.

Connecting the Printer to a Power Socket

1. Plug the power cable into the power port at the back of the printer.

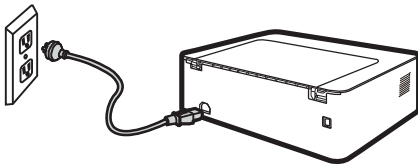

DPJ029

2. Plug the other end of the power cable into a properly grounded AC power supply socket.

Starting the Printer

Hold the  power key for 0.5 seconds or longer to start the printer.

The indicator display shown below indicates that the printer is ready.

	Power indicator is green
---	--------------------------

Note

- After the printer starts, the scanner will perform auto calibration. Please wait for the process to complete.

Installing Printer Drivers and Neo Printing Software

Three ways to install drivers

Quick Installation (USB)

Neo Printing software will be installed on your device by default when you choose Quick Install.

2

Installing Neo Printing software

Reference

- Please see “Neo Printing Software” for details

Before installing printer drivers

Please confirm the following items:

- Your computer has 128MB or more of internal memory.
- Your computer has 200 MB or more free space available on the hard disk.
- Your computer has a Windows or Apple Mac operating system which supported by this printer.

Note

- Please see “5. Drivers” for more information about compatible operating systems.


Quick Installation (USB)

Installation of Wireless Driver Program in Windows System

Here the example is Windows 7. Your specific operating system decides the steps you will take.


1. **Start the printer and connect the computer and printer with the USB cable.**
2. **Insert the CD-ROM supplied with this product into the computer’s CD-ROM drive.**
3. **Select proper installation directory for your printer model. Click “setup.exe” to start the installation.**

4. Select a language when the installation program interface comes up.

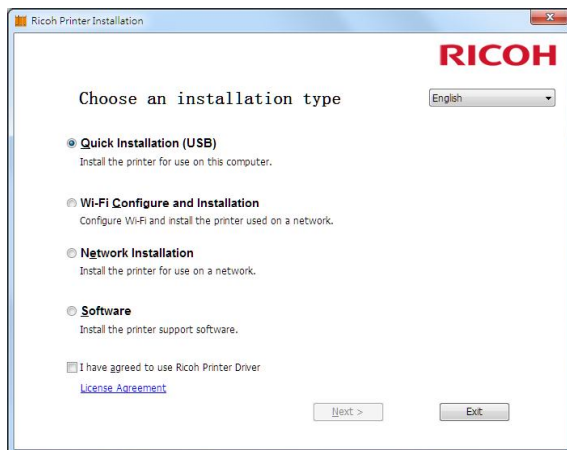


5. Click [Quick Installation (USB)]. Please study the Agreement. If you accept the agreement, please tick the box in front of [I have agreed...] and then click [Next].

6. The program will start installing automatically.

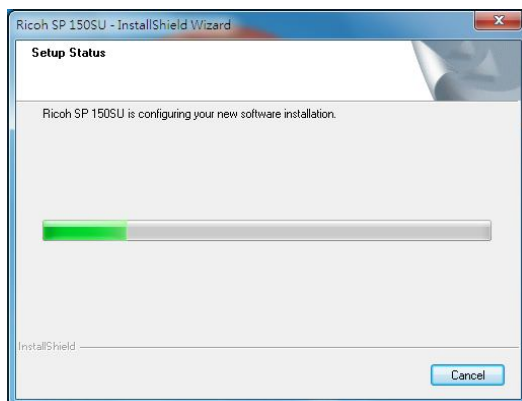

7. Click [Finish] after the installation is completed.

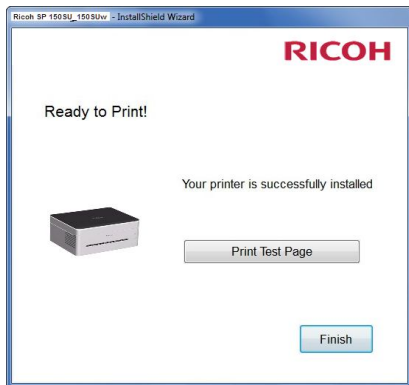


2

The printer is ready for use after the printer driver program is installed.


Installing drivers on Mac OS

1. Start the printer and connect the computer and printer with the USB cable.
2. Insert the CD-ROM supplied with this product into the computer's CD-ROM drive.
3. Double click the CD disk icon on the computer desktop.
4. Double click the Install icon. A window will pop up as shown in the screenshot below.

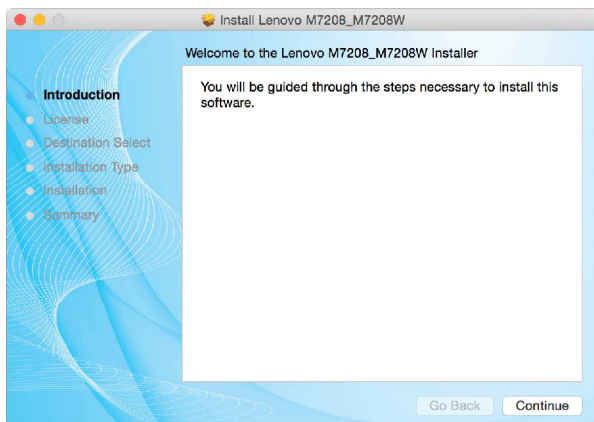


5. Click [Continue] in the introduction window.
6. When the License Agreement interface appears, please select the required language.


7. Please carefully read the software License Agreement, and click [Continue].

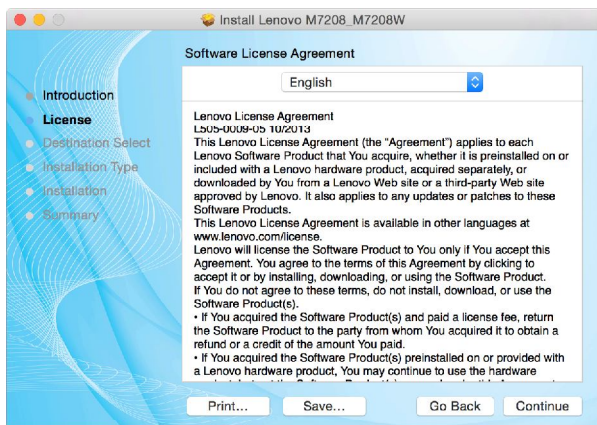


8. If you accept the terms of the license agreement, please click [Agree] to continue installation.

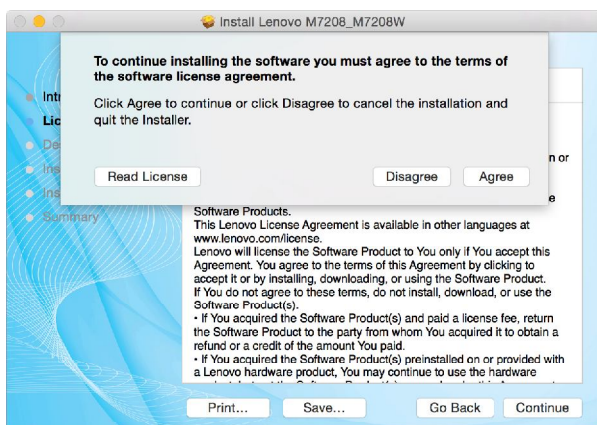


9. Click [Install], and the system will perform a default install of the software.

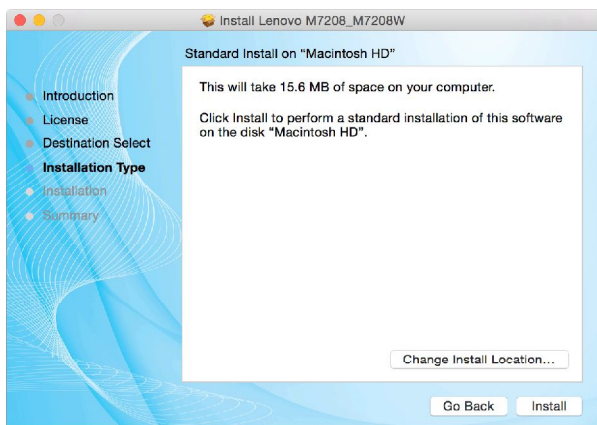

10. For Mac OS X, enter the administrator name and password and click [Install Software].
11. Click [Continue Installation].

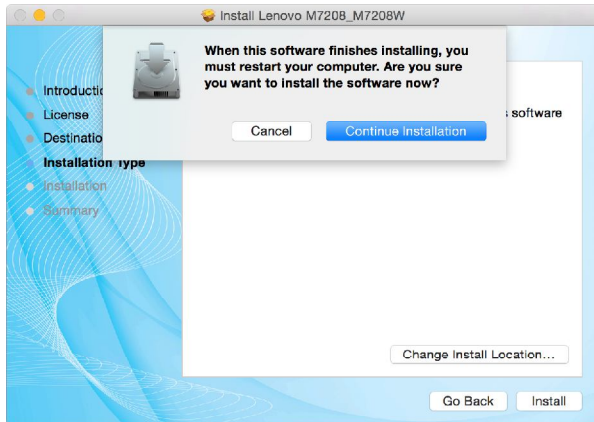

12. Click [Restart] to complete the installation.

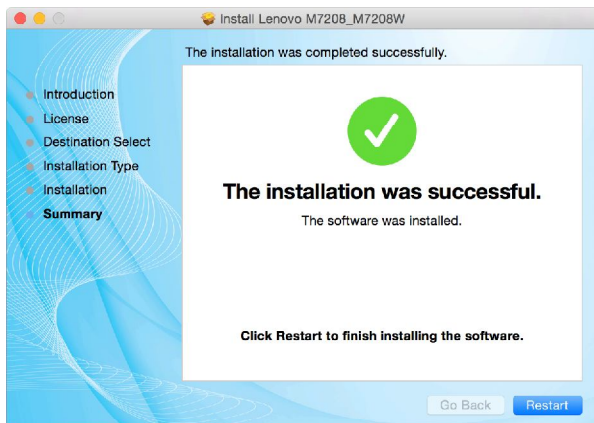

Upgrading Printer Drivers

You can upgrade the installed printer driver by following the steps below.

1. In the [Start] menu, click [Devices and Printers].
 - Windows Server 2003/2003 R2:
In the [Start] menu, select [Printers and Faxes].
 - Windows Vista, Windows Server 2008:
In the [Start] menu, select [Control Panel] and click [Hardware and Sound]-[Printer]
 - Windows 8/8.1/10, Windows Server 2012/2012 R2:
Click [Settings] on the charm bar, and then click [Control Panel].
When the window pops up, click [View devices and printers].

2. Right click the icon of the printer you want to modify, and click [Printer Properties].

- Windows Vista, Windows Server 2003/2008:

Right click the icon, and click [Properties].

3. Click the [Advanced] tab.

4. Click [New Driver...], and click [Next].

5. Click [Have Disk....].

6. Click [Browse...], and select the location of the printer driver.

7. Click [OK] and specify the printer model.

8. Click [Next].

9. Click [Finish].

10. Click [OK] to close Printer Properties window.

11. Restart the computer.

Uninstalling Printer Drivers

You can use the uninstall program also can uninstall the printer driver by following the steps below.

1. In the [Start] menu, click [Devices and Printers].

- Windows Server 2003/2003 R2:

In the [Start] menu, select [Printers and Faxes].

- Windows Vista, Windows Server 2008:

In the [Start] menu, select [Control Panel] and click [Hardware and Sound]-[Printer].

- Windows 8/8.1/10, Windows Server 2012/2012 R2:

Click [Settings] on the charm bar, and then click [Control Panel].

When the window pops up, click [View devices and printers].

2. Right click the icon of the printer you want to delete, and click [Remove Device].

- Windows Vista, Windows Server 2003/2003 R2/2008:

Right click the icon you want to delete and click [Delete].

3. Click [Yes].

4. Click any printer icon, and click [Print Server Properties].

5. Click the [Driver] tab.

6. If [Change Driver Settings] is displayed, please click it.

7. Select the type of printer that you want to delete, and then click Click [Delete].

8. Select [Remove Driver And Driver Package] and click [OK].

9. Click [Yes].

10. Click [Delete].


11. Click [OK].
12. Click [Close] to close the Print Server Properties window.

Printing a Test Page

At the end of driver installation, there will be a print test page option, and you can also print the test page by the following.

This example uses Windows 7.

1. Click [Start], then [Devices and Printers]. Right click your printer and select [Printer Properties] to display the properties dialog box (As shown below).

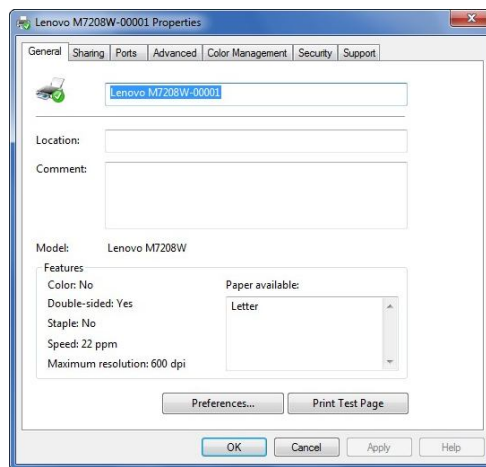

2. Click [Print Test Page].

If the test page is successfully printed, the RICOH SP 150 has been configured correctly.

Printing a Configuration Page

The configuration page shows your printer settings, such as printer model name, network parameters, name and password of Soft AP, Toner Volume, Waste Toner Box and Print Count.

When the printer is in the state of standby, quickly press the  power key three times in 1.5 seconds and observe the indicator light.

	Power indicator alternates between green and off every second
---	---

3. Print Media

Supported Paper

Paper Sizes

3

- A4
- Letter "8½" × 11"
- Legal "8½" × 14"
- B5
- A5 LEF
- A5 SEF
- B6 LEP
- B6 SEF
- A6
- Executive 7¼" × 10½"
- 16K (195 × 267 mm)
- Custom Paper Size

Custom Paper Size supports the following sizes:

- Width Approx. 76.2-216mm (3-8.5 inches)
- Length Approx. 116-355.6mm (4.57-14 inches)

Paper Types

- Plain Paper (70-90 g/m²)
- Recycled Paper (70-90 g/m²)
- Thick Paper (90-105 g/m²)
- Thin Paper (60-70 g/m²)
- Label

Paper Capacity

- Paper tray 50 sheets (70 g/m²)

Non-Recommended Paper Types

Do not use the following types of paper:

- Special paper for ink-jet printers


- Special paper for viscous inks
- Curled, folded or creased paper
- Twisted paper
- Corrugated paper
- Wet paper
- Dirty or torn paper
- Excessively dry paper that may produce static
- Printed paper except that with header/footer designs
- Paper printed by non-laser printers (e.g. monochrome or color copiers, ink-jet printers, etc) in particular may cause failures
- Special paper such as thermal paper and carbon paper
- Paper weighing heavier or lighter than the limit
- Paper with windows, holes, perforations, cutouts, or embossing
- Adhesive label paper on which glue or base paper is exposed
- Paper with clips or staples
- Envelopes

↓ Note

- Poorly stored paper can cause paper misfeeds, print quality degradation, or malfunctions.
- Use of any of the paper types listed above may damage the product. Such damage is not covered by the warranty from .

Print Area

The picture below shows the area of the paper that the machine can print on.

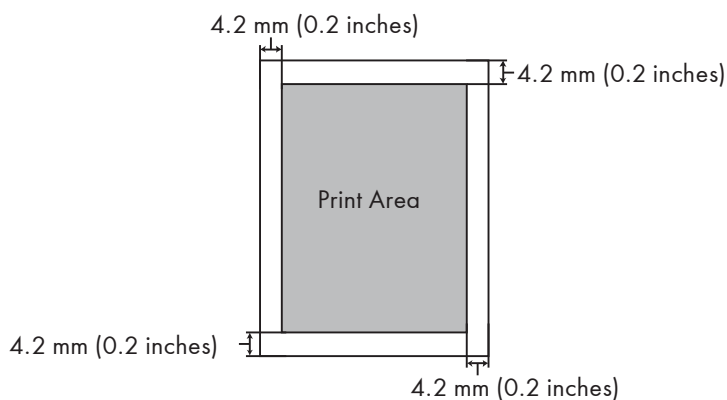

↓ Note

- The print area may vary depending on the paper size and printer driver settings.

4. Printing

Print Jobs

This printer offers two options for handling printing:

- Printing with a Printer Driver
- Printing with Neo Printing

Printing with a Printer Driver

This option allows you to print files on the computer using printer drivers.

The example below is for Adobe Reader XI on Windows 7.

The steps needed to print may be different for other software or environments.

Please see the software you are using to print for the actual steps you need to follow.

1. **Please confirm the printer is connected.**
2. **Open the file you want to print.**
3. **Select Print in the File menu.**


The print dialog box is displayed. (Dialog box may be different for other software.)

Select basic print settings in the print dialog box.

The settings include number of copies, paper size and orientation.

Please make sure your printer is selected.

Click [Properties]
if displayed. Click
[Settings], [Printer] or
[Options] if displayed,
then [Properties].

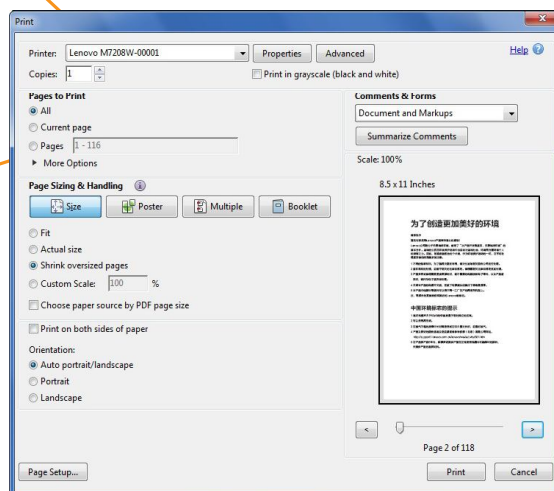

If no other print requirements are needed, click [Print] to start printing.

Note

- Click the [Properties] button in the print dialog box to display another dialog box with more printer settings.
- Any changes made will apply only to the software currently in use.
If you want your printer to always use the settings, please follow the steps below:
 - Click the Windows [Start] button.
 - Select [Devices and Printers] to open the window.
 - Select your printer, right click, and select [Printing Preferences].
 - Configure the printer settings here and click [OK]. These settings will be effective for all printing on this computer.
- Please see "5. Drivers" about the printer settings.
- Please see "7. Machine Maintenance" for details of key functions and how indicators display the printer device status.

Printing with Neo Printing


For details, see >> the section on Print in the Neo Printing User's Guide.

Canceling Print Jobs


The steps for canceling a print job are different for jobs that are not yet printing or currently printing.

Canceling a Print Job before Printing has started


- Double click the printer icon on the taskbar at the bottom right of the computer desktop. The print queue is displayed.**

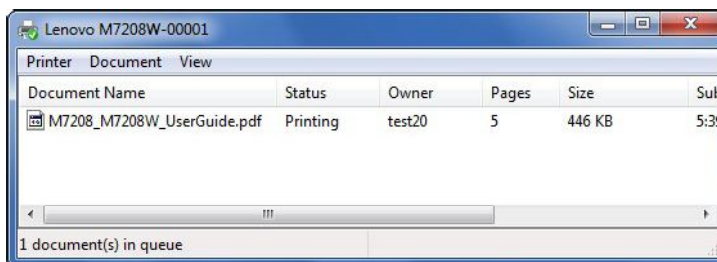

2. Click [Print Task]. Then right click it and click [Cancel].

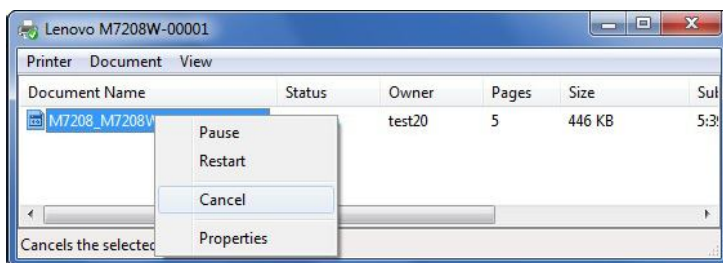

3. Click [Yes] to cancel the task.

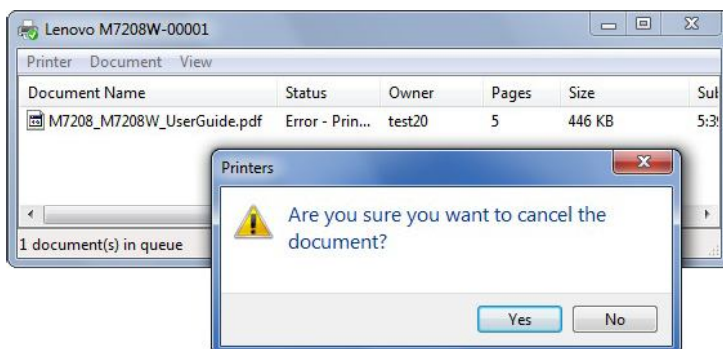

Canceling a Print Job during Printing

Press and hold the  power key for one second or longer.

The LED indicator display shown below indicates the current task is being canceled.

	Power indicator alternates between red and green every 0.5 seconds.
---	---

★ Important

- If you cancel a print job that has already been processed, printing may continue for a few pages before being canceled.
- It may take a while to cancel large print jobs.

5. Drivers

This chapter describes the settings for printer drivers.

Supported System Environment

Windows Vista	Home Basic/Home Premium/Business/Enterprise/Ultimate
Windows 7	Home Basic/Home Premium/Professional/Enterprise/Ultimate
Windows Server 2003	Standard/Standard x64/Enterprise/Enterprise x64 (SP1 or later)
Windows Server 2003 R2	Standard/Standard x64/Enterprise/Enterprise x64
Windows Server 2008	Standard/Standard without Hyper-V/Enterprise/Enterprise x64 without Hyper-V
Windows Server 2008 R2	Standard/Enterprise
Windows 8	Windows 8
Windows 8.1	Windows 8.1
Windows Server 2012	Windows Server 2012
Windows Server 2012 R2	Windows Server 2012 R2
Windows 10	Home/Pro/Enterprise
Mac OS X 10.8-10.11	Mac OS X 10.8-10.11

5

Drivers Used in Windows

The example below illustrates printing with Windows 7.

The actual operation may differ depending on the software used.

To print documents from the computer using the printer drivers, do the following:

- 1. Open the file you want to print.**
- 2. Select Print in the File menu.**


The print dialog box will be displayed. (The dialog box may differ between software.)

Select Basic Print Settings in the Print dialog box.

The settings include number of copies, paper size and orientation.
- 3. Click [Properties]. Edit the print settings in the Properties dialog box.**

Basic Tab

(1) Displays the current settings

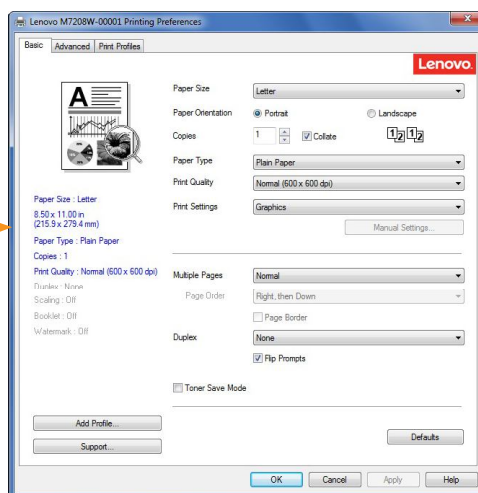

1. Select the options below to change the corresponding settings as required.

- Paper Size
- Paper Orientation
- Copies
- Paper Type
- Print Quality
- Print Settings
- Multiple Pages
- Duplex
- Toner Save Mode

2. Check the selected settings displayed in Window (1).

3. Click to OK.

To restore default settings, please click Defaults followed by OK.

Paper Size

Select the required paper size from the drop-down list.


Supported paper sizes: Letter/A4/A5/A6/B5/B6/Executive/16K/A5(LEF)/B6(LEF)/Legal/Custom Paper Size/A3/B4 JLS/11x17in/5.5x8.5in/8K

Custom Paper Size supports the following range of paper sizes:

- Width Approx. 76.2-216mm (3-8.5 inches)
- Length Approx. 116-355.6mm (4.57-14 inches)

Paper Orientation

You can select the orientation of your document (Portrait or Landscape).

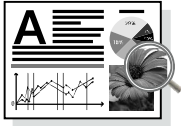Portrait (vertical)	Landscape (horizontal)
	



Copies

You can define the number of copies to be printed.

Collate

If the Collate check box is checked, one complete copy of your document will be printed and then repeated for the number of copies you selected.

If the Collate check box is not checked, then each page will be printed for the number of copies selected before the next document is printed.

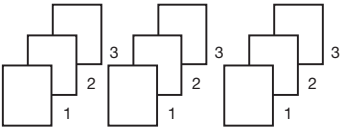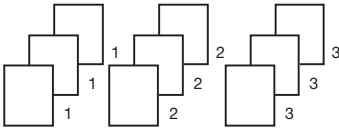Collate check box is selected	Collate check box is not selected
	

Paper Type

This machine supports the following types of printing media. For optimal print quality, select the correct printing media.

- Plain Paper
- Recycled Paper
- Thick Paper
- Thin Paper
- Label

Print Quality


You can select one of the following print quality options:

- Normal (600*600dpi)
- Fine (1200*600dpi)

Print Settings

You can select one of the following print modes:

- **Graphics**
The optimal print mode for graphic documents.
- **Text**
The optimal print mode for text documents.
- **Manual**
You can select Manual and click [Manual Settings] button to change the settings for Brightness and Contrast.

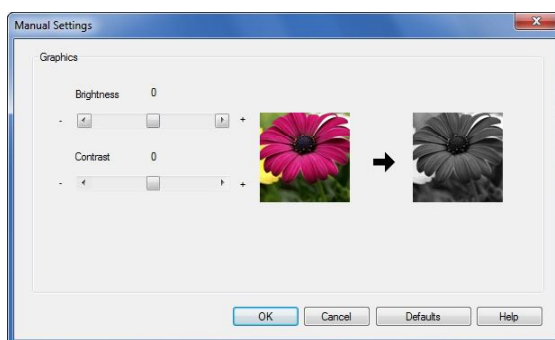

Multiple Pages

The Multiple Page selection can reduce the image size of a page, allowing multiple pages to be printed on one sheet of paper.

You can also enlarge the image size for printing one page on multiple sheets of paper.

★ Important

- When the N in 1 option is selected, the Scaling option in the Advanced tab will not be available.
- When the 1 in NxN Pages option is selected, the duplex will not be available. A warning message will pop up.

Page Order

When the N in 1 option is selected, you can select the desired page order from the drop-down list.

Page Border

When printing multiple pages on the same sheet, you can choose to add solid borders or to print without borders.

Print Crop Marks


When the 1 in NxN Pages option is selected, you can select the Print Crop Marks option to add fine crop marks to the print area.

Duplex

Select Duplex Printing to print on both sides of the paper.

1. **Select Long Edge or Short Edge.**
2. **Enabling Duplex displays a dialog box with the instructions for installing paper.**

The dialog box is shown below:

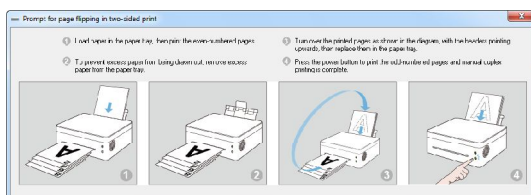

3. **After the first side is printed, according to the dialog box with the instructions, you will need to manually reload the paper to print the second side.**
4. **After reloading the paper, press the  Power key once, which should be flashing red.**
5. **The printer will continue to print the second side.**

★ Important

- The Label does not support duplex printing.

Print Order

If the Reverse Print check box in the Advanced tab is checked, even pages will be printed in reverse order (2,4,6,8...), followed by odd pages in reverse order (1,3,5,7...).



If the Reverse Print checkbox in the Advanced tab is unchecked, even pages will be printed in reverse order (2,4,6,8...), followed by odd pages in reverse order (1,3,5,7...).

↓ Note

- If the total number of pages is odd, the last page of the printed document will be a blank page.

Two Ways of Binding

- None
- Long Edge
- Short Edge

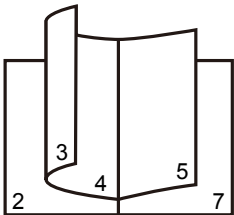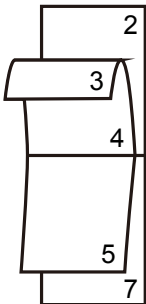Long Edge	Short Edge
	

5

Toner Save Mode

Activate the Toner Save Mode to reduce toner consumption.


In Toner Save Mode, the printed document will be fainter, but print density remains the same.

This option is disabled by default.

★ Important

- The printing speed and memory usage will not be affected in the Toner Save Mode.

Advanced Tab

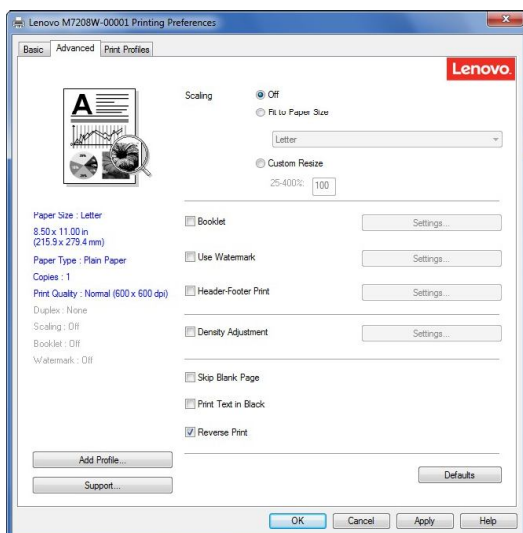

5

You can click the options below to change the corresponding settings:

- Scaling
- Booklet
- Use Watermark
- Header-Footer Print
- Density Adjustment
- Skip Blank Page
- Print Text in Black
- Reverse Print

Scaling

You can change the scaling of printed images.

- Off
- Fit to Paper Size
- Custom Resize [25-400%]

★ Important

- When Fit to Paper Size or Custom Resize is selected, Multiple Pages or [Booklet] options are unavailable.
- A warning message will pop up.

Booklet

Select this option to print a booklet with the duplex printing feature. The printer will automatically arrange the pages in the required order. You only have to fold the printed pages.

The following options are available on the Booklet dialog box.

Booklet Creation Settings

- Left Binding
- Right Binding

Booklet Printing Method

- All Pages at Once
- Divide into Sets

Select the Divide into Sets option to print a booklet as a set of smaller booklets.

The pages will be automatically ordered. You only have to fold the printed pages.

You can set the number of pages in each booklet set to between 1 to 15. This option is very useful when printing booklets with many pages.

Binding Offset

When Binding Offset is selected, you can assign a binding offset value in mm or inch.


★ Important

- When Booklet print is selected, a warning dialog box will pop up, and the Long Edge feature will be activated.
- When Booklet print is selected, the Page Number function in the Header-Footer Print mode will not be available.

Use Watermark

You can add a logo or text into your documents as a watermark. You can choose to use a preset watermark or a text/image file you created. Check [Use Watermark] check box, and click [Settings].

Watermark Settings

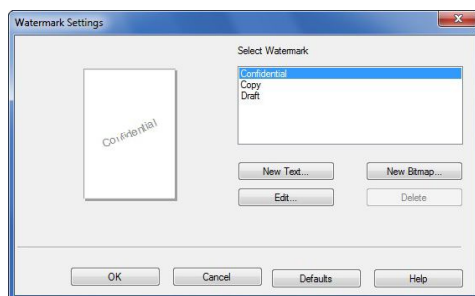

Select Watermark


Select the required watermark.

Click New Text or New Bitmap to create a new watermark.

New Text

Watermark text can contain up to 30 characters.

Register Watermark

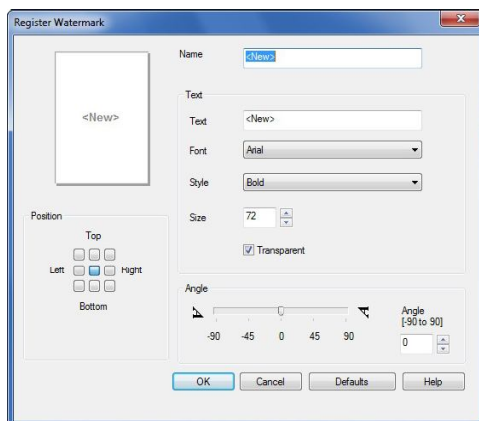

Name

Enter a proper title in the text box.

Text

Enter the watermark text in the text box, and select the Font, Style, and Size of the watermark, and select the required Transparent option.

Transparent

Check this check box to make the watermark transparent, such that the text or images below the watermark remain visible.

Leave this check box unchecked to make the watermark completely opaque, such that the text and images underneath it are completely covered.


Angle

Define the angle at which the Watermark will be inclined.

Position

Define the position of the watermark on the page.

Register Watermark (Bitmap)

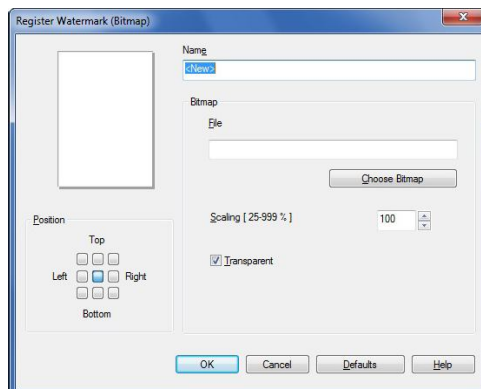

Name

Enter a proper title in the text box.

Bitmap

Select the name of the required image file.

Scaling

Change the size of the selected image.

Position

Define the position of the watermark on the page.

Transparent

Check this check box to make the watermark transparent, such that the text or images below the watermark remain visible.

Leave this check box unchecked to make the watermark completely opaque, such that the text and images underneath it are completely covered.

Click [OK] after creating a new text or bitmap, and the new watermark will be created.

★ Important

- When watermarks are used, the "1 in NxN Pages" option in [Multiple Pages] will not be available.

Edit

Select the watermark to be edited from the watermark list, and click [Edit] to call out either the [Edit Watermark] or [Edit Watermark (Bitmap)] dialog box.

Delete

Select the watermark to be deleted from the watermark list, and click [Delete]. Follow the instructions on the pop up dialog box to delete the watermark.

↓ Note

- Standard watermarks cannot be edited or deleted.


Header-Footer Print

Use this feature to add a header and footer to the document.

Check the Header-Header Print check box, and click [Settings] to configure the settings.

The settings include:

- Login User Name
- Job Owner Name
- Document Name
- Page Number
- Date
- Time

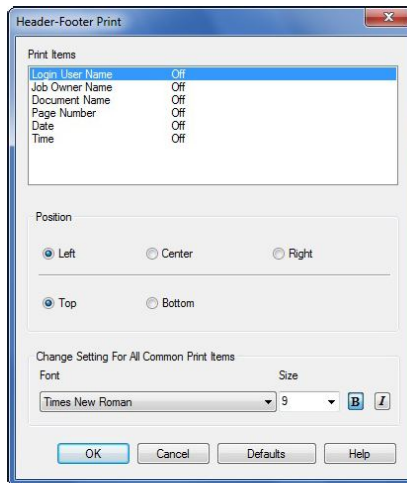

5

Position

Use the Position settings to define the position of the header/footer on the page.

Three options are available in the horizontal direction: Left/Center/Right.

Two options are available in the vertical direction: Top/Bottom.

Font

You can set the text font.

Size

You can set the text size.


"B" button: bold.

"I" button: italic.

Density Adjustment

Use this option to increase or decrease print density.

To adjust print density, check the Density Adjustment check box, and click [Settings].

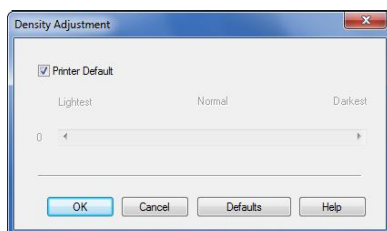

Skip Blank Page

If Skip Blank Page is checked, the printer driver automatically detects blank pages and excludes them from printing.

★ Important

5

- This option does not work when the following options are selected:
 - Use Watermark
 - Header-Footer Print
 - Multiple Pages
 - Duplex
 - Booklet

Print Text in Black

If this option is checked, all texts will be printed black except white texts.

★ Important

- Some characters may not show up properly under this option.


Reverse Print

If this option is selected, all pages will be printed in the reverse order.

Print Profile Tab

Profiles are editable presets designed to give you quick access to frequently used printing configura-

tions.

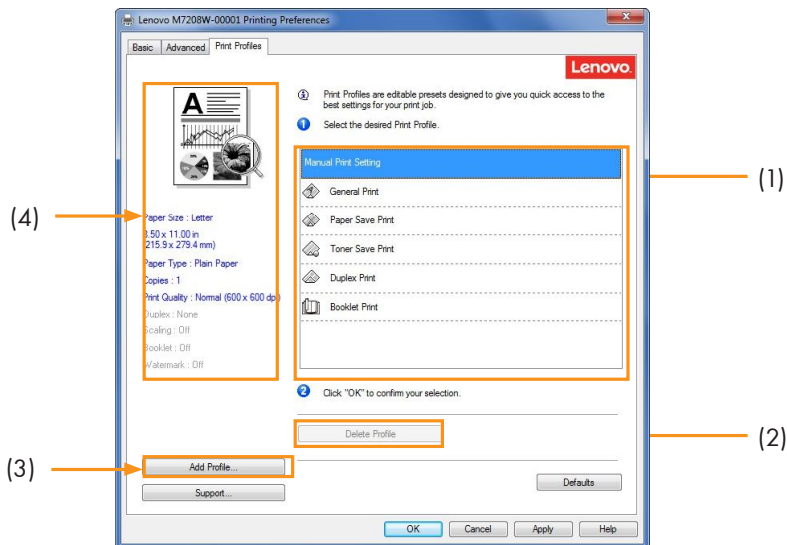

- Profile Box (1)
- Delete Profile (2)
- Add Profile (3)
- Current Profile View (4)

1. Select the required profile from the Profile Box.
2. Click [OK] to apply the selected profile.

Add Profile

Click [Add Profile] to open the dialog box.

1. Enter the name of the profile.
2. Select the icon you want to use from the icon list, and click [OK].
3. The selected settings is displayed on the left of the printer driver window.



Delete Profile

Use this option to delete a profile.

1. Select the profile to be deleted from the [Print Profile] list.
2. Click [Delete profile].
3. Click [OK].
4. The selected profile will be deleted.

Support

5

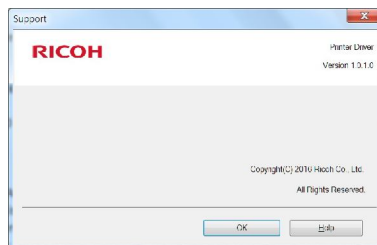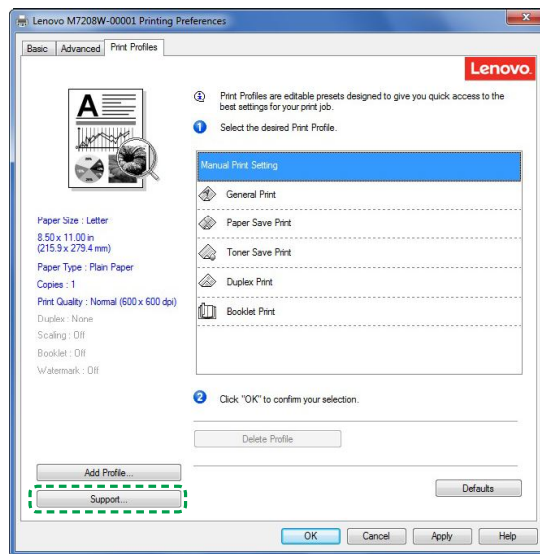


Version Number

The [Support] window provides version information of the installed printer driver.

Drivers Used in Mac

Basic

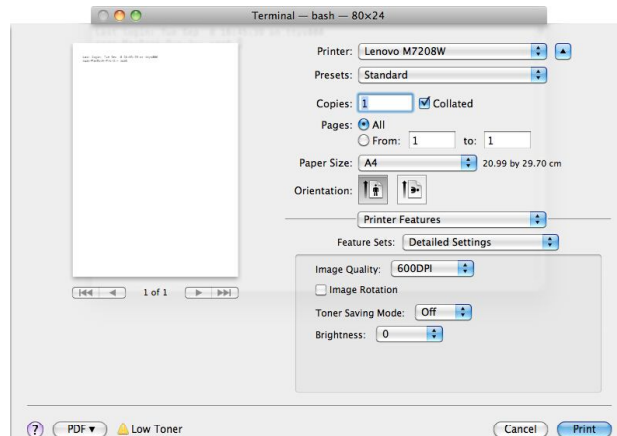

5

Select the options below to change the corresponding settings as required.

- Paper Size
- Orientation
- Copies
- Media Type
- Image Quality
- Print Settings
- Toner Save Mode


Check the selected settings displayed in the preview window.

Paper Size

Select the required paper size from the drop-down list.

Supported paper sizes: US Letter/A4/A5/A6/JIS B5/JIS B6/Executive/16K/Legal/Custom
Paper Size

Manage Custom Sizes (System Build-in Function)

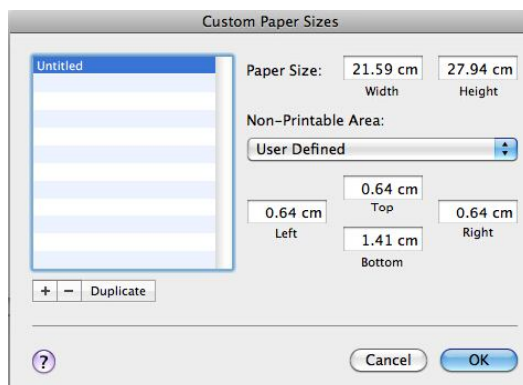

Create a Custom Paper Size

5

1. **Open the file to be printed;**
2. **Follow the steps below:**
 - Go to File >> Page Settings. In the Settings menu, select Page Properties, Then select Format followed by Any Printer. This will allow you to print documents on any printer that supports the paper size you have defined.
 - If the Page Settings is not available, select File >> Print. If the Print dialog box contains only two pop-up menus and some buttons at the bottom, click the triangle beside the pop-up menu.
3. **Select Custom Paper Size from the Paper Size pop-up menu.**
4. **Click the [+] button.**
5. **Double click the Paper Size Name and enter a new name.**
Enter the required dimensions under Paper Size and Non-Printable Area and click [OK].

Note

- System Build-in Function: Built-in functions vary with the version of Mac OS X installed.

Orientation

You can select the orientation of your document (Portrait or Landscape).




Copies

You can define the number of copies to be printed.

- Collate

If the Collate check box is checked, one complete copy of your document will be printed and then repeated for the number of copies you selected. If the Collate check box is not checked, then each page will be printed for the number of copies selected before the next document is printed.

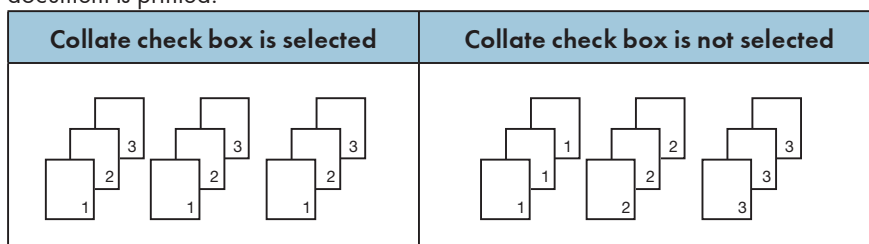

Media Type


This machine supports the following types of printing media. For optimal print quality, select the correct printing media.

- Plain Paper
- Recycled Paper
- Thick Paper
- Thin Paper
- Label

Print Settings

Adjust Brightness: Brightness refers to the brightness or darkness of the image. At high brightness levels, the color will be almost white.

Multiple Page (Built-in Function)

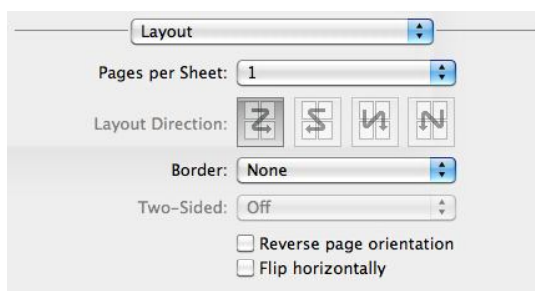

With this function, you can print multiple pages on the same sheet.

Five options are offered: "1", "2", "4", "6", "9" and "16".

- Layout Direction (Built-in Function)

When the N in 1 option is selected, you can select the layout direction and position of the pages on the same sheet.

- Border

When printing multiple pages on the same sheet, you can choose to add borders.

Duplex

Select Duplex Printing to print on both sides of the paper.

Duplex printing Steps:

1. Select to print using the Manual Duplex option.
2. Print the even pages (2, 4, 6, 8...) on the first page
3. After the first side is printed, you will need to manually reload the paper to print the second side.
4. After reloading the paper, press the  Power key once, which should be flashing red.
5. The printer will continue to print the second side.

Note

- The Lable does not support duplex printing.

Color Balance

You can adjust the blackness of the printing by adjusting the toner density.

Toner Save Mode

In the Toner Save Mode, toner consumption is reduced and the printed document will be fainter.

Image Rotation

You can rotate the image 180 degrees before printing.

Brightness

You can adjust the brightness of the image from -100 to 100.

Skip Blank Pages

If Skip Blank Page is checked, the printer driver automatically detects blank pages and excludes them from printing.

Important

- This option does not work when the following options are selected:
 - Multiple Pages
 - Duplex

6. Keys and Indicators

Introduction



LED indicator has three colors.

- Power key: Red
Blue
Green

LED Indicator

LED indicator	Status
○	Off
●	On
⦿	Flashing (on for one second and off for one second)
⦿	Slow flash (on for one second and off for three seconds)
⦿	Rapid flash (on for 0.5 seconds and off for 0.5 seconds)
★	Highly rapid flash (on for 0.25 seconds and off for 0.25 seconds)

LED Indicator and Status Description

General

System Status	LED	Description
Power off	○	Power indicator is off.
Power on	●	Power indicator is green.
Warming up	⚙️	Power indicator flashes green.
Initializing/Standby (Non Wi-Fi Models)	●	Power indicator is green.
Initializing/Standby	●	Power indicator is blue.
Firmware Update	⚙️ ↔️ ⚙️	Power indicator alternates between red and blue every 0.5 seconds.
Sleep Mode	⚙️	Power indicator flashes green slowly.
Factory Reset	● ●	Power indicator flashes rapidly for 10 seconds, followed by the orange indicator being lit steadily.
Task in Progress	⚙️	Power indicator flashes green.
Printing	⚙️	Power indicator flashes green.
Canceling the Task	⚙️ ↔️ ⚙️	Power indicator flash red and green alternately for every 0.5 seconds.
Cover is open/ Toner cartridge is not installed/ Paper Jam/Decode Error/ PDL memory overflow/ Waste toner full/Toner end	●	Power indicator is red.

System Status	LED	Description
Out of Paper/ Machine cooling down/ Pending to print the reverse side in the manual duplex mode		Power indicator flashes red.
Toner Near End		Power indicator flashes red slowly.
Controller error	 	The red power indicator flashes once rapidly and the green indicator flashes once.
Fuser Unit Error	 	The red power indicator flashes rapidly twice and the green indicator flashes once.
Main Motor Fault	 	The red power indicator flashes twice rapidly and the green indicator flashes twice.
HVPS Unit Fault	 	The red power indicator flashes once rapidly and the blue indicator flashes once.
LVPS Fault	 	The red power indicator flashes twice rapidly and the blue indicator flashes once.
Fan Fault	 	The red power indicator flashes once rapidly and the blue indicator flashes twice.

LED Indicator Status and Operation Guide

General

Printer Status	Operation	Key Steps
Power off	Power on	Press and hold power key for 0.5 second or longer.
Power off	Factory Reset	Open the cover, press and hold the power key for 10 seconds or longer. (Power indicator is orange.)
Standby	Power off	Press and hold the power key for 6 seconds or longer until all the indicators are off. Then release the key to power off the printer (Power off is a mandatory operation and can be performed in any status.)
Standby	Print a Configuration Page	Press the power key three times within 1.5 seconds.
Task in Progress/Printing	Cancel the task	Press and hold power key for one second or longer.
Sleep	Wake up	Press any button or disconnect and reconnect the USB cable.
Pending the reverse side of the ID card	Cancel the task and exit ID card copy	Press and hold power key for one second or longer.
Pending the next page in the N in 1 mode	Start copying the next page	Press the start key once.
Paper Jam	Clear jam	Follow the steps of clearing jams in Chapter 10 Troubleshooting.
Out of Paper	Continue printing	Load paper and click the power key once.
Pending to print the reverse side in the manual duplex mode	Continue printing	Press the power key once.

7. Machine Maintenance

Maintaining the Toner Cartridge

Storage

To extend the life of toner cartridges, note the following:

- Only remove the cartridge from its packaging just before its installation.
- Do not refill printer cartridges.
- The printer's warranty is voided when refilled cartridges are used.
- Store the cartridge in an environment similar to where the printer is placed. The cartridge should be stored in the shade.
- To avoid damaging the cartridge, do not expose it to the sun for more than a few minutes. Replacing the Toner Cartridge.

Expected Life

7

The life of a cartridge depends on the intensity of use. Retail cartridge can print at least 1,500 pages when used for printing documents with 5% text coverage. (But the toner cartridge supplied with the printer can print an average of 700 pages.)

- Using non-recommended paper can shorten the life of the cartridge and device parts.
- Frequency of cartridge replacement varies with the type of document printed, print media and print coverage.

Recycling the cartridge

- Separate used cartridges from household garbage and dispose them according to local laws and regulations.

For more information, contact your local waste treatment agency. Reseal the cartridge before disposal to prevent accidental toner spills.

- Place used cartridges on clean paper to prevent accidental spilling or scattering of the toner.

Toner Save Mode

You can enable the Toner Save Mode in the Property Settings of the printer. The life of the cartridge can be extended by selecting this option.

The printing cost per page is reduced, but print quality is compromised.

Note

- When the toner is low, the LED indicators will light up as follows:

	Start indicator is off.
	Power indicator flashes red slowly.

If the printed image turns lighter or blurred, we recommend that you use the Neo Printing software that monitors the amount of toner remaining. Considering whether to replace the toner cartridge.

- Actual printable numbers vary depending on image volume and density, number of pages printed at a time, paper type and size, and environmental conditions such as temperature and humidity. Toner quality degrades over time.
- For good print quality, we recommend that you use genuine toner from the RICOH.
- RICOH shall not be responsible for any damage or expense that might result from the use of parts other than genuine parts from the RICOH with your office products.

7


Replacing the Toner Cartridge

Important

- If the power indicator flashes red slowly, replace the print cartridge by following the procedure described below. However, this indicator will not flash red slowly if [Toner End Option] has been set to [Continue Printing] in Neo Printing Software. Replace the print cartridge if the printed image becomes pale or blurred. For details, see the Neo Printing User's Guide.
- Store print cartridges in a cool dark place.
- Actual printable numbers vary depending on image volume and density, number of pages printed at a time, paper type and size, and environmental conditions such as temperature and humidity.
- Toner quality degrades over time.
- For good print quality, the manufacturer recommends that you use genuine toner from the manufacturer.
- The manufacturer shall not be responsible for any damage or expense that might result from the use of parts other than genuine parts from the manufacturer with your office products.


1. Open the printer cover.
2. Hold the handle of the cartridge and lift the cartridge out off the printer.

⚠ Beware of hot surfaces.

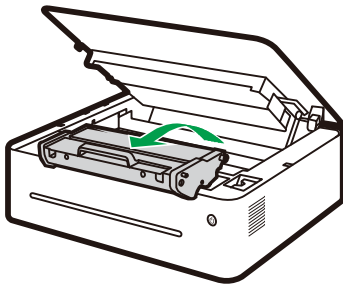


DPJ301

3. Take the new toner cartridge out of box, and then take it out of the plastic bag.

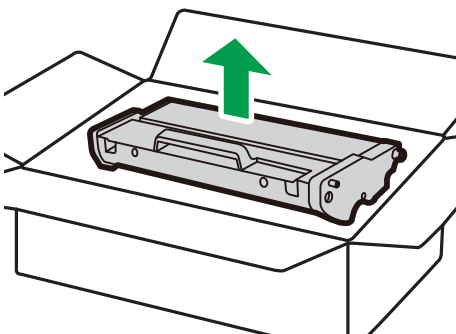

DPJ324

4. Gently shake the cartridge five to six times horizontally to distribute the toner evenly within the cartridge.

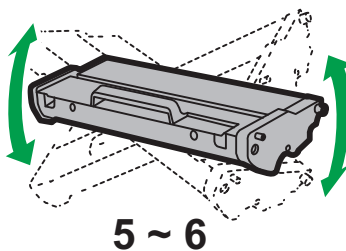


DPJ005

★ Important


- Should your clothes be stained with toner, wipe with a clean cloth and wash with cold water. Hot water will set the toner into the fabric, making the stain difficult to remove.

-
5. Insert the cartridge into the printer until it is locked into place.

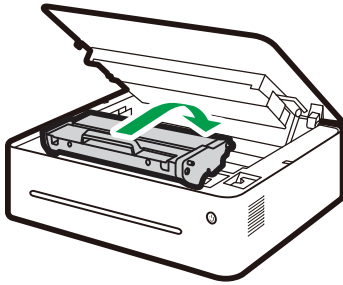

DPJ307

6. Close the printer cover.

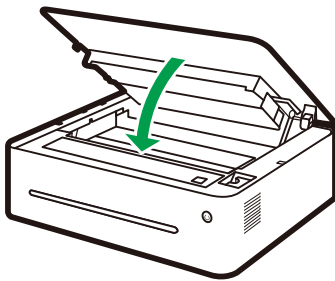

DPJ303

7

Cleaning the Printer

To ensure the best print quality, clean the printer as instructed below whenever the toner cartridge is replaced or when you notice a decrease in print quality.

Do's and Don'ts

Clean the machine periodically to maintain high print quality.

- Wipe the printer surface with a soft dry cloth or a soft damp cloth where necessary.
If the printer is still dirty, use a pH neutral detergent to avoid causing deformation, discoloration or damage to the printer.
Do not use volatile cleaning agents (such as gasoline, solvents or insecticidal sprays) to wipe the machine.
Wipe the printer repeatedly with a damp cloth until the stain is removed, then dry with a clean cloth.
- Do not touch the Transfer roller (under the toner cartridge) when cleaning the inside of the printer.

Greasy hands may affect the print quality.

- Use a clean dry cloth to wipe off any dirt or stain inside the machine.
- You must disconnect the plug from the wall outlet at least once a year. Clean away any dust and grime from the plug and outlet before reconnecting. Accumulated dust and grime pose a fire hazard.
- Do not drop clips, staples or other small articles into the printer.

Cleaning the Exterior of the Printer

Clean the exterior of the printer with a clean and dry lint-free cloth.

Cleaning the Inside of the Printer

During printing, paper scraps, toner and dust particles may fall into and accumulate inside the printer. As time goes by, the debris may result in poor print quality, such as toner spots, stains and paper jams. Cleaning the inside of the printer can eliminate or reduce such issues.

1. **Power off the printer and disconnect the power cord. Wait for the printer to cool.**
2. **Open the printer cover and remove the toner cartridge.**
3. **Wipe off the dust and toner on the cartridge and inside the printer with a dry lint-free cloth.**
4. **Re-install the cartridge and close the cover tightly.**
5. **Connect the power cord and turn on the printer.**

Note

- Do not expose the cartridge to the sun for more than a few minutes to avoid damaging it. Cover it with a piece of paper where necessary. Do not touch the transfer roll inside the printer.

Cleaning Scanner Glass

1. **Lift the scanner cover.**
2. **Clean the scanner glass with a soft wet cloth, and then dry with a clean cloth.**

8. Troubleshooting

FAQs

This section provides troubleshooting tips for commonly encountered problems.

Problems	Possible Causes	Solutions
Machine cannot be powered on	The power cord is not correctly connected	1. Make sure that the power plug is firmly inserted into the wall outlet 2. Connect other devices to the same socket to verify that it is working
Pages are not printed	USB cable is not correctly connected	Re-connect the USB cable
Strange noises	The toner cartridge is not installed correctly	Check whether the toner cartridge is correctly installed

Note

- If the problems persist, power off the machine, disconnect the power cord and contact your sales or service representatives.

Paper Feed Problems

If the machine is operating but paper will not feed or paper jams occur frequently, check the condition of the machine and paper.

Problems	Solutions
Paper does not feed smoothly	• Use only supported paper types. See "3. Print Media" for the supported paper types. • Load paper correctly, making sure that the paper guides are properly adjusted. See "2. Setting up the Printer" for Loading Paper. • If the paper is curled, straighten the paper. • Take out the paper from tray and fan it well. Then, reverse the top and bottom of the paper, and put it in the tray.
Frequent jams	• If there are gaps between the paper and paper guides, adjust the guides to remove the gaps. • Avoid printing on both sides of the paper when printing images that contain large areas of solid color, which consume a lot of toner. • Use only supported paper types. See "3. Print Media" for the supported paper types. • Load paper only as high as the upper limit markings on the paper guide.

Problems	Solutions
Multiple sheets of paper are fed at one time	• Fan the stack of paper well before loading it in the tray. Make sure that the edges are even by tapping the stack on a flat surface such as a desk. • Make sure that the paper guides are in the right position. • Use only supported paper types. See "3. Print Media" for the supported paper types. • Load paper only as high as the upper limit markings on the paper guide. • Check that paper was not added while there was still some left in the tray. Before adding new paper, remove the remaining paper from the feed tray and add them to new stack, fan the paper again ,then put it in the tray..
Paper gets wrinkles	• Paper is damp. Use only paper that has been stored properly. • Paper is too thin. See "3. Print Media" for the supported paper types. • If there are gaps between the paper and the paper guide, adjust the paper guides to remove the gaps.
The printed paper is curled	• Load the paper upside down in the feed tray. • Paper is damp. Use only paper that has been stored properly.
Images are printed diagonally to the pages	• If there are gaps between the paper and the paper guide, adjust the paper guide to eliminate the gap.

8

Removing Paper Jams

Paper jams may occur during printing. When the print media is stuck, you will be notified by an error message from the Neo Printing software and by the printer LED indicators.

Reasons for Paper Jams

- The paper is not correctly loaded in the feed tray, or too much paper has been loaded.
- The cover is open during printing.
- The paper used does not comply with the required specifications.
See "3. Print Media" for the supported paper types.
- The paper is too large or too small.
See "3. Print Media" for the supported paper types.
- When paper is jammed, the LED indicator will light up as follows:

	Power indicator is red
---	------------------------


- If the area where the paper is jammed is not immediately visible, check the inside of the printer.

Paper Jams at the Paper Exit


★ Important

- If the paper is jammed here, it can cause the toner to spill onto the paper. If your clothes is stained with the toner, wash off the stain with cold water.
- Hot water will set the toner into the fabric, making the stain difficult to remove..

1. Open the printer cover.

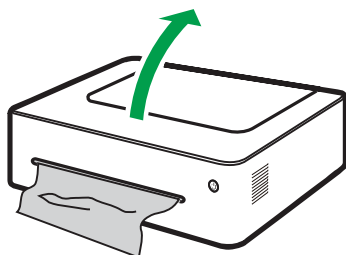


2. Remove the toner cartridge.

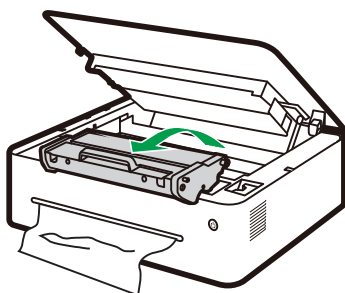

DPJ311


3. Pull the release lever upwards.

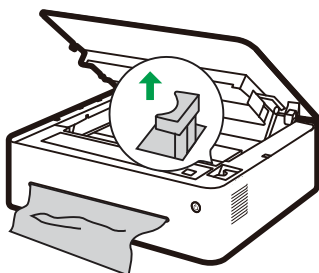

DPJ309


4. Pull the jammed paper carefully out of the paper exit.

Be careful not to tear the paper.

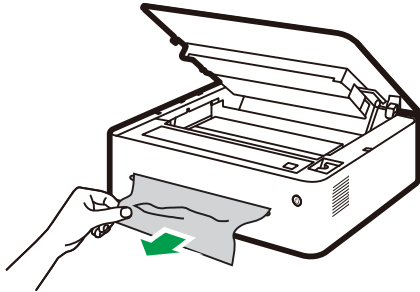


DPJ313

5. Push the release lever back into position.

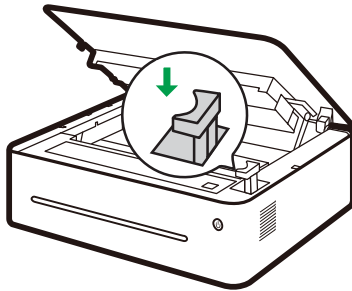


DPJ315

6. Reinstall the toner cartridge.

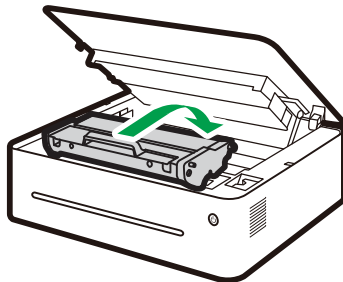

DPJ307

-
7. Close the cover to resume printing.

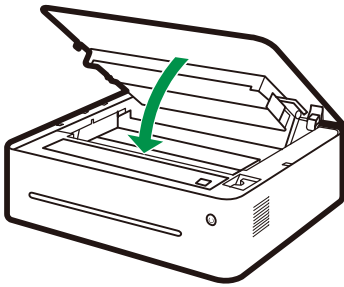


DPJ317

Paper Jams at the Feed Tray

★ Important

- If the paper has already entered the toner cartridge section, carry out the following steps.

1. Open the printer cover, and then remove the toner cartridge.

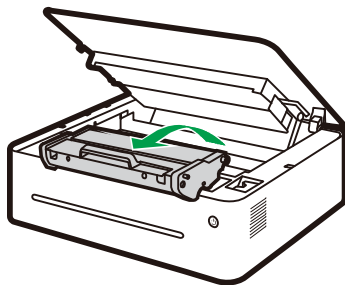


DPJ301

★ Important

- If the power indicator remains red, it indicates some paper is still stuck in the printer. Check the inside of the printer.


2. Pull the jammed paper carefully out of the feed tray.

Be careful not to tear the paper.

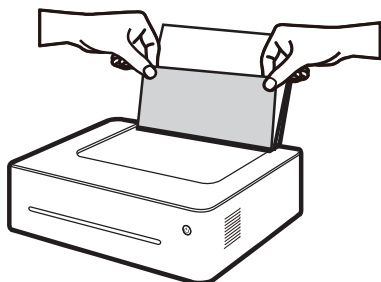

DPJ319

3. Replace the toner cartridge, and then close the cover.

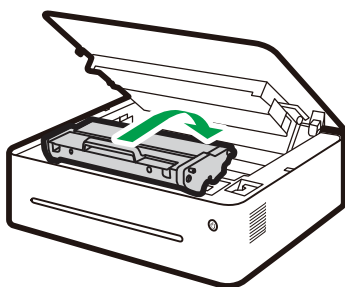


DPJ307

Paper Jams Inside the Printer

★ Important


- If the paper jam occurs here, it can cause the toner to spill onto the paper. If your clothes is stained with the toner, wash off the stain with cold water. Hot water will set the toner into the fabric.

1. Open the printer cover.

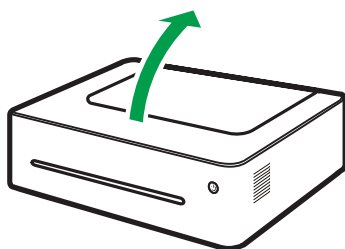

DPJ321

2. Remove the toner cartridge.

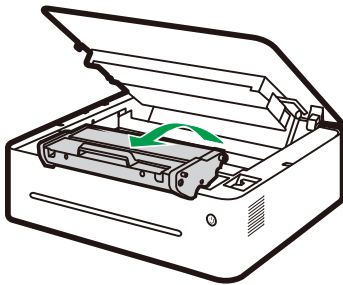


DPJ301

★ Important

- Do not expose the cartridge to the sun for more than a few minutes to avoid damaging it. Cover the cartridge with a sheet of paper after it has been removed from the printer.


3. Gently pull the paper out of the printer.

Make sure no paper is left inside the printer.

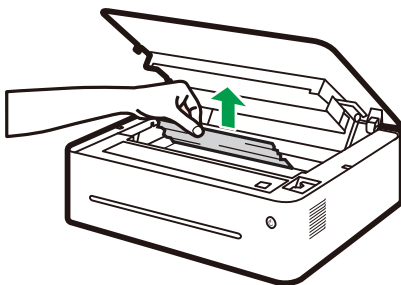

DPJ323


Reinstall the toner cartridge.

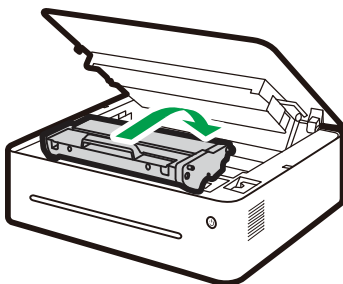

DPJ307

4. Close the cover tightly.

The printer will resume printing.

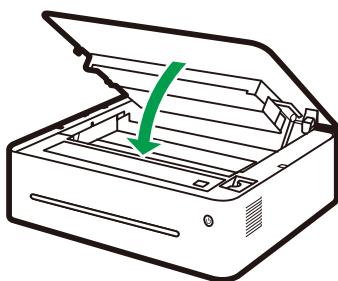

DPJ303

★ Important

- If the power indicator remains red, it indicates that some paper is still stuck in the printer. Check the inside of the printer.

Tips to Avoid Paper Jams

- The occurrence of paper jams can be significantly reduced by using the recommended types of print media. In the event of paper jams, follow the instructions described in "Removing Paper Jams".
- Load paper as instructed in the section on "Loading Paper". Adjust the position of the paper guide properly.
- Do not overload the feed tray.
- Do not attempt to remove paper from the feed tray when the printer is printing.
- Bend the sheets back and forth, fan the stack and flatten the paper before loading it.
- Do not use corrugated, folded, wet or curled paper.
- Do not mix different types of paper in the same feed tray.
- Use only recommended print media. See "Loading Paper" in "Setting up the Printer".
- Store the print media in a suitable environment.

★ Important

- The jammed sheet of paper will likely be covered with unused toner. Be careful not to get it on your hands or clothes.
- Toner on prints made immediately after removing a paper jam may be insufficiently fused and can smudge. Make test prints until smudges no longer appear.
- Do not force a jammed paper out of the printer as it may tear. Torn pieces left inside the machine will cause further jams and possibly damage the machine.
- Paper jams may lead to missing pages. Check whether there are any missing pages in the print job and, if yes, re-print the missing pages.

Print Quality Problems

If there is a problem with the quality of printing, first check the condition of the machine.

Problems	Solutions
The machine is not properly placed.	Make sure that the machine is on a level surface. Place the machine where it will not be subject to vibration or shock.
Unsupported paper types have been used.	Make sure that the paper being used is supported by the machine. See "3. Print Media" for the supported paper types.
Incorrect paper type settings.	Make sure that the paper type setting of the printer driver matches the type of paper loaded. See "Supported Paper".
Non-genuine toner cartridge has been used.	Non-genuine toner cartridge has been used. The non-genuine toner cartridge may reduce the print quality and even cause malfunctions. Use genuine toner cartridges.
Old toner cartridge has been used.	Toner cartridges should be opened before their expiration date and used within six months of being opened.
Machine needs to be cleaned	See "Cleaning the Printer" in "7. Machine Maintenance". Clean the machine as required.

Printing Problems

Problems	Solutions
An printing error occurs	If an error occurs during printing, change the computer settings and printer driver settings. Check whether there are other running applications. Close any other applications because they may interfere with the printing. If the problem is not resolved, close unneeded processes too. Check that the latest printer driver is being used.
There is considerable delay between the print start command and actual printing.	Processing time depends on data volume. High volume data, such as graphics-heavy documents, take longer to process. Wait for a while. To speed up printing, reduce the printing resolution using the printer driver program.
The whole printout is blurred	Paper is damp. Use only paper that has been stored properly. See "3. Print Media" for the supported paper types. If you have enabled [Toner Save Mode], printing is generally less dense. Condensation may have collected. If rapid change in temperature or humidity occurs, use this machine only after it has been acclimatized.
Cannot print properly when using a certain application, or cannot print image data properly. Some characters are printed faintly or not printed.	Change the print quality settings.
Old toner cartridge has been used.	Toner cartridges should be opened before their expiration date and used within six months of being opened.
Machine needs to be cleaned	See "Cleaning the Printer" in "7. Machine Maintenance". Clean the machine as required.

Print Positions Do Not Match Display Positions

If the position of items on the printed page differs from the position displayed on the computer screen, the cause may be one of the following.

Problems	Solutions
Page layout settings are not configured properly.	Check that the page layout settings are properly configured in the application.
The paper size settings does not match with the paper loaded.	Check whether the paper size specified on the printer driver matches that of the loaded paper.

LED Indicator Status for Errors and Operation Guide

See "6. Keys and Indicators" for LED Indicator Status and Operation Guide.

9. Appendix

Precautions about Toner

- The normal operation of the machine cannot be guaranteed if non-RICOH toner products are used.
- Depending on printing conditions, there are cases where the printer cannot print the number of sheets indicated in the specifications.
- If the printed image suddenly turns lighter or blurred, replace the toner cartridge.

Moving and Transporting the Machine

This section provides cautions that you must follow when moving the machine for a long/short distance.

Repackage the machine with the original packing materials when you need to move the machine for a long distance.

- Be sure to disconnect all cables from the machine before transporting it.
- The machine is a precision piece of machinery. Be sure to handle it carefully when moving it.
- Make sure to move the machine horizontally. Take extra caution when carrying the machine up or down stairs.
- Do not take out the toner cartridge during the moving.
- Make sure to keep the machine upright when moving it. Move the machine carefully to prevent the toner from spilling.

Make sure to follow the checklist below:

- The power has been turned off.
- The power cord is unplugged from the wall outlet.
- All other cables have been disconnected from the machine.
- Repackage the machine properly if it needs to be transported for a long distance. Take care not to tip or tilt the machine during transit.
- When moving the machine, the toner may spill out into the machine if the machine is not kept level during transit..
- For more information about moving the machine, contact your sales or service representatives.

Disposal

For information on correct disposal of the machine, contact your sales or service representatives.

Where to Inquire

Contact your sales or service representative for further information about the topics included in this manual or to inquire about other topics not included in this manual.

Toner Cartridge

Retail toner cartridge can print at least 1,500 pages when used for printing documents with 5% text coverage. The toner cartridge that is supplied with the printer can print an average of 700 pages.

Note

- Unless a toner cartridges is replaced before toner runs out, printing will become impossible. To facilitate cartridge replacement, we recommend you purchase and store extra toner cartridges.
- The actual number of printable pages varies depending on the image volume and density, number of pages printed at a time, paper type and paper size used, and environmental conditions such as temperature and humidity.
- The quality of the cartridge will decrease with time. Hence, print cartridges may need to be replaced sooner than indicated above.
- Toner cartridges are not covered under the warranty. However, if problems arise, contact the store where they were purchased.

Specifications of the Machine

This section lists the specifications of the machine.

9

General Function Specifications

Configuration

Desktop

Maximum paper size for printing

216 mm × 356 mm (8.5 × 14 inches)

Warm-up time

Less than 25 seconds (23 °C, 50%RH)

Paper sizes

A4, B5 JIS, A5 (SEF), B6 JIS (SEF), A6 (SEF), Letter, Legal, Executive, 16 K, Custom Paper Size
Custom Paper Size supports the following range of paper sizes:

- Width: 76.2-216mm
- Length: 116-355.6mm

Paper types

Plain Paper (70-90 g/m²)

Recycled Paper (70-90 g/m²)

Thick Paper (90-105 g/m²)

Thin Paper (60-70 g/m²)

Label

Paper feed capacity

50 sheets (70 g/m², 19 lb.)

Memory

128 MB

Power requirements

220-240 V, 5 A, 50/60 Hz

Power consumption

Maximum: 900 W

Power Saving Mode 1: 1.2 W or less

Dimension (Width×Depth×Height)

350 x 265 x 103 mm

Weight (Machine and toner cartridge)

Approx. 6.5 kg (14.3 pounds) or less

Printing Function Specifications

Printing speed

22 pages per minute (A4, SEF)

Resolution

600 × 600 dpi (Max: 1200 × 600 dpi)

First print speed

11 seconds or less (from data processing completion to output)

Interface

USB 2.0

Printer language

GDI

Trademark

Mac OS is a trademarks or registered trademarks of Apple Inc., in the United States and other countries.

Microsoft®, Windows®, Windows Server® and Windows Vista® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries/regions.

Other product names used in this manual are for identification purposes only and may be trademarks

of their respective companies. We do not have any or all rights to these marks.

Proper names of Windows operating systems are as follows:

- Names of Windows Vista products are as follows:
 - Microsoft® Windows Vista® Ultimate
 - Microsoft® Windows Vista® Business
 - Microsoft® Windows Vista® Home Premium
 - Microsoft® Windows Vista® Home Basic
 - Microsoft® Windows Vista® Enterprise
- Names of Windows 7 products are as follows:
 - Microsoft® Windows® 7 Home Premium
 - Microsoft® Windows® 7 Professional
 - Microsoft® Windows® 7 Ultimate
 - Microsoft® Windows® 7 Enterprise
- Names of Windows 8 products are as follows:
 - Microsoft® Windows® 8
 - Microsoft® Windows® 8 Pro
 - Microsoft® Windows® 8 Enterprise
- Names of Windows 8.1 products are as follows:
 - Microsoft® Windows® 8.1
 - Microsoft® Windows® 8.1 Pro
 - Microsoft® Windows® 8.1 Enterprise
- Names of Windows Server 2003 products are as follows:
 - Microsoft® Windows Server® 2003 Standard Edition
 - Microsoft® Windows Server® 2003 Enterprise Edition
- Names of Windows Server 2003 R2 products are as follows:
 - Microsoft® Windows Server® 2003 R2 Standard Edition
 - Microsoft® Windows Server® 2003 R2 Enterprise Edition
- Names of Windows Server 2008 products are as follows:
 - Microsoft® Windows Server® 2008 Foundation
 - Microsoft® Windows Server® 2008 Standard
 - Microsoft® Windows Server® 2008 Enterprise
- Names of Windows Server 2008 R2 products are as follows:
 - Microsoft® Windows Server® 2008 R2 Foundation
 - Microsoft® Windows Server® 2008 R2 Standard
 - Microsoft® Windows Server® 2008 R2 Enterprise
- Names of Windows Server 2012 products are as follows:
 - Microsoft® Windows Server® 2012 Foundation
 - Microsoft® Windows Server® 2012 Essentials

Microsoft® Windows Server® 2012 Standard

- Names of Windows Server 2012 R2 products are as follows:

Microsoft® Windows Server® 2012 R2 Foundation

Microsoft® Windows Server® 2012 R2 Essentials

Microsoft® Windows Server® 2012 R2 Standard

- Names of Windows 10 products are as follows:

Microsoft® Windows® 10 Home

Microsoft® Windows® 10 Pro

Microsoft® Windows® 10 Enterprise

All Microsoft product screenshots are reprinted with permission from the Microsoft Corporation.

