



SIMPLE MANUAL / MANUEL SIMPLE

Portable Bluetooth Speaker Enceinte Bluetooth portable

XT7S




COV37529720

www.lg.com

Copyright © 2023 LG Electronics Inc. All Rights Reserved.

Copyright © 2023 LG Electronics inc. Tous droits réservés.

2309_Rev01

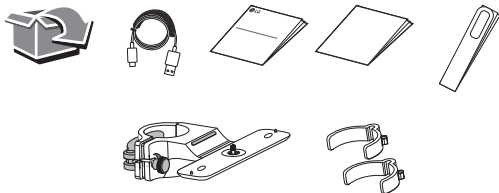

Download Manual
Télécharger le manuel


<Android>



<iOS>



Download App
Télécharger l'application

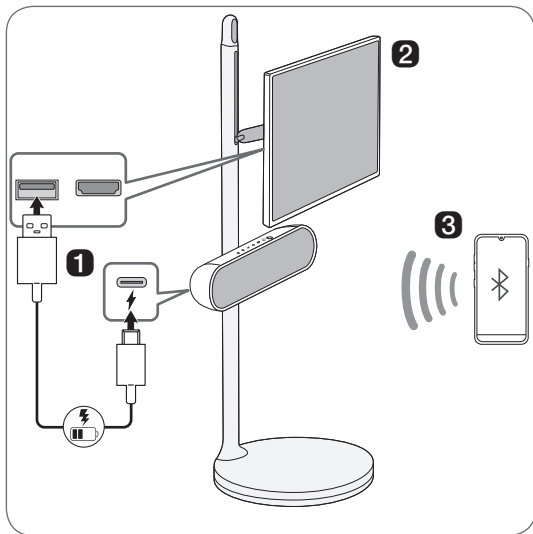

Connecting and Using the Speaker

- ❶ Charge the speaker before using it by opening the rear cover and connect the speaker to the USB port on the StanbyME TV by the USB cable.

- ❗ The speaker can be charged while the TV is on.
- ❗ If the speaker is connected to the TV and powered by the battery, the usage time of the TV may be shortened. For continuous use, connect the power to the TV.
- ❗ When connecting the speaker to the TV, position the TV monitor horizontally.
- ❗ You can charge the speaker without the TV by using your own AC adapter for charging.

- ❷ Connect the speaker to the StanbyME TV via Bluetooth

- **Connect automatically (Initial connection)**

- ❶ Turn on the TV.
- ❷ Press the **Power** (⏻) button on the speaker to turn it on.
- ❸ The TV finds and connects to this speaker so you can hear the TV sound.

- **Connect manually**

- ❶ Press the **Power** (⏻) button on the speaker to turn it on. **Bluetooth** LED blinks. If the LED is not blinking press **Bluetooth** (🔗) button.
- ❷ Press **🔗 → 🔊** (Sound Out) on the StanbyME TV and select [**Bluetooth** device] or [**Bluetooth** device+Internal speaker] and then [Device list].
 - If you choose [**Bluetooth** device], find and select "LG-XT7S(XX)" on the Connectable Devices list.

- If you choose [**Bluetooth** device+Internal speaker], select [Connect One Speaker]. Then find and select "LG-XT7S(XX)" on the Connectable Devices list.

③ Once the TV is connected via **Bluetooth**, the **Bluetooth** LED will turn on and you can hear the TV sound through the speaker.

③ Connect the speaker to a smartphone via Bluetooth

① Turn off the StanbyME TV. Press the **Power**  button on the speaker to turn it on. **Bluetooth** LED blinks. If the LED is not blinking press **Bluetooth**  button.

② Tap the **Settings**  button on the smartphone and select **Bluetooth** .

Turn on the **Bluetooth** function.
(Off  > On )

③ Find "LG-XT7S (XX)" on the device list on the smartphone and connect to it. Once the smartphone is connected via **Bluetooth**, the **Bluetooth** LED will turn on.

④ On the smartphone, play a music of your choice.

ⓘ When you restart the speaker and if it connects to a device other than the StanbyME TV, the speaker will wait for **Bluetooth** connection for 30 seconds to easily connect with the TV.

④ Connecting the LG XBOOM App

① Find **LG XBOOM app** on the Google Play or App Store and install it on your smartphone.

② Run the **LG XBOOM app** and use more features. (EQ, Lighting, Sleep Timer, Setting etc.)

- Design and specifications are subject to change without notice.
- For more information, download the online owner's manual.
<http://www.lg.com>

Connexion et utilisation du haut-parleur

- 1** Chargez l'enceinte avant de l'utiliser en ouvrant le capot arrière et connectez le haut-parleur au port USB du téléviseur StanbyME à l'aide du câble USB.

- ❗ L'enceinte peut être chargée lorsque le téléviseur est allumé.
- ❗ Si l'enceinte est connectée au téléviseur et alimentée par la batterie, la durée d'utilisation du téléviseur peut être raccourcie. Pour une utilisation continue, connectez l'alimentation au téléviseur.
- ❗ Lorsque vous connectez l'enceinte au téléviseur, positionnez le moniteur TV horizontalement.
- ❗ Vous pouvez charger l'enceinte sans le téléviseur en utilisant votre propre adaptateur secteur pour le chargement.

- 2** Connectez l'enceinte au téléviseur StanbyME TV via Bluetooth

- **Connectez-vous automatiquement (connexion initiale)**

- ① Allumez le téléviseur.
- ② Appuyez sur le bouton **Alimentation**  du haut-parleur pour l'allumer.
- ③ Le téléviseur trouve et s'y connecte afin que vous puissiez entendre le son du téléviseur.

- **Connectez-vous manuellement**

- ① Appuyez sur le bouton **Alimentation**  du haut-parleur pour l'allumer. La DEL **Bluetooth** clignote. Si la DEL ne clignote pas, appuyez sur le bouton **Bluetooth** .
 - ② Appuyez sur  →  (Sortie son) sur le téléviseur StanbyME et sélectionnez [Périphérique **Bluetooth**] ou [Périphérique **Bluetooth** + enceinte interne] et puis [liste des périphériques].
- Si vous choisissez [Périphérique **Bluetooth**], recherchez et sélectionnez « LG-XT75(XX) » dans la liste des appareils connectables.

- Si vous choisissez [Périphérique **Bluetooth** + enceinte interne], sélectionnez [Connecter une enceinte]. Recherchez et sélectionnez ensuite « LG-XT75(XX) » dans la liste des appareils connectables.

③ Une fois le téléviseur connecté via **Bluetooth**, la DEL **Bluetooth** s'allumera et vous pourrez entendre le son du téléviseur via l'enceinte.

③ Connexion du haut-parleur à un téléphone intelligent par Bluetooth

① Éteignez le téléviseur StanbyME. Appuyez sur le bouton **Alimentation**  du haut-parleur pour l'allumer. La DEL **Bluetooth** clignote. Si la DEL ne clignote pas, appuyez sur le bouton **Bluetooth** .

② Appuyez sur le bouton **Réglages**  du téléphone intelligent et sélectionnez **Bluetooth** . Activez la fonction **Bluetooth**. (Désactivée  > Activée )

③ Trouvez « **LG-XT75 (XX)** » dans la liste des appareils du téléphone intelligent et connectez-vous à

celui-ci. Une fois que le téléphone intelligent est connecté au produit par **Bluetooth**, la DEL **Bluetooth** s'allume.

④ Sur le téléphone intelligent, lancez la musique de votre choix.

❗ Lorsque vous redémarrez l'enceinte et si elle se connecte à un appareil autre que le téléviseur StanbyME, l'enceinte attendra la connexion **Bluetooth** pendant 30 s pour se connecter facilement au téléviseur.

④ Connexion à l'application LG XBOOM

- ① Trouvez l'**application LG XBOOM** dans la boutique Google Play ou l'App Store et installez-la sur votre téléphone intelligent.
- ② Exécutez l'**application LG XBOOM** et utilisez davantage de fonctionnalités. (EQ, Éclairage, Minuterie d'arrêt, Réglages, etc.)

- La conception et les caractéristiques techniques peuvent être modifiées sans préavis.
- Pour plus d'informations, téléchargez le manuel d'utilisation en ligne. <http://www.lg.com>

ENGLISH

Specification

Power Supply:

- 5 V  1.2 A (AC Adapter)
- Built-in rechargeable battery

Power consumption

- Refer to the main label.

Dimensions (W x H x D):

Approx. 326.0 mm x 78.0 mm x 87.0 mm
(12.8 inch x 3.1 inch x 3.4 inch)

Operating Temperature: 5 °C to 35 °C
(41 °F to 95 °F)

Operating Humidity: 5 % to 80 % RH

Ingress Protection: IPX5

- Protected against low pressure jets of water from all directions.

Battery life: Approx. 16 hours

- The listed time may differ depending on usage conditions and playing music sources.

FRANÇAIS

Caractéristiques techniques

Alimentation électrique :

- 5 V  1,2 A (adaptateur c.a.)
- Batterie rechargeable intégrée

Consommation électrique :

- Reportez-vous à l'étiquette principale.

Dimensions (L x H x P) :

environ 326,0 mm x 78,0 mm x 87,0 mm
(12,8 po x 3,1 po x 3,4 po)

Température de fonctionnement : de 5 °C
à 35 °C (de 41 °F à 95 °F)

Humidité de fonctionnement : de 5 % à
80 % RH

Protection contre les infiltrations : IPX5

- Protégé contre les jets d'eau à basse pression venant de toutes les directions.

Durée de vie de la batterie : environ
16 heures

- La durée indiquée peut différer en fonction des conditions d'utilisation et de la lecture des sources musicales.

Safety Information

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING:

- TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.
- Do not install this equipment in a confined space such as a book case or similar unit.
- This unit contains magnets which can be harmful to certain kinds of objects (Ex: Magnetic card, Pacemaker etc..).

CAUTION:

- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.

- The apparatus should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- It is recommended that you use the 5 V AC adapter (more than 1.2 A) with this device. If you do not use the recommended adapter, charging is unavailable or charging time may differ.
- To avoid fire or electric shock, do not open the unit; contact to qualified personnel only.
- Do not leave the unit in a place near the heating appliances or subject to direct sunlight, moisture, or mechanical shock.
- The Power Plug is the disconnecting device. In case of an emergency, the Power Plug must remain readily accessible.
- To clean the unit, use a soft, dry cloth.
- Do not use volatile liquids such as insecticide spray near the unit. Wiping with strong pressure may damage the surface. Do not leave rubber or plastic products in contact with the unit for a long period of time.
- Do not place the unit over the vehicle's air bag. When the air bag deploys, it may result in injury. Before using in the car, fix the unit.
- Do not use the handsfree function during driving a car.
- Do not leave the unit on an unstable place such as high shelves. It may fall down because of the vibration of the sound.
- Do not use high voltage products around this product. (ex. Electrical swatter)
This product may malfunction due to electrical shock.

CAUTION when using this product in environments of low humidity.

- It may cause static electricity in environments of low humidity.
- It is recommended to use this product after touching any metal object which conducts electricity.

NOTICE: For safety marking information including product identification and supply ratings, please refer to the main label on the bottom or the other surface of the product.

Symbols

	Refers to alternating current (AC).
	Refers to direct current (DC).
	Refers to class II equipment.
	Refers to stand-by.
	Refers to "ON" (power).
	Refers to dangerous voltage.

For models using a built-in battery

Do not store or transport at pressures lower than 11.6 kPa (0.116 Bar) and at above 15,000 m (9.32 miles) altitude.

- replacement of a battery with an incorrect type that can defeat a safeguard (for example, in the case of some lithium battery types);
- disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
- leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas; and

- a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

For models using a battery

This device is equipped with a portable battery or accumulator.

CAUTION: Risk of fire or explosion if the battery is replaced by an incorrect type.

How to Safely remove the batteries or the battery pack from the equipment:

To Remove the old batteries or battery pack, follow the assembly steps in reverse order. To prevent contamination of the environment and bring on possible threat to human and/or animal health, the old batteries or the battery pack must be put in an appropriate container at designated collection points. Do not dispose of batteries or battery pack together with other waste. It is recommended that you use local, free reimbursement systems batteries or battery packs, (may not be available in your area). The batteries or the battery pack should not be exposed to excessive heat such as sunshine, fire or the like.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.



14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

FCC Compliance Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment

off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC RF Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Users must follow the specific operating instructions for satisfying RF exposure compliance. This device was tested in compliance with FCC and ICED RF Exposure limit.(0 mm distance from human head/body (limit 1.6 W/kg@ 1 g SAR) and extremity (limit 4.0 W/kg@ 10 g SAR)).

Supplier's Declaration of Conformity

Trade Name LG

Responsible Party LG Electronics USA, Inc.

Address 111 Sylvan Avenue, North
Building Englewood Cliffs,
New Jersey 07632

Email lg.environmental@lge.com

USA Only (Product with embedded rechargeable battery ONLY)

In case rechargeable battery is included in this product, the entire device should be recycled in compliance with rechargeable battery recycling standards because of the internal battery.

To dispose of properly, call (800) 822-8837 or visit www.call2recycle.org.

Industry Canada Statement

[For having wireless function (WLAN, Bluetooth,...)]

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

CAN ICES-003(B) / NMB-003(B)**IC Radiation Exposure Statement**

[For having wireless function (WLAN, Bluetooth,...)]

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This device was tested in compliance with FCC and ICSED RF Exposure limit. (0 mm distance from human head/body (limit 1.6 W/kg@ 1 g SAR) and extremity (limit 4.0 W/kg@ 10 g SAR)).

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

WARNING

[For product having the wireless function using 5 GHz frequency bands]

- i. the device for operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;
- ii. for devices with detachable antenna(s), the maximum antenna gain permitted for devices in the bands 5250-5350 MHz and 5470-5725 MHz shall be such that the equipment still complies with the e.i.r.p. limit;

- iii. for devices with detachable antenna(s), the maximum antenna gain permitted for devices in the band 5725-5850 MHz shall be such that the equipment still complies with the e.i.r.p. limits as appropriate; and
- iv. [for devices operating in the band 5250-5350 MHz having an e.i.r.p. greater than 200 mW] antenna type(s), antenna models(s), and worst-case tilt angle(s) necessary to remain compliant with the e.i.r.p. elevation mask requirement set forth in section 6.2.2.3 of RSS-247 shall be clearly indicated.

Users should also be advised that high-power radars are allocated as primary users (i.e. priority users) of the bands 5250-5350 MHz and 5650-5850 MHz and that these radars could cause interference and/or damage to LE-LAN devices.

Canada Only (Product with embedded rechargeable battery ONLY)

In case rechargeable battery is included in this product, the rechargeable battery should be recycled in compliance with rechargeable battery recycling standards. To dispose of properly, call 1.800.822.8837 or visit www.call2recycle.ca.

Consignes de sécurité

ATTENTION : POUR RÉDUIRE LE RISQUE DE DÉCHARGE ÉLECTRIQUE, N'ENLEVEZ PAS LE COUVERCLE (OU LA PARTIE ARRIÈRE).

IL N'Y A PAS DE COMPOSANTS SUSCEPTIBLES D'ÊTRE RÉPARÉS PAR L'UTILISATEUR À L'INTÉRIEUR DE CET APPAREIL. CONFIEZ L'ENTRETIEN À DU PERSONNEL QUALIFIÉ.



Le symbole d'un éclair avec une tête de flèche à l'intérieur d'un triangle équilatéral sert à avertir l'utilisateur de la présence d'une tension dangereuse non isolée dans le corps de l'appareil, qui peut être suffisamment élevée pour provoquer un risque de décharge électrique.



Le symbole d'un point d'exclamation à l'intérieur d'un triangle équilatéral sert à avertir l'utilisateur de la présence d'instructions d'utilisation et de maintenance (entretien) importantes dans la documentation qui accompagne l'appareil.

AVERTISSEMENTS :

- Pour prévenir tout risque d'incendie ou de décharge électrique, n'exposez pas cet appareil à la pluie ou à l'humidité.
- N'installez pas cet appareil dans un espace restreint, tel qu'une bibliothèque ou tout autre meuble similaire.
- Cet appareil contient des aimants pouvant être nuisibles pour certains types d'objets (p. ex., carte magnétique, stimulateur cardiaque, etc.).

ATTENTION :

- N'obstruez pas les ouvertures d'aération. Installez l'appareil en respectant les directives du fabricant. Les fentes et les ouvertures de l'appareil ont été conçues pour assurer une bonne ventilation et un bon fonctionnement du produit en le protégeant de toute surchauffe. Les ouvertures ne doivent jamais être bloquées; l'obstruction pourrait survenir en installant le produit sur un lit, un canapé, un tapis ou sur toute autre surface similaire. Cet appareil ne doit pas être installé dans un espace fermé comme une bibliothèque ou une étagère

à moins qu'une ventilation particulière soit assurée ou que les directives du fabricant l'autorisent.

- L'appareil ne doit pas être exposé à des projections d'eau ou à des éclaboussures, et aucun objet contenant du liquide, comme un vase, ne doit être posé sur l'appareil.
- Ne posez pas sur l'appareil des sources de flamme nue, telles que des bougies allumées.
- Il est recommandé d'utiliser l'adaptateur secteur 5 V (plus de 1,2 A) avec cet appareil. Si vous n'utilisez pas l'adaptateur recommandé, le chargement n'est pas possible ou la durée de chargement peut différer.
- Pour éviter tout incendie ou décharge électrique, n'ouvrez pas l'appareil. Contactez un technicien qualifié uniquement.
- Ne laissez pas l'appareil à proximité d'appareils de chauffage et ne l'exposez pas aux rayons directs du soleil, à l'humidité ou à des chocs mécaniques.
- La fiche d'alimentation sert à débrancher l'appareil. En cas d'urgence, elle doit être facilement accessible.
- Pour nettoyer l'appareil, utilisez un chiffon doux et sec. Si les surfaces sont très sales, utilisez un chiffon doux légèrement humidifié d'une solution détergente douce. N'utilisez pas de solvants puissants, tels que de l'alcool, du benzène ou des diluants, car ces derniers risquent d'endommager la surface de l'appareil.
- N'utilisez pas de liquides volatils, tels qu'un insecticide en aérosol, à proximité de l'appareil. Si vous frottez trop fort, vous risquez d'endommager la surface. Ne laissez pas de produits en caoutchouc ou en plastique en contact prolongé avec l'appareil.
- Ne placez pas l'appareil sur le coussin gonflable du véhicule. Vous risqueriez d'être blessé en cas de déploiement du coussin gonflable. Fixez bien l'appareil pour l'utiliser dans la voiture.
- N'utilisez pas la fonction mains libres pendant que vous êtes en train de conduire.
- N'installez pas l'appareil en équilibre précaire, par exemple sur une étagère en hauteur. Il pourrait tomber sous l'effet des vibrations sonores.

- N'utilisez pas d'appareils à haute tension autour de ce produit (comme un tue-mouches électrique). Ce produit pourrait présenter un dysfonctionnement en raison d'une décharge électrique.

SOYEZ PRUDENT lorsque vous utilisez ce produit dans des endroits où le taux d'humidité est faible.

- Il peut se créer de l'électricité statique lorsque le taux d'humidité est faible.
- Il est recommandé d'utiliser ce produit après avoir touché un objet de métal qui conduit l'électricité.

REMARQUE : Pour obtenir des informations sur le marquage de sécurité, l'identification du produit et les valeurs nominales d'alimentation, reportez-vous à l'étiquette principale au-dessous de l'appareil ou sur un autre côté.

Symboles

	Courant alternatif (CA).
	Courant continu (CC).
	Équipement de classe II
	Alimentation en veille
	Alimentation activée
	Tension dangereuse

Pour les modèles avec batterie intégrée

N'entreposez pas ou ne transportez pas la batterie à des pressions inférieures à 11,6 kPa (0,116 Bar) et à plus de 15 000 m (9,32 miles) d'altitude.

- remplacer une batterie par un type incorrect peut faire échouer un dispositif de protection (par exemple, dans le cas de certains types de batteries au lithium);
- jeter une batterie dans le feu ou un four chaud, ou l'écraser ou la découper mécaniquement peut entraîner une explosion;

- laisser une batterie dans un environnement où la température est extrêmement élevée peut entraîner une explosion ou une fuite de liquide ou de gaz inflammable;
- soumettre une batterie à une pression d'air extrêmement basse peut entraîner une explosion ou une fuite de liquide ou de gaz inflammable.

Pour les modèles utilisant une batterie

Cet appareil est équipé d'une batterie transportable ou de piles rechargeables.

ATTENTION : Risque d'incendie ou d'explosion si la batterie est remplacée par un type incorrect.

La façon de retirer les batteries ou le bloc-batterie de l'équipement en toute sécurité :

Pour retirer les batteries anciennes ou le bloc-batterie, suivez les étapes de l'assemblage dans l'ordre inverse. Pour éviter la contamination de l'environnement et causer une menace possible pour la santé humaine ou animale, les batteries anciennes ou le bloc-batterie doivent être placés dans un récipient approprié aux points de collecte désignés. Ne jetez

pas les batteries ou le bloc-batterie avec d'autres déchets. Il est recommandé que vous utilisiez des systèmes gratuits de remboursement locaux des batteries ou le bloc-batterie (peuvent être indisponibles dans votre région). Les batteries ou le bloc-batterie ne doivent pas être exposés à une chaleur excessive, telle que le soleil, le feu ou autre chose similaire.

CONSIGNES DE SÉCURITÉ IMPORTANTES

1. Lisez les instructions.
2. Conservez ces instructions.
3. Respectez tous les avertissements.
4. Suivez toutes les instructions.
5. N'utilisez pas ce produit près de l'eau.
6. Nettoyez seulement avec un chiffon sec.
7. Ne bloquez pas les ouvertures de ventilation. Installez l'appareil conformément aux instructions du fabricant.

8. N'installez pas l'appareil près de sources de chaleur comme un radiateur, une cuisinière ou d'autres appareils semblables (y compris des amplificateurs) qui produisent de la chaleur.
9. Ne contournez pas la fonction sécuritaire de la prise polarisée ou de mise à la terre. Une prise polarisée est dotée de deux lames, dont l'une est plus large que l'autre. Une prise de mise à la terre est dotée de deux lames et d'une broche de mise à la terre. La lame la plus large ou la broche de mise à la terre assurent votre sécurité. Si la fiche n'entre pas dans la prise murale, consultez un électricien pour remplacer cette dernière.
10. Protégez le cordon d'alimentation contre le piétinement ou le pincement, particulièrement près de la fiche, des prises et des points de sortie du produit.
11. Utilisez seulement les accessoires recommandés par le fabricant.

12. Utilisez seulement des chariots, des supports, des trépieds, des fixations ou des tables recommandés par le fabricant ou vendus avec l'appareil. Si un chariot est utilisé, faites attention au moment de déplacer l'appareil pour que celui-ci ne bascule pas.



13. Débranchez cet appareil pendant les orages ou lorsqu'il n'est pas utilisé pendant de longues périodes.
14. Consultez du personnel qualifié pour la réparation. Un entretien est requis lorsque le produit est endommagé, peu importe qu'il s'agisse d'un dommage au cordon d'alimentation ou à la fiche, d'un déversement de liquide ou que des objets aient été insérés à l'intérieur, d'une exposition à la pluie ou à l'humidité, d'un fonctionnement anormal ou d'une chute de l'appareil.

Avis d'Industrie Canada

[Pour la fonction sans fil (WLAN, Bluetooth, etc.)]

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

CAN ICES-003(B) / NMB-003(B)

Avis d'Industrie Canada sur l'exposition aux rayonnements

[Pour la fonction sans fil (WLAN, Bluetooth, etc.)]

Cet appareil est conforme aux limites d'exposition aux rayonnements d'Industrie Canada pour un environnement non contrôlé. Cet appareil a été testé conformément à la limite d'exposition FCC

et ISED RF. (0 mm de distance de la tête/ du corps humain (limite de 1,6 W/kg@ 1 g das) et des extrémités (limite de 4,0 W/kg@ 10 g das)).

REMARQUE : LE FABRICANT N'EST PAS RESPONSABLE DES INTERFÉRENCES RADIOÉLECTRIQUES CAUSÉES PAR DES MODIFICATIONS NON AUTORISÉES APPORTÉES À CET APPAREIL. DE TELLES MODIFICATIONS POURRAIENT ANNULER L'AUTORISATION ACCORDÉE À L'UTILISATEUR DE FAIRE FONCTIONNER L'APPAREIL.

AVERTISSEMENTS

[Pour les produits ayant la fonction sans fil utilisant des bandes de fréquences de 5 GHz]

- i. les dispositifs fonctionnant dans la bande de 5 150 à 5 250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux;

- ii. pour les dispositifs munis d'antennes amovibles, le gain maximal d'antenne permis pour les dispositifs utilisant les bandes de 5 250 à 5 350 MHz et de 5 470 à 5 725 MHz doit être conforme à la limite de la p.i.r.e.;
- iii. pour les dispositifs munis d'antennes amovibles, le gain maximal d'antenne permis (pour les dispositifs utilisant la bande de 5 725 à 5 850 MHz) doit être conforme à la limite de la p.i.r.e. spécifiée, selon le cas;
- iv. [pour des dispositifs fonctionnant dans la bande de 5 250 à 5 350 MHz ayant une p.i.r.e. de plus de 200 mW], les types d'antennes (s'il y en a plusieurs), les numéros de modèle de l'antenne et les pires angles d'inclinaison nécessaires pour rester conforme à l'exigence de la p.i.r.e. applicable au masque d'élévation, énoncée à la CNR-247 section 6.2.2.3, doivent être clairement indiqués.

Les utilisateurs doivent également savoir que les radars de grande puissance sont attribués en tant qu'utilisateurs principaux (c'est-à-dire les utilisateurs prioritaires) des bandes de 5 250 à 5 350 MHz et de 5 650 à 5 850 MHz et que ces radars peuvent causer des interférences avec les appareils LE-LAN et/ou les endommager.

Uniquement au Canada (seulement un produit avec la batterie intégrée rechargeable)

Si le produit inclut une batterie rechargeable, celle-ci devrait être recyclée conformément aux normes de recyclage des batteries rechargeables.

Pour vous en débarrasser correctement, appelez 1.800.822.8837 ou visitez www.appelarecyclerc.ca.

LG Portable Bluetooth Speaker Limited Warranty - USA

ARBITRATION NOTICE: THIS LIMITED WARRANTY CONTAINS AN ARBITRATION PROVISION THAT REQUIRES YOU AND LG TO RESOLVE DISPUTES BY BINDING ARBITRATION INSTEAD OF IN COURT, UNLESS YOU CHOOSE TO OPT OUT. IN ARBITRATION, CLASS ACTIONS AND JURY TRIALS ARE NOT PERMITTED. PLEASE SEE THE SECTION TITLED "PROCEDURE FOR RESOLVING DISPUTES" BELOW.

Should your LG Portable **Bluetooth** Speaker ("Product") fail due to a defect in materials or workmanship under normal and proper use, during the warranty period set forth below, LG Electronics ("LG") will, at its option, repair or replace the Product. This limited warranty is valid only to the original purchaser of the Product and applies only when purchased lawfully and used within the United States including U.S. Territories.

WARRANTY PERIOD	HOW SERVICE IS HANDLED
PARTS & LABOR: One (1) Year from original retail purchase (internal, functional parts only).	For customer assistance, please contact LG Electronics: Call 1(800)243-0000 and select the appropriate option from the menu. Or visit our website at http://www.lg.com/us Or by mail: LG Electronics Customer Service P.O. Box 240007, Huntsville, AL 35813 ATTN: Customer Service The original sales invoice specifying the Product and date of purchase ("POP") is required to obtain warranty service.

- Replacement Products and parts are warranted for thirty (30) days or the remainder of your product's original warranty, whichever is longer.
- Replacement Products and parts may be new, reconditioned, refurbished, or otherwise factory remanufactured.
- Any replaced Product and/or parts will be the property of LG.

Disclaimer:

EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THE PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THE ABOVE LIMITED WARRANTY PERIOD. UNDER NO CIRCUMSTANCES SHALL LG OR ITS U.S. DISTRIBUTORS/DEALERS BE LIABLE FOR ANY INDIRECT, INCIDENTAL, CONSEQUENTIAL, SPECIAL OR PUNITIVE DAMAGES INCLUDING, WITHOUT LIMITATION, LOST GOODWILL, LOST REVENUES OR PROFITS, WORK STOPPAGE, IMPAIRMENT OF OTHER GOODS, COST OF REMOVAL AND REINSTALLATION OF THE PRODUCT, LOSS OF USE, OR ANY OTHER DAMAGES WHETHER BASED IN CONTRACT, TORT, OR OTHERWISE. LG'S TOTAL LIABILITY, IF ANY, SHALL NOT EXCEED THE PURCHASE PRICE PAID BY THE CUSTOMER FOR THE PRODUCT.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE EXCLUSIONS OR LIMITATIONS MAY NOT APPLY TO YOU. THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE.

THIS LIMITED WARRANTY DOES NOT COVER:

- Service trips to deliver, pick up, install, educate on how to operate, correct wiring or for unauthorized repairs.
- Damage to or failure of the Product to perform during power failures, interruptions, or inadequate electrical service.
- Damage or failure resulting from operating or using the Product in any way contrary to the instructions, for other than the Product's intended purpose, or in conditions contrary to those recommended or outlined in the Product's Owner's Manual.
- Damage or failure, loss, or personal injury due to misuse, abuse, negligence, improper maintenance or storage, or to acts of nature or other causes beyond LG's control, including, but not limited to, pest or vermin, lightning strike, wind, fire, power surges, water damage, flood, or other environmental causes.
- Damage or failure resulting from improper installation, repair, maintenance, or foreign objects placed in or connected to the Product including use of parts not approved or specified by LG.
- Damage or failure caused by unauthorized modification, alteration, adjustment of user controls, calibration, accessories or separate system components, or due to use with incompatible mobile devices.
- Damage or failure caused by reception problems due to inadequate wireless connections, interference with signals, or computer software.
- Damage or failure caused by incorrect electrical current, voltage, components, or consumable cleaning products that are not approved by LG.
- Damage or failure caused by transportation and/or handling, including scratches, dents, chips, and/or other damage to the finish of your Product, unless such damage results from defects in materials or workmanship, and is reported within one (1) week of purchase or delivery.
- Damage or failure arising from the use of accessories and software not approved or specified by LG.

- Damage or failure of the Product arising from use outside normal and usual, single-family household use (e.g., commercial use or industrial use, etc.).
- Products sold "AS IS," "With All Faults," or with a similar disclaimer.
- Any Product with original serial numbers that have been removed, altered, or cannot be readily determined.
- Increases in utility costs and additional utility expenses.
- Any consumable parts such as batteries.

The cost of repair or replacement under the above excluded circumstances shall be borne by you.

PROCEDURE FOR RESOLVING DISPUTES:

ALL DISPUTES BETWEEN YOU AND LG ARISING OUT OF OR RELATING IN ANY WAY TO THIS LIMITED WARRANTY OR THE PRODUCT SHALL BE RESOLVED EXCLUSIVELY THROUGH BINDING ARBITRATION, AND NOT IN A COURT OF GENERAL JURISDICTION. BINDING ARBITRATION MEANS THAT YOU AND LG ARE EACH WAIVING THE RIGHT TO A JURY TRIAL AND TO BRING OR PARTICIPATE IN A CLASS ACTION.

Definitions. For the purposes of this section, references to "LG" mean LG Electronics U.S.A., Inc., its parents, subsidiaries and affiliates, and each of their officers, directors, employees, agents, beneficiaries, predecessors in interest, successors, assigns and suppliers; references to "dispute" or "claim" shall include any dispute, claim or controversy of any kind whatsoever (whether based in contract, tort, statute, regulation, ordinance, fraud, misrepresentation or any other legal or equitable theory) arising out of or relating in any way to the sale, condition or performance of the product or this Limited Warranty.

Notice of Dispute. In the event you intend to commence an arbitration proceeding, you must first notify LG in writing at least 30 days in advance of initiating the arbitration by sending a letter to LG at LG Electronics, USA, Inc. Attn: Legal Department- Arbitration 111 Sylvan Avenue, Englewood Cliffs, NJ 07632, USA. You and LG agree to engage in good faith discussions in an attempt to amicably resolve your claim. The notice must provide your name, address, and telephone number; identify the product that is the subject of the claim; and describe the nature of the claim and the relief being sought. If you and LG are unable to resolve the dispute within 30 days, either party may proceed to file a claim for arbitration.

Agreement to Binding Arbitration and Class Action Waiver. Upon failure to resolve the dispute during the 30 day period after sending written notice to LG, you and LG agree to resolve any claims between us only by binding arbitration on an individual basis, unless you opt out as provided below. Any dispute between you and LG shall not be combined or consolidated with a dispute involving any other person's or entity's product or claim. More specifically, without limitation of the foregoing, any dispute between you and LG shall not under any circumstances proceed as part of a class or representative action. Instead of arbitration, either party may bring an individual action in small claims court, but that small claims court action may not be brought on a class or representative basis.

Arbitration Rules and Procedures. To begin arbitration of a claim, either you or LG must make a written demand for arbitration. The arbitration will be administered by the American Arbitration Association ("AAA") and will be conducted before a single arbitrator under the AAA's Consumer Arbitration Rules that are in effect at the time the arbitration is initiated (referred to as the "AAA Rules") and under the procedures set forth in this section. The AAA Rules are available online at www.adr.org/consumer. Send a copy of your written demand for arbitration, as well as a copy of this provision, to the AAA in the manner described in the AAA Rules. You must also send a copy of your written demand to LG at LG Electronics, USA, Inc. Attn: Legal Department- Arbitration 111 Sylvan Avenue, Englewood Cliffs, NJ 07632, USA. If there is a conflict between the AAA Rules and the rules set forth in this section, the rules set forth in this section will govern. This arbitration provision is governed by the Federal Arbitration Act. Judgment may be entered on the arbitrator's award in any court of competent jurisdiction. All issues are for the arbitrator to decide, except that issues relating to the scope and enforceability of the arbitration provision and to the arbitrability of the dispute are for the court to decide. The arbitrator is bound by the terms of this provision.

Governing Law. The law of the state of your residence shall govern this Limited Warranty and any disputes between us except to the extent that such law is preempted by or inconsistent with applicable federal law.

Fees/Costs. You do not need to pay any fee to begin an arbitration. Upon receipt of your written demand for arbitration, LG will promptly pay all arbitration filing fees to the AAA unless you seek more than \$25,000 in damages, in which case the payment of these fees will be governed by the AAA Rules. Except as otherwise provided for herein, LG will pay all AAA filing, administration and arbitrator fees for any arbitration initiated in accordance with the AAA Rules and this arbitration provision. If you prevail in the arbitration, LG will pay your attorneys' fees and expenses as long as they are reasonable, by considering factors including, but not limited to, the purchase amount and claim amount. Notwithstanding the foregoing, if applicable law allows for an award of reasonable attorneys' fees and expenses, an arbitrator can award them to the same extent that a court would. If the arbitrator finds either the substance of your claim or the relief sought in the demand is frivolous or brought for an improper purpose (as measured by the standards set forth in Federal Rule of Civil Procedure 11(b)), then the payment of all arbitration fees will be governed by the AAA Rules. In such a situation, you agree to reimburse LG for all monies previously disbursed by it that are otherwise your obligation to pay under the AAA Rules. Except as otherwise provided for, LG waives any rights it may have to seek attorneys' fees and expenses from you if LG prevails in the arbitration.

Hearings and Location. If your claim is for \$25,000 or less, you may choose to have the arbitration conducted solely on the basis of (1) documents submitted to the arbitrator, (2) through a telephonic hearing, or (3) by an in-person hearing as established by the AAA Rules. If your claim exceeds \$25,000, the right to a hearing will be determined by the AAA Rules. Any in-person arbitration hearings will be held at a location within the federal judicial district in which you reside unless we both agree to another location or we agree to a telephonic arbitration.

Opt Out. You may opt out of this dispute resolution procedure. If you opt out, neither you nor LG can require the other to participate in an arbitration proceeding. To opt out, you must send notice to LG no later than 30 calendar days from the date of the first consumer purchaser's purchase of the product by either: (i) sending an e-mail to optout@lge.com, with the subject line: "Arbitration Opt Out" or (ii) calling 800- 980- 2973. You must include in the opt out e-mail or provide by telephone: (a) your name and address; (b) the date on which the product was purchased; (c) the product model name or model number; and (d) the serial number (the serial number can be found (i) on the product; or (ii) online by accessing <https://www.lg.com/us/support/repair-service/schedule-repair-continued> and clicking on "Find My Model & Serial Number").

You may only opt out of the dispute resolution procedure in the manner described above (that is, by e-mail or telephone); no other form of notice will be effective to opt out of this dispute resolution procedure. Opting out of this dispute resolution procedure will not affect the coverage of the Limited Warranty in any way, and you will continue to enjoy the full benefits of the Limited Warranty. If you keep this product and do not opt out, then you accept all terms and conditions of the arbitration provision described above.



LG Customer Information Center
Centre d'information à la clientèle de LG

1-800-243-0000	USA, Consumer
1-888-865-3026	USA, Commercial
1-888-542-2623	CANADA

Register your product Online!
Enregistrez votre produit en ligne!

www.lg.com



Printed in China