

Test Setup photographs

EUT Position: X-axis & Receiving Antenna: Hor.




Test Setup photographs

EUT Position: Y-axis & Receiving Antenna: Hor.



Test Setup photographs

EUT Position: Z-axis & Receiving Antenna: Hor.

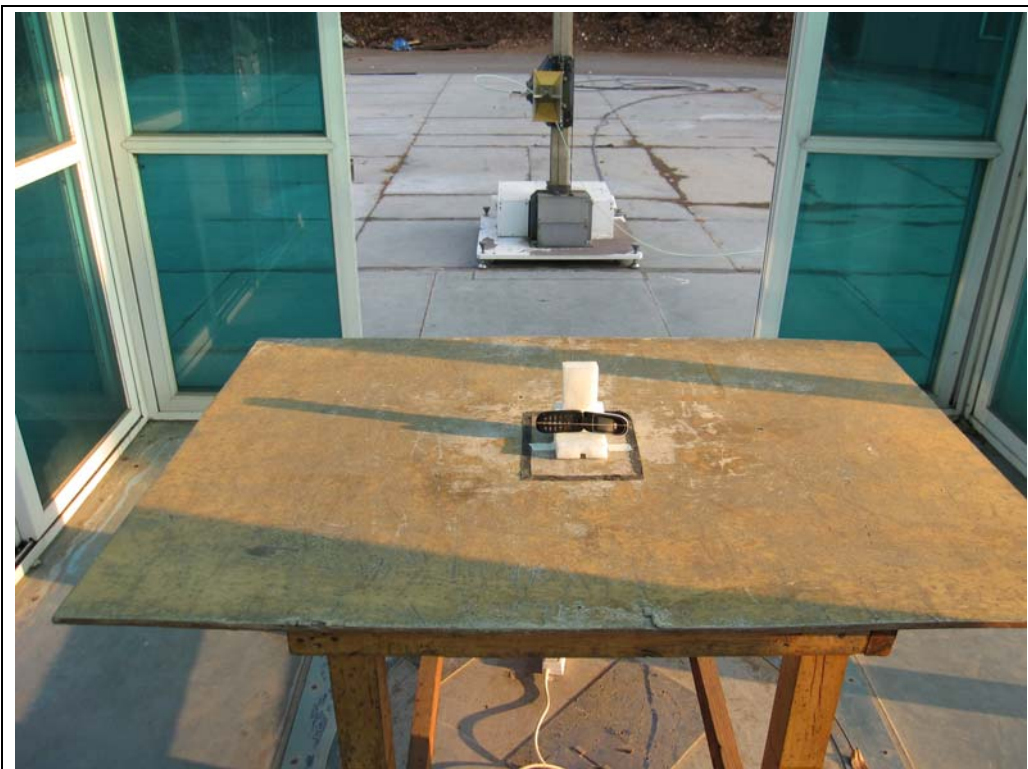


Test Setup photographs

EUT Position: X-axis & Receiving Antenna: Ver.



Test Setup photographs

EUT Position: Y-axis & Receiving Antenna: Ver.

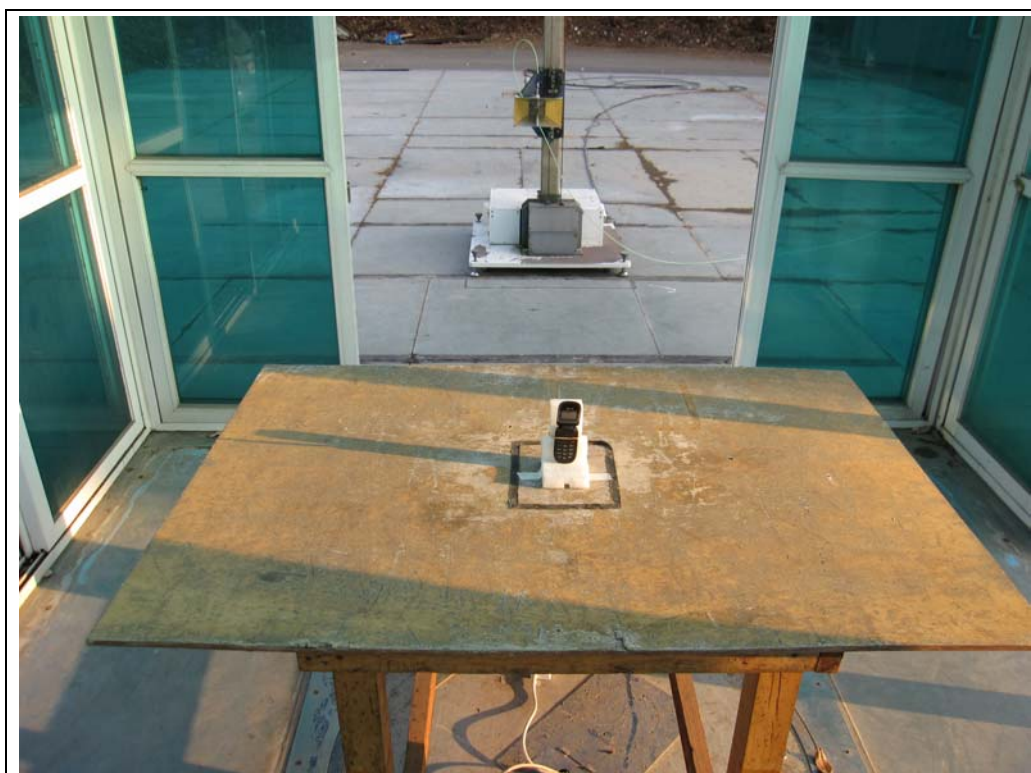

Test Setup photographs

EUT Position: Z-axis & Receiving Antenna: Ver.

