

Test Setup photographs(PCE)

EUT Position: X-axis

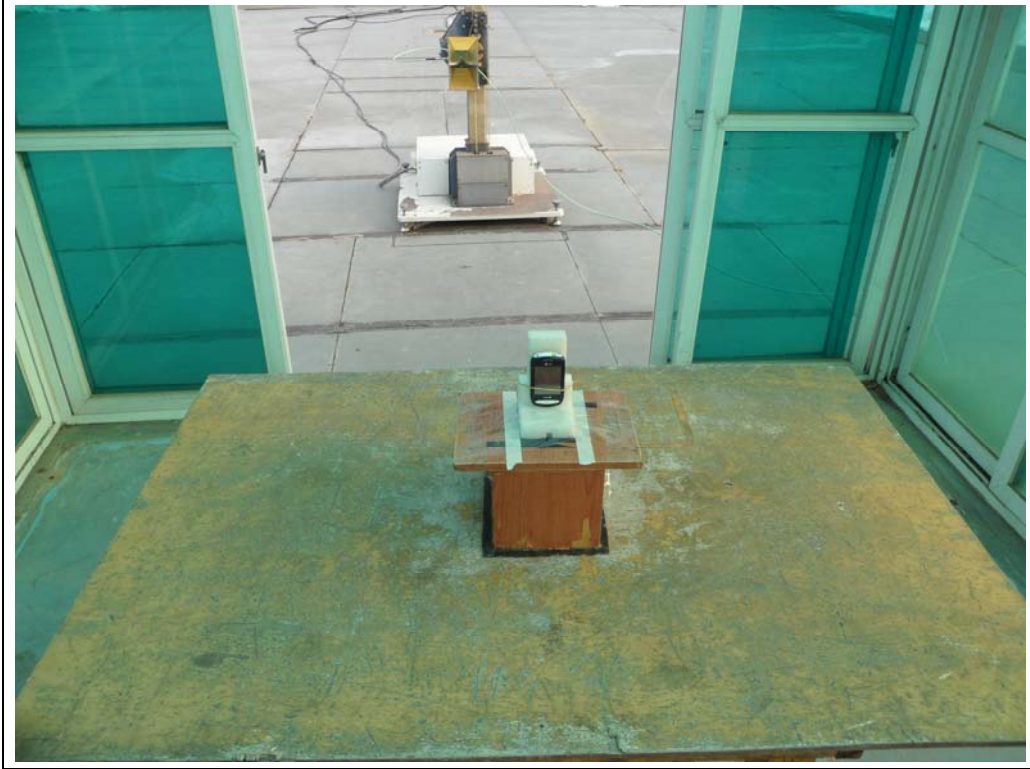

Test Setup photographs(PCE)

EUT Position: Y-axis



Test Setup photographs(PCE)

EUT Position: Z-axis




Test Setup photographs(DSS)

EUT Position: X-axis




Test Setup photographs(DSS)

EUT Position: Y-axis

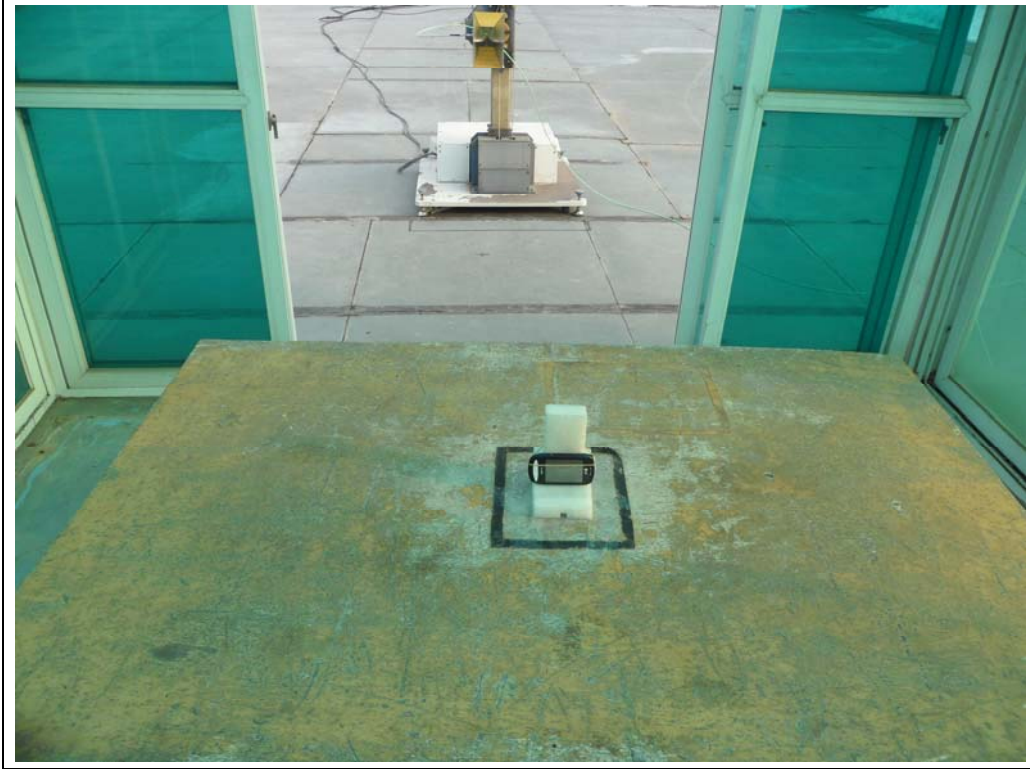

Test Setup photographs(DSS)

EUT Position: Z-axis

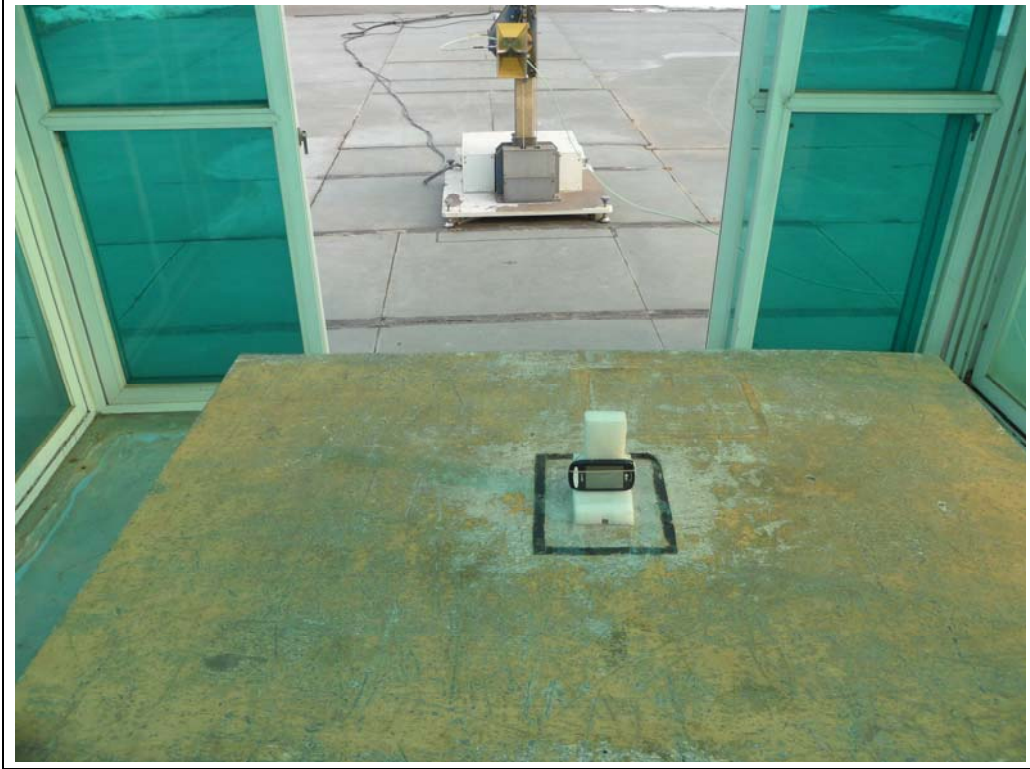

Test Setup photographs(DSS)

