

EUT Internal Photos

Figure 22
Internal View (With Keyboard)



Figure 23
Internal View

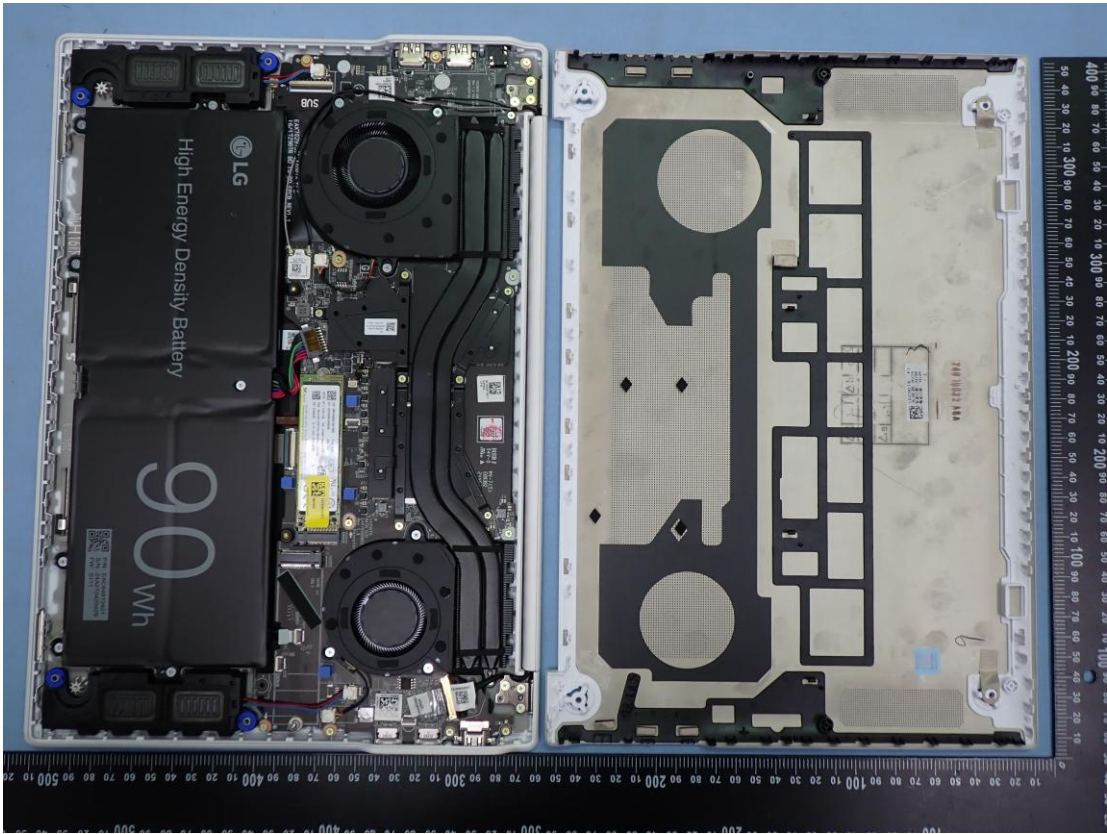


Figure 24
Battery, Front View



Figure 25
Battery, Back View



Figure 26
SUB Board, Front View

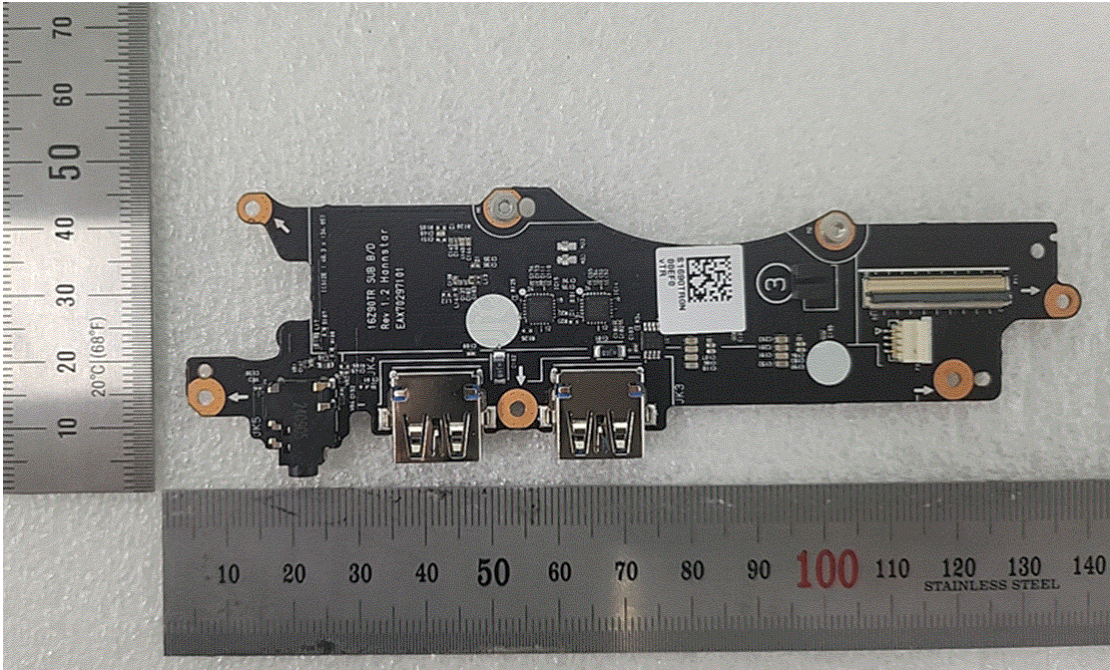


Figure 27
SUB Board, Back View

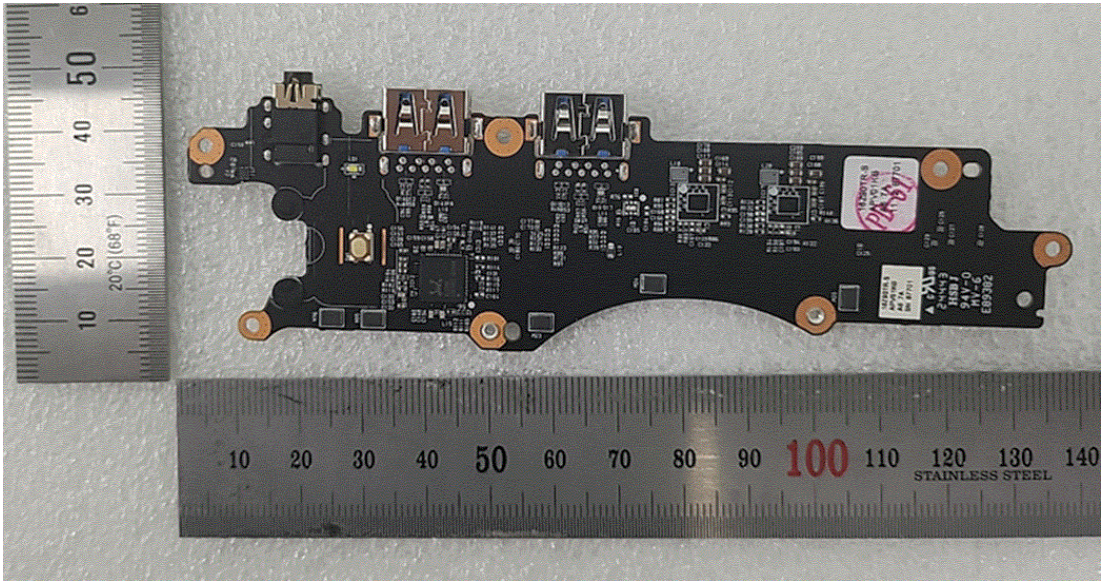


Figure 28
Main Board, Front View (WLAN Combo Card Location)

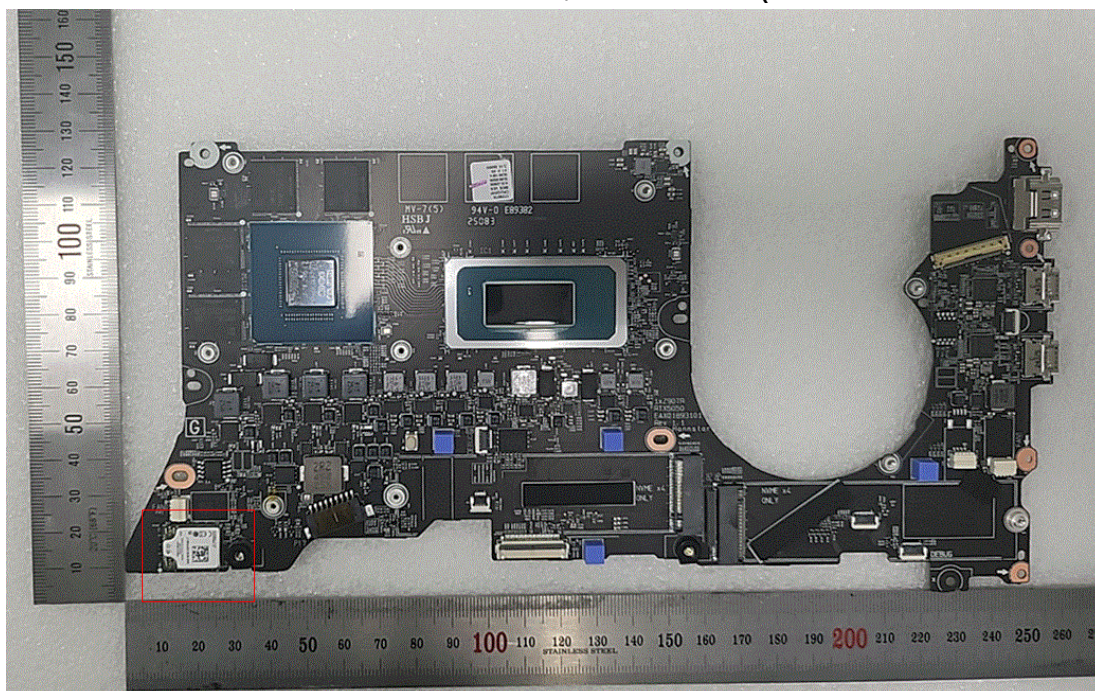


Figure 29
Main Board, Back View

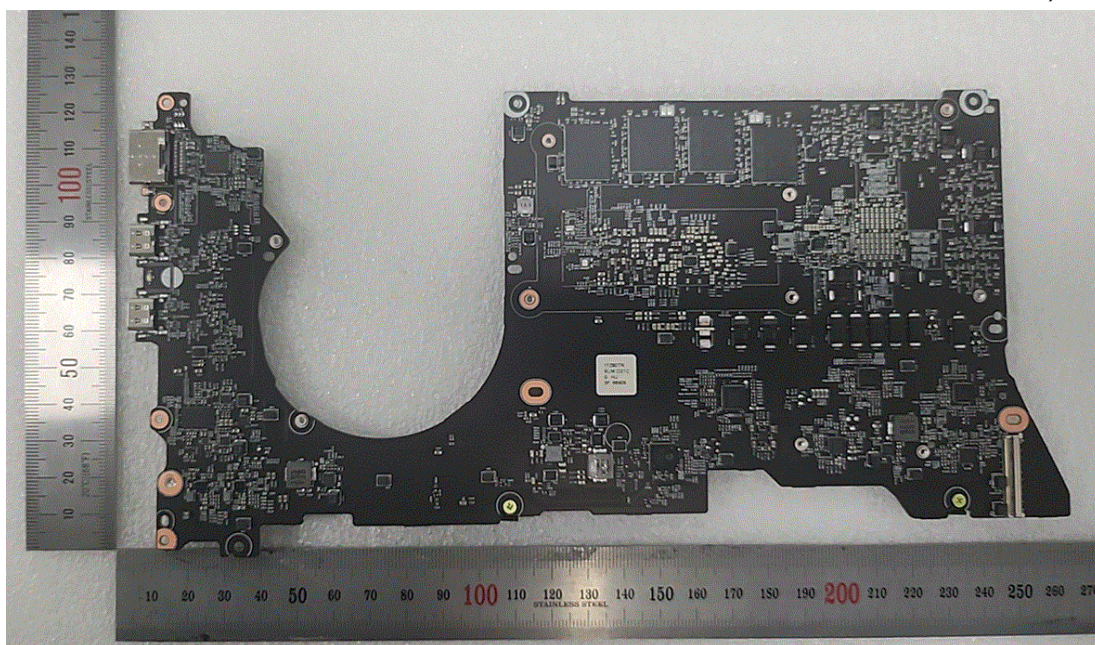


Figure 30
WLAN Combo Card View

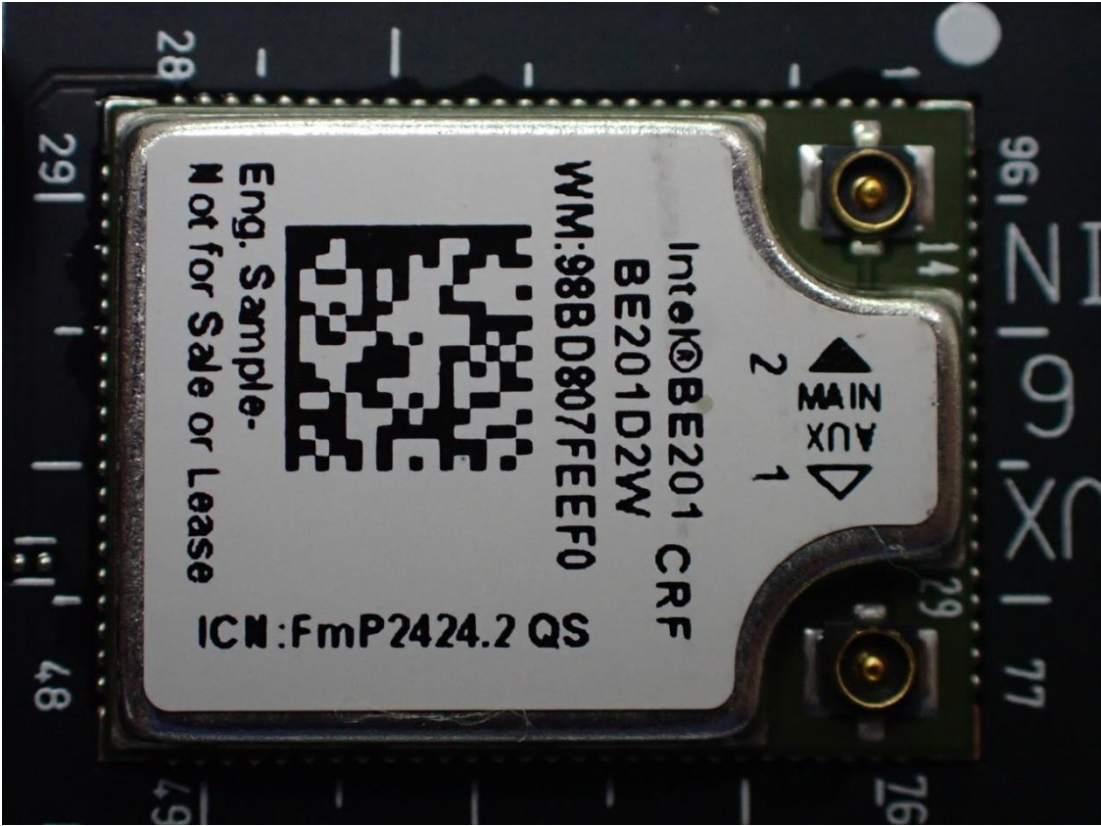


Figure 31
WLAN Combo Card, Without Shield and Back View

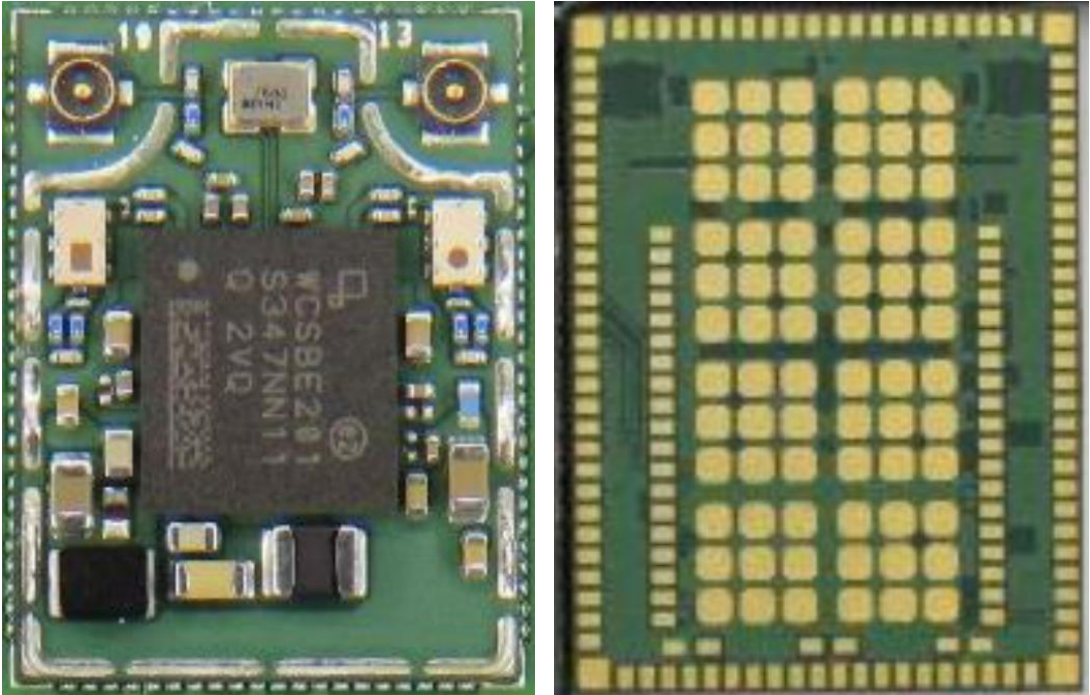


Figure 32
WLAN Combo Antenna Position

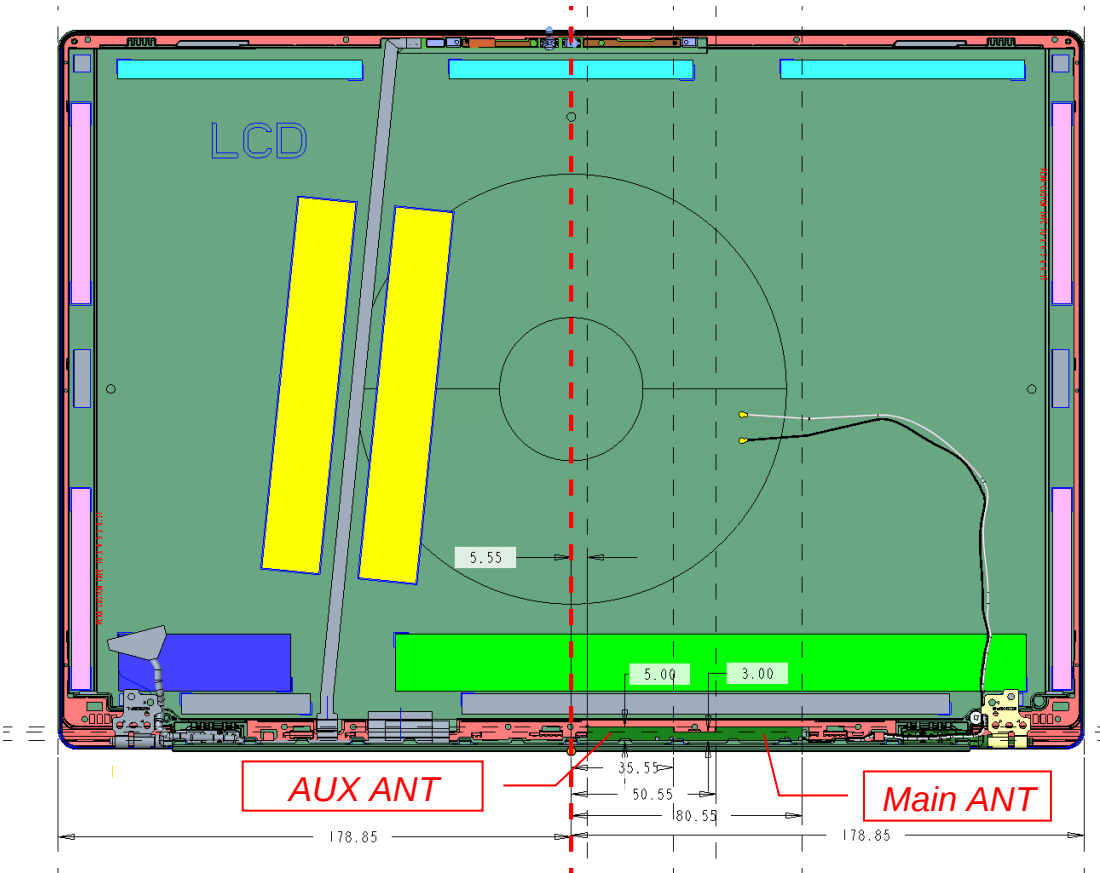


Figure 33
WLAN Combo Antenna View

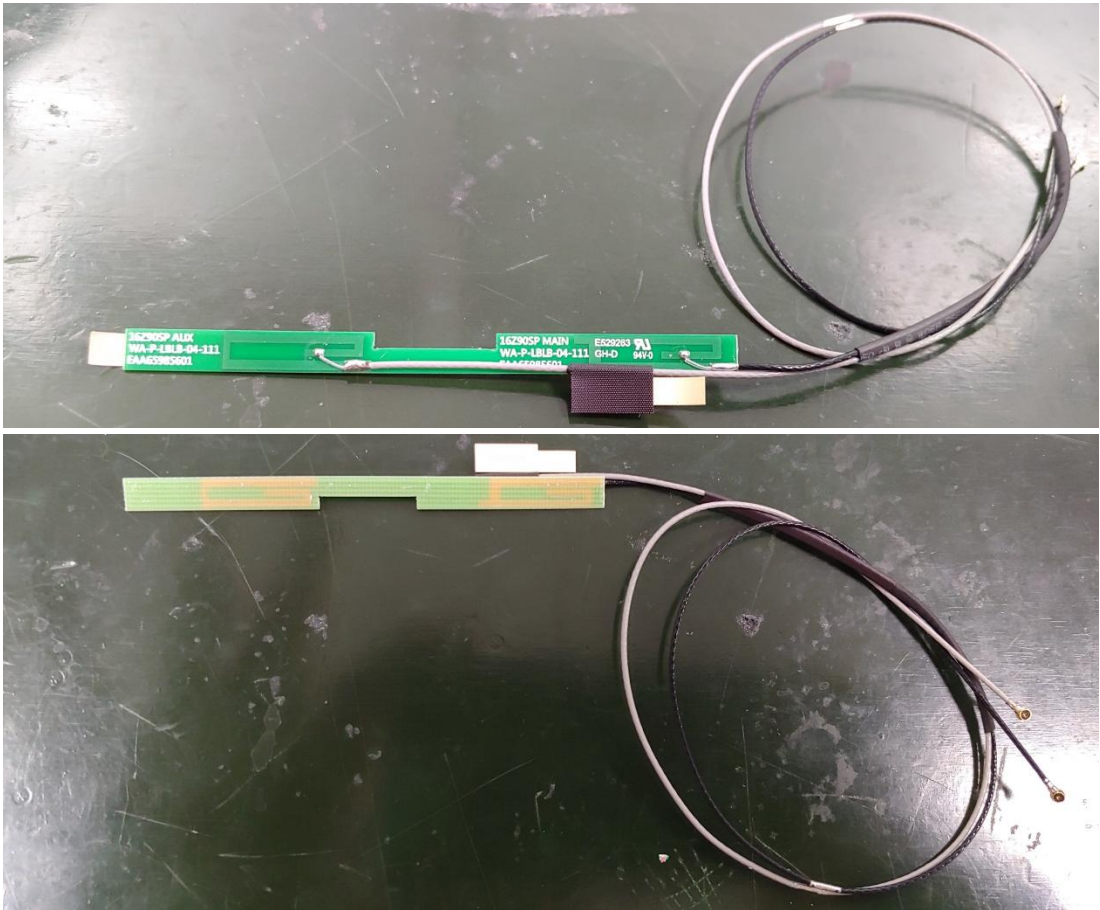


Figure 34
ATNA60CL06-0, LCD Panel, Front View

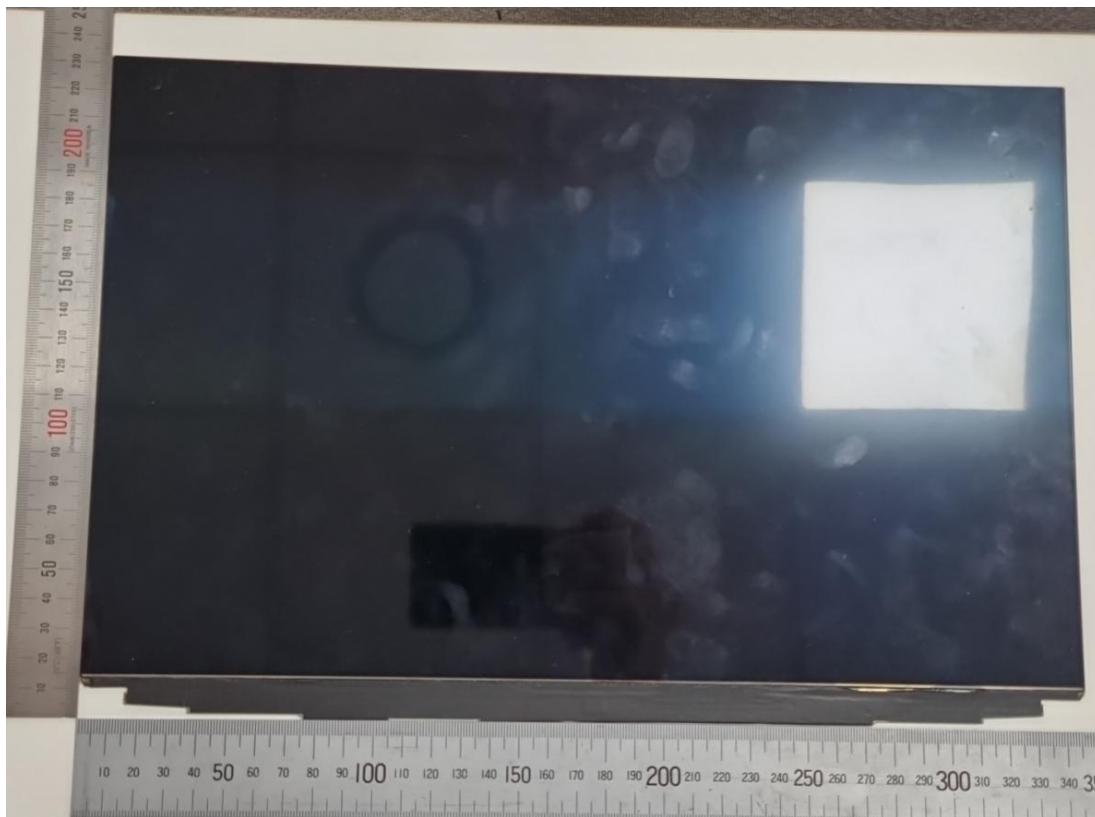


Figure 35
ATNA60CL06-0, LCD Panel, Back View

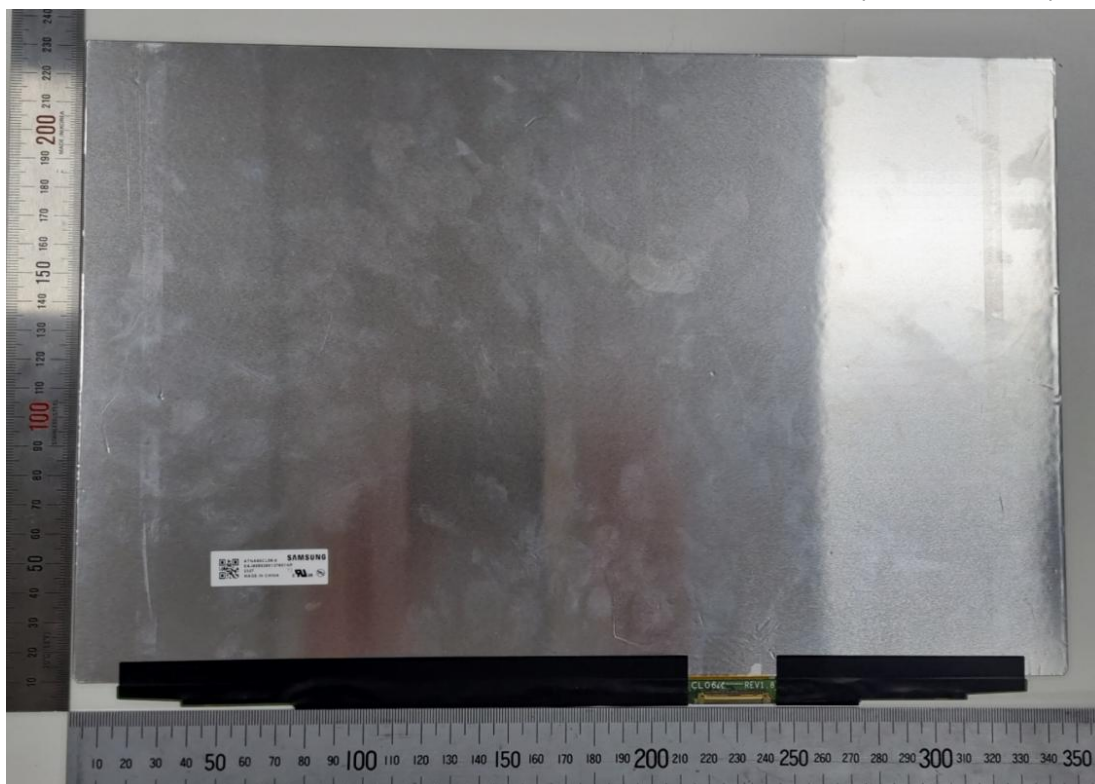


Figure 36
ATNA60CL06-0, LCD Panel, Label View



Figure 37
LP160WQ2, LCD Panel, Front View



Figure 38
LP160WQ2, LCD Panel, Back View

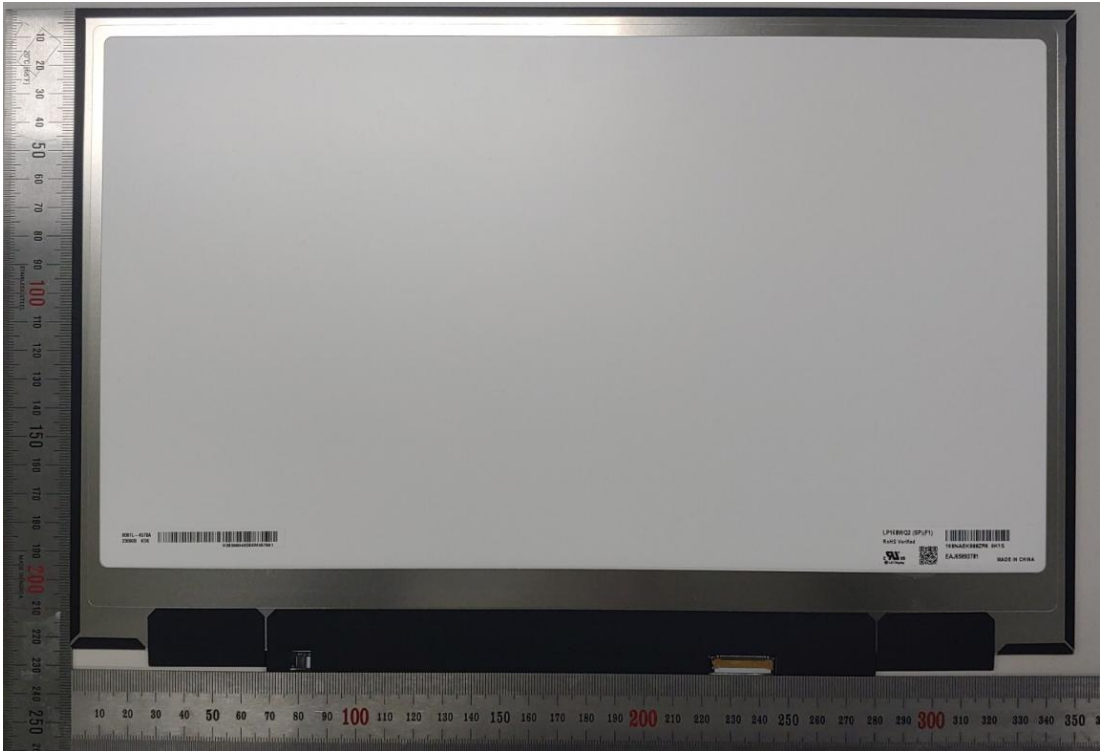


Figure 39
LP160WQ2, LCD Panel, Label View

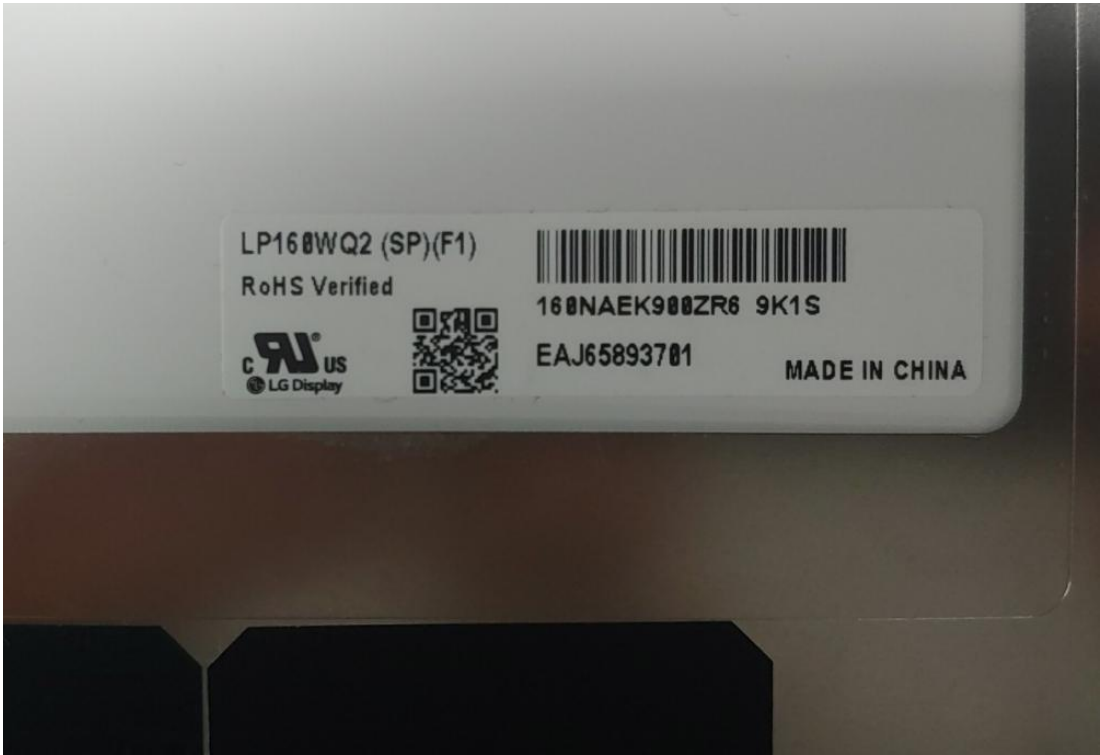


Figure 40
CPU View

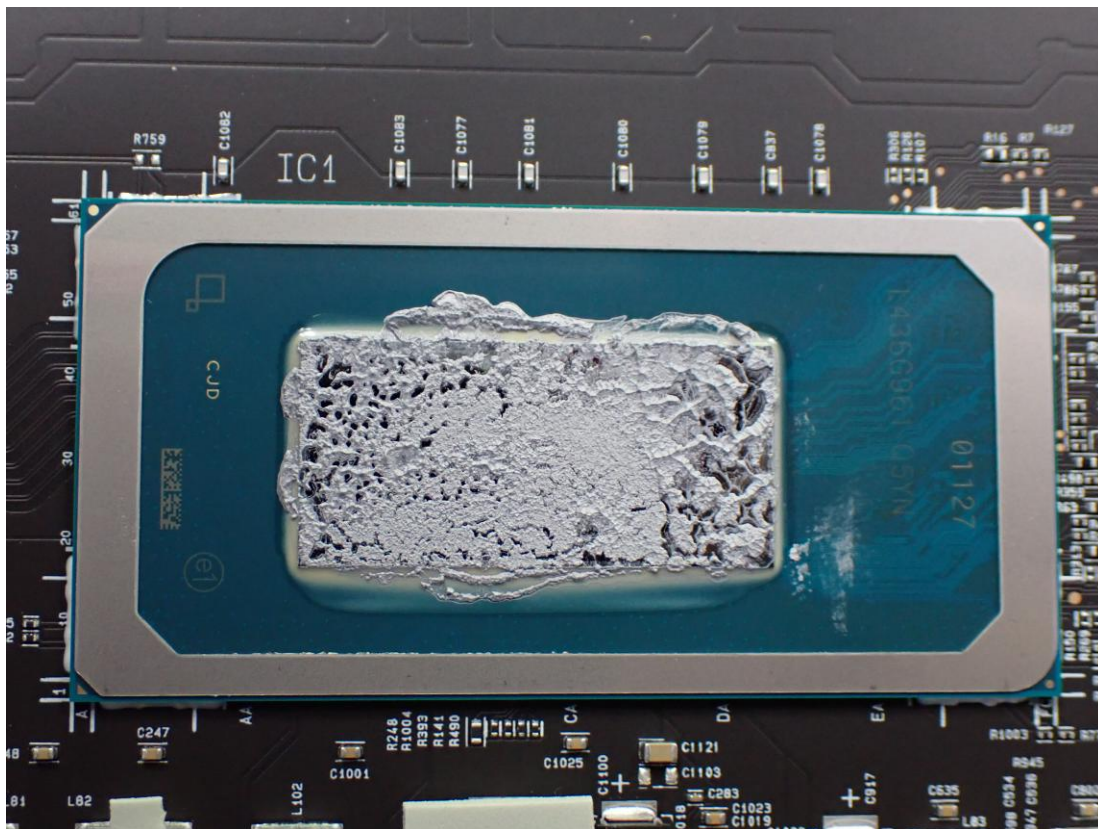


Figure 41
RAM View

