



DLS3397-Important Notes

DLS3397-Placement of the Speaker

DLS3397-Location and Description of Controls

DLS3397-Power Supply

DLS3397-Bluetooth Function

DIGITAL LAB

Splash Proof Portable BT Speaker
Instruction Manual

Please read before using the unit.
Model : DLS3397

Avoid installing this unit in places exposed to direct sunlight or close to heat radiating appliances such as electric heaters, on top of other stereo equipment that radiates too much heat, places lacking ventilation or dusty areas, places subject to constant vibration and/ or humid or moist areas.

FCC IMPORTANT
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device does not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

INDUSTRY CANADA NOTICE
This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:
(1) This device may not cause interference, and
(2) This device must accept any interference, including interference that may cause undesired operation of the device.

CAN ICES-3 (B)/ NMB-3(B)

This speaker is supplied with a strap to hang the speaker from the shower pipe, faucet, or a hook on the back of the bathroom door.

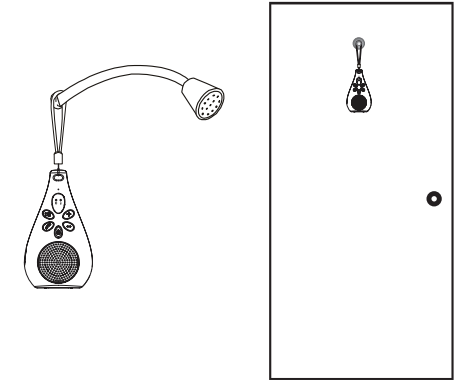

CAUTION:
DO NOT HANG THE SPEAKER FROM A SHOWER PIPE THAT IS SLOPING DOWNWARD. THE SPEAKER COULD SLIDE FORWARD AND FALL OFF THE PIPE, RESULTING IN PERSONAL INJURY, DAMAGE TO THE SPEAKER, OR BOTH. IF YOU USE THE STRAP TO HANG THE SPEAKER MAKE SURE THAT IT IS IN A SECURE LOCATION AND THAT IT WILL NOT MOVE.

Note: Although this speaker is water resistant it should not be placed in the direct path of the shower stream.



DLS3397-Location and Description of Controls

Front view

Back view

1. Microphone

2. Low battery LED indicator

3. Bluetooth LED indicator

4. Bluetooth pairing, Play/Pause

5. Receive call/ Transfer call/ Redial call/ End call

6. Turn unit On/Off

7. Adjust volume

8. Speaker

9. Battery compartment door

DLS3397-Power Supply

Using the batteries (not provided)
1. Open the battery compartment door.
2. Insert 3 AA/UM-3/R6 size batteries into the compartment. Make sure to match their polarities (+/-) to the markings inside the compartment.
3. Close the battery compartment door.

Battery Precautions
The precautions below should be followed when using batteries in this device:

1. Use only the size and type of batteries specified.
2. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline and Carbon Zinc) or old batteries with fresh ones.
4. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge batteries not intended to be recharged, they can overheat and rupture (Follow battery manufacturer's directions).
6. Rechargeable batteries are to be removed from the product before being charged.
7. Rechargeable batteries are only to be charged under adult supervision.
8. Exhausted batteries are to be removed from the product.
9. The supply terminals are not be short-circuited.
10. Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Note:
When the battery is low, the low battery LED indicator will fast blink 3 times accompanying a triple beep every one minute. The unit will turn off automatically when the battery is too low to work.

TURN ON/OFF THE UNIT
Press to turn on/off the unit.

DLS3397-Bluetooth Function

Paring and linking
1. Place the Bluetooth-enabled device for pairing within 10 meters (30 feet) from the unit.
2. Press to turn ON the unit. The Bluetooth indicator starts rapid blinking, which indicates that the unit is in pairing mode.
3. Set the Bluetooth enabled device (e.g. mobile phone) to search for other available Bluetooth devices within a range of 10 meters (30 feet) until it recognizes "SHOWER SPEAKER". (Refer to the user manual of the device to be connected for detailed operations.)

Note: If the pairing attempt fails or times out after 3 minutes, the unit will exit pairing mode. You will hear a beep. The Bluetooth indicator changes to slow blinking. Press and hold until the Bluetooth indicator starts rapid blinking to enter pairing mode again.
4. Select "SHOWER SPEAKER" to start pairing. Enter 0000 when prompted for a password. Wait for completion of the pairing until you hear a beep from the unit.

Note:

- The Bluetooth indicator will change to slow blinking after successfully paired.
- If you have made Bluetooth connectivity before, a list of the previous search results is displayed. Select "SHOWER SPEAKER" and confirm.
- On some devices such as computers, once paired you must select the unit from the Bluetooth menu and choose "Use as Audio Device (stereo)" or similar.
- Pairing remains intact when the unit and/or your Bluetooth device is taken out of communication range. An active connection will be re-established when your Bluetooth device returns within range.
- When the unit is turned on again, it will automatically try to reconnect with the most recently paired Bluetooth device.

5. Turn off the Bluetooth function of your Bluetooth enabled device to do disconnection.

Tips: If you want to connect your Bluetooth speaker to other Bluetooth audio device, you need to disconnect current device first and follow above steps to make a new connection.

DLS3397

DLS3397-Bluetooth Function

DLS3397-Trouble Shooting

DLS3397-Specifications

DLS3397-Limited Warranty

DLS3397-Limited Warranty

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Starlight Marketing (HK) Ltd is under license. Other trademarks and trade names are those of their respective owners.

Bluetooth audio function
This Bluetooth speaker supports Bluetooth audio function. You can play the audio file in your Bluetooth enabled device (e.g. mobile phone) via this unit. Make sure the Bluetooth connection between the unit and the Bluetooth device is active. Start music playback from your Bluetooth device. Press on unit to pause playback, press again to resume. Slowly adjust both volume controls on the unit and the Bluetooth device. The Bluetooth indicator remains on during music streaming mode.

Receiving / dialing a call through the unit
This unit is equipped with a built-in microphone (located on front panel and near the LED lens) which allows you to make or end calls of a connected mobile phone through this unit. Make sure your Bluetooth-enabled mobile phone is paired with the unit. When there is an incoming call to the connected mobile phone, you will hear an incoming call alert tone from the unit.

1. Press on unit to answer the incoming call.
2. Press again to end call.
3. To reject the incoming call, press and hold .
4. To transfer the sound between the mobile phone and the unit, press and hold during a call.
5. To redial the last number retained in the memory of the mobile phone, press twice.

Note: Re-dialing function is unavailable if there is no any dial record in your mobile phone.

Notes:

- This unit will not operate or may operate improperly with some Bluetooth mobile phones / audio players.
- There are many mobile phones in the market. We cannot guarantee the compatibility of all mobile phones together with the unit.
- If you found the conversation is not clear, try to move closer to the microphone (located on front panel and near the LED lens).

Check the following guide for the possible cause of a problem before contacting service.

Problem	Solution
The unit turns off automatically.	Batteries are low. Replace with new batteries.
The Bluetooth device cannot pair or connect with the unit.	• You have not activated the Bluetooth function of your device. Refer to the user manual of your device to activate Bluetooth function. • The unit is not in paring mode. Press and hold until the Bluetooth indicator blinks fast. • The unit is already connected with another Bluetooth device, Disconnect that device and then try again.
The unit does not react when buttons are pressed.	Turn the unit Off and then On again.
Music playback is not available on the unit even after successful Bluetooth connection.	Ensure that your Bluetooth audio source device can support the A2DP Bluetooth profile.

General
Unit Dimension: L9 x W6 x H15.6 cm /L3.54 x W2.36 x H6.14 inch
Weight: 0.17kg / 0.37lbs

Power Supply
DC 4.5V 3 x AA/ UM-3/ R6 batteries (not included)

Operating time:
Approx. 14 hours at max. volume with new Alkaline batteries

Bluetooth:
Bluetooth version: V4.0

Working distance:
Up to 10 meters measured in open space (Wall and structures may affect range of device).

Design and specification are subject to change without notice.

We at Cosmo believe you will be pleased with your new Product. Please read this Warranty carefully. Cosmo warrants this product to be free from manufacturing defects including original parts and workmanship for a period of one year from the date of original purchase in and if used in Canada. Should you find your unit is not operating properly during the terms of full coverage of this warranty (one year), Cosmo will provide one of the following options (at Cosmo's discretion), providing the manufacturing defect is verified along with the proof of purchase.
Repair service for 1 year from the date of original purchase at no charge for labour and parts. Replacement of your defective unit with either a new, refurbished, or equivalent model at no charge for one year from the date of original purchase. Remote Controls and Accessories are covered for 90 Days from original date of purchase.

CUSTOMER OBLIGATIONS
This warranty applies to the product from the original date of purchase at retail. Therefore, the owner must provide a copy of the original, dated bill of sale. No warranty service will be performed without a bill of sale. Transportation to and from the service depot is the responsibility of the owner. This warranty is void if the product is:
A) Damaged through negligence, abuse, misuse, accident or acts of God.
B) Used in commercial applications or rentals.
C) Modified or repaired by anyone other than Cosmo or their expressly authorized representative.
D) Damage resulting from the improper connection to equipment of other manufacturers.
This warranty does not cover:
A) Cost incurred in the shipping of the product to and from the Cosmo authorized repair facility listed.
B) Damage or improper operation caused by the failure to follow the operating instructions provided with the product.
C) Routine adjustments to the product which can be performed by the customer as outlined in the owner's manual.
D) Damage to compact disc, or audio tape.
E) Signal reception problems caused by external factors.
F) Products not purchased in Canada.
G) Damage to the products used outside Canada.

THIS WARRANTY IS NON-TRANSFERABLE AND APPLIES SOLELY TO THE ORIGINAL PURCHASER AND DOES NOT EXTEND TO SUBSEQUENT OWNERS OF THE PRODUCT. ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD OF THE EXPRESSED WARRANTY AS PROVIDED HEREIN BEGINNING WITH THE DATE OF THE ORIGINAL PURCHASE AT RETAIL AND NO WARRANTIES, WHETHER EXPRESSED OR IMPLIED SHALL APPLY TO THE PRODUCT THEREAFTER. COSMO MAKES NO WARRANTY AS TO THE FITNESS OF THE PRODUCT FOR ANY PARTICULAR PURPOSE OR USE. THE EXTENT OF COSMO'S LIABILITY UNDER THIS LIMITED WARRANTY IS THE REPAIR OR REPLACEMENT PROVIDED ABOVE AT THE SOLE DISCRETION OF COSMO NO EVENT SHALL COSMO LIABILITY EXCEED THE PURCHASE PRICE PAID BY THE PRUCHASER. UNDER NO CIRCUMSTANCES SHALL COSMO BE LIABLE FOR ANY LOSS, DIRECT, INDIRECT, INCIDENTAL FORESEEN, UNFORESEEN, SPECIAL OR CONSEQUENTIAL DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE USE OF THIS PRODUCT.

THIS WARRANTY IS VALID ONLY IN CANADA. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. HOWEVER, YOU MAY HAVE OTHER RIGHTS WHICH MAY VARY FROM PROVINCE TO PROVINCE. SOME PROVINCES DO NOT ALLOW LIMITATIONS ON IMPLIED WARRANTIES OR EXCLUSION OF CONSEQUENTIAL DAMAGE, THEREFORE THESE RESTRICTIONS MAY NOT APPLY TO YOU.

Cosmo Communications Service
55 Travail Road Unit 2
Markham, Ontario
L3S 3J1
Toll Free 1-888-208-4108 Fax: (905) 209-0489
www.cosmocanada.ca



DLS3397-Fonction de Bluetooth

www.cosmocanada.ca