

 


Lantern Radio *FR3807DP*

INSTRUCTION MANUAL

Manual De Instrucciones

Mode D' Emploi

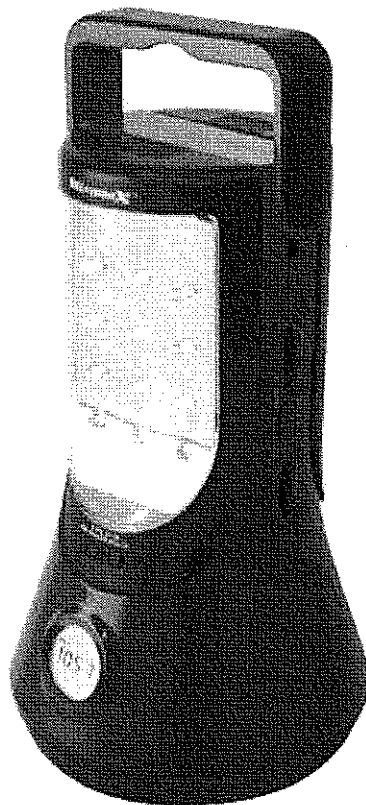

Warnings and Precautions

TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Any use of the controls or an adjustment to the procedures other than those specified herein may result in hazardous radiation.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.


To reduce the risk of electric shock, do not remove cover (or back). There are no user-serviceable parts inside. Please refer any servicing to qualified service personnel.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


Features

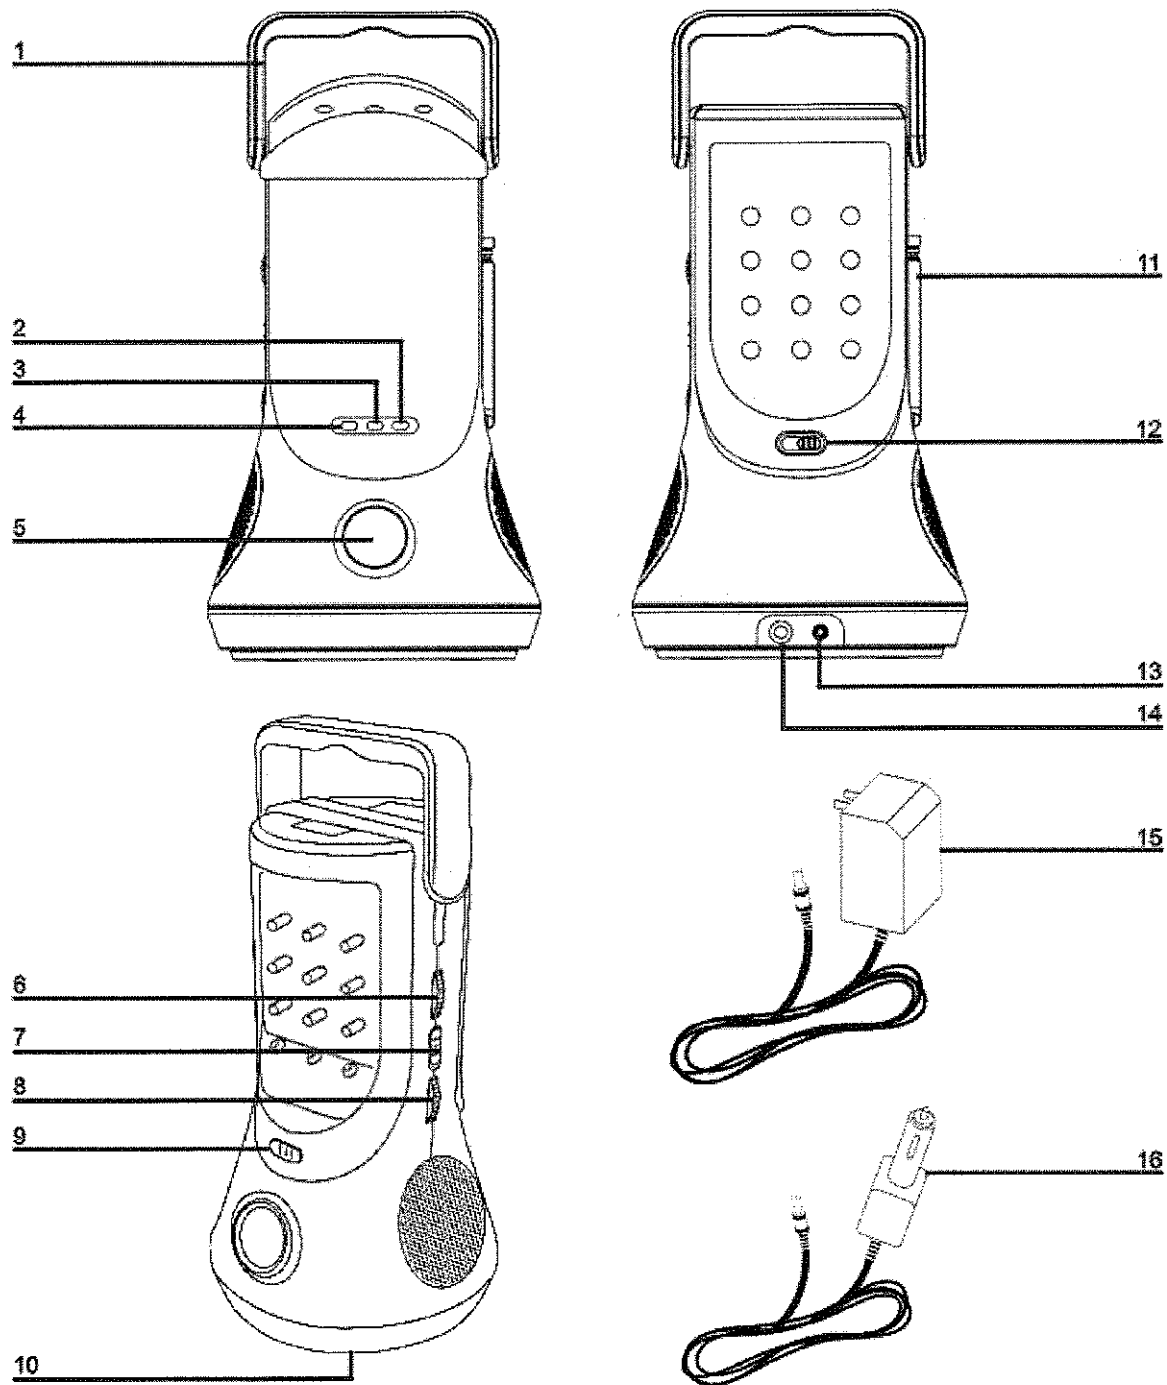

Features Defined

-
- 1 Carry Handle** Use the Carry Handle for transporting the player.
-
- 2 MIN** While holding the CLK ADJ button, press the MIN button to adjust the minute.
-
- 3 HR** While holding the CLK ADJ button, press the HR button to adjust the hour.
-
- 4 CLK ADJ** Press and hold the CLK ADJ, then press the HR and MIN buttons to adjust the clock.
-
- 5 LCD Display** View the Time, AM Indicator, PM Indicator, and Radio Frequency through this Liquid Crystal Display.
-
- 6 VOLUME/Power** Turn the VOLUME dial to power on the lantern radio, or to adjust the volume.
-
- 7 Line In/WB/AM/FM** Toggle between Line In, Weatherband Radio, AM, and FM stereo modes.
-
- 8 TUNING** Turn the TUNING dial to adjust the AM, FM, and Weatherband radio frequency.
-
- 9 OFF/4/8/12** Use this toggle switch to switch between 4, 8, or 12 LEDs.
-
- 10 Battery Compartment (6 - C Batteries)** The Battery Compartment allows the player to run off of DC Power (Batteries Not Included).
-
- 11 FM Antenna** The FM extendable antenna provides flexibility and range when adjusting the FM reception. An AM Antenna is built into the player.
-
- 12 OFF/4/8/12** Use this toggle switch to switch between 4, 8, or 12 LEDs.
-
- 13 DC In** Use the DC In to connect the player to a car lighter, or other DC power sources.
-
- 14 Line-In** Use the line-in jack to connect a digital audio device to the lantern radio.
-
- 15 AC Adapter (120V / 60 Hz)** The detachable AC Adapter provides power to the lantern radio.
-
- 16 Car Adapter** The detachable Car Adapter provides power to the lantern radio through a automobile's lighter port.
-

Special Features

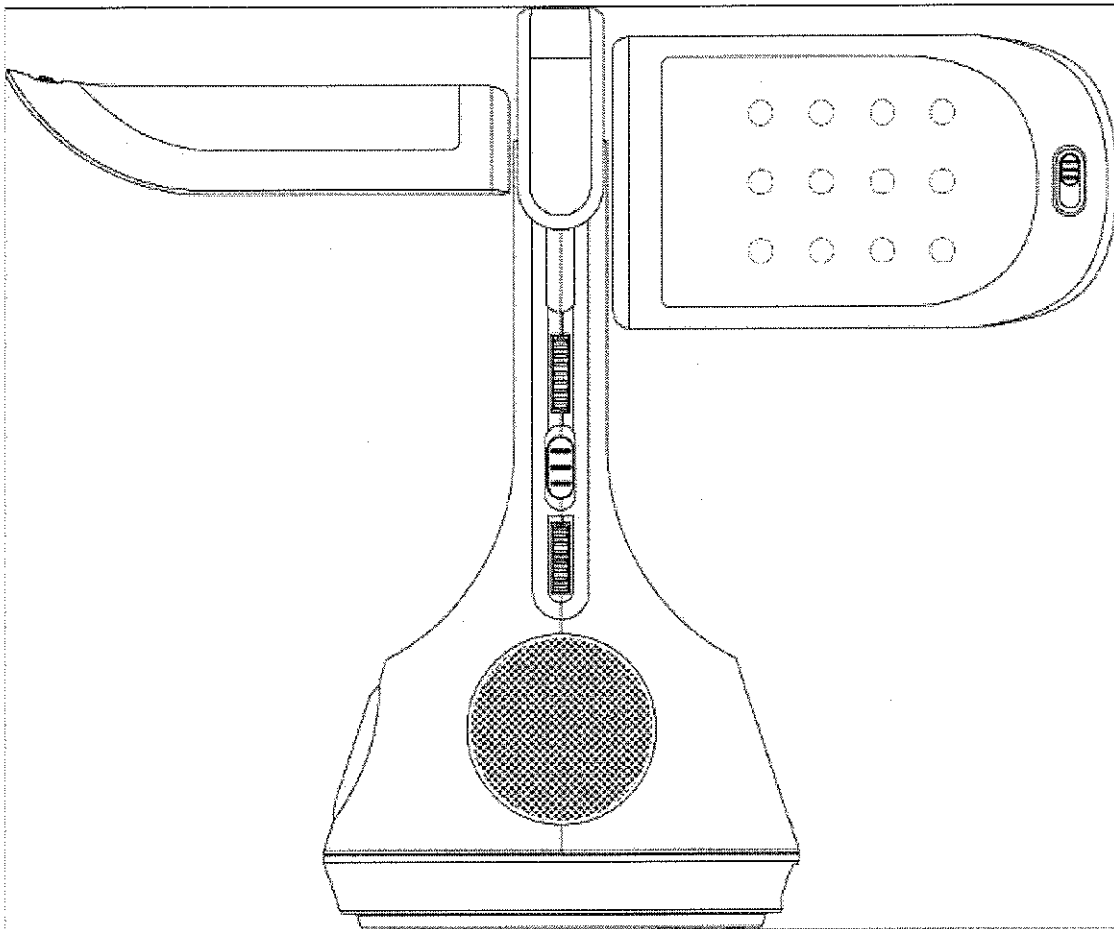

Both of the LED Light Sets extend out from the Lantern Radio and rotate 270° independently. Do not force the light sets to turn if they give resistance. Instead, make sure it is being turned in the proper direction.

Weatherband



National Oceanic and Atmospheric Agency (NOAA) instant weatherband alerts you to the latest news and weather, specific to your region. In addition, you can tune into other local broadcasts with the AM/FM radio.



Service Information

Address 2116 Carr Street, St. Louis MO, 63106
Phone 1-314-621-2881
Fax 1-314-588-1805
Email prodinfo@gpx.com
Website www.weather-x.net

To download this Instruction Manual in English, Spanish, or French visit the Support section at www.weather-x.net.

Para descargar este manual de instrucción en inglés, español, o francés visite la sección de la ayuda en www.weather-x.net.

Pour télécharger ce manuel d'instruction en anglais, espagnol, ou le Français visitez la section de soutien à www.weather-x.net.
