

# Using the System for the First Time

## Home Screen



| Button | Description  |
|--------|--|
| 15     | Turns display off.   |
| 16     | Adjusts brightness.  |
| 17     | Adjusts the display mode.  |
| 18     | Displays the Home screen.  |
| 19     | • Moves to the previous screen.<br>• Hides keyboard.<br>(when keyboard is displayed) |
| 20     | Adjusts volume.  |
| 21     | • Sets the speaker mode.<br>• The speaker icon changes for each speaker mode.        |
|        | Bluetooth Audio Sync - Syncs the audio and video upon Bluetooth connection.          |

# Kids Theme

Press  → Press **Kids Theme**



## Note

- If the system is turned off and on with Kids Theme applied, the system starts with Kids Theme.

## Basic Screen



| Name and Icon              | Details                                      |
|----------------------------|--|
| 1 Baby Shark Songs & Games | Goes to the Baby Shark Songs & Games screen. |
| 2 USB kids                 | Goes to the USB kids screen.                 |
| 3 YouTube Kids             | Goes to the YouTube Kids screen.             |
| 4 Default Theme            | Returns to the default theme.                |

### Note

- In Kids Theme, the Pinkfong contents and USB, YouTube Kids feature are only available.

## Baby Shark Songs & Games Screen




| Name and Icon | Details                                  |
|---------------|--|
| 1             | Goes to Kids Theme home screen.          |
| 2             | Choose the language.                     |
| 3             | Goes to Baby Shark Songs & Games screen. |

### Note

- Slide left or right to select the content you want to see.

# Kids Theme


## USB kids Screen

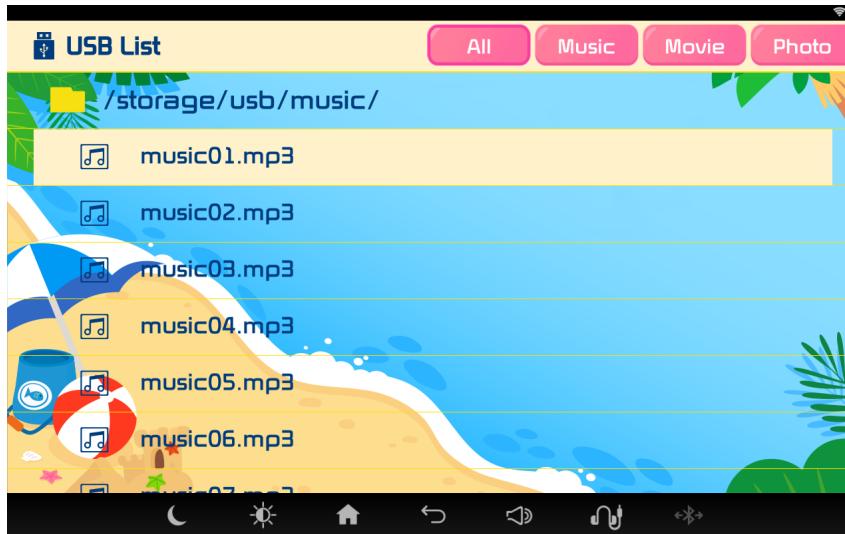

### Note

- For details about USB, refer to page 28.


## YouTube Kids Screen

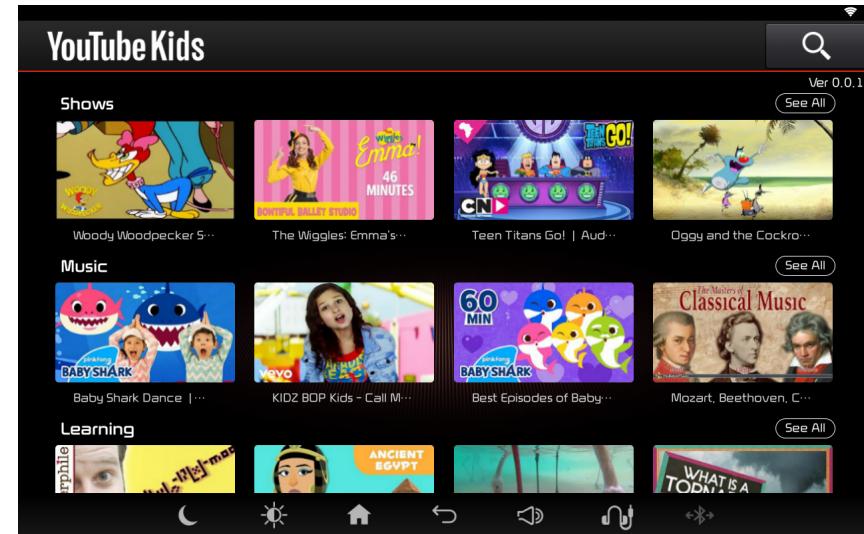

### Note

- For details about YouTube, refer to page 59.

## USB List Screen

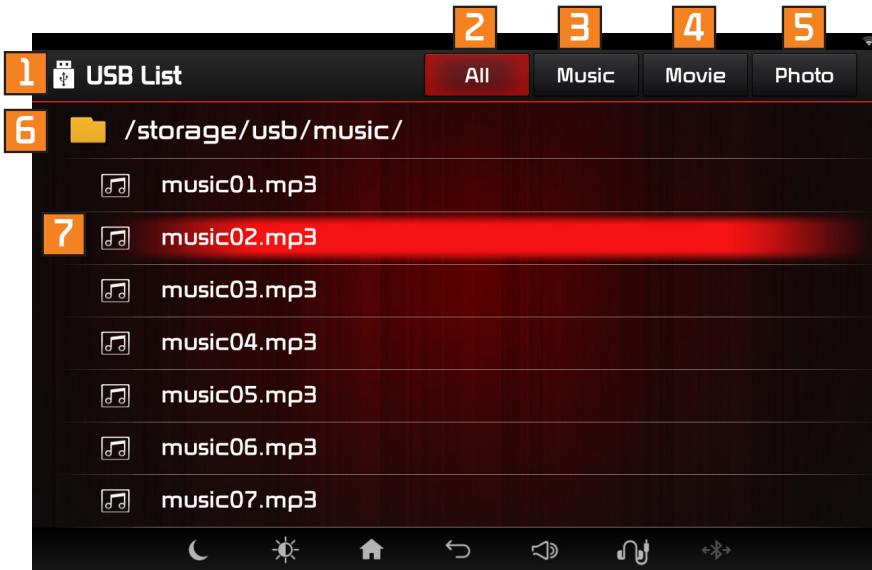

| Name and Icon    | Details   |
|------------------|---|
| 1 Mode           | Displays current mode.  |
| 2 All            | Displays all folders and music/ movie/photo files.              |
| 3 Music          | Displays folders and music files.                               |
| 4 Movie          | Displays folders and movie files.                               |
| 5 Photo          | Displays folders and image files.                               |
| 6 Directory Name | Current list directory.<br>Touch to move to previous directory. |
| 7 Current Song   | Displays current song name.                                     |

## Playing USB Music

Press the **Home** button → Press **USB** → Press **Music** → Select the desired file.

