



Playing USB Photo

Press the **Home** button → Press **USB** → Press **Photo** → Press the desired file.

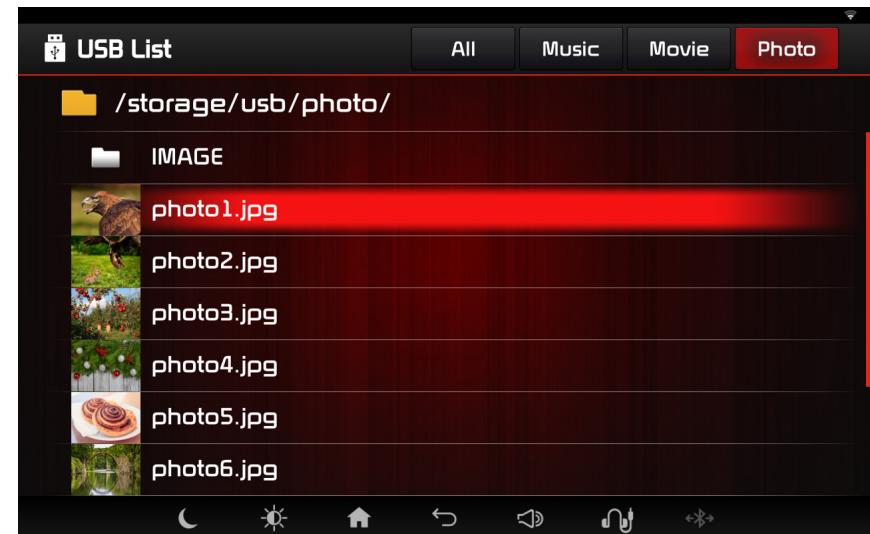

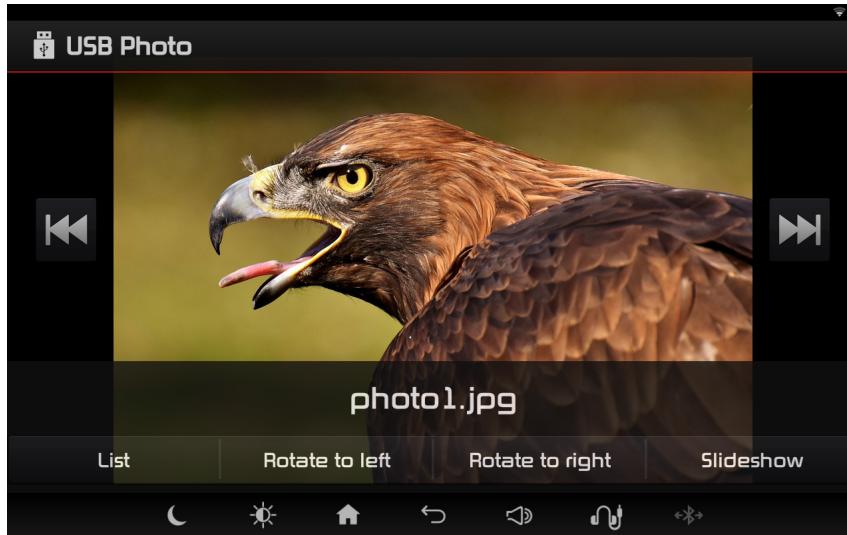

Displaying Control Panel

Touch anywhere in the play screen to display control panel.

The control panel will disappear if operations are not made for 5 seconds while the control panel is showing.

Playing the Previous/Next File

Press the **◀** **▶** button to play the previous/next file.

Rotate

Press the **Rotate to left** or **Rotate to right** button.

Each time the button is pressed, the image is rotated by $0^\circ \rightarrow 90^\circ \rightarrow 180^\circ \rightarrow 270^\circ$ degrees.


Slideshow

Press the **Slideshow** button to images as a slideshow that slides in 5 second intervals.

Touch anywhere to stop the slideshow.

Zoom In/Out

In the play screen, pinch using two fingers to zoom in or out.

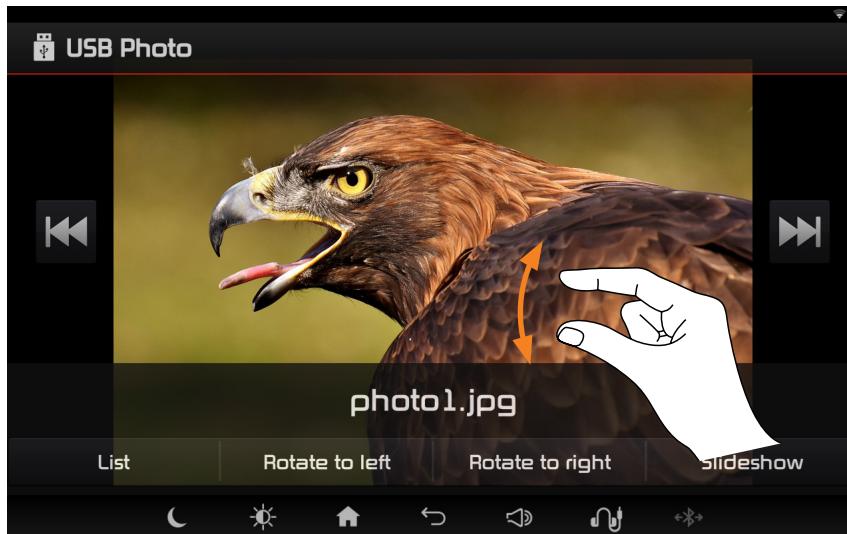


List

Press the **List** button to display the USB Photo list screen.



Press the directory name to move to the higher directory.

Basic Screen

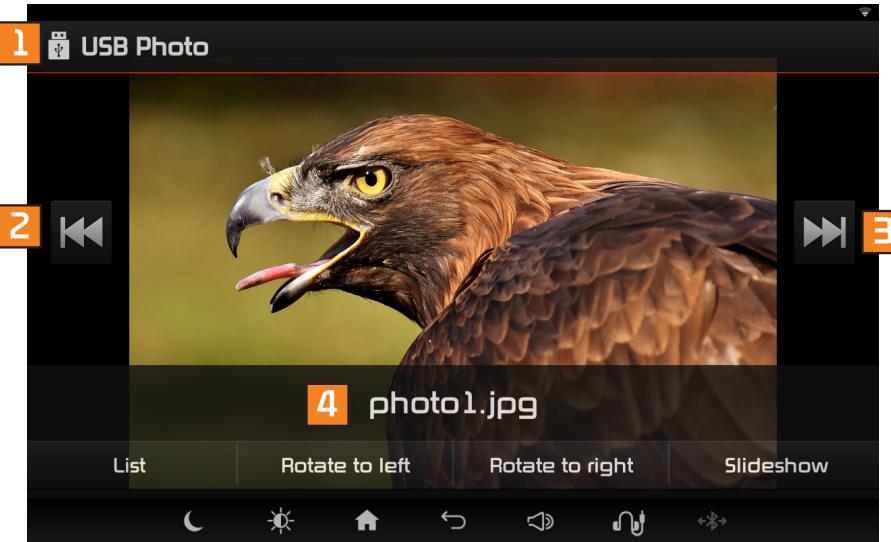

Name and Icon	Details
1 Mode	Displays current mode.
2 Previous File	Moves to the previous file.
3 Next File	Displays current file name.
4 File Info	Displays current file name.

Basic Screen



Name and Icon	Details
5 List	Moves to the list screen.
6 Rotate to left	Rotates image in counter-clockwise direction.
7 Rotate to right	Rotates image in clockwise direction.
8 Slideshow	Displays images in a slideshow in 5 second intervals.

Playing an External Source

AV-In or HDMI mode can be used when an external device player is connected and operating.

Use an AV or HDMI cable to connect the external device.

Press the **AV-In** or **HDMI** button to play the auxiliary device.



Adjusting Video

In AV-In mode, press the **⋮** button → Adjust the Brightness, Contrast, and Hue to the desired levels → Press **Confirm** .



Note

- The Video Adjust feature is not supported when using HDMI.

Sounds of Nature


Playing the Sounds of Nature.

Press the  button → Press **Sounds of Nature** → Selects the sound you want to listen to.



Sounds of Nature

Basic Screen

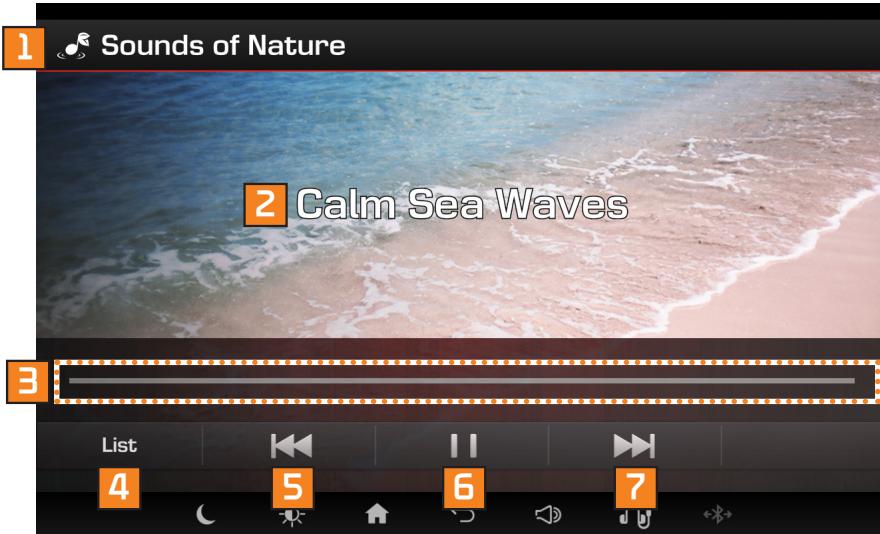


Name and Icon	Details
1 Mode	Displays current mode.
2 Play Screen	Displays the file name/photo information for the current music.
3 Play Bar	Displays the current play location.
4 List	Moves to the list screen.
5 Previous File	Moves to the previous file.
6 Play/ Pause	Plays/pauses the current file.
7 Next File	Moves to the next file.

Screen Sharing

Using the Screen Sharing feature

Press  → Press **Screen Sharing**

When Screen Sharing is turned on, the screen currently displayed on the next seat screen is shared, and the media can be controlled on both seat.

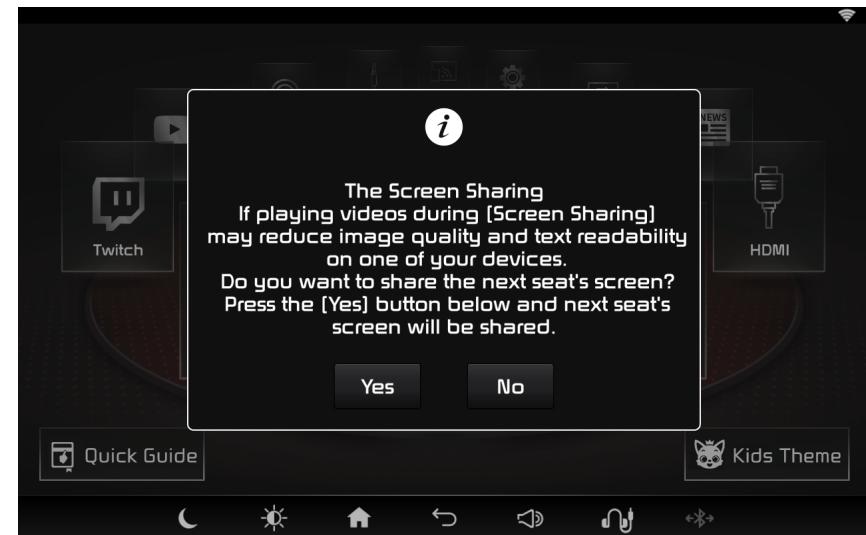

Note

- Voice is not shared when Bluetooth audio is output.

Screen Sharing

Using Screen Sharing Menu

To use the menu buttons while screen sharing is in use, quickly tap the screen twice.



Button	Description
1	Plays/pauses screen sharing.
2	Stops screen sharing.

Screen Sharing

Using the Screen Sharing

If the screen sharing failed, go to the home screen and retry Screen Sharing.



Note

- When sharing the screen, the sound icon at the bottom of the screen must be changed to an ear jack for normal voice output.

Turning Off Screen Sharing

To stop Screen Sharing, go to the Home screen and press the Screen Sharing button.



News Reader / podcasts and more

Before Starting News Reader / podcast / YouTube / Twitch / NETFLIX / YouTube Kids


News Reader / podcast / YouTube / Twitch / NETFLIX / YouTube kids modes will be disabled when Wi-Fi is disconnected.

The first connect a Wi-Fi network.

Note

- Internet is based on Chromium, an open source software available for use through a BSD license.
- The scope of support may change according to the policy change of the service provider.


Press the  button → Press **Settings** → Press **Network**.

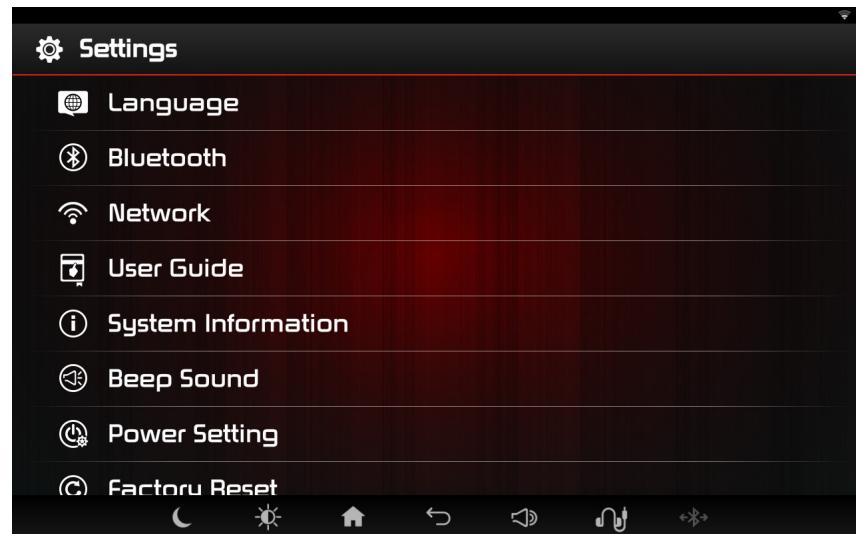

For subsequent operations, refer to the "Network" section.

Starting News Reader

Select  → Select **News Reader**.

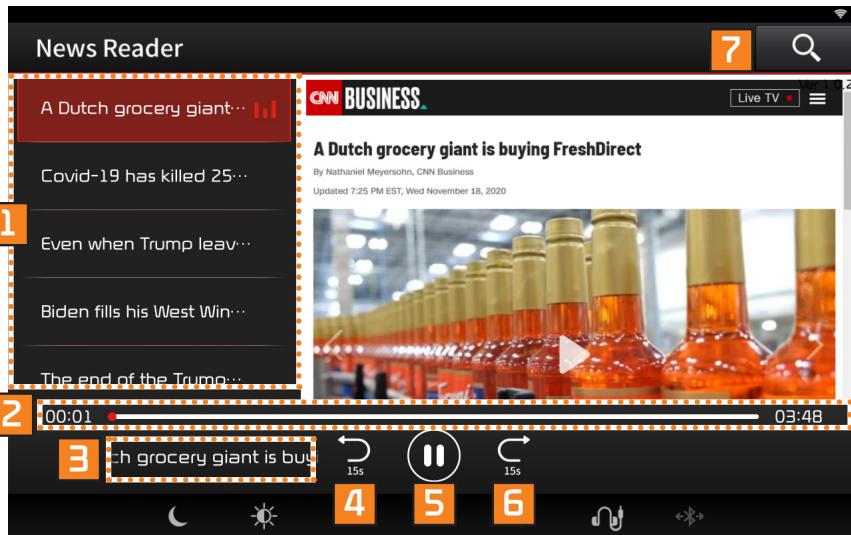

Button	Description
1 News Name	News name for each category
2 Playtime / regenerative bar	Displays the current play time and the total play time
3 News Name	Displays the currently played news
4 Previous	Moves to 15 seconds ago
5 Play / Pause	Plays or pauses the current file
6 Next	Moves to 15 seconds later
7 Search	Search for the desired news

Search

Press the  button to search for the desired news.

