

Press the **▶** button to play.

Press the **||** button to pause.

Playing the Previous/Next File

While playing → Press the **◀ ▶** button to play the previous/next file.

After 3 seconds of playing, pressing **◀** will play the current file from the beginning.

Fast-forwarding/Rewinding

Drag or touch the slider along the play bar in the music screens to jump to the point that you want to play from.

Shuffle

Press the **Shuffle** button.

Each time the button is pressed, the option is changed from Shuffle On () → to Shuffle Off.


Repeat

Press the **Repeat** button.

Each time the button is pressed, the option is changed from Repeat All () → Repeat One () → Off.


List

Press the **List** button to display the USB Music list screen.

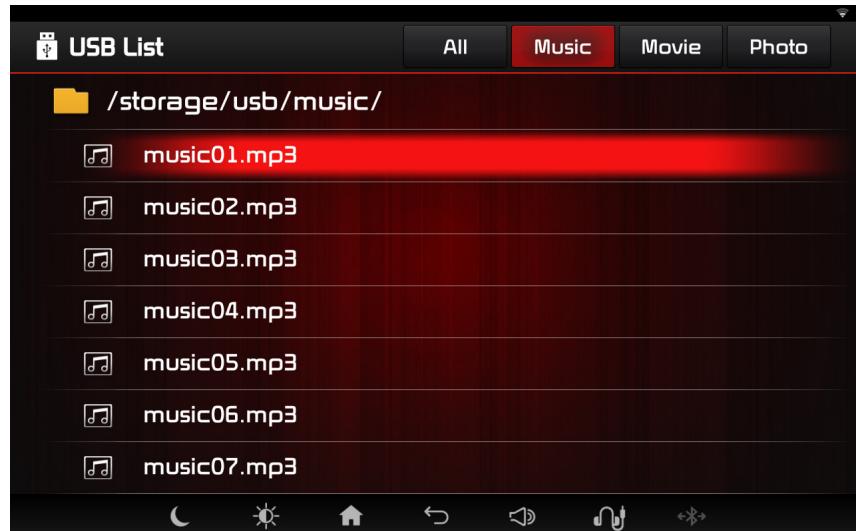


Press the directory name to move to the higher directory.

Basic Screen

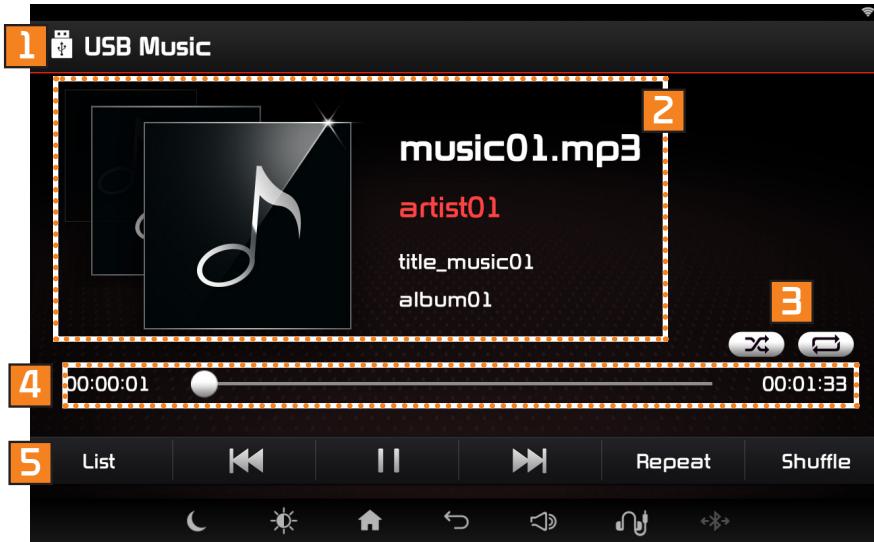

Name and Icon	Details
1 Mode	Displays current mode.
2 File Info	<ul style="list-style-type: none"> Displays file name/title/artist/album info of the current file. Clicks the album to display the list of album arts.
3 Play Mode	Displays current play mode feature.
4 Play Time/Play Bar	<ul style="list-style-type: none"> Displays the current play time. Drag/touch the playback bar to move to the desired position and play.
5 List	Moves to the list screen.

Basic Screen


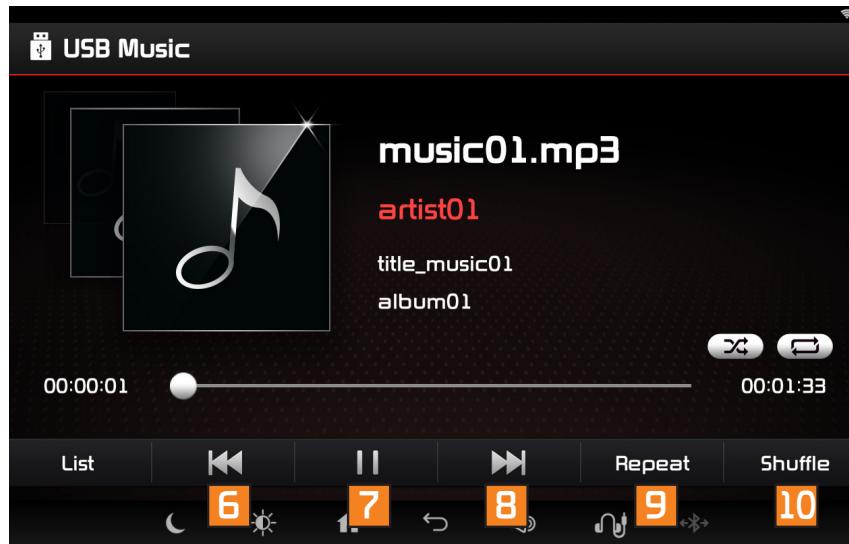


Name and Icon	Details
6 Previous File	<ul style="list-style-type: none"> When play time is under 3 seconds : Moves to the previous file. When play time is over 3 seconds : Plays the current file from the beginning.
7 Play/ Pause	Plays/pauses the current file.
8 Next File	Moves to the next file.
9 Repeat	Repeats the current file or all files in the folder.
10 Shuffle	Plays files in random order.

Album Screen


Selects the album art.


Moves left/right to select the album you want to listen to.

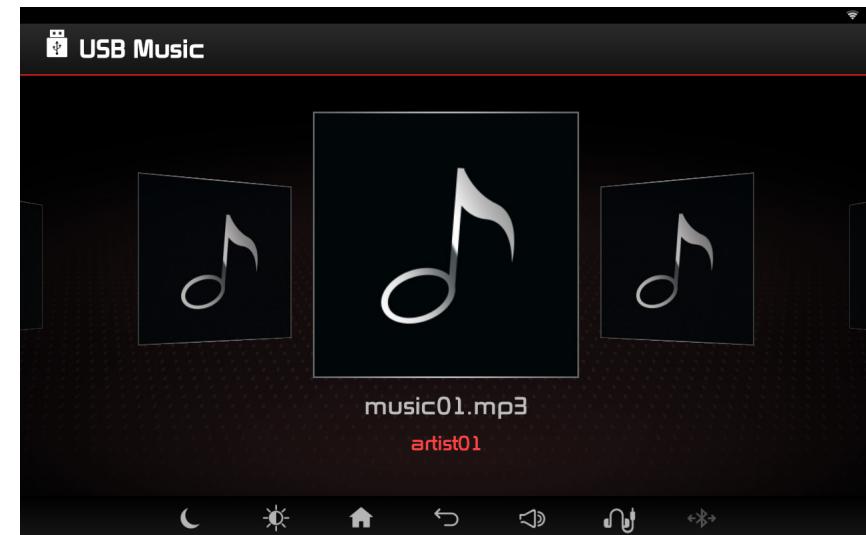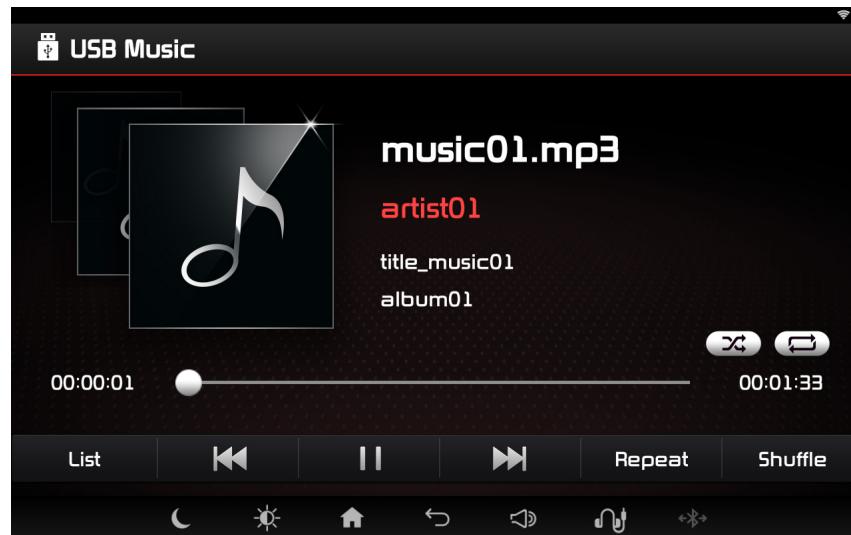

Playing USB Movie

Press the **Home** button → Press **USB** → Press **Movie** → Press the desired file.

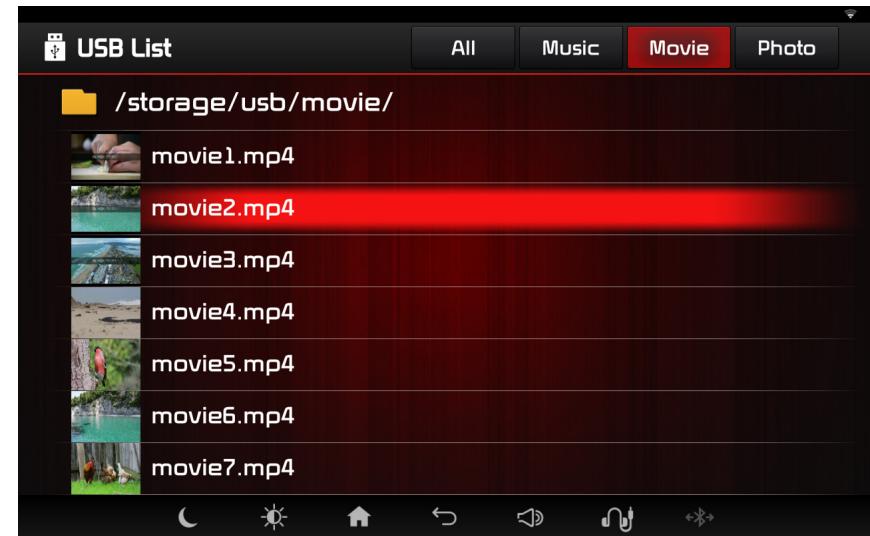

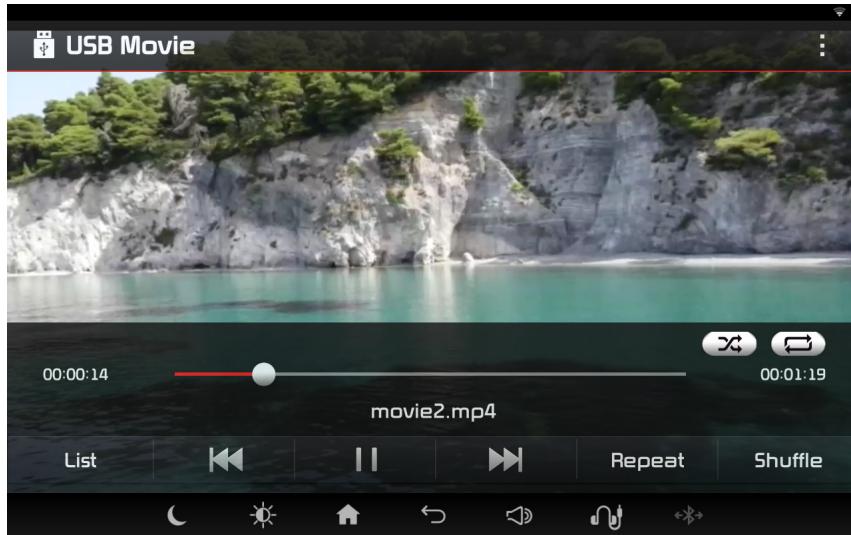

Press the **▶** button to play.

Press the **||** button to pause.

Displaying Control Panel

Touch anywhere in the play screen to display control panel.

The control panel will disappear if operations are not made for 5 seconds while the control panel is showing.

Playing the Previous/Next File

While playing → Press the **◀** **▶** button to play the previous/next file


Press the **◀** button after 3 seconds of playback time, will play the current file from the beginning.

Fast-forwarding/Rewinding

Drag or touch the play ball to start playing from 5 seconds before the selected position.

Subtitles

Press the **:** button → Press **Subtitles** to set the subtitle language or Select the desired option.

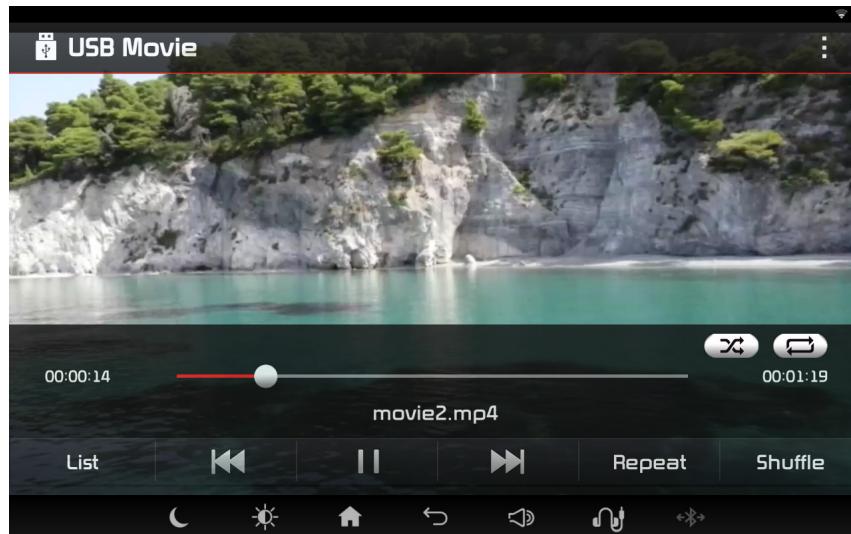


Note

- If subtitles do not exist, then the Subtitles button will be disabled.

Voice

Press the **:** button → Press **Voice** to set the voice language.

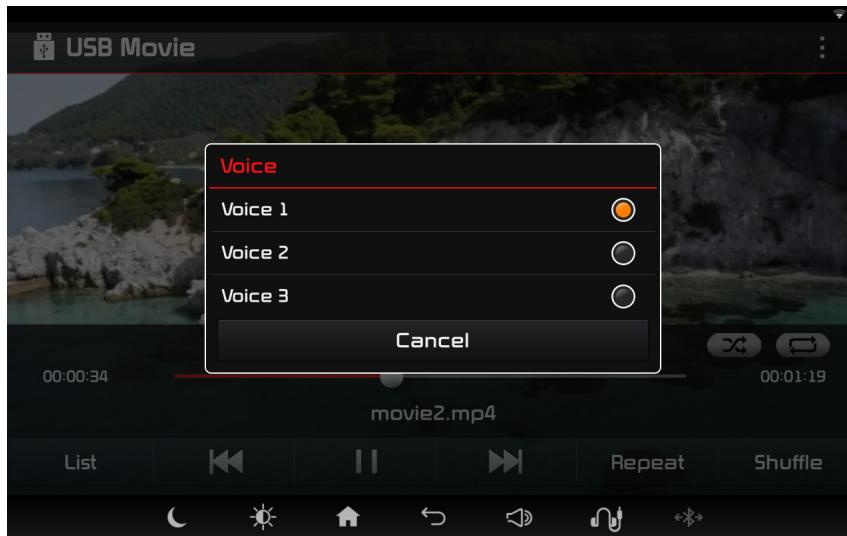


Note

- If Voice files do not exist, then the Voice button will be disabled.


List

Press the **List** button to display the USB Movie list screen.

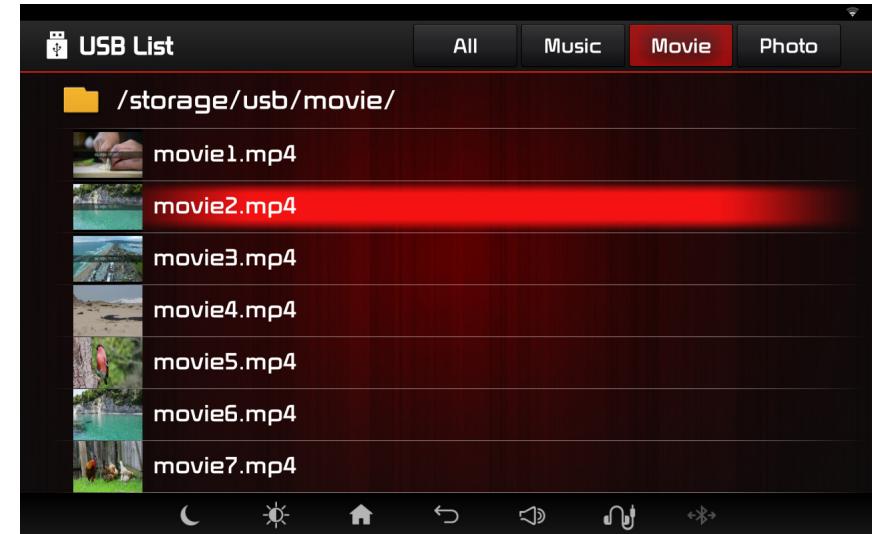

Press the directory name to move to the parent directory.

Basic Screen

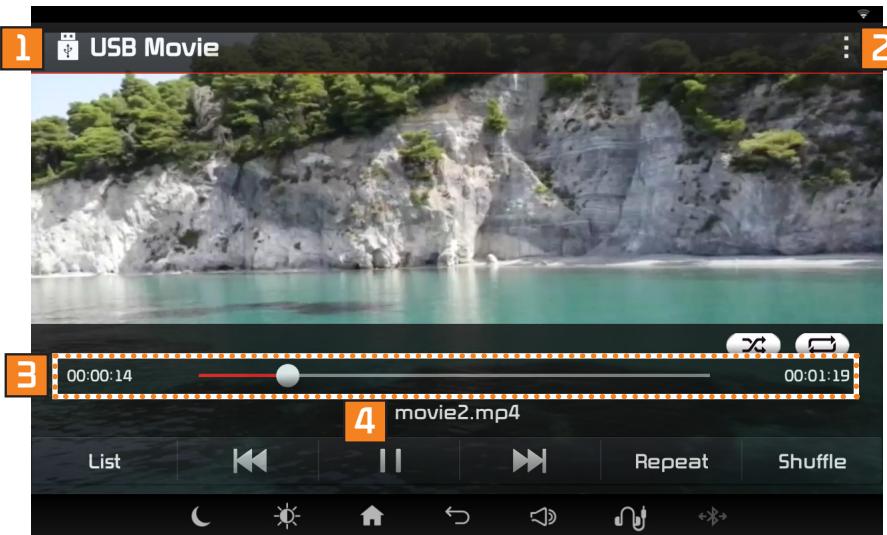


Name and Icon	Details
1 Mode	Displays current mode.
2 Menu	Displays the USB Movie settings menu.
3 Play Time/ Play Bar	<ul style="list-style-type: none">Displays the current play time.Drag/touch the playback bar to move to the desired position and play.
4 File Info	Displays currently file name.

Note

- The **2** Menu feature is available only when a video file supports subtitles or voice features.

Basic Screen

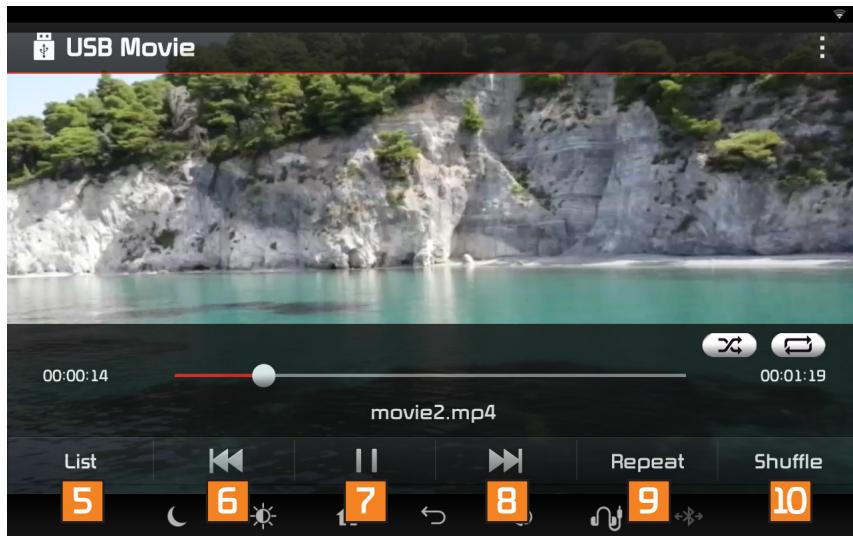

Name and Icon	Details
5 List	Moves to the list screen. <ul style="list-style-type: none">When play time is under 3 seconds : Moves to the previous file.When play time is over 3 seconds : Plays the current file from the beginning.
6 Previous File	
7 Play/ Pause	Plays/pauses the current file.
8 Next File	Moves to the next file.
9 Repeat	Repeats the current file or all files in the folder.
10 Shuffle	Plays files in random order.