

6/8/98

1. VOLUME CONTROL KNOB
2. BAND SWITCH
3. TUNING KNOB
4. TELESCOPIC ANTENNA
5. ON / OFF PUSH SWITCH
6. LED STEREO INDICATOR - GREEN
7. LED POWER INDICATOR - RED
8. BAND EQUALIZER
9. LEFT AND RIGHT SPEAKERS
10. COLLAPSIBLE HANDLE
11. AC SOCKET
12. BATTERY COMPARTMENT

TO ADD: A/C ITEM SAFETY INSTRUCTIONS

SUPPLY

BATTERIES

- WHENEVER CONVENIENT, USE AC MAINS SUPPLY IF YOU WANT TO CONSERVE BATTERY LIFE.
- OPEN THE BATTERY COMPARTMENT (NO. 12) AND INSERT 6 X UM-1 / D / R20 OR EQUIVALENT BATTERIES, MAKING SURE TO INSERT CORRECTLY ACCORDING TO THE POLARITY AS INDICATED. THEN CLOSE THE BATTERY DOOR. WE RECOMMEND USE OF ALKALINE BATTERIES FOR LONGER LIFE.
- REMOVE THE BATTERIES IF EXHAUSTED OR IF THE UNIT IS NOT TO BE USED FOR A LONG PERIOD TO PREVENT LEAKAGE OF THE BATTERY AND DAMAGE TO THE UNIT. THE BATTERY SUPPLY WILL SWITCH OFF WHEN THE SET IS CONNECTED TO THE MAINS. TO CHANGE OVER TO BATTERY SUPPLY, REMOVE THE AC PLUG FROM THE MAINS SOCKET (NO.11)

MAINS SUPPLY

- CHECK THAT THE MAINS VOLTAGE AS SHOWN ON THE PRODUCT PLATE (LOCATED BACK OF YOUR UNIT) CORRESPONDS TO YOUR LOCAL MAINS SUPPLY. IF IT DOES NOT, CONSULT YOUR DEALER OR SERVICE ORGANISATION.
- CONNECT THE MAINS LEAD TO THE AC MAINS SOCKET (NO.11) AND THE WALL SOCKET. THE MAINS SUPPLY IS NOW CONNECTED.
- TO DISCONNECT THE SET FROM THE MAINS, WITHDRAW THE MAINS PLUG FROM THE WALL AND UNIT.
- ALWAYS USE AC LEAD SUPPLIED WITH THE UNIT.

RADIO OPERATION

- SWITCH ON THE RADIO WITH THE ON/OFF SWITCH (NO. 5) TO DOWN POSITION. POWER ON RED LED LIGHT WILL LIGHT UP (NO. 7).
- SELECT THE WAVE BAND USING BAND SELECTOR SWITCH (NO. 2)
- TUNE IN TO YOUR DESIRED RADIO STATION USING TUNING CONTROL (NO. 3).
- IN FM BAND, STEREO GREEN LED INDICATOR (NO. 6) WILL LIGHT UP UPON STEREO TRANSMISSION RECEPTION.
- ADJUST VOLUME CONTROL (NO. 1) TO DESIRED LEVEL.
- TO SWITCH OFF THE RADIO, PUSH ON/OFF SWITCH (NO. 5).

NOTE:

THIS UNIT IS EQUIPPED WITH A BUILT IN FERRITE ANTENNA FOR AM AND TELESCOPIC ANTENNA FOR FM RECEPTION. IN AREAS WHERE AM RECEPTION IS NOT CLEAR, CHANGE POSITION & DIRECTION OF UNIT FOR BETTER RECEPTION. FOR BETTER FM RECEPTION, YOU MUST EXTEND FM TELESCOPIC ANTENNA (NO. 4) TO FULL EXTEND.

GRAPHIC EQUALIZER

- THE UNIT IS EQUIPPED WITH 3 STAGES GRAPHIC EQUALIZER (NO. 8). YOU CAN SET THIS FUNCTION ACCORDING TO TASTE & LISTENING PLEASURE.

MAINTENANCE

- FINGERPRINTS, DUST AND DIRT ON THE SET CAN BE REMOVED BY USING A SOFT, CLEAN AND SLIGHTLY DAMP LEATHER CLOTH. DO NOT USE ANY CLEANING AGENTS, SINCE THEY MAY DAMAGE THE CABINET.
- DO NOT EXPOSE THE SET TO RAIN, MOISTURE, SAND OR TO EXCESSIVE HEAT e.g. HEATING EQUIPMENT OR IN MOTOR CARS PARKED IN THE SUN.
- THERE ARE NO SERVICEABLE PARTS INSIDE THE UNIT. THEREFORE DO NOT OPEN THE BACK COVER OF THE UNIT. IN CASE OF DEFECT OR REPAIR IS REQUIRED ON THE UNIT, PLEASE REFER IT TO A QUALIFIED SERVICE CENTRE.

TECHNICAL SPECIFICATION

AM BAND: 520 — 1620, KHZ (EUROPE) 520 — 1700 (USA)

FM BAND: 87.5 — 108 MHZ

LW: 145 — 265 KHZ (FOR EUROPE VERSION)

WEATHER BAND: 160 — 165 KHZ (FOR USA VERSION)

POWER OUTPUT: 1.2 Watt

A/C POWER SUPPLY: 230 V, 50 HZ (FOR EUROPE VERSION)

120 V, 60 HZ (FOR USA VERSION)

SUBJECT TO TECHNICAL ALTERATIONS AND ALTERATIONS IN STYLING.