



SX200



INSTRUCTION MANUAL

Safety information

Before using this device, carefully read this user manual and keep it together with cashier receipt and if possible, the original package inclusive its interior packing. If you hand on the device to any third person, include the user manual as well.

- To avoid the risk of fire of an electric shock, you should not expose the device to rain or moisture. Consequently, do not use the device in the immediate vicinity of water, for example near a bath tub, a swimming pool or in a damp cellar.
- Use the appliance only for the intended, private use. This appliance is not intended for commercial use.
- The apparatus is used in moderate climates.
- Ensure that the output voltage, currency and polarity of the power adaptor correspond to the nameplate specifications!
- Do not touch the power adaptor with wet hands!
- Power off when cleaning or if a fault occurs.
- Make sure that the power cable is not bent, crushed, run over or does not come into contact with heat sources.
- Only connect the device at a properly installed plug socket. Pay attention that the specified voltage corresponds to the voltage of the plug socket.
- When using external mains supply, pay attention to the correct polarity and voltage. Always place the batteries in the correct direction.
- Assemble the device in such a way that the available ventilation openings are not covered.
- Never open the housing of the device. Incorrect repairs can constitute a considerable risk for the user. Should the device become damaged, in particular the mains supply cable, do not operate the device any longer, but rather have it repaired by an expert. Check the mains supply cable regularly for damage.
- For safety reasons a broken or damaged mains lead may only be replaced by an equivalent lead from the manufacturer, our customer service department or a similar qualified person.
- If the device is not used for a long period, remove the plug connector from the plug socket or take out the batteries.

These symbols may be found on the device and are intended as warnings:



The lightning flash is intended to alert the user the presence of dangerous voltage within the device.



User to the presence of important operating and maintenance instruction accompanying this device.



This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.



Invisible laser radiation when open and interlocks defeated. Avoid exposure to beam of laser.

Symbols in this user manual

Important notes for your safety are marked distinctively. Pay absolute attention to them to avoid accidents and damage to the device: Warns of dangers for your health and indicates potential risks of injury.

Indicates potential dangers for the device or other objects.

NOTE: Highlights tips and information for you.

For the safety of your children, keep any packing parts (plastic bags, cartilage, styrofoam etc.) out of their reach.

Don't let small children play with foils for Danger of suffocation!

This device is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and/or knowledge unless they have been given supervision or instructions concerning the use of the device by a person responsible for their safety.

Supervise children to ensure they do not play with the device.

- Do not use the device in locations that are extremely hot, cold, dusty or moist.
- Select a suitable location for the tower speaker, such as a dry, flat, non-slip surface on which it is easy to operate the machine.
- Ensure that the speaker is sufficiently ventilated!
- Do not cover any ventilation slits with objects such as magazines, tablecloths, curtains etc.
- Never touch the mains plug or lead with wet hands.
- Keep the mains lead away from heaters.
- Never put a heavy object on the electric lead.
- Keep the device away from vases, baths, wash basins etc. If liquid enters the device this may cause serious damage.
- The apparatus is used in moderate climates.

 This marking indicates that this product should not be disposed with other household wastes throughout the UN. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.


Accessories

Check the accessories before operating. This package contains the main unit and the following accessories:

- 3.5mm Audio Cable x 1
- Audio Cable (RCA) x 1
- Speaker Cable x 1
- Power Adaptor x 1
- Instruction Manual x 1

Power adapter

The unit must be connected to the power adapter provided with the package, using other kinds of power adapters may cause unpredictable damage to the products.

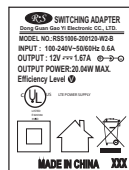

Specific information of power adapter:

Manufacturer: Dong Guan Gao Yi Electronic CC., LTD.

Model name: Switching adapter

Input: 100-240V, 50/60Hz, 0.6A

Output: 12V~1.67A


Max. output power: 20.04W

WARNING: Use only power supplies listed in the user instructions. Plug the adapter with the product power supply interface firmly before connecting to power. The adapter must be un-plugged if it's unused for long period of time.

WARNINGS:

1. The direct plug-in adapter is used as disconnect device, the disconnect device shall remain readily operable.
2. Listening to music at high volume levels and for extended durations can damage one's hearing. In order to reduce the risk of damage to hearing, one should lower the volume to a safe, comfortable level, and reduce the amount of time listening at high levels.

Overview

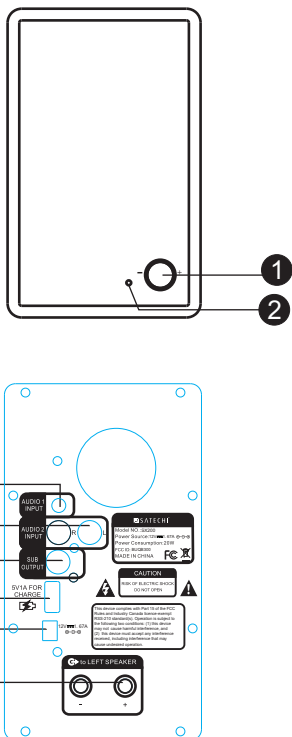

1. VOLUME KNOB/STANDBY/MODE BUTTON
2. INDICATOR LIGHT
3. AUDIO INPUT 1
4. AUDIO INPUT 2
5. SUBWOOFER OUTPUT
6. USB CHARGING PORT
7. POWER SUPPLY
8. SPEAKER CONNECTORS

USB Charging

The USB port on the rear panel is only for USB charging, not for playback via USB.

While in any mode, you could connect the USB port with any device which is charged through USB connector.

Basic operation

Preparation

- 1) Before the unit is turned on, please check if all the connections are right and safe. Then connect the main power.
 - 2) Connect the power adaptor.
 - 3) Press and hold the **STANDBY** button for 3s to enter or exit the standby mode.
- When in standby mode, the indicator lights red.

Mode Button

To switch different modes, you could press the **MODE** button to switch to different modes.

Volume Setting

Press the **VOL.+/- KNOB** buttons to turn the volume up or down.

Bluetooth operation

It is possible to listen to audio files using the Bluetooth function of this unit.


1. Press the **MODE** button to enter the bluetooth mode, the indicator light flashes blue quickly.
2. Start the bluetooth function on the device such as the mobile phone.
3. Place the device into Bluetooth search mode. The device will begin searching the speaker. Select the **SX200** from the search list.
4. If prompted, input 0000 as password.
5. When connecting successfully, the indicator light will be lit blue steadily. And there is an audible signal to indicate the successful connection. Then you could select the MP3 track you want to play.
6. If there is a call coming while the telephone is connected, the playing music will be paused automatically. When the call ends, it depends on the setting of your phone whether the tracks will be resumed playing or not.

NOTE:

If the function can not be controlled normally, power off the speaker, then turn on it.

System connection

Before connecting acoustic equipment, pay attention to the picture below. Each connection must be safe and firm. Disconnect power cable until you have finished all the connections.

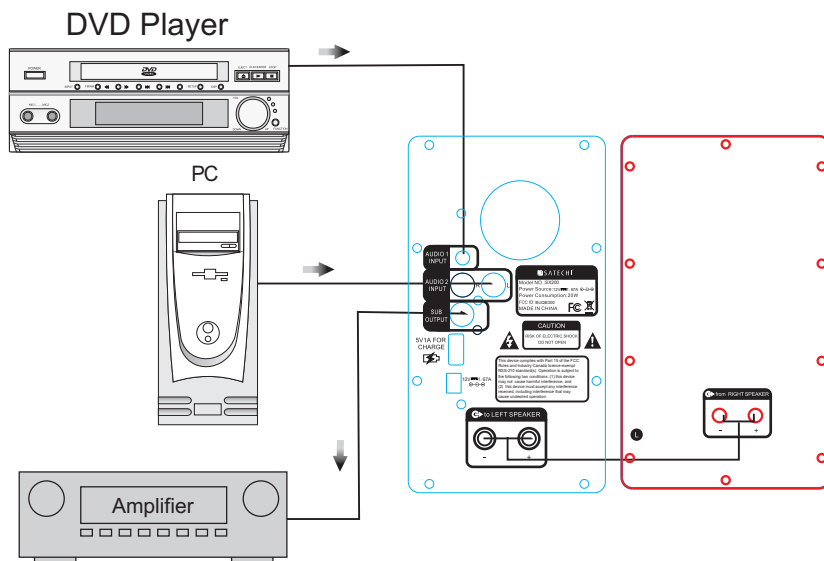

Audio Input Operation

For the connection of analog playback devices via the Audio input sockets, you may also hear the sound through the speakers from other playback devices such as MP3 players, cell phones, etc., .

1. Connect the external device to the Audio input jacks on the rear of the device with the audio cables.
2. Press the **MODE** button to switch to the Audio input mode. The Indicator Light will be lit red in 5s, then the light is off, but it is still in Audio input mode.
3. Start the playback of your audio source. Listen to the sound playback via the speakers. You can adjust the volume using the **Volume knob**.
4. For the further procedure, please refer to the user manual of the external audio source.

NOTE:

1. If possible, adjust the volume of the external unit to a comfortable level.
2. If you have connected with the Audio input 1 and Audio input 2 jacks at the same time, the speaker will prefer to play audio 1 device.
3. If you want to play the audio via Audio Input 2 socket, please **DO NOT** connect the Audio input 1 jack with any device, otherwise, it will turn to play the music via Audio input 1 jack.

Trouble shooting

Problem	Solutions
The device doesn't turn on	Check if the power cable is connected correctly
	Is the main power switch turned on?
No sound	Did you set the external audio source correctly?
	Did you selected the correct source? (Bluetooth or AUX)
	Is the Bluetooth device paired?
	Adjust volume knob
The unit does not respond	Reset the unit

FCC statement

1. This device complies with Part 15 of FCC Rules.
Operation is subject to the following two conditions:
- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provided reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

- measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Specifications

Model.....SX200
Power supply.....12V
USB charging power output.....5V
Max Power.....20W

Bluetooth

Bluetooth support.....V2.1 + EDR
Range.....approx.10 metres

Note: Specifications subject to change without prior notice. Weight and dimensions are approximate.