



DYNEX™



DX-SH115

 
Mini Audio Shelf System w/ Bluetooth

Package contents

- Mini audio shelf system, including:
- Speakers (2)
- Subwoofer
- Audio cable
- FM Antenna
- Remote control and batteries (2)
- *User Guide*
- *Quick Setup Guide*

Installing the remote control batteries


- 1 Press the battery compartment cover latch, then remove the cover.

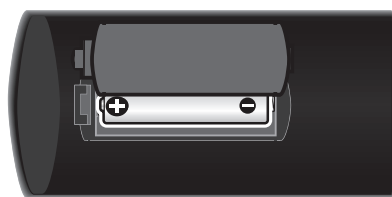

- 2 Insert two AAA batteries (included) into the battery compartment. Make sure that the + and – symbols on the batteries match the + and – symbols in the battery compartment.
- 3 Replace the cover.


Connecting the FM antenna

 - 1 Connect the FM antenna (included) to the FM ANT jack on the back of your mini audio shelf system.
- 2 Adjust the antenna for best FM reception.

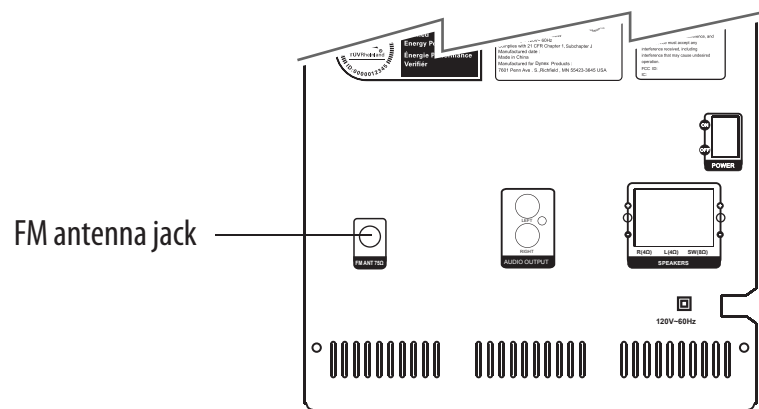


Connecting the speakers

 - 1 Connect the black wires from the speakers or subwoofer to the black terminals on the shelf system.
- 2 Connect the red wires from the speaker or subwoofer to the other terminals on the shelf system: right speaker to red, left speaker to white, and subwoofer to purple.

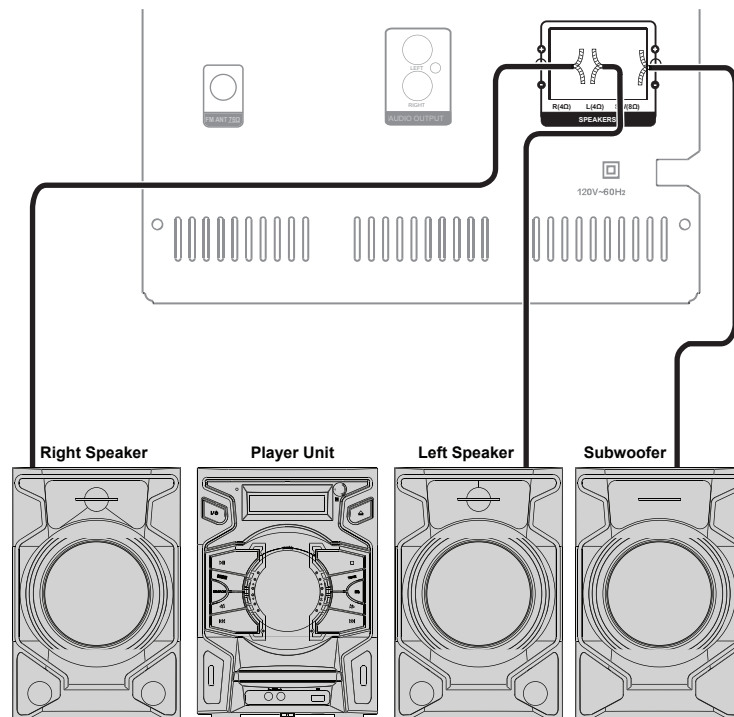

Connecting the AC power

 - Plug the power cord into an AC outlet.

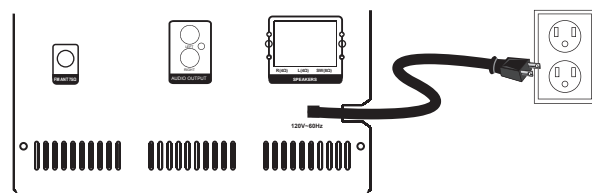

Turning on your mini audio shelf system

- 1 Turn on the power switch on the back of your mini audio shelf system.
- 2 Press **STANDBY** on the front of your system or on the remote control.

Selecting the sound source

- Press **SOURCE** repeatedly on the front of your mini audio shelf system or one of the Source buttons on the remote control to select **CD**, **FM**, **USB**, **BT** (Bluetooth), or **AUX**. The source you select appears on the display.

Adjusting the volume

- After you select the sound source you want, turn the **VOLUME** knob to set the volume to a comfortable level.
- Press **MUTE** (mute) to mute the sound. Press **MUTE** (mute) again or press **VOL+** or **VOL-** to turn the sound back on.

Using Bluetooth

Before you can use your mini audio shelf system with a Bluetooth device, you need to pair your device to the mini audio shelf system.

Pairing a Bluetooth device

Your mini audio shelf system saves pairing information for up to eight devices, such as phones and tablets. However, it can only be connected and playing content from one device at a time.

- 1 Make sure that your Bluetooth device supports Bluetooth and is not paired with another device.
 - 2 Turn on your mini audio shelf system.
 - 3 Press **SOURCE** repeatedly to select **BT** mode or press **BT** on the remote control. “**BT**” appears on the display.
 - 4 Make sure that your Bluetooth device is within 33 feet (10 m) of your mini audio shelf system.
 - 5 Turn on your Bluetooth device, turn on Bluetooth, then set your device to pairing mode. For more information, see the documentation that came with your Bluetooth device.
 - 6 On your Bluetooth device, select “**DX-SH115**”. Your mini audio shelf system pairs with the Bluetooth device.
 - 7 On the Bluetooth device, enter **0000** as the PIN, if prompted.
- If you are pairing with a computer, make sure that your mini audio shelf system is selected as the computer’s default playback device. See the computer’s documentation for instructions.

NOTES:

- Some devices, such as iPhone, connect immediately after pairing. Other devices, such as notebook computers, may ask you if you want to connect.
- When you turn on your mini audio shelf system, it automatically connects to the last connected device if that device is in range. To connect to a different paired device, you have to turn off Bluetooth or unpair from the currently paired device and manually connect to the other paired device.

Playback operation

- Playback is controlled by the Bluetooth device, by the buttons on the front of your mini audio shelf system, and by the remote control (such as **VOL+/-**, **▶▶**, **▶▶▶**, and **◀◀**).

Using a USB device

- 1 Connect the USB flash drive to the USB port on the front of the system.
- 2 Press **SOURCE** one or more times until “**USB**” appears on the display or press **USB** on the remote control. Your mini audio shelf system automatically detects the device and starts playback.
- 3 To control playback, use the controls on the mini audio shelf system or remote control.

NOTES:

- Depending on the amount of data and the media speed, it may take as long as 60 seconds for your system to read the contents of the USB device. This is not a malfunction.
- Even when the files are in a supported format, some may not play or display, depending on the content.
- The file formats that your system can play are MP3 and WMA with .mp3 and .wma extensions.

Using an AUX device

- 1 Make sure that your mini audio shelf system is turned off.
 - 2 Plug one end of the RCA stereo audio cable (included) into the **R** and **L** AUX IN jacks on the front of your mini audio shelf system and the other end into the audio out or line out jacks on the audio device.
 - 3 Press **SOURCE** one or more times until “**AUX**” appears on the display or press **AUX** on the remote control.
 - 4 Use the volume controls on your mini audio shelf system to control the volume.
 - 5 Use the controls on the audio device to control playback.
- NOTE:** You can also use the volume controls on the device to adjust the volume, but the volume control on your mini audio shelf system provides the best control.

Playing the radio

- 1 Press **SOURCE** repeatedly to select FM (Tuner) mode or press **FM** on the remote control. “**TUNER**” appears on the display.
- 2 Adjust the volume to a comfortable level.
- 3 Press **MO/ST** to switch between mono and stereo Tuner mode.
- 4 To tune to a station, press the numbers buttons on your remote control to select a specific frequency. For example, to listen to 99.7 MHz, press **9**, **9**, then **7**. You can also briefly press **TUNE +** or **TUNE -** on the remote control to tune the radio up or down one frequency step.
- 5 To scan to the next highest or lowest radio station with a strong signal, press and hold **TUNE +** or **TUNE -** for three seconds.

NOTE: For information on saving and scanning to preset stations see your *User Guide*.

Using your CD player

You can play audio CDs, CD-Rs, and CD-RWs.

 
- 1 Press **SOURCE** repeatedly to select **CD** mode.
 - 2 Press **▲** to open the CD tray.
 - 3 Insert a CD, label side up.
 - 4 Press **▲** to close the CD tray.
 - 5 Playback begins automatically.
 - 6 Use the controls on the mini audio shelf system or remote control to control playback.
- NOTE:** For more information on using your CD player, see your *User Guide*.

For additional information on using your Mini Audio Shelf System, refer to the *User Guide*.




Features

Front view

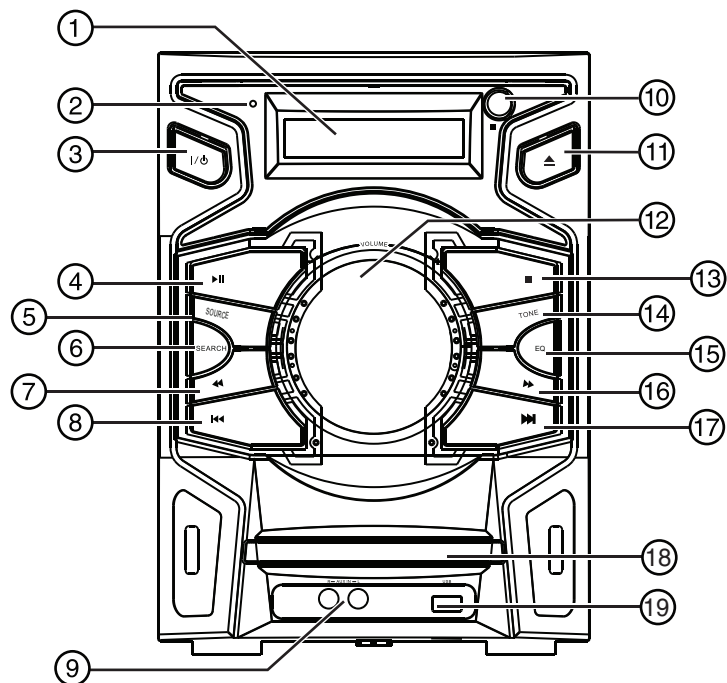


Back view

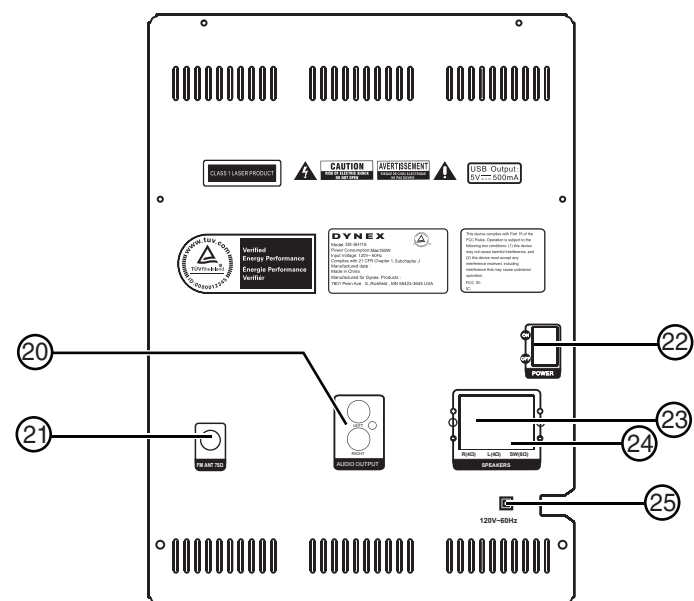 

#	Component	Description
1	Display	Displays source, frequency, and playback information.
2	Standby indicator	Red: Standby mode
3	⏻ (standby) button	Press to turn on your mini audio shelf system. Press again to go to standby.
4	▶ (play/pause) button	Press to start playback. Press again to pause playback.
5	SOURCE button	Press repeatedly to select a source: CD, FM, USB, BT (Bluetooth), or AUX .
6	SEARCH button	Press to search FM stations. The searched stations are saved automatically as presets.
7	◀◀ (fast reverse) button	Press to fast rewind a CD or USB track.
8	◀◀ (previous) button	Press to go to the previous track or song.
9	L/R AUX IN jacks	Connect an external sound source, such as an MP3 player, to these jacks.
10	Remote control sensor	Point the remote control at this sensor.
11	▲ (eject)	Press to open the CD tray or eject the currently playing CD.
12	VOLUME knob	Turn to adjust the volume.
13	■ (stop) button	Press to stop playback.
14	TONE button	Press to adjust the bass and treble.
15	EQ button	Press to select a specific sound field (equalization). Selections include Jazz, Rock, Classic, Pop, Live, Dance, and Off .
16	▶▶ (fast forward) button	Press to fast forward a CD or USB track.
17	▶▶ (next)	Press to go to the next track or song.
18	CD tray	Place the CD in this tray, label side up, to begin playback.
19	USB port	Connect a USB flash drive to this port to play files on the device.
20	L/R Audio output	Connect to the audio input of an audio amplifier.
21	FM antenna jack	Connect the FM antenna to this jack.
22	Power switch	Turn power on and off.
23	L/R speaker connections	Connect the left and right speakers to these jacks.
24	Subwoofer connection	Connect the subwoofer to this jack.
25	Power cord	Plug into a standard 120V~60Hz wall outlet.

 Remote control

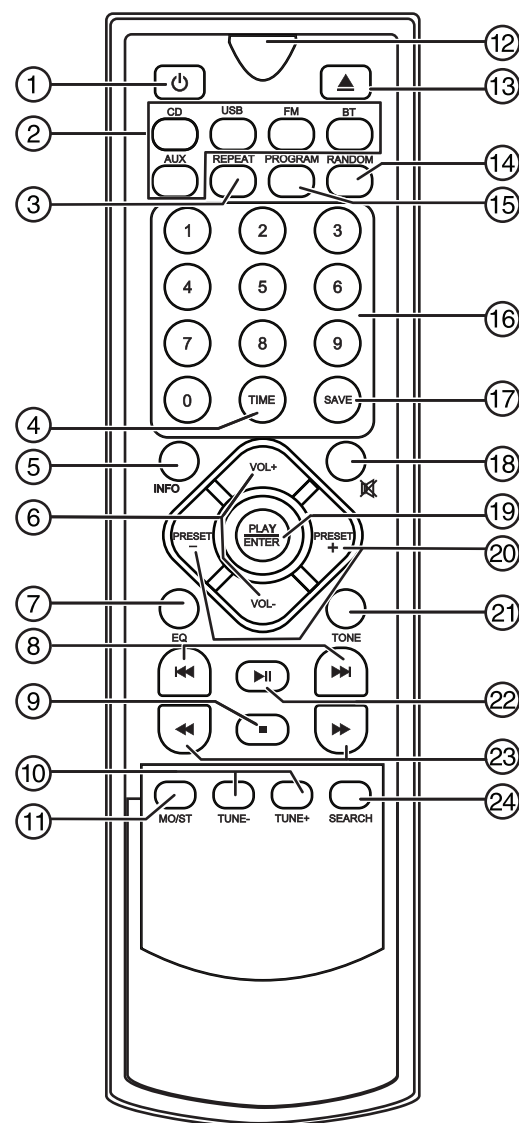

#	Button	Description
1	⏻ (standby)	Press to turn on your mini audio shelf system. Press again to go to standby.
2	Source buttons	Press to switch to CD, USB, FM, BT (Bluetooth), or AUX mode.
3	REPEAT	In CD or USB mode, press once to repeat the current song, press twice to repeat all tracks, or press a third time to cancel Repeat mode.
4	TIME	Press to play a CD from a specific time point. In USB mode, press to set the playback time of the current track.
5	INFO	While playing MP3 tracks, press to display information about the current track.
6	VOL+ /VOL-	Press to raise and lower the volume.
7	EQ	Press to select a specific sound field (equalization). Selections include Jazz, Rock, Classic, Pop, Live, Dance, and Off .
8	◀◀ (previous) ▶▶ (next)	Press to go to the previous or next track/song.
9	■ (stop)	Press to stop playback.
10	TUNE+ /TUNE-	Press to tune the FM radio to a higher or lower frequency.
11	MO/ST	In Tuner mode, press to switch from Stereo mode to Mono mode. Press again to switch back to Stereo mode.
12	IR transmitter	Transmits the IR signal to the mini audio shelf system.
13	▲ (eject)	Press to open the CD tray or eject the currently playing CD.
14	RANDOM	Press to switch playback to random mode. Press again to cancel.
15	PROGRAM	Press to program CD playback.
16	Number buttons	In CD mode, press to enter the track number you want to play. In FM mode, press to select a specific frequency. In Program mode, press to enter the number of the song you want to begin playback. In Time mode, press to enter the time.
17	SAVE	In FM mode, press to save a preset station.
18	🔇 (mute)	Press to mute the sound. Press again to cancel. When you switch to other modes, the default is mute off.
19	PLAY/ENTER	Press to enable the item you have selected.
20	PRESET- /PRESET +	Press to tune the FM radio to the previous or next preset station. When setting presets, press to select a lower or higher preset number.
21	TONE	Press to adjust the bass and treble.
22	▶ (play/pause)	Press to start and pause playback.
23	▶▶ (fast forward) ◀◀ (fast reverse)	Press to fast forward or fast reverse a CD or USB track.
24	SEARCH	Press to search FM stations. The searched stations are saved automatically as presets.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Canadian Notice

CAN ICES-3 (B)/NMB-3(B)

CANADA IC STATEMENT

This device complies with Industry license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Ce dispositif est conforme à la norme de l'industrie RSS exempts de licence (s). Son fonctionnement est soumis aux deux conditions suivantes: (1) cet appareil ne peut pas provoquer d'interférences et (2) cet appareil doit accepter toute interférence, y compris les interférences qui peuvent causer un mauvais fonctionnement du dispositif.

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment.

Cet équipement est conforme à l'exposition aux rayonnements IC limites établies pour un environnement non contrôlé.

One-year limited warranty

For complete warranty, visit www.dynexproducts.com.

Contact Dynex:

For customer service call 1-800-305-2204
www.dynexproducts.com