

TRANSMITTER POWER OUTPUT = DIRECTIONAL COUPLER + POWER METER READING 30.1 dB + 19.9 dB 50 dB 100 Watts

\* LOWPASS FILTER INCLUDED IN THE TEST SETUP IS NORMALLY LOCATED IN THE RADAR ANTENNA PEDESTAL.

TRANSMITTER OUTPUT POWER TEST SETUP

A D 06/02/03	SIZE	COOE 10E	IT NO.	DRAWING NO.				
	Α	501	87	SK-189	93			
APPR./DATE	SCALE	<u> </u>		9931	SHEET	1	QF.	1