

Difference between DB6830-01H and DB6830-01J

Item	Location	01H	01J	Purpose
1	C11	NONE	0402 3.3pF	Improve EMI issue
2	C155	0402 1nF	0402 100pF	Improve EMI issue
3	R20	0402 10 OHM	0402 0 OHM	Improve EMI issue
4	L9	0805 BEAD	0603 BEAD	Layout issue