



ATTENTION PARENTS:  
IT IS RECOMMENDED THAT THIS TOY  
AND ALL ACCESSORIES BE  
PERIODICALLY EXAMINED FOR  
POTENTIAL HAZARDS AND THAT ANY  
POTENTIALLY HAZARDOUS PARTS  
BE REPAIRED OR REPLACED.

ITEM #98303

FAST LANE is a mark of Geoffrey, Inc.  
© Geoffrey, Inc.  
Distributed by Toys "R" Us, Inc.,  
Wayne, NJ 07470.  
Imported by Toys "R" Us (Australia) PTY Ltd.,  
Regents Park NSW 2143, Australia.  
Made in China  
O.I. NO. 3415

www.toysrus.com



## OPERATING INSTRUCTIONS:

### BATTERY INSTALLATION

#### TRANSMITTER:

1. Unscrew to open the battery lid. Insert 2 X AA batteries (see diagram 1).
2. Replace battery cover.

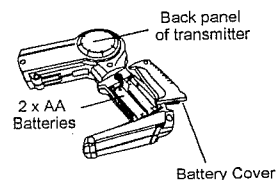 


DIAGRAM 1

### BATTERY LOADING: (WHEN USING 5 "AA" SIZE BATTERY) (FOR MAXIMUM PERFORMANCE, USE ALKALINE BATTERIES)

Remember to take out all batteries from the vehicle and transmitter after playing.

1. Do not mix old and new batteries.
2. Do not mix alkaline, standard (Carbon-Zinc), or rechargeable (Nickel-Cadmium) batteries.

#### CAR :

1. Push the ON/OFF to "OFF" position. (see diagram 2)
2. Locate the battery compartment. (see diagram 2)
3. Insert 5 "AA" batteries into battery clip. (see diagram 2)
4. Load the battery clip into the battery compartment follow the "ARROW" sign. Make sure (+) (-) polarity is correct. (see diagram 2)

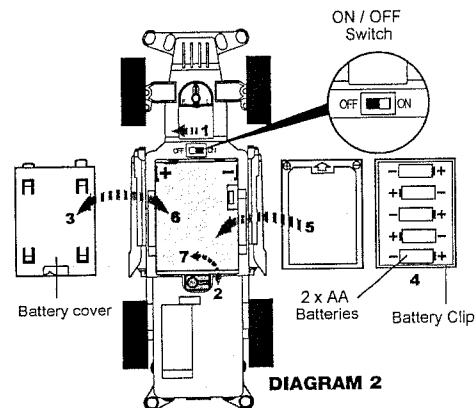 


DIAGRAM 2

### SETTING UP YOUR VEHICLE

1. Build up the antenna by inserting the cable into the antenna tube (included) completely and plug the tube into the vehicle securely. (see diagram 3)
2. Screw the antenna on to the top of the transmitter and extend to full length (see diagram 4).

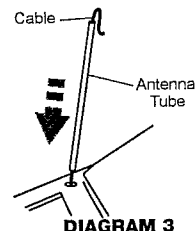 


DIAGRAM 3

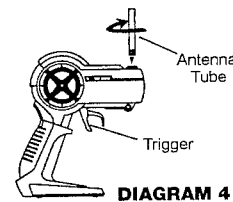 


DIAGRAM 4

### OPERATION

1. Push the vehicle ON/OFF switch to the "ON" position (see diagram 5).
2. Operate the vehicle with the transmitter. (see diagram 7)
3. Turn OFF the vehicle and the transmitter after playing and remove all batteries from the transmitter and the car.
4. To adjust steering alignment, adjust the "Steering Alignment Lever" on the underside of the vehicle when the vehicle does not run straight forward. (see diagram 6)

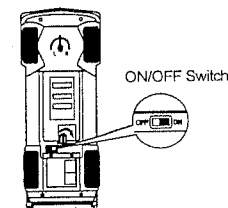 


DIAGRAM 5



DIAGRAM 6

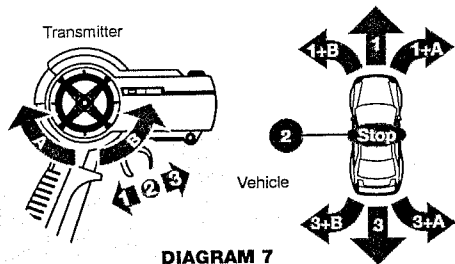 


DIAGRAM 7

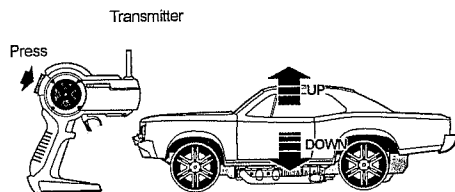 


DIAGRAM 8

### PERFORMANCE TIPS:

1. Operate your vehicle in a safe place. Do not drive in streets. Avoid driving through sand, mud, and water, which can impair the performance of your car.
2. Do not leave your transmitter or car near sources of heat or under direct sunlight for long periods of time.
3. Do not expose your transmitter or car to humidity for long periods of time as dampness can damage interior mechanism.
4. Clean the toy vehicle regularly with a slightly damp cloth.
5. When the vehicle slows down or begins to move erratically, replace with freshly charged battery pack.
6. Concrete walls, metal posts, wire fence, and other electrical appliances and machineries can interfere with the transmission signal of your transmitter and result in erratic performance of your car. In this case, change to a different location.
7. If another radio control car or CB radio is operating at your same location, they will interfere with the performance of your car.

### BATTERY CAUTIONS

1. Do not charge non-rechargeable batteries.
2. Remove rechargeable batteries from the toy before recharging.
3. Rechargeable batteries are to be recharged under adult supervision.
4. Different types of batteries, new and used batteries are not to be mixed.
5. Only batteries of the same or equivalent type as recommended are to be used.
6. Batteries are to be inserted with the correct polarity.
7. Exhausted batteries are to be removed from the toy.

8. The supply terminals are not to be short-circuited.
9. The transformer is not a toy.
10. The toy must be used with the recommended transformer.
11. This toy is not intended for children under 3 years old.
12. Do not charge battery pack that is hot, wet or shows leakage or corrosion.
13. The battery pack may explode if disposed of in fire.
14. Do not disassemble the battery pack.
15. If the battery pack and connectors are wet, thoroughly dry before charging.
16. Overcharging can damage the battery pack. Charge according to recommended time.
17. This toy and all accessories must be periodically examined for potential hazards, and that potentially hazardous parts must be repaired and replaced before use.

### FCC NOTE:

THE ANTENNA PROVIDED IS A UNIQUE ANTENNA. BY INSTALLATION OF UNAUTHORIZED ANTENNA TO THIS EQUIPMENT. SUCH UNAUTHORIZED INSTALLATION COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.