



## WIRELESS MOUSE &amp; CHARGER

Model: SCA61




User Guide

## Installing the batteries

**WARNING:** Use only rechargeable batteries with this mouse. Never use conventional disposable batteries with this product as they may explode if charged and/or you will damage the mouse and charging cradle/receiver.

1. Open the battery cover.
2. Insert the 2 "AAA" Ni-MH rechargeable batteries (included) into the battery compartment. Make sure that the (+) and (-) poles are correctly aligned.
3. Close the battery cover.

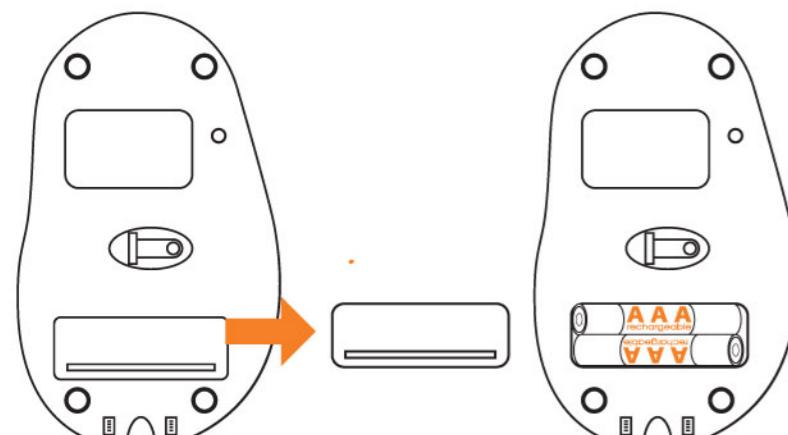

**Note:** When charging batteries for the first time, be sure to charge them for 12 hours without interruption. Make sure the computer's power saving function is turned off during this initial charging phase.

## In the box



Wireless Optical Mouse



Charging Cradle/Receiver




2 (AAA) Ni-MH Rechargeable Batteries




User Guide

## Location of controls

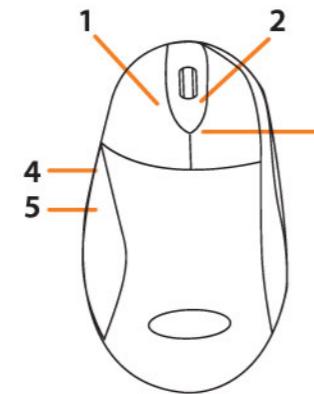


## Mouse (front):

1. Left-click button
2. Right-click button
3. Scroll wheel / third button
4. Forward button / fourth button
5. Backward button / fifth button

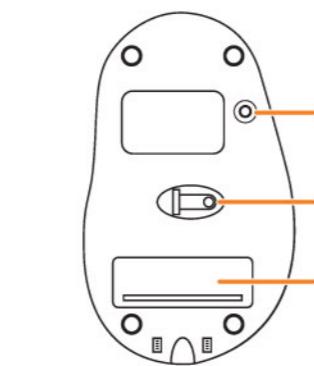

## Mouse (back):

6. Connect button - mouse
7. Optical sensor
8. Battery compartment

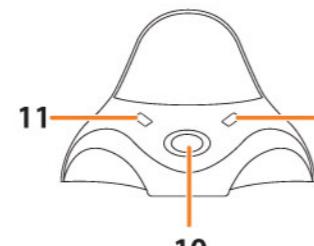


## Cradle/Receiver:

9. Fully charged indicator (shows fully charged status)
10. Connection indicator (shows connection status)
11. Charging indicator (shows charging status)

## Connecting to a computer

1. Insert the USB cable of the cradle/receiver into an available USB port on your computer. The device driver will install itself at this point. Wait for the "Device is ready to use" message in the taskbar.
2. Place the mouse into the charging cradle/receiver to charge the batteries.
3. The connection indicator (middle of cradle) will turn solid blue when connected to a computer.
4. The charging indicator (left side of cradle) will turn solid red when the batteries are charging and will turn OFF when the batteries are fully charged.
5. When the mouse is fully charged, the fully charged indicator (right side of cradle) will turn solid green.
6. The mouse will shut itself off after 30 minutes of inactivity to conserve battery power. If it is not responding, press any button or the scroll wheel to "wake up" the mouse.

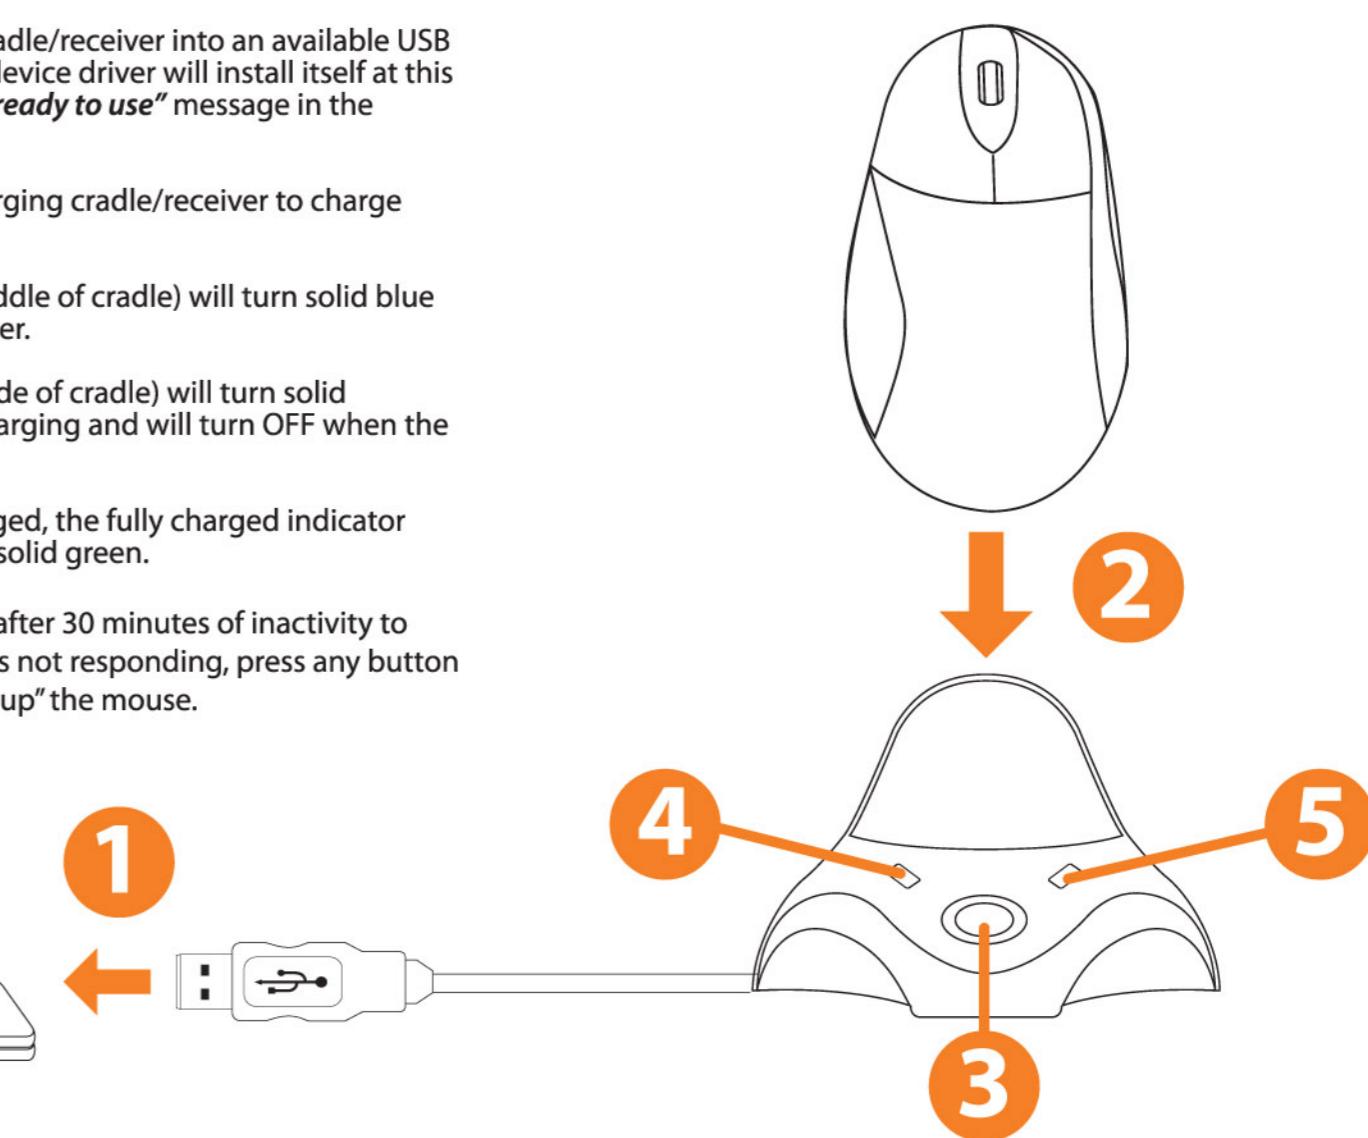

## FCC information

## FCC Part 15:

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Do not attempt to repair or modify this equipment.

Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

"This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation."

## Limited warranty

## Warranty:

In the unlikely event that this product is defective or does not perform properly, you may within ninety (90) days from your original date of purchase return it to the authorized service center for repair or exchange.

## TO OBTAIN WARRANTY SERVICE:

- Provide proof of the date of purchase within the package (Dated bill of sale).
- Prepay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping, will require you to file a claim with the carrier.

The shipping address of the authorized service center is:

Southern Telecom, Inc.  
ATTN: Returns Department  
14-C 53rd Street  
Brooklyn, NY 11232

IN NO EVENT WILL SOUTHERN TELECOM, INC., ITS MANUFACTURERS, DISTRIBUTORS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) RELATED TO THIS PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY.

Should you have any questions or problems concerning this product, please contact our customer service department at:

1-877-768-8483 (Toll Free)  
Monday - Thursday: 9AM - 5PM (EST)  
Friday: 9AM - 3PM (EST)  
cs@southerntelecom.com