



USER'S GUIDE
V: 924-01



TBDB863B 8" Capacitive Multi-touch Tablet

For the most up-to-date version of this User's Guide, go to
www.zekitablet.com

Warnings and Precautions

- **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- **AVERTISSEMENT:** Pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Do not place this unit directly onto furniture surfaces with any type of soft, porous, or sensitive finish. As with any rubber compound made with oils, the feet could cause marks or staining where the feet reside. We recommend using a protective barrier such as a cloth or a piece of glass between the unit and the surface to reduce the risk of damage and/or staining.
- **PRÉCAUTION:** *Danger d'explosion si les piles sont remplacées de façon incorrect. Remplacer les piles seulement par le même type de pile ou l'équivalent.*
- **WARNING:** The battery, batteries, and battery pack shall not be exposed to excessive heat such as sunshine, fire, or the like.
- **WARNING:** Lithium batteries, like all rechargeable batteries are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never be incinerated since they might explode.
- **WARNING:** Shock hazard - Do Not Open.
- **AVIS: RISQUE DE CHOC ÉLECTRIQUE - NE PAS OUVRIR**
Mains Plug or Direct plug-in adapter is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the Mains Plug or Direct plug-in adapter should be disconnected from the mains socket outlet completely.

La fiche d'alimentation ou adaptateur de courant est utilisé comme dispositif de déconnexion et doit rester accessible pendant l'utilisation. Pour mettre l'appareil hors tension, la fiche ou adaptateur de courant doit être débranché de la prise de courant.



WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of unisolated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

Important Safety Instructions

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.



Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

- 12.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. DO NOT place objects on top of the device, as objects may scratch the screen.
16. DO NOT expose the device to dirty or dusty environments.
17. DO NOT place the device on an uneven or unstable surface.
18. DO NOT insert any foreign objects into the device
19. DO NOT expose the device to strong magnetic or electrical field.
20. DO NOT expose the device to direct sunlight as it can damage the LCD Screen.
21. Keep it away from heat sources.
22. The device and the adapter may produce some heat during normal operation
23. Clean the touch screen with a soft cloth. If needed, dampen the cloth slightly before cleaning.

Never use abrasives or cleaning solutions.

24. Disconnect the device from an electrical outlet and power off before cleaning the device
25. DO NOT disassemble the device, only a certified service technician should perform repair.
26. Please select a suitable volume and avoid loud sounds while using the headphones
27. Only use the original charger supplied with this device.
28. Please do not disconnect the device while downloading and uploading, or it may cause application errors.

FCC Warnings

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Additional Warnings

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.

L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.

- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.

- Caution marking is located at the rear or bottom of the apparatus.

Attention marquage est situé sur le panneau arrière ou inférieur de l'unité.

- The marking information is located at the rear or bottom of apparatus.

Le marquage est situé sur le panneau arrière ou inférieur de l'unité.

Table of Contents

- Table of Contents..... 4-5
- 8" Capacitive Multi-touch Tablet..... 6
 - Features
 - Included
- Setup..... 7
 - Power
 - Charging
 - Sleep Timer
- Introduction 8-9
- Basic Use 10
 - Unlocking the Screen
 - Customizing the Lock Screen
 - Orienting Your Tablet
- Connecting to the Internet..... 11
 - Connecting to Wireless Internet
- Connecting Bluetooth 12
 - Connecting to Bluetooth
- Browser..... 13
 - Navigating the Browser
- Email 14
 - Setting Up an Email account
 - Manually Configuring an Email account
- Getting to Know Your Tablet 15
 - Touch Screen
 - Notifications

Table of Contents

On-Screen Introduction..... 16

Icons You Should Know

Screen..... 17

Changing the Background

Changing Screens

Viewing Open items

Apps..... 18-19

Accessing the App Menu

Adding Apps to the Home Screen

Removing Apps from the Home Screen

Managing Apps

Removing Apps

Camera & Video Camera 20

Using the Camera

Using the Video Camera

Accessing Saved Photos and Videos

Transferring Files..... 21

Transferring Files with a Computer

Connectivity 22

Connecting to a TV

Connecting a Micro SD card

Removing a Micro SD card

Company Information 23

International Support

Contact Information

Warranty

Green Initiative

7" Capacitive Multi-touch Tablet

Features

- Supports Bluetooth v4.0
- 8" LCD display
- Capacitive touchscreen
- Full color touch LCD display
- Android OS 4.1.1 Jelly Bean
- 1.5 GHz processor (running in 1.2 GHz battery optimizing mode)
- Built-in 1GB RAM
- Built-in WiFi 802.11 b/g/n
- 8GB installed flash memory
- Expandable memory
- G-Sensor for screen rotation
- 800 x 600 native resolution
- Front facing camera
- Built-in microphone
- Digital video: MOV, MKV, AVI, RM, RMVB, FLV, WMV, MP4, VOB
- Digital audio: MP3, WMA (non-DRM), WAV
- Digital photos: JPEG, BMP, PNG
- eBooks: PDF, PDF DRM, EPUB, EPUB DRM
- Preloaded Apps: Opera Mobile, Soc.io App Mall, Soc.io e-Reader, and eMusic
- Basic Apps: Music Player, Movie Player, Photo Viewer, Web Browser, Email, Camera
- Amazon App Store
- Browser: Google Chrome
- Mini-HDMI output (1080p)
- Micro-SD memory card reader
- Micro-USB port
- 3.5mm headphone jack
- Built-in speaker
- DC battery power: built-in rechargeable lithium polymer battery
- DC battery power: 3000 mAH battery
- Battery life: ~2.5 hours

Included

- Micro-USB to USB cable
- One set of stereo earbuds
- AC/DC power adapter

 
Note: Flash isn't available with Chrome for Android.

Note: Specifications are subject to change without prior notice.

Setup

Power

Requires an AC/DC power adapter (included)

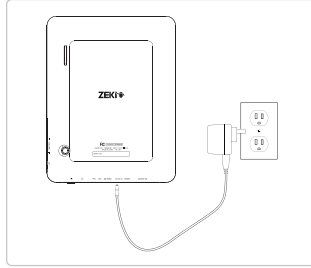

Charging

Initial charge time ~10 hrs.

When the **Battery Indicator**  signals that the power is running low, connect the tablet to an AC outlet using the included adaptor.

A warning will also display on the screen stating that the battery is low.

Note: It is normal for the tablet surface to become warm during charging or long periods of use.

 
Note: If the tablet is not being used regularly, it is recommended to charge the battery fully once a month.

Sleep Timer


In order to conserve battery, the tablet will shut off after a certain period of time and enter sleep mode.

1. To adjust the time it takes to enter sleep mode, press the **Settings**  button.
2. Select **Display**.
3. Select **Sleep** and choose how long it takes the tablet to enter sleep mode.
4. To manually enter sleep mode, press the **Power** button.

Introduction

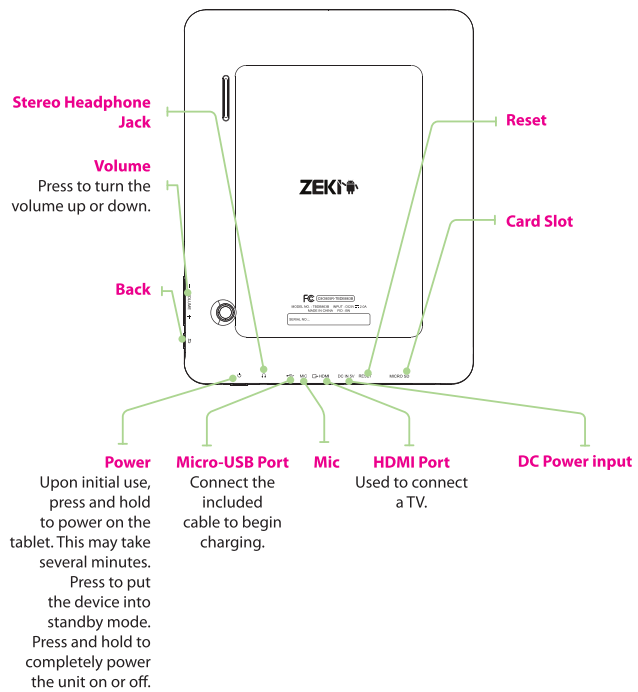

Introduction

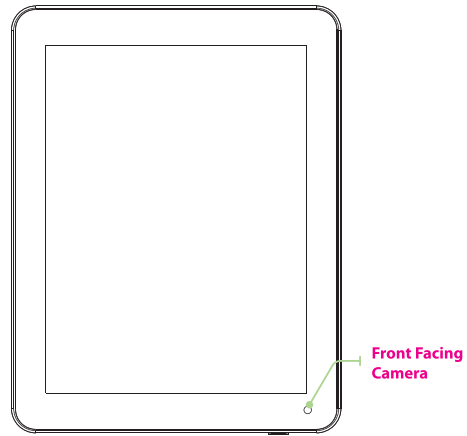 


Basic Use

Unlocking the Screen



Upon first use, you will notice your tablet prompts you to unlock the screen to begin use.

 1. To do this, place your finger on the **Lock**  icon, and drag it toward the **Unlock** icon.

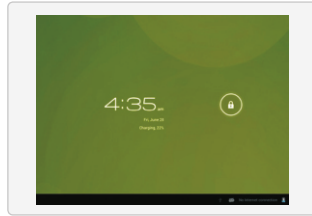

Customizing the Lock Screen

  1. To add a password, PIN, or unlock pattern, press the **Settings**  button.
2. Select **Security** from the menu.
3. Select the desired security method and follow the instructions on screen.

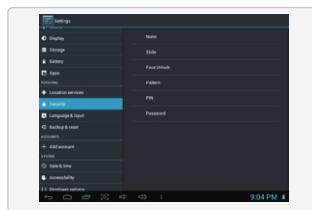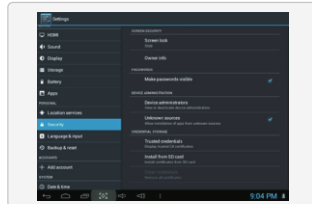

Orienting Your Tablet

The tablet can be oriented horizontally or vertically.

To change the orientation, rotate the tablet to the desired position.

The screen will rotate automatically.



Connecting to the Internet

Connecting to Wireless Internet

 
1. Press the **Settings**  icon.
2. Locate the **Wi-Fi**  setting and slide it to the **On** position.
3. Select a network from the list of available networks.

To refresh the list of available networks, press the **Scan**  button.

To manually add a network, select the **Add Network**  button.

4. Select **Connect** from the pop up menu.
5. If the network is secured with a password, enter the password to continue.
6. Once finished connecting, the display will show **Connected** under the name of the network.



To conserve battery life, turn off Wi-Fi when not in use.

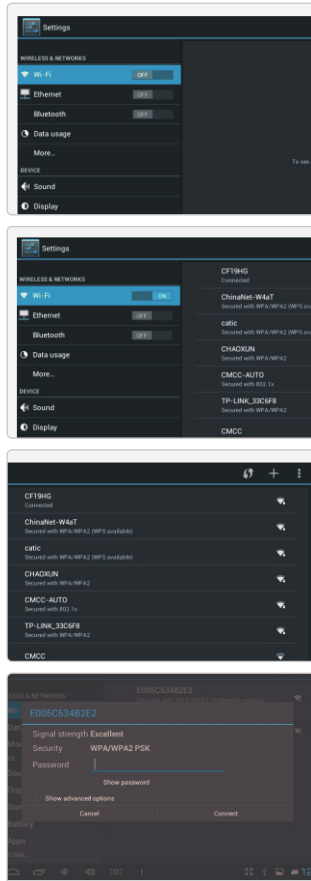

Connecting Bluetooth

Connecting to Bluetooth

  1. Press the **Settings**  icon.
2. Locate the **Bluetooth** setting and slide it to the **On** position.
3. Press Bluetooth. The tablet will scan and displays all available Bluetooth devices in range
If your tablet stops scanning before your Bluetooth device is ready, touch SEARCH FOR DEVICES.
4. Press the name of the Bluetooth device in the list to pair with it.
5. If you're prompted to enter a password, try entering 0000 or 1234, or consult the user manual came with the device.
6. Once connected, the display will show PAIRED DEVICES above the name of the device.

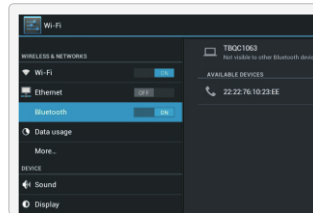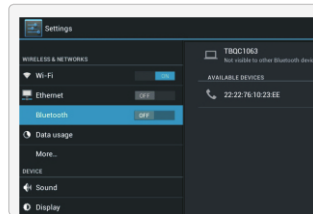

Browser

Navigating the Browser

Make sure you are connected to the internet before attempting to use the browser.

1. Press the **Browser** icon.
2. Tap the navigation bar at the top of the page
3. The on-screen keyboard will automatically appear.
4. Type in a web address or a search term and hit **Enter** to begin browsing.

