 


Email

Setting Up an Email account

1. Press **Email** icon under App menu.
2. Enter your email address and password, then press **Next**.

 
If this does not work, you will need to manually configure your account. Before attempting to configure manually, re-enter you email and password to make sure they are correct.

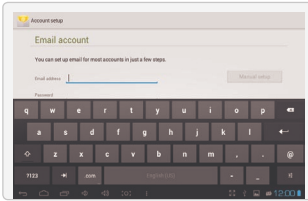

Manually Configuring an Email account

It is recommended to consult an IT professional before attempting to manually configure your email address.

1. To set up your email manually, detailed information is required. Check your provider's website or phone support for individual provider information.
2. The first thing you will need to determine is the server type. While most servers are POP3, IMAP and Exchange are also supported services.
3. Enter your email address and password then press **Next**.
4. Fill in all information for the Incoming server portion of the manual setup.
5. Press **Next** and the app will test your settings.
Wi-Fi is required to be active for this step.
6. Fill in all information for the Outgoing server settings.
7. Press **Next** and the app will test your settings.
Wi-Fi is required to be active for this step.

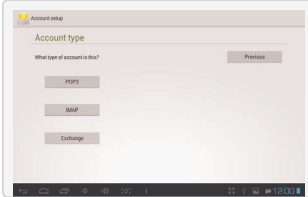

Getting to Know Your Tablet

Touch Screen

With capacitive touch, your tablet is able to recognize a wide variety of touch functions.

Tap

Briefly tap an icon or menu item.

Swipe (Fig. 1)

In the home screen, press down gently and move your finger across the screen.

Drag (Fig. 2)

 
 
Tap and hold an icon until it becomes active, then move your finger to drag it.

Hold

Press and hold an item (such as a photo in your internet browser) to see additional menu options.

Pinch to Zoom (Fig. 3)

Place two fingers on the screen and slide them apart to zoom in. Slide them back together to zoom out.

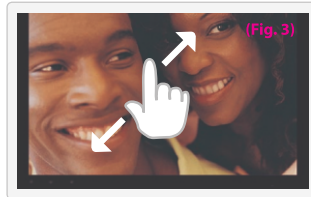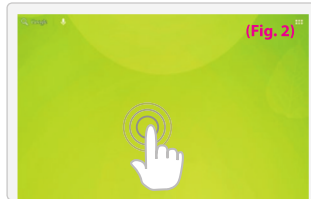

Notifications

Items will display in the lower right hand corner of your screen alerting you to activity such as the progress of a download, or a new email message.



On-Screen Introduction

Icons You Should Know

Camera

Gallery

Settings

Browser

Music

**Battery Indicator**
Indicates how much power the tablet has. When red, the tablet needs charging

**Screens**
Press to view all running applications and windows.

**Wifi Indicator**
Indicates if a WiFi signal is available and the strength of a connected signal.

**Menu**
Press to view the menu.

**Lock**
Indicates the tablet is locked. The tablet will not function unless unlocked.

**App Menu**
Press to view all running applications and windows.

**Back**
Press to return to a previous screen.

**Search**
Press to begin a Google search of the internet.

**Home**
Press to return to the home screen.

**Settings**
Press to access the settings menu.

**Screen Capture**
Press to capture an image of the current screen.

Screen

Changing the Background

1. Press the **Menu** button.
2. Select **Wallpaper** from the pop up menu.
3. Select from Live Wallpapers, pre-loaded wallpapers, or choose a photo from the gallery.
4. Select a picture to change the current wallpaper.



Changing Screens

When the tablet is turned on, it will default to the home screen. However, by swiping the screen, you can access screens to the left and right of the home screen. Apps and widgets may be dragged onto these screens as well.



Viewing Open items

By pressing the **Screens** button, you can see all running applications.

 
 


Apps

Accessing the App Menu

1. Press the **App Menu**  button in the upper right hand corner.
2. This will load the App menu, which shows all installed apps and widgets.

Note: App menu is reflective of apps installed on the tablet and will likely change from the figure shown.

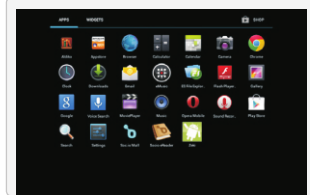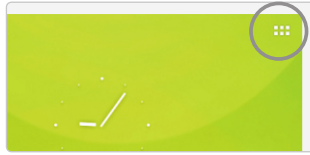

Adding Apps to the Home Screen

1. Press the **App Menu**  button in the upper right hand corner.
2. Press and hold on an icon and wait for the screen to appear. Drop the icon wherever it is desired.

To add the icon to a screen other than the home screen, drag it to the left or right.



 
Removing Apps from the Home Screen

1. Press and hold the desired icon.
2. Drag it to the **Remove** option at the top of the screen.

Apps


Managing Apps

1. Press the **Menu**  button.
2. Select **Manage Apps**.
3. From this menu you can view and modify all installed apps.

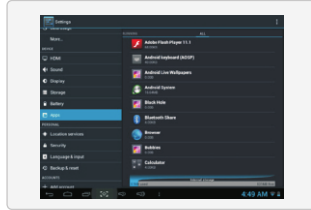

Removing Apps

 1. Press the **Menu**  button.
2. Select **Manage Apps**.
3. Select the app you want to uninstall.
4. Press the **Uninstall** button.
5. The tablet will prompt ask you if you're certain you want to uninstall this app, select **Ok**.
6. The app will be uninstalled.

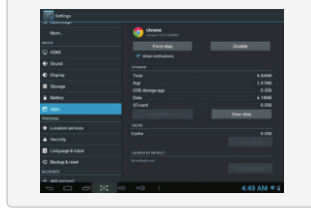

Warning: The selected app and all related content will be completely removed from the tablet.

 
Note : The apps pre-loaded onto the unit can not be uninstalled.

Camera & Video Camera

Using the Camera

1. Press the **Camera** icon.
2. Select the **Camera** button to switch to Camera mode.
3. Press the blue **Capture** button to take a picture.


To view the picture just captured, press the small preview in the upper right hand corner.

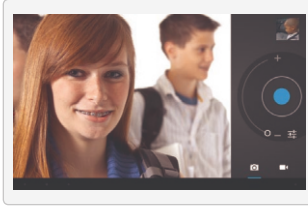

Using the Video Camera

1. Press the **Camera** icon.
2. Press the **Video** button to switch to Video mode.
3. Press the red **Capture** button to begin taking a video.
4. Press the button again to end the recording.

 
To view the recording just captured, press the small preview in the upper right hand corner.

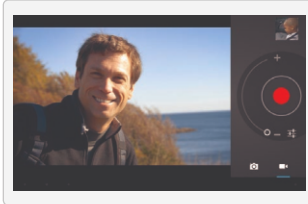

Accessing Saved Photos and Videos

1. Press the **Gallery** icon.
2. Select the desired folder.
3. Select an individual photo or video to enlarge and view it.

 Use the Pinch to Zoom touch action to zoom in further.

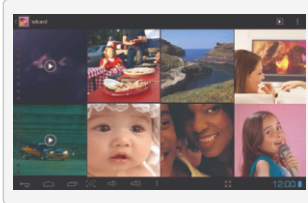

Transferring Files

Transferring Files with a Computer

1. To begin transferring files to your computer, plug one end of the included Micro-USB to USB cord into the unit, and the other into the USB port on a computer.
2. Press the **USB** icon in the lower right hand corner.
3. Select USB Connected.
4. Press the **Turn On USB Storage** button.

Using the native controls, accept any prompts on the connected computer.

 
5. You will now be able to transfer files to and from your computer.
6. To end the sessions, press the **Turn Off USB Storage** button.



Connectivity

Connecting to a TV

Connect one end of a HDMI cable (not included) to the **HDMI Port** and the other end to the HDMI input on a television.

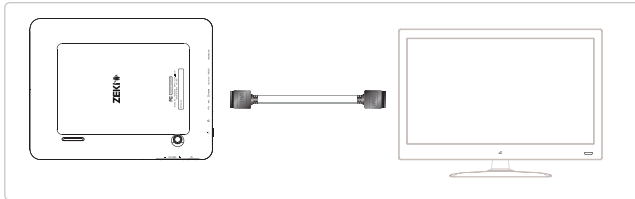


Connecting a Micro SD card

1. Turn off the tablet using the **Power** button.
2. Insert the Micro SD Card into the **Card Slot**.
3. To access the content on the Micro SD Card, go to the Apps menu by pressing the **Apps Menu** button.
4. Press the **ES Explorer** icon.

If you cannot locate this icon, please make sure you have installed the pre-loaded Zeki apps.

 5. Press **extsd** to view the contents of the card.

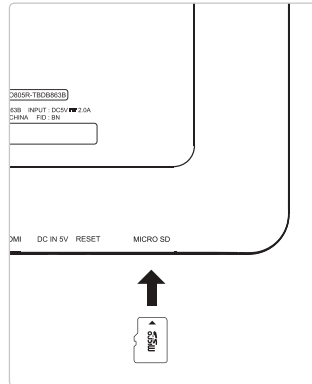

Removing a Micro SD card

1. Press the **Settings** button to access the settings menu.
2. Select **Storage**.
3. Select **Unmount Micro SD CARD**.
4. Remove the card from the tablet by gently pushing it until it pops out.

Company Information

International Support

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at www.zeki-tablet.com.

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en www.zeki-tablet.com.

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur www.zekitablet.com.

Contact Information

Email Support: prodinfo@dpiinc.com

Email Parts: partsinfo@dpiinc.com

Phone Support: 1-888-999-4215

Website: www.zekitablet.com

Warranty

For Warranty Information and the most up-to-date version of this User's Guide, go to: www.zekitablet.com

Green Initiative



Environmental Commitment to 'Protect for Today and Sustain for Tomorrow'
On a continual basis DPI, Inc. is making efforts to sustain the environment and improve the recyclability of its products and packaging.

Focusing on "protecting for today and sustaining for tomorrow" DPI, Inc. has committed to reducing packaging size, increasing the usage of recyclable plastics, and ensuring that packaging and manuals are made with up to 85% recycled material. In addition to material consideration, DPI, Inc. has also focused on the finer details that positively impact the environment such as employing the usage of soy-based inks.

DPI, Inc. also ensures that the factories that produce the company's wide variety of consumer electronics adhere to environmentally friendly air and water restrictions. This is yet another example that every step of the way DPI, Inc. is making efforts to lessen any impact on the environment.

DPI, Inc. also engages in conversations with Energy Star in order to ensure that the consumer electronics being produced meet high standards of energy efficiency. The ultimate goal is keeping energy costs for consumers low while providing quality, feature-rich products.