



USER'S GUIDE
V: 625-01



TB782B

7" Capacitive Multi-touch Tablet

For the most up-to-date version of this User's Guide, go to
www.zekitablet.com

Warnings and Precautions

- **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- **AVERTISSEMENT:** Pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.
- **CAUTION:** Use of any controls or adjustments or performance of procedures other than those herein specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Do not place the unit on top of any soft, porous, or sensitive surfaces to avoid damaging the surface. Use a protective barrier between the unit and surface to protect the surface.
- **WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- **PRÉCAUTION:** Danger d'explosion si les piles sont remplacées de façon incorrect. Remplacer les piles seulement par le même type de pile ou l'équivalent.
- **WARNING:** The battery, batteries, and battery pack shall not be exposed to excessive heat such as sunshine, fire, or the like.
- **WARNING:** Lithium batteries, like all rechargeable batteries are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never be incinerated since they might explode.
- **WARNING:** Shock hazard - Do Not Open.
- **AVIS: RISQUE DE CHOC ÉLECTRIQUE - NE PAS OUVRI**

Mains Plug or Direct plug-in adapter is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the Mains Plug or Direct plug-in adapter should be disconnected from the mains socket outlet completely.

La fiche d'alimentation ou adaptateur de courant est utilisée comme dispositif de déconnexion et doit rester accessible pendant l'utilisation. Pour mettre l'appareil hors tension, la fiche ou adaptateur de courant doit être débranché de la prise de courant.

Do not mix old and new batteries.
Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.
No mezcle baterías viejas y nuevas.
No mezcle baterías alcalinas, estándar (carbono-zinc) o recargables (ni-cad, ni-mh, etc.).



WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Important Safety Instructions

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.

12.  Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Special note: When placing your unit on a lacquered or natural finish, protect your furniture with a cloth or other protective material.

Additional Warnings

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.
- Caution marking is located at the rear or bottom of the apparatus.
Attention marquage est situé sur le panneau arrière ou inférieur de l'unité.
- The marking information is located at the rear or bottom of apparatus.
Le marquage est situé sur le panneau arrière ou inférieur de l'unité.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

Table of Contents

7" Capacitive Multi-touch Tablet	6
Features	
Included	
Setup	7
Power	
Charging	
Features Introduction	8
Basic Introduction	9
WiFi	10
Connecting to WiFi	
Getting to Know Your Tablet	11
Touch Screen	
Notifications	
On-Screen Introduction	12
Icons You Should Know	
Basic Use	13
Unlocking the Screen	
Customizing the Lock Screen	
Orienting Your Tablet	
Screen	14
Changing the Background	
Changing Screens	
Viewing Open items	
Apps	15-16
Accessing the App Menu	
Adding Apps to the Home Screen	
Removing Apps from the Home	
Managing Apps	
Adding Apps	
Removing Apps	

Table of Contents

Multimedia	17
Using the Camera	
Using the Video Camera	
Multimedia	18
Using Panorama Mode	
Accessing Saved Photos and Videos	
Transferring Files	19
Transferring Files with a Computer	
Connectivity	21
Connecting to a TV	
Connecting a Micro SD card	
Removing a Micro SD card	
Support & FAQ	22
How do I....?	
Troubleshooting	
Support & FAQ	23
Company Information	24
International Support	
Contact Information	
Warranty	
Green Initiative	

7" Capacitive Multi-touch Tablet

Features

- 7" TFT LCD display
- Capacitive touchscreen
- 4.0.3 Android Operating System
- 1 GHz Processor
- 1GB RAM
- 800 x 480 native resolution
- Built-in WiFi
- G-Sensor for screen rotation
- 0.3MP Camera
- Digital video: MOV, MKV, AVI, RM, RMVB, FLV, WMV, MP4, VOB
- Digital audio: MP3, WMA (non-DRM), WAV
- eBooks: PDF, PDF DRM, TXT, EPUB DRM, HTML
- Expandable memory
- 8GB installed flash memory
- Built-in speaker
- Micro-SD memory card reader:
- supports JPEG, MP3
- Mini-USB port for battery recharge
- Mini-HDMI output (1080p)
- Battery life: ~3.5 hours
- DC battery power: 2800 mAH battery
- DC battery power: built-in rechargeable battery


Included

- Mini-USB to USB cable
- One set of stereo earbuds
- AC/DC power adapter

Setup

Power

Requires an AC/DC power adapter (included)

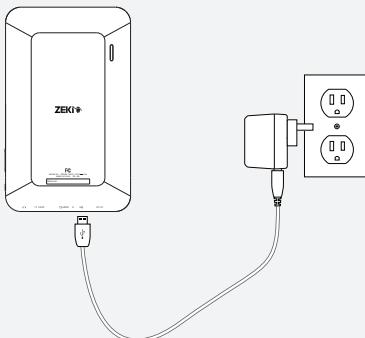


Charging


When the **Battery Indicator** signals that the power is running low, connect the tablet to a power source using the included Mini-USB to USB charging cable.

A warning will also display on the screen stating that the battery is low.

Connect the tablet to an AC outlet using the included adaptor, or connect the included Mini-USB to USB to the USB port on a powered on computer to charge.

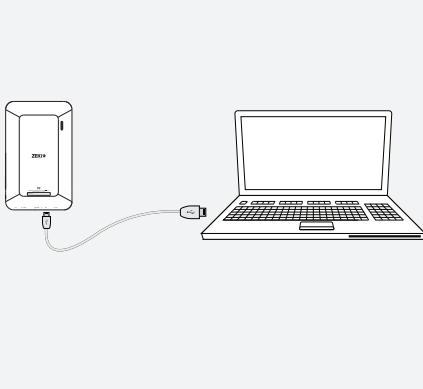

Introduction

 

Power

Press to put the device into standby mode. Press and hold to completely power on or off.


Volume

Press to turn the volume up or down.

Card Slot

Mini-USB Port

Connect the included cable to begin charging.

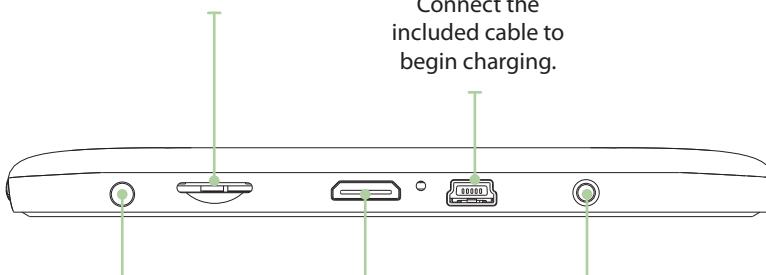


Stereo Headphone Jack

HDMI Port
Used to connect a TV.

DC Power input

Introduction

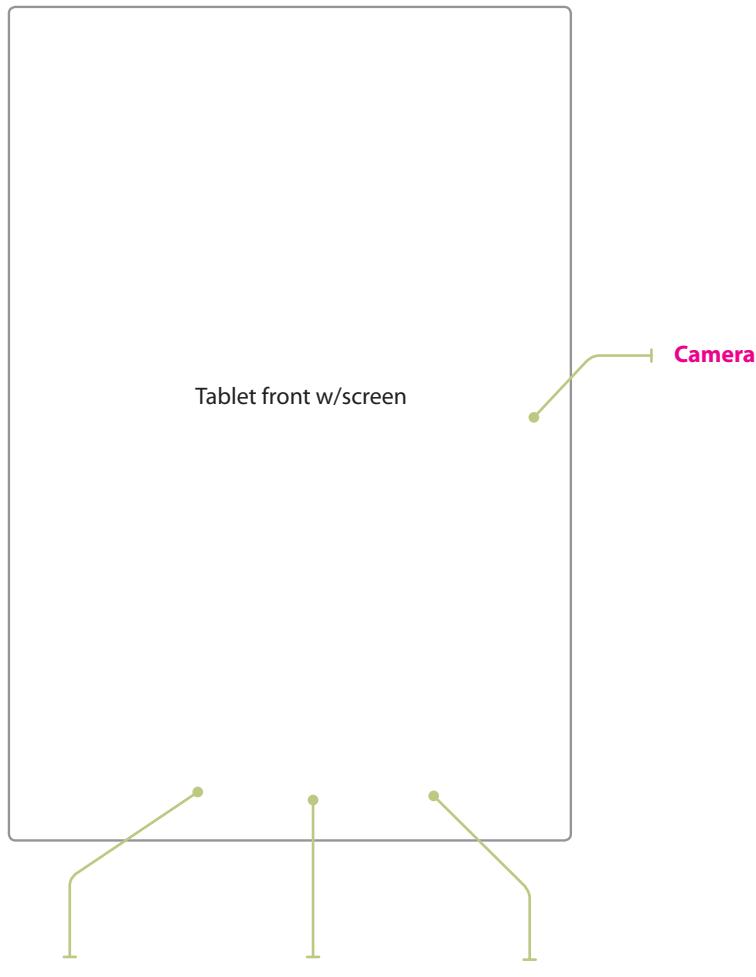

Menu
Press to access
the menu.

Home
Press to return to
the home screen.

Back
Press to return to the
previous screen.

Connecting to the Internet

Connecting to Wireless Internet





1. Press the **Settings** Icon.
2. Locate the **Wi-Fi** icon and slide it to the **On** position.
3. Select a network from the list of available networks.

*To refresh the list of available networks, press the **Scan** button.*

*To manually add a network, select the **Add Network** button.*

4. Select **Connect** from the pop up menu.
5. If the network is secured with a password, enter the password to continue.
6. Once finished connecting, the display will show **Connected** under the name of the network.

To conserve battery life, turn off Wi-Fi when not in use.

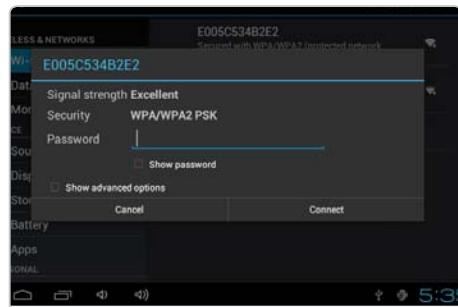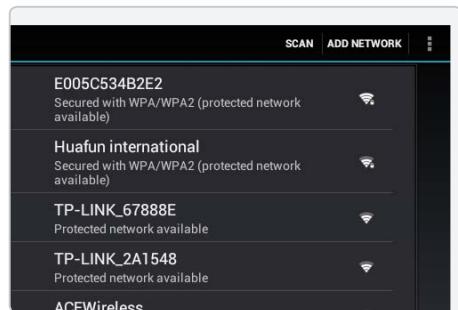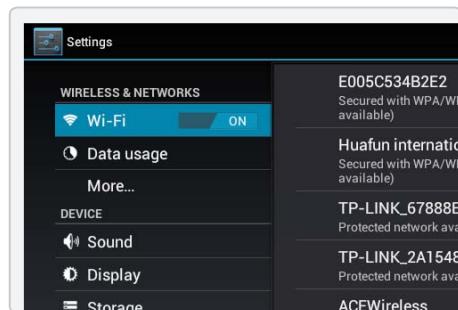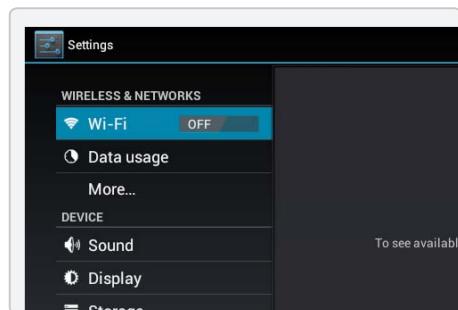


Getting to Know Your Tablet

Touch Screen

With capacitive touch, your tablet is able to recognize a wide variety of touch functions.

Tap

Briefly tap an icon or menu item.

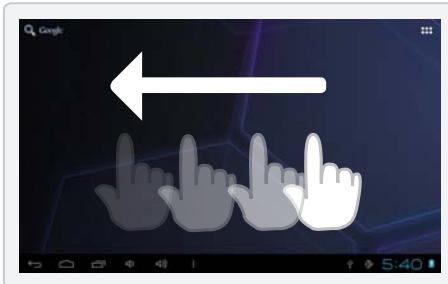


Swipe

In the home screen, press down gently and move your finger across the screen.




Drag

Tap and hold an icon until it becomes active, then move your finger to drag it.

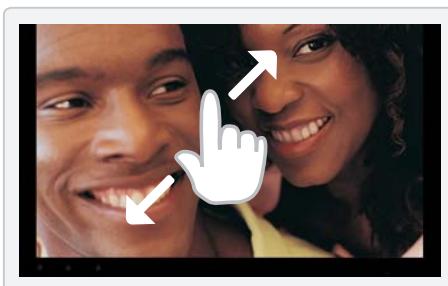

Pinch to Zoom

Place two fingers on the screen and slide them apart to zoom in. Slide them back together to zoom out.

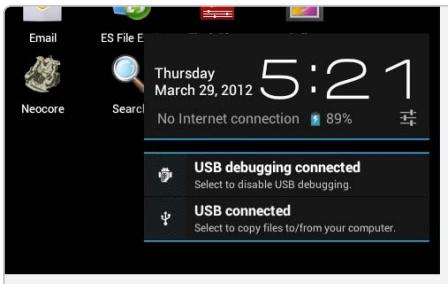


Notifications

Items will display in the lower right hand corner of your screen alerting you to activity such as the progress of a download, or a new email message.

On-Screen Introduction

Icons You Should Know

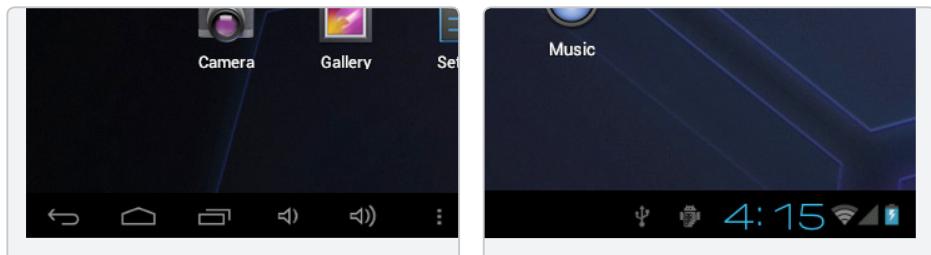

Battery Indicator

Indicates how much power the tablet has. When red, the tablet needs charging



Wifi Indicator

Indicates if a WiFi signal is available and the strength of a connected signal. Press to



Lock

Indicated the tablet is locked. The tablet will not function unless unlocked.



Back

Press to return to a previous screen.



Home

Press to return to the home screen.



Screens

Press to view all running applications and windows.




Menu

Press to view the menu.

Basic Use


Unlocking the Screen

Upon first use, you will notice your tablet prompts you to unlock the screen to begin use. To do this, place your finger on the **Lock** icon, and drag it toward the **Unlock** icon.

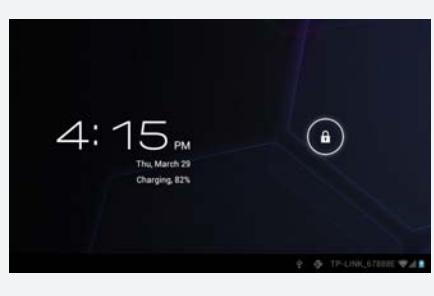

Customizing the Lock Screen

1. To add a password, PIN, or unlock pattern, select the **Menu** button.
2. Select **Security** from the menu.
3. Select the desired security method and follow the instructions on screen.

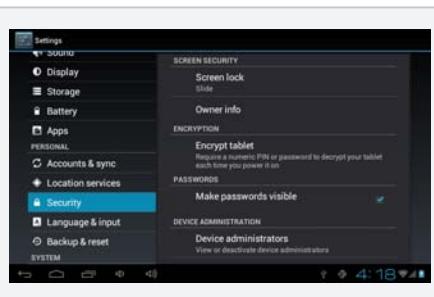

Orienting Your Tablet

The tablet can oriented horizontally or vertically.

To change the orientation, rotate the tablet to the desired position.

The screen will rotate automatically.



Screen


Changing the Background

1. Press the **Menu** button.
2. Select **Wallpaper** from the pop up menu.
3. Select from Live Wallpapers, pre-loaded wallpapers, or choose a photo from the gallery.
4. Select a picture and select **Set as background**.




Changing Screens

When the tablet is turned on, it will default to the home screen. However, by swiping the screen, you can access screens to the left and right of the home screen. Apps and widgets may be dragged onto these screens as well.

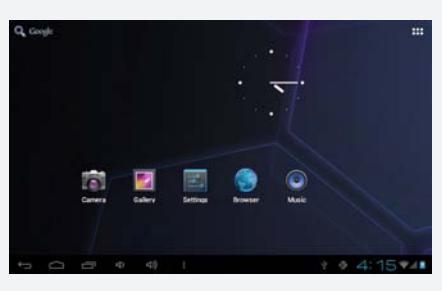

Viewing Open items


By pressing the **Screens** button, you can see all running applications.

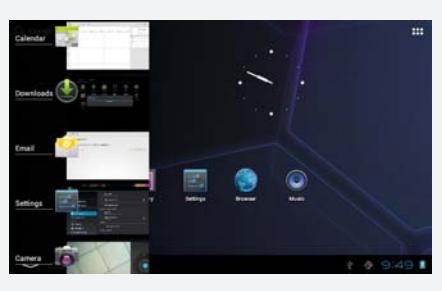

Apps

Accessing the App Menu

1. Press the **App Menu** button in the upper right hand corner.
2. This will load the App menu, which shows all installed apps and widgets.

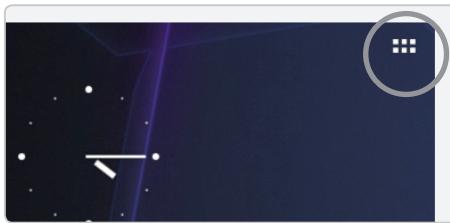

Adding Apps to the Home Screen

1. Press the **App Menu** button in the upper right hand corner.
2. Press and hold on an icon and wait for the screen to appear. Drop the icon wherever it is desired.

To add the icon to a screen other than the home screen, drag it to the left or right.




Removing Apps from the Home Screen

1. Press and hold the desired icon.
2. Drag it to the **Remove** option at the top of the screen.


Apps

Managing Apps

1. Press the **Menu** button.
2. Select **Manage Apps**.
3. From this menu you can view and modify all installed apps.

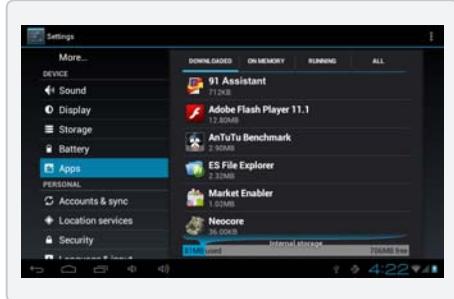

Adding Apps

 

Removing Apps

1. Press the **Menu** button.
2. Select **Manage Apps**.
3. Select the app you want to uninstall.
4. Press the **Uninstall** button.
5. The tablet will prompt ask you if you're certain you want to uninstall this app, select **Ok**.
6. The app will be uninstalled.




Camera & Video Camera

Using the Camera

1. Press the **Camera** icon.
2. Select the **Camera** button to switch to Camera mode.
3. Press the blue **Capture** button to take a picture.

To view the picture just captured, press the small preview in the upper right hand corner.

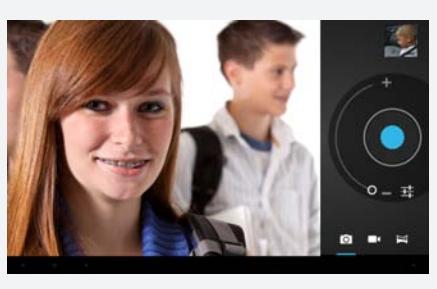

Using the Video Camera

1. Press the **Camera** icon.
2. Press the **Video** button to switch to Video mode.
3. Press the red **Capture** button to begin taking a video.
4. Press the button again to end the recording.


To view the recording just captured, press the small preview in the upper right hand corner.



Accessing Saved Photos and Videos

1. Press the **Gallery** icon.
2. Select the desired folder.
3. Select an individual photo or video to enlarge and view it.

Use the Pinch to Zoom touch action to zoom in further.

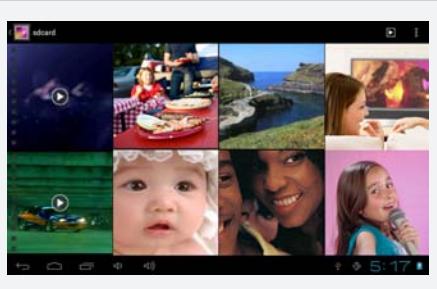

Advanced Camera Operations

Using Panorama Mode

1. Press the **Camera** icon.
2. Press the **Video** button to switch to Video mode.
3. Press the green **Capture** button to start recording a panorama.
4. Pan slowly around the desired area.
5. Press the button again to end the recording.




Transferring Files

Transferring Files with a Computer

1. To begin transferring files to your computer, plug one end of the included Mini-USB to USB cord into the unit, and the other into the USB port on a computer.
2. Press the **USB** icon in the lower right hand corner.
3. Select **USB Connected**.
4. Press the **Turn On USB Storage** button.

Using the native controls, accept any prompts on the connected computer.


5. You will now be able to transfer files to and from your computer.
6. To end the sessions, press the **Turn Off USB Storage** button.

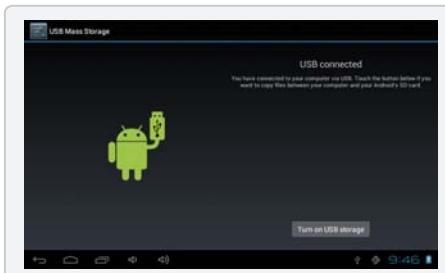

Connectivity

Connecting to a TV

Connect one end of a HDMI cable (not included) to the **HDMI Port** and the other end to the HDMI input on a television.

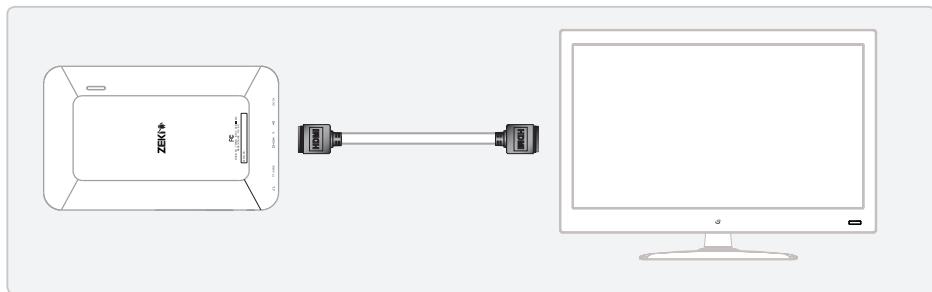

Connecting a Micro SD card

1. Turn off the tablet using the **Power** button.
2. Insert the Micro SD Card into the **Card Slot**.
3. To access the content on the Micro SD Card, go to the Apps menu by pressing the **Apps Menu** button.
4. Press the **Explorer** icon.

Removing a Micro SD card

1. Press the **Settings** button to access the settings menu.
2. Select **Storage**.
3. Select **Unmount Micro SD CARD**.
4. Remove the card from the tablet by gently pushing it until it pops out.

Support & FAQ

How do I....?

How do I unlock my tablet if I forgot the password?

How do I reset my tablet to factory default?

How do I set up my email?

How do I update the tablet/apps?

How do I share my pictures/videos?

How do I install GetJar App Marketplace?

How do I find numbers and symbols on the Touch Screen keyboard?

Troubleshooting

I can't get my tablet to connect to the internet and I know I have wifi, why won't it connect?

My ____ keeps giving me an error. What do I do?

Which drivers do I need?

Why won't my email account sync?

My tablet is behaving strangely. What do I do?

Why can't I hear any audio?

Why won't my video/picture/music file play?

Why is my tablet so hot?

My screen is frozen, what do I do?

How long will it take to fully charge my tablet?

Support & FAQ

Company Information

International Support

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at www.zeki-tablet.com.

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en www.zeki-tablet.com.

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur www.zekitablet.com.

Contact Information

Email Support: prodinfo@dpiinc.com

Email Parts: partsinfo@dpiinc.com

Phone Support: 1-888-999-4215

Website: www.zekitablet.com

Warranty

For Warranty Information and the most up-to-date version of this User's Guide, go to: www.zekitablet.com

Green Initiative



Environmental Commitment to 'Protect for Today and Sustain for Tomorrow' On a continual basis DPI, Inc. is making efforts to sustain the environment and improve the recyclability of its products and packaging.

Focusing on "protecting for today and sustaining for tomorrow" DPI, Inc. has committed to reducing packaging size, increasing the usage of recyclable plastics, and ensuring that packaging and manuals are made with up to 85% recycled material. In addition to material consideration, DPI, Inc. has also focused on the finer details that positively impact the environment such as employing the usage of soy-based inks.

DPI, Inc. also ensures that the factories that produce the company's wide variety of consumer electronics adhere to environmentally friendly air and water restrictions. This is yet another example that every step of the way DPI, Inc. is making efforts to lessen any impact on the environment.

DPI, Inc. also engages in conversations with Energy Star in order to ensure that the consumer electronics being produced meet high standards of energy efficiency. The ultimate goal is keeping energy costs for consumers low while providing quality, feature-rich products.

FCC Statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without RF striction.

Co-located Statement:

This device and its antenna (s) must not be co-located or operation in conjunction with any other antenna or transmitter.