



Registering Guest Passcode [Maximum10 Guests]

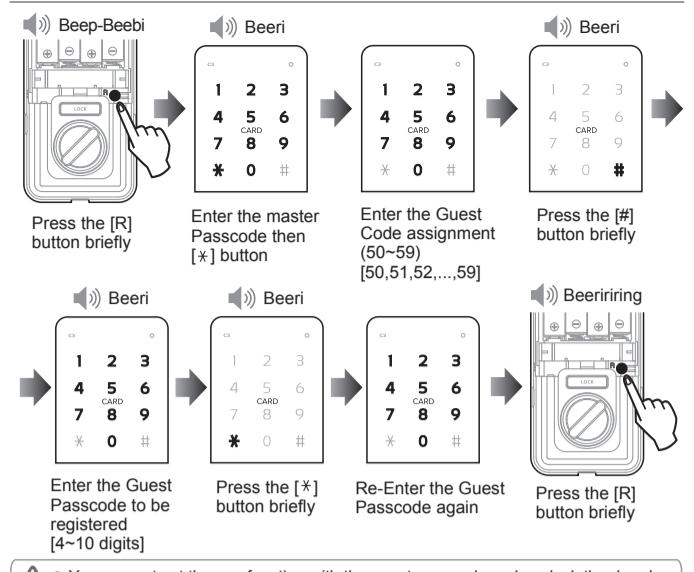


- ⚠ You can not set the any function with the guest passcode, only unlock the door by the guest passcode.
- When Registration authentication mode is set up, it can use guest passcode.
- If you register a new guest passcode in the existing registered address, the existing guest passcode will be deleted.

Delete Individual Guest Passcode

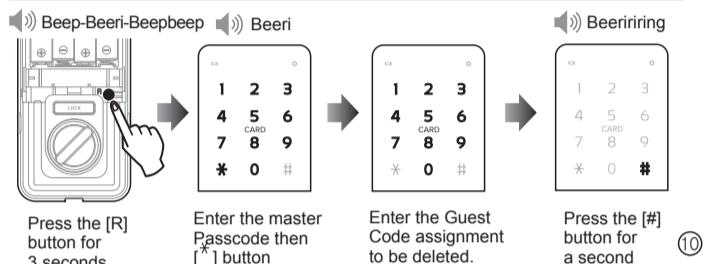


Delete All Guest Passcode

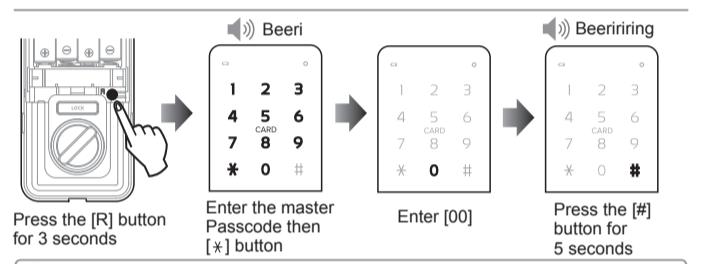


- ⚠ If you turn off registration authentication mode, registered guest passcode will be automatically deleted.

Outgoing Security Mode Feature

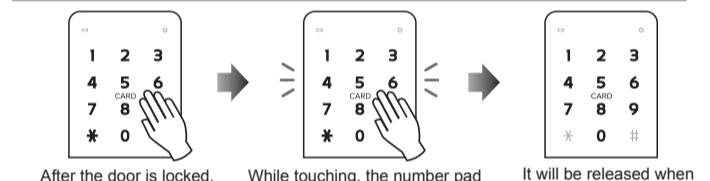


- ⚠ An alarm sounds when someone try to open the door by Thumb-Turn from the inside. It does not work when the magnetic sensor is faulty, malfunction or not recognized the magnet.


Internal Security Mode Feature

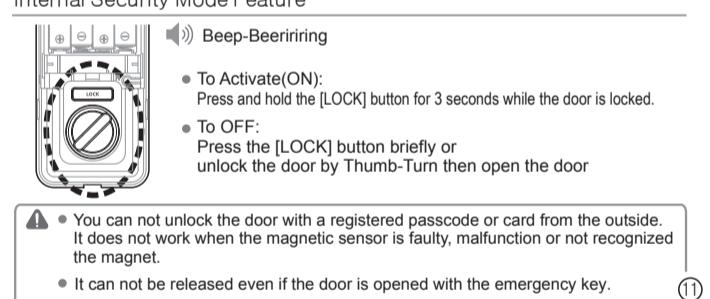

Volume Control Setting

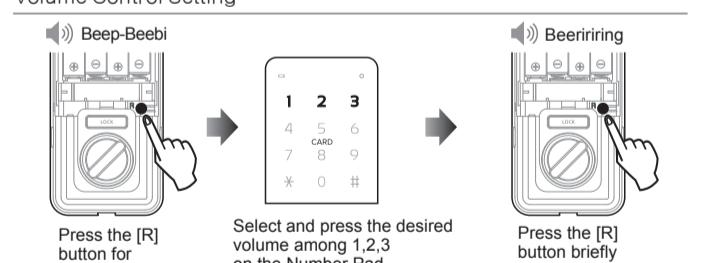


Etiquette Mode Feature

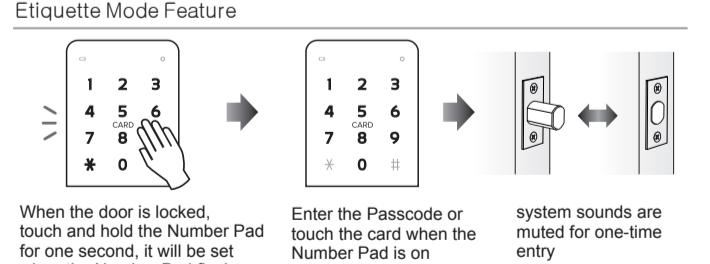

Anti-Peek Feature [Hidden Passcode]

If you are concerned about passcode exposure, you may enter a random number before entering your passcode. [up to 20 digits included passcode] i.e) If your passcode is 1234: (up to 16 random digits) + (your passcode: 1234 [*])

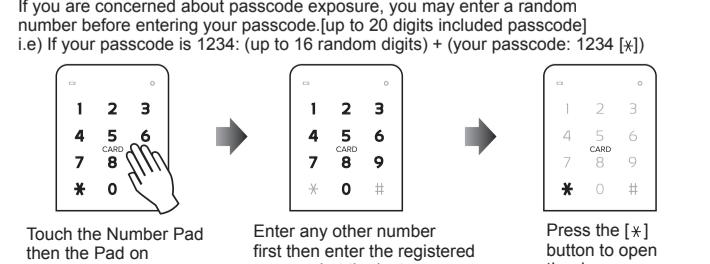

High Temperature Alarm

- If an alarm occurs during an internal fire or a high temperature, the door will automatically unlock.
- The alarm sounds for 3 minutes continuously. [Inside temperature : $158^{\circ}\text{F} \pm 41^{\circ}\text{F}$]
- Temperature may vary depending on installation environment
- It will be off when it is authenticated by registered passcode or cards.
- It will be off when the battery is removed.



Trespass Alarm

- When the door is forcibly unlocked or abnormally unlocked, an audible alarm sounds for 3 minutes continuously.
- It will be activated after 7 seconds from door lock.
- It will be off when it is authenticated by registered passcode or cards.
- It will be off when the battery is removed.



Passcode Error Locked Alarm

- An error sounds when authentication is attempted with an unregistered password or card, if 5 times authentication errors occur, an alarm sounds and all operations stop for 3 minutes.



Low Voltage (Battery) Notification Alert

- If a battery shortage is detected, the alarm sounds during unlock or lock and the low voltage red light indicator on the number pad will blink.
- Replace the batteries immediately
- If the battery is fully discharged, open the door with Emergency Power Contact and 9V battery(6LR61)



Deadbolt Jam Warning

- If the deadbolt does not work properly cause installed incorrectly or mechanically, the alarm sounds when unlocking or locking the door.



Emergency Power Contact

- Contact the 9V Battery(6LR61) to Emergency Power Contact
- Enter the passcode or card in contact state



[Not Included]

① When buying a 9V battery, please purchase replace batteries together
[Change Batteries Spec : 1.5V LR6 AA Size ALKALINE(4ea)]

Soft Reset [All settings are reset except BLE & Z-Wave]

If you suspect that your security is weak due to the leakage of your password or the loss of your registered card, we will reset your registered password and card to improve security.
[When deleting BLE information, delete it from APP of registered smartphone.]

- ⚠ If you do Soft Reset, all settings are reset except BLE & Z-wave information.

