

Contents

Attention	1
1. Appearance and button	2
1.1 Touch panel	2
1.2 POWER	3
1.3 ESC	3
1.4 Menu	3
1.5 Volume +, Volume -	3
1.6 earphone jack	3
1.7 Video output interface	3
1.8 TF card	3
1.9 Mini USB	3
1.10 Reset	4
2. First use	4
2.1 Battery management and charge	4
2.2 Connection with PC	5
3. Equipment operation interface	7
3.1 Main interface describe	7
3.2 status bar describe	8
3.3 Use touch panel	8
4. Equipment basic set	10
4.1 Silent mode	10
4.2 Privacy	11
4.3 Storage	11
4.4 Language & keyboard	12
4.5 Date & time setting	13
4.6 USB Mode Select	13
4.7 About device	13
5. Apps Install and manage	14
5.1 App installer	14
6. Problem solution	14
7. Basic function	15

Attention

This handbook contains important security measures and the correct use of the product information, in order to avoid accidents. Pls make sure to reading the manual carefully before use the device.


- Please don't be in high temperature, moisture or very dust place.
- Please don't be in high temperature, especially in summer don't put the device in the car when Windows closed.
- Avoid fall or Violent collision of the device, don't make the TFT display screen were violent tremor, this could cause TFT display screen abnormal or damage.
- Please choose the appropriate volume, Use headphones should not be too big volume, If feel tinnitus, Lower the volume or stop using it.
- Please charge In the following condition.
 - A、The battery power ICONS shows have no power.
 - B、The system automatically shut off, startup after power off soon.
 - C、Operation buttons no response.
 - D、The machine that the top right corner show red icons.
- When the device in the format or ongoing upload and download file, please don't suddenly disconnect, this could cause application error.
- For those who because of damage to the product, repair, or other causes of erased the memory, the company shall not be liable for any responsibility, please follow the user manual for the standardized operation to use the device.
- Don't disassemble the product, don't use alcohol、Thinner or benzene to scrubbing products.
- Don't use the device one of the place of prohibit to use electronic equipment in regional (such as the plane).
- Please don't using the Tablet PC when you in driving or walking down the street.
- USB just only be used for data transmission.

The company reserves the right to improve product, products specification and design have any change, and the information is subject to changes without prior notice.

(This tablet is no waterproof function)

【Remark】 All pictures in this manual is just for your reference. Products specification and design have any change; the information is subject to changes without prior notice.

1. Appearance and button

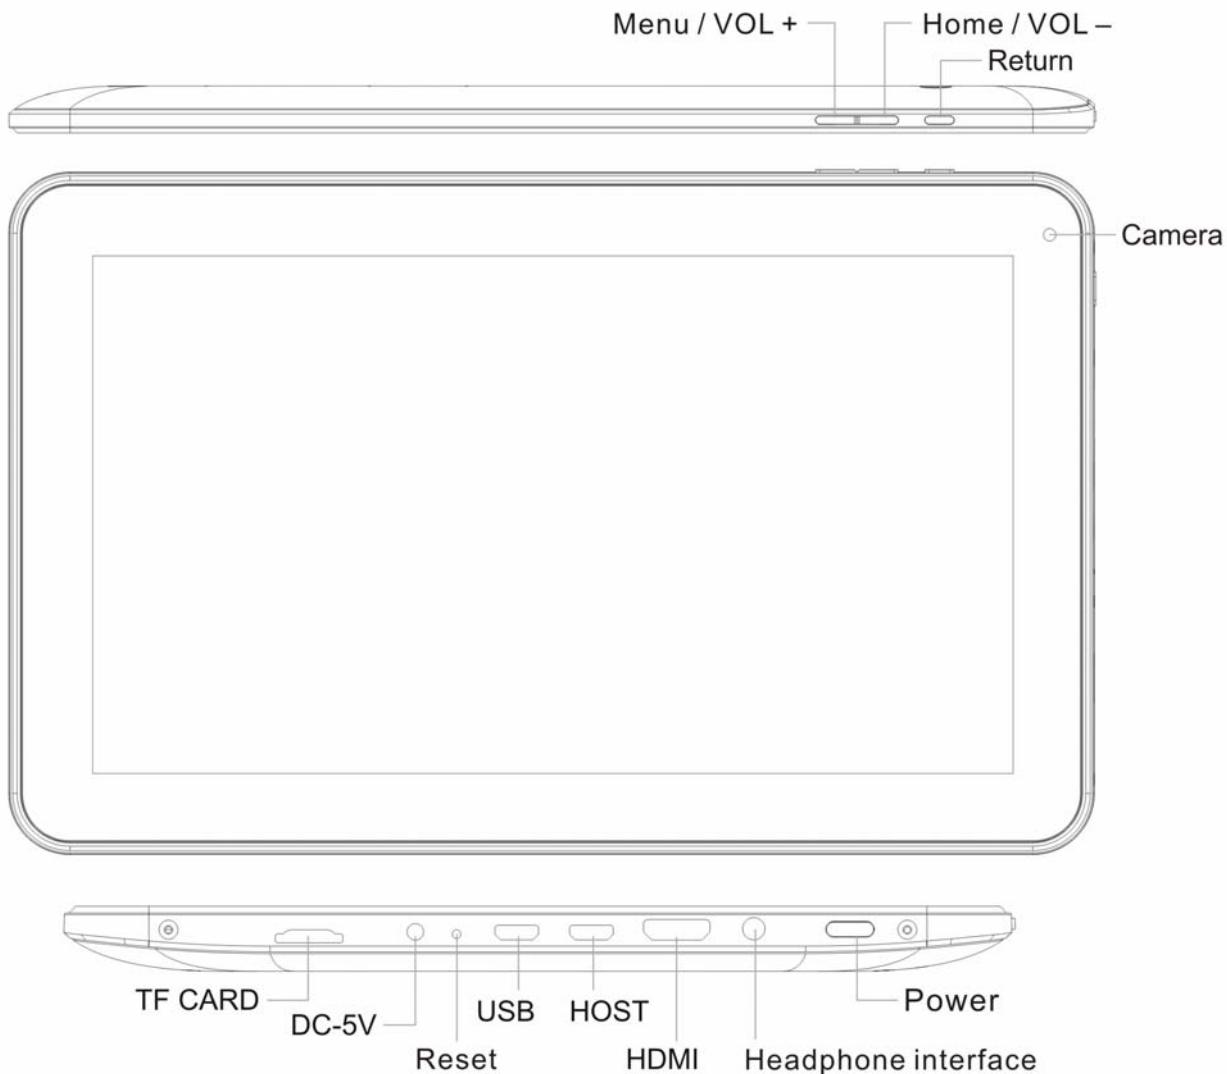


1.1 Touch panel

10" touch panel: In the Operation, to click, dragging on the touch panel.

1.2 POWER

Start up: Long Press and hold the power button, the system will enter the main interface.

Shutdown: In the main menu interface, Press the power button about 5 second to shut down, the system can hint "power off" option, Click "ok". You can safely shut down.

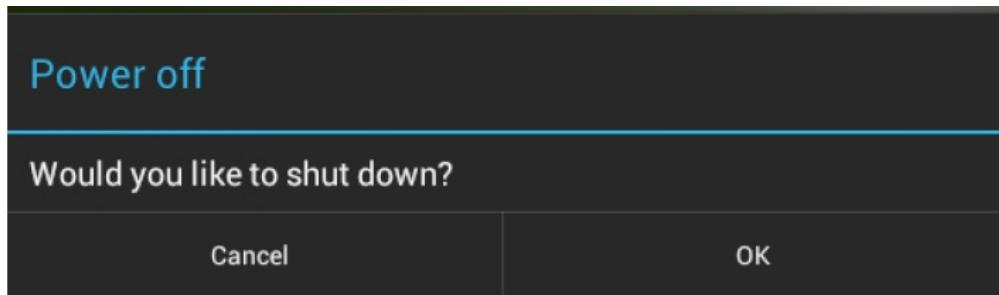

Lock screen: Short press Power button to lock screen or unlock screen.

Remark 1. When power is empty, system will shut down automatically.

2. Illegal turn off the device, restart will scan and restore the disk, it may take longer time to enter into system.

1.3 ESC

Shortly press ESC button will return the last interface; long press ESC button will return the main interface.

1.4 Menu

The Tablet under normal operating conditions, short press M button will back to the home screen

1.5 Volume +, Volume-

When long pressing the Menu buttons, it will change Volume -.

When long pressing the **Volume +**, it will increase the volume.

1.6 earphone jack

3.5 mm standard earphone jack

1.7 Video output interface

HDMI output interface

1.8 TF card

TF-CARD slot: external T-FLASH card

1.9 Mini USB

Mini USB jack: you can use it to connect the computer for data transmission, charging and external connection USB flash drive

1.10 Reset

When the Tablet under the condition of the crash, use the small objects to shortly press RESET button, Tablet will force to shutdown.

【Remark】 : Don't use the reset, till unable to shutdown, suggest you to shutdown by normal, if no, it will easy to damage the machine system.

2. First use

2.1 Battery management and charge

Before first use, please set the device's battery is fully charged

Just need to connect the adaptor or USB interface, then you can charge

The first two times charging please keep about 6 hours, after that you just need 4 hours to charge.

【Remark】 : This tablet using Built-in type polymer battery, Charge must be to choose standard adaptor (Input: AC110~240V 50/60Hz Max: 180MA. Output: DC5.0~5.5V/2A), this device without supply DC charging, USB interface can charge, Choose USB interface to charger

During the charging, the battery icon will scroll

When finished charging, battery icon will become green and stop rolling

In order to prolong the service life of the machine, suggest use out battery power before charge it

【Remark】 :

1. If you long time don't use this Tablet, in order to avoid power consumption caused damage, please charge/play the battery once a month.
2. After low battery shut down, connect DC adaptor, device will remind low battery, charging, need to wait some time until the battery is enough power to enter into main menu.
3. Device charging should be in standby status for reach normal charging time.


Because device and screen consumption, it may cause longer charging time.

2.2 Connection with PC


* USB connection

Using USB to connect the MID and PC, the default connection mode is a synchronous mode. You can see this  icon and then drag the status bar to drop, appeared the following interface:


Step 1:

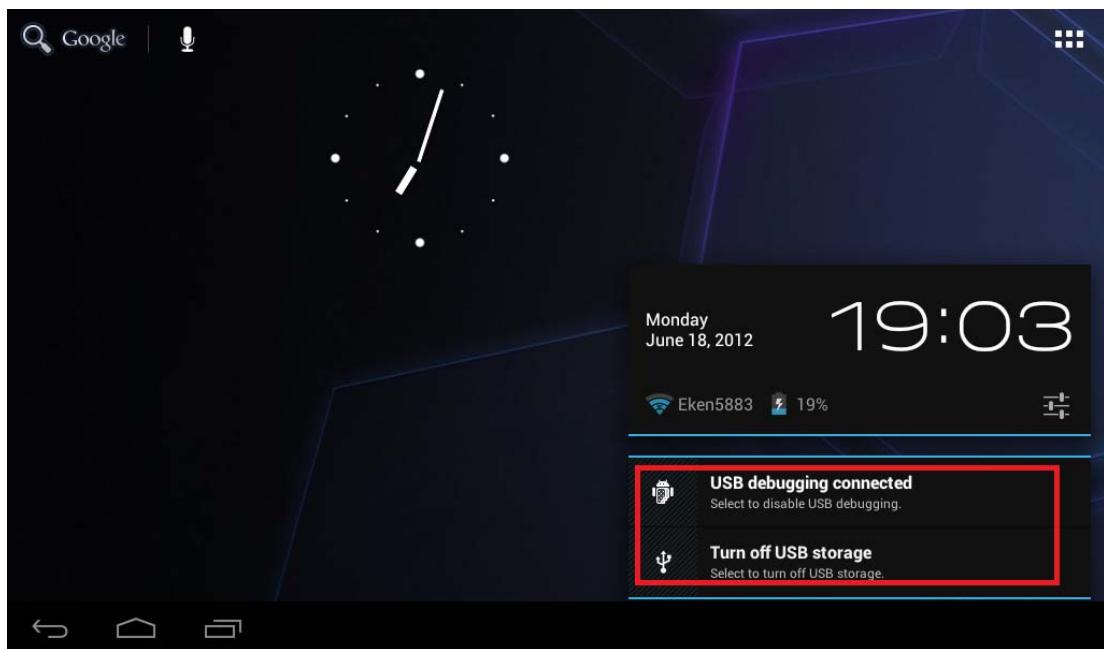


Step 2:

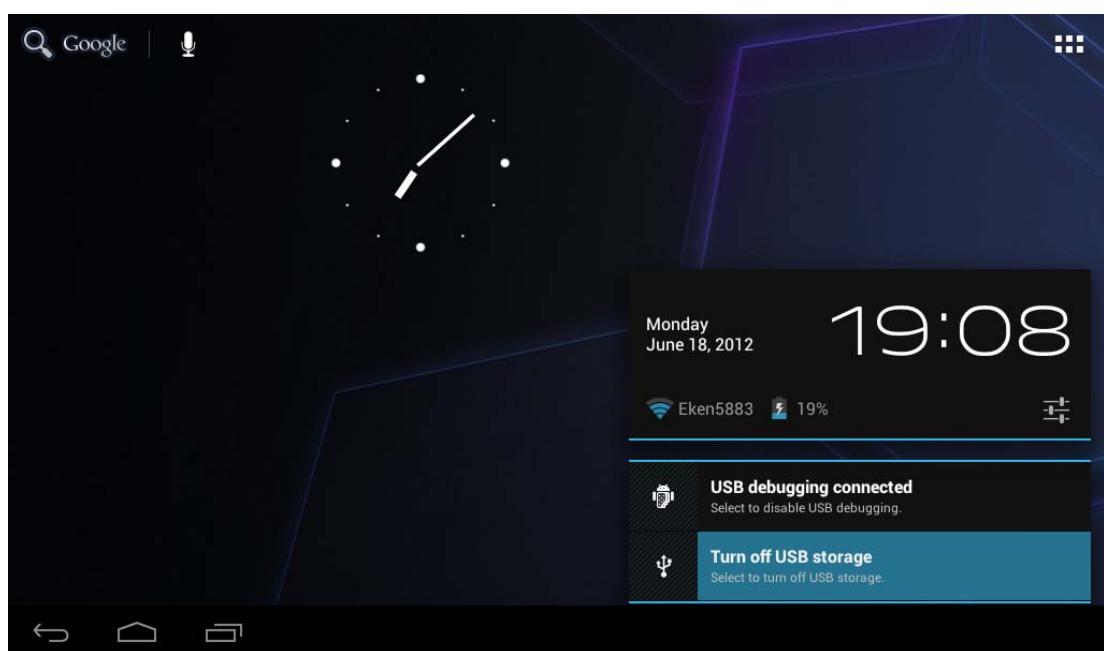

Step 3: According to the above photo, please choose USB connected. Then you can see the following interface:

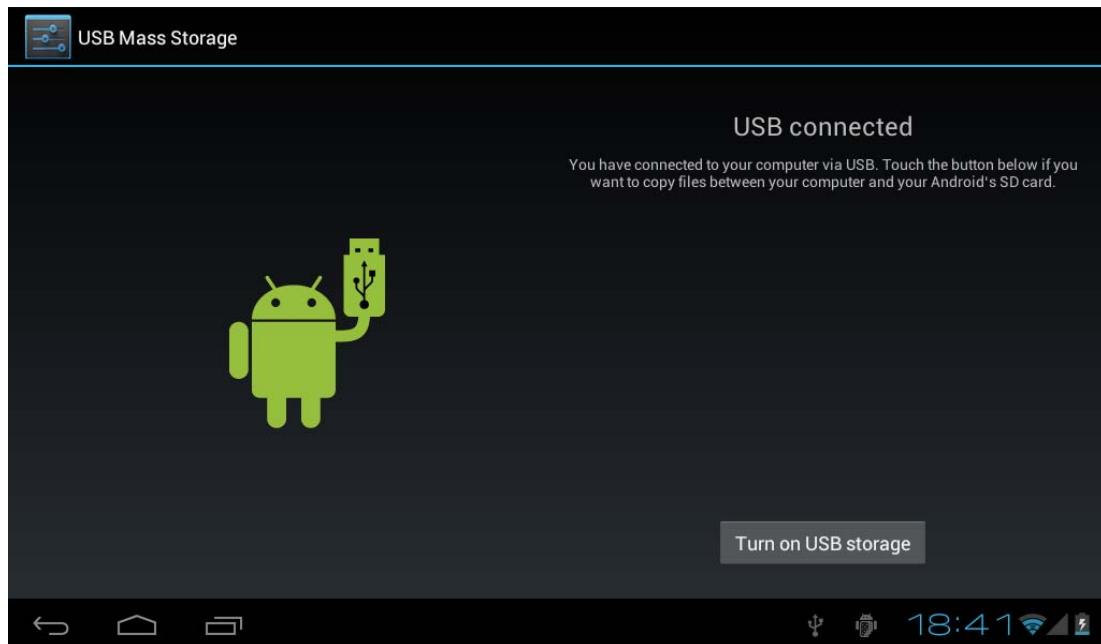

Step 4: Please press “turn on USB storage”. Then you will find the following photos:

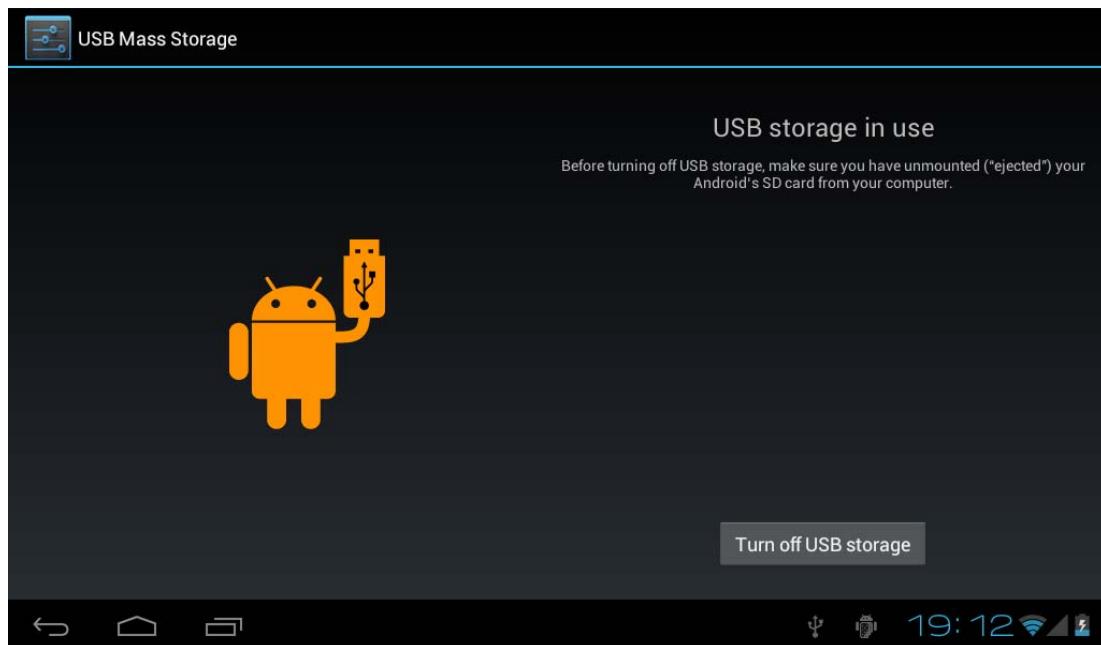


Please use USB cable to connect device to PC, device will pop up the USB connection window; click Turn on USB storage to connect to PC.


3. Equipment operation interface

3.1 Main interface describe

After startup will enter the main interface.

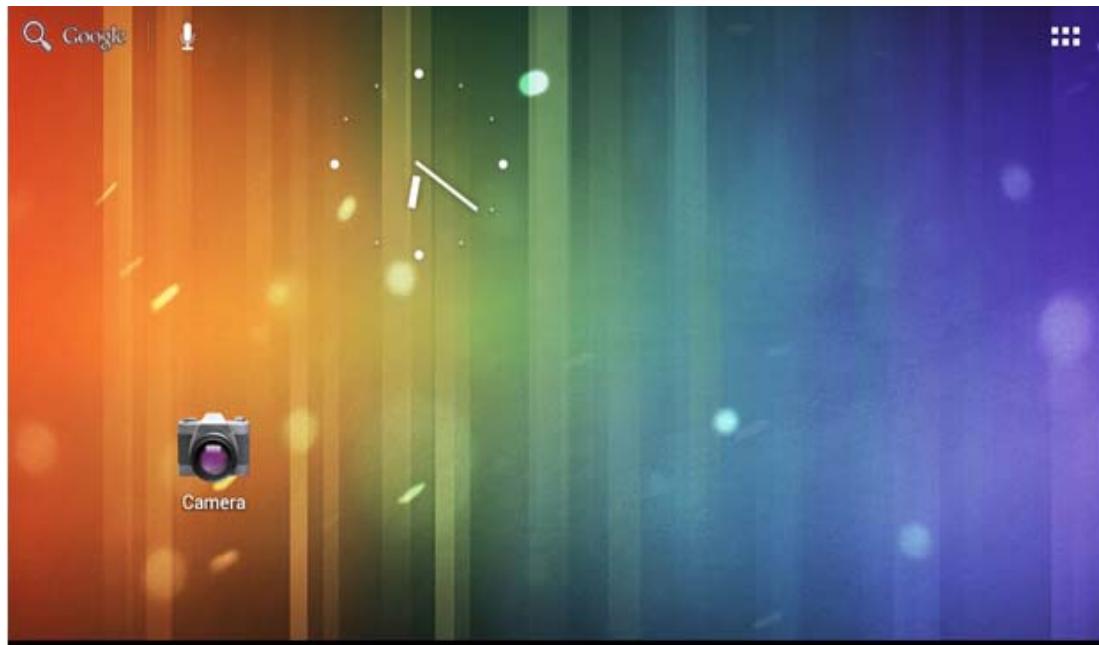


In the main interface, you can Management main interface software ICONS: long press the icons 3 second, after the icons going bigger, then you can drag anywhere in the interface.

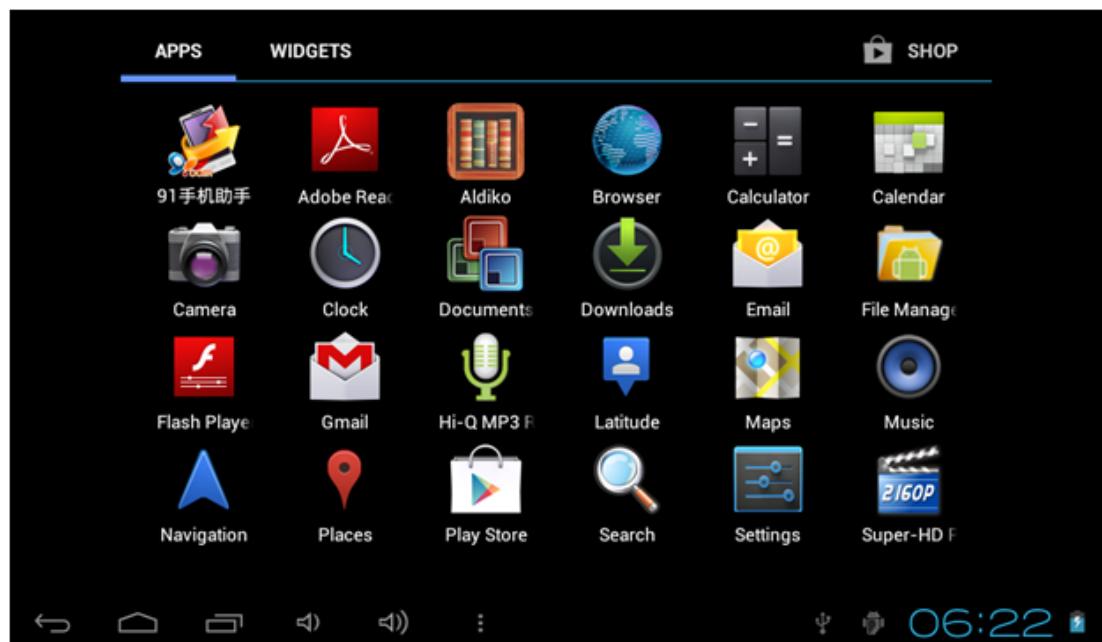

Delete icons: long press the icons 3 second, drag the icons to the Recycle Bin icon, once it become red, Loosen your hand, after that you can delete icon.

You touch the screen keep a time, appear the dialog box" Add you Home screen" as shown below:

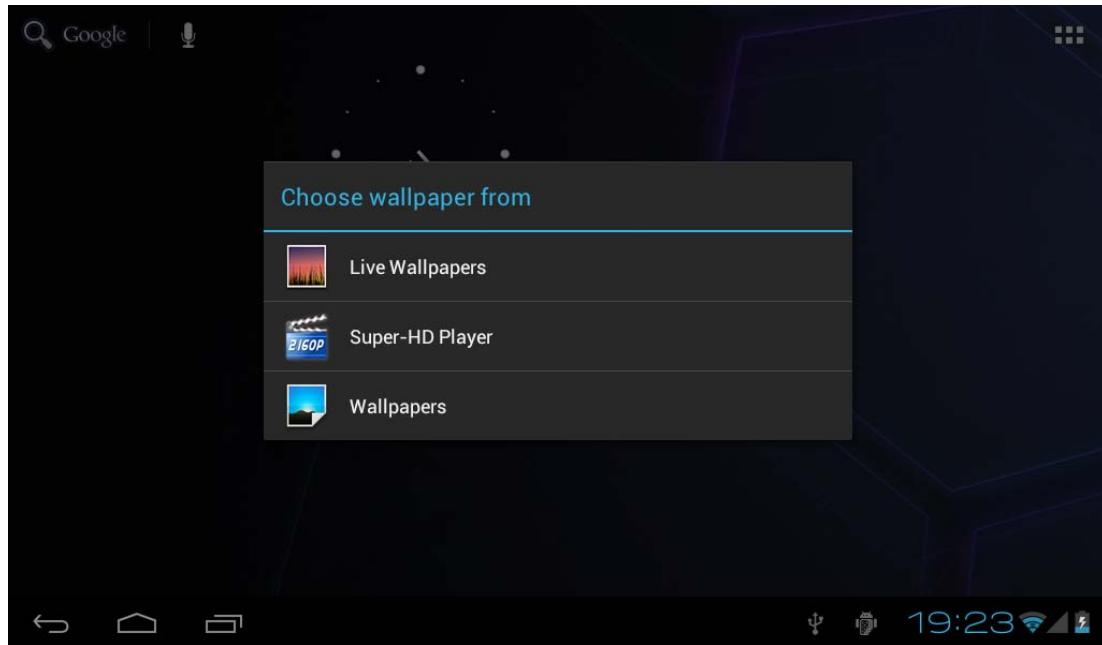

3.2 Status bar describe



- The status bar above of the screen.

Top left display main interface software, T-Flash card, USB connection status and so on.

Top right display the battery, battery charge icons, current time, set time, Settings Menu, ESC button.


3.3 Use touch panel

Device equipped with a 7 " touch screen. Following the main touch screen area is described, and describes some of the tips for how to use the touch screen.

No matter which interface you are on the screen, can go back to main screen through pressing the soft key  on the bottom right corner of the main screen.

【Attention】 The main screen soft key  functions as the machine back key  In different applications, by tapping the back soft key  on the bottom right corner on the touch screen, you can return to its interface on the up floor. In different applications, by tapping the menu key  on the upper right corner of touch screen, the screen will appear the operation setting interface as follows.

【Remark】 : The main screen soft key  functions as the machine menu 

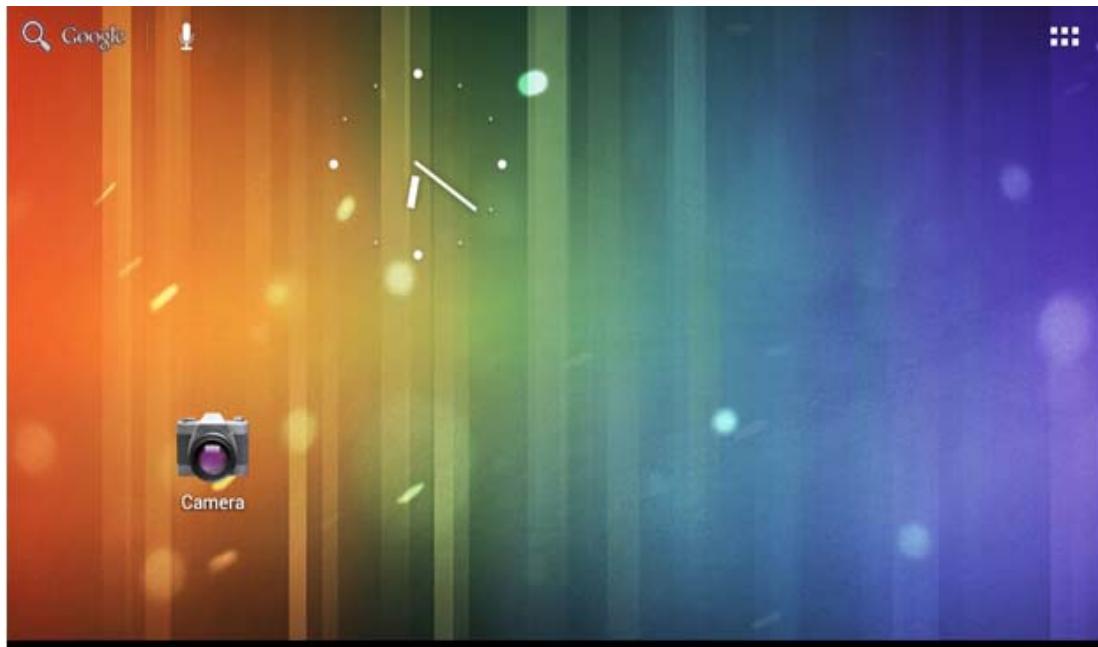

In the main interface, you can touch the icon to open the APPs.


In different browser (file, music, video, pictures), you shift and drag the scroll bar, so that the file list can up or down to roll.

4. Equipment basic set

Setting: Click setting icon  , enter setting interface.



4.1 Silent mode, Volume, Notification ringtone, Audible selection, Screen lock sounds.

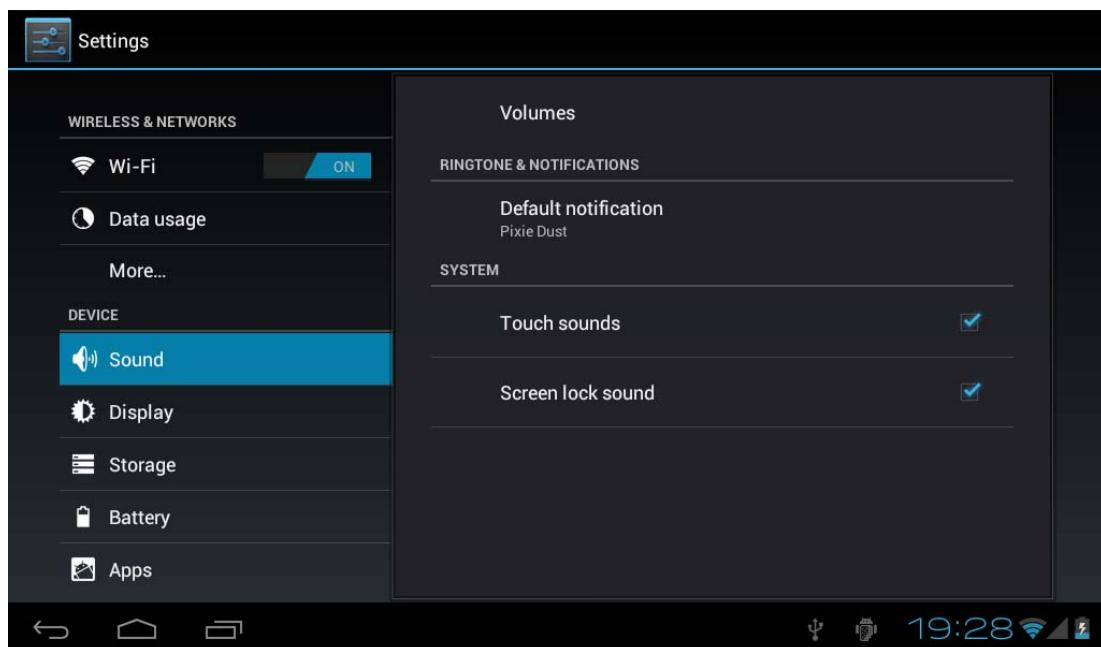

How to uninstall?

1. enter  “setting”>“Application”>“Manage application” And then there


will be installed the program list.

2. Click you want to uninstall icons, will enter the following interface.
3. Click Uninstall, then you can delete the application.




4.2 Privacy

Factory data reset

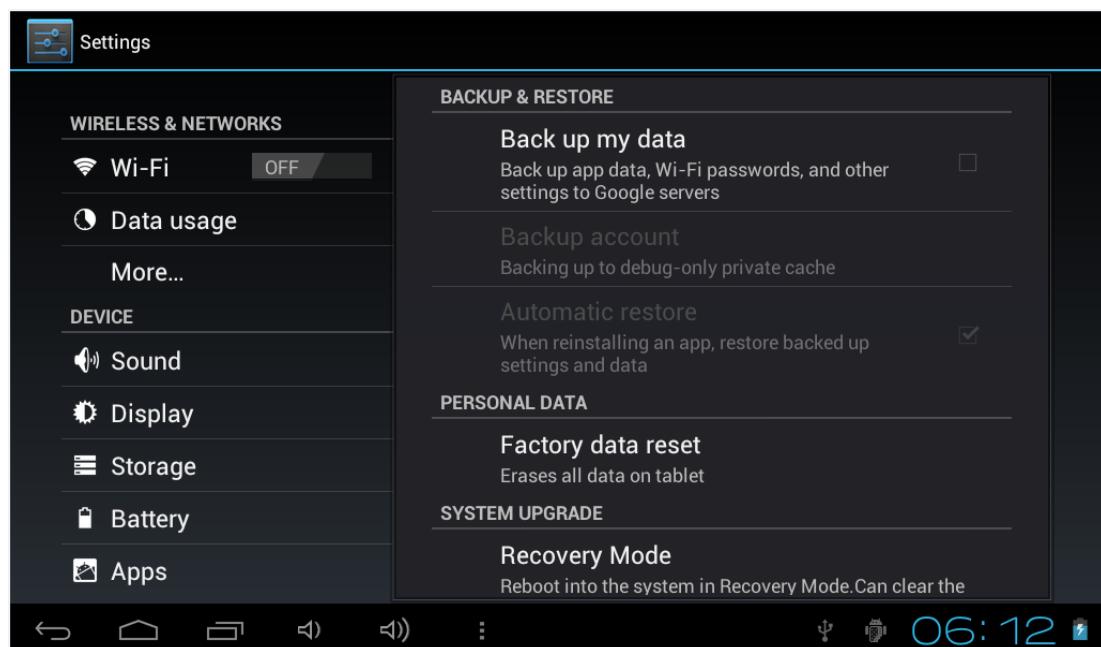

4.3 Storage


Remove TF card, view of the available storage space.

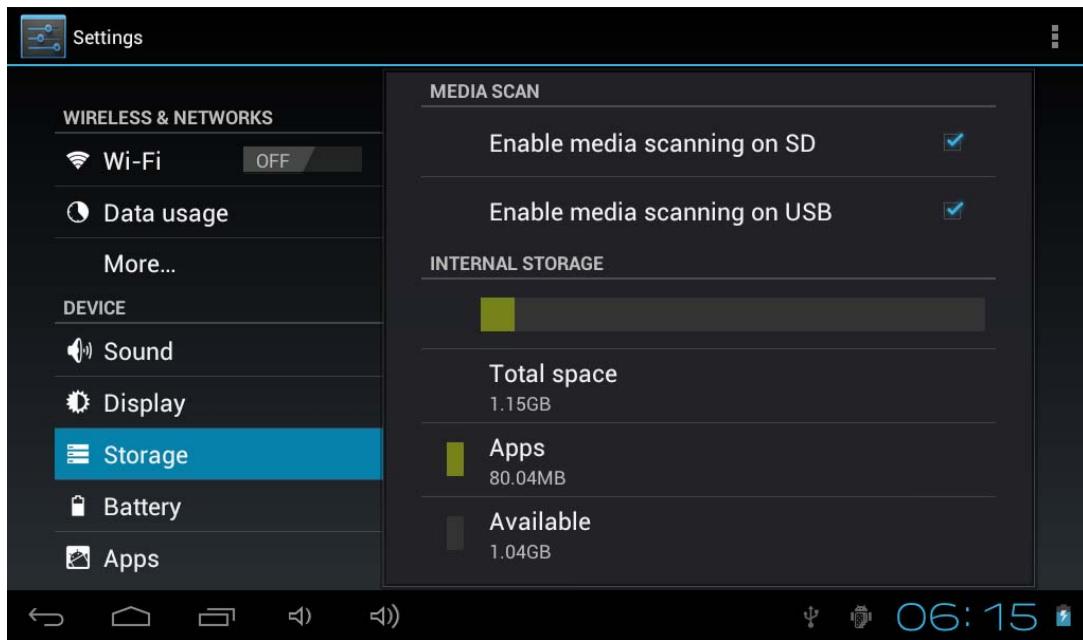

【Remark】: pls touch option "delete SD card", so that can safety to remove SD card.

4.4 Language & keyboard

Setting: (Language), text input and automatic error correction options;

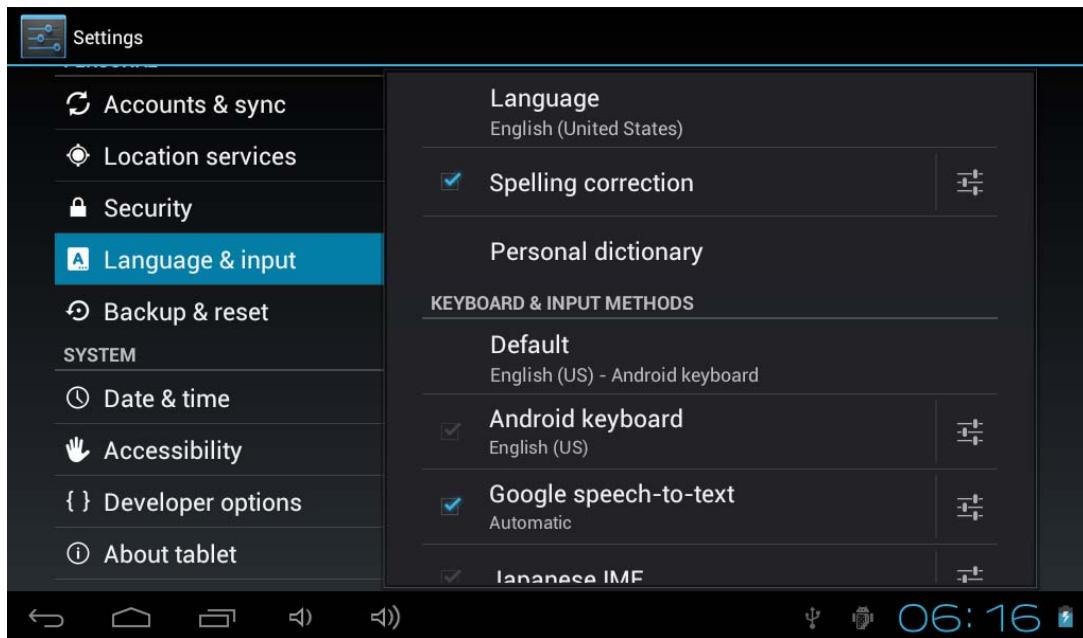

Select Language: 54 kind of national languages are available.

Remark: Android system can support 54 kind of language, now menu interface just support 14 language.

Android keyboard: Android keyboard setting.

Sound on Key-press.


Auto-capitalization

Show suggestions: Display suggested words while typing.

Auto-complete: Spacebar and punctuation automatically insert highlighted word.

4.5 Date & time setting


Set date, set time, Select time zone and select date format.

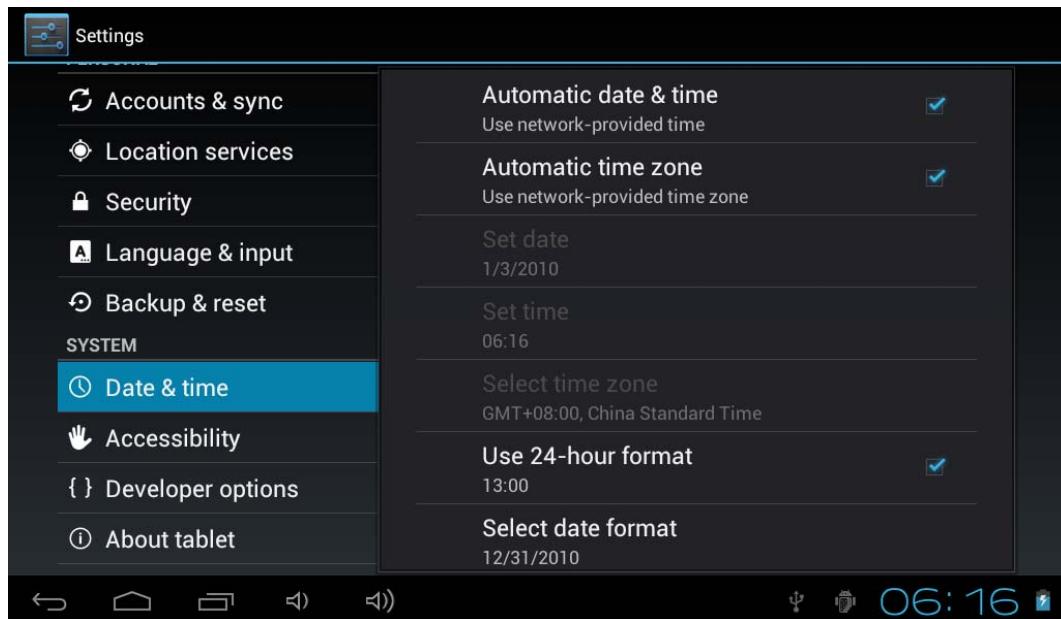

4.6 USB Mode Select

Choose USB work pattern: OTG/HOST/SLAVE.....

4.7 About tablet

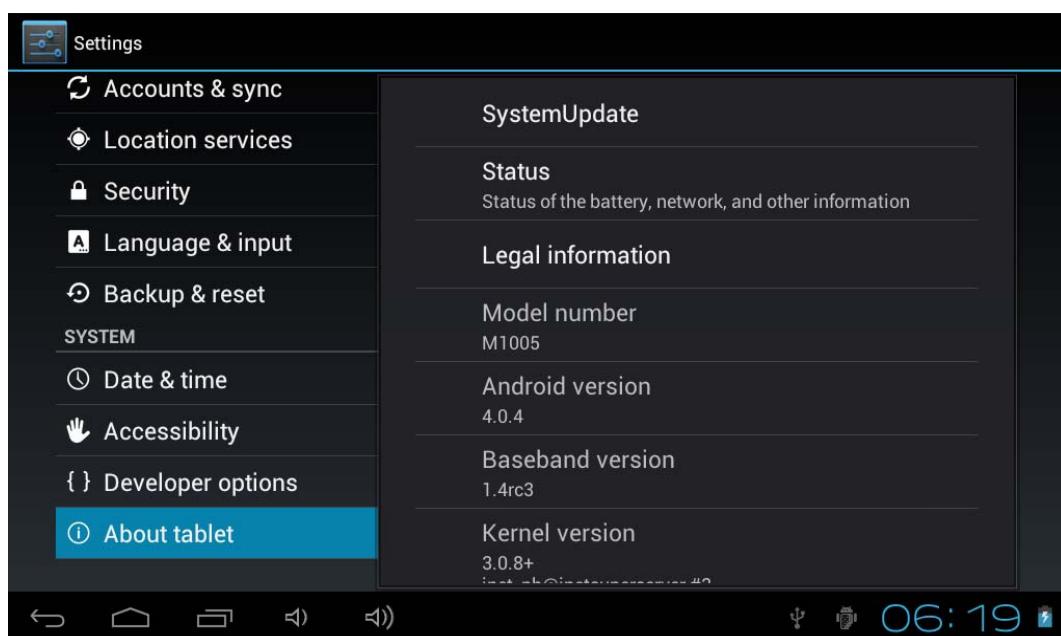

5. Apps Install and manage

5.1 App installer

This Tablet can support Android APP in market by third party, most Apps can install in the network, can copy to NAND FLASH or SD card.

Click App installer icon, will appear Install, manage, Exit options.

Install: Click install, enter Apk install interface

Separately for Internal Memory disk and SD Card disk.

Select the APK you would like to install, and click it to install, then go back to main menu, will display the installed app you just selected.

Remark: some 3rd APP must install properly by memory card, downloaded 3rd party app may not install properly on device.

Manage: Click manage, enter third party interface

Click install icon, will enter Action interface

6. Problem solution

1. Device can't to open

- 1) Check the battery power.
- 2) Connect adaptor first, then check again.
- 3) After charging then can't to open, pls contact with the supplier.

2. After startup the screen or the opening picture has been appearing, the device appear shutdown

- 1) Power is not enough, please charge

3. Headset can't hear the voice

- 1) Pls check the volume whether set to 0
- 2) Check the music file whether damaged. Try playing other music, if the file have damaged may lead to serious noise or hop sounds.

4. Can copy file or play music and so on

- 1) Please check between computer and device is correct connection.
- 2) Check the memory storage space is already full.
- 3) Check the USB cable is good or not.
- 3) USB connection is disconnected.

7. Basic function

Hardware configuration

Size: (length * wide * thick) 263*165*11.5mm

CPU processor: Boxchip A10 1.2 GHz, GPU: 400 MHz

Memory: 4G - 32G

RAM: 512 MB

TF card: 128M-16G

Display screen: 10" capacitive multi-touch

Resolution: 1240*600

Battery and capacity: rechargeable Built - in type polymer battery, 5000Mah

USB: USB 2.0OG

G-sensor 3D

Record: built-in microphone

Operation System: Android 4. 0 (ICS)

Video: (1080P): WMV, MKV, MOV, AVI, RM / RMVB, MPEG-2/4.

Music: MP3, WMA, 3GP, AAC, FLAC, WAV. OGG

Pictures: JPEG. BMP. PNG. TIF

8. FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate

radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Caution!

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

