

### Functions:

### \*TO SPEAK

In (ON) position, press and hold the (PUSH TO TALK) button. Then speak into Walkie Talkie to transmit voice.

### \*MORSE CODE:

In (ON) position, press and hold (PUSH TO TALK) button. Then press (MORSE CODE) button to transmit message.

### \*ON/OFF

Turn counter clockwise for (ON) position. Turn clockwise to turn (OFF),

### \*FOR BEST PERFORMANCE:

Use within 50 feet - 100 feet of each other.

### **BATTERY REPLACEMENT**

REPLACEMENT OF BATTERIES MUST BE DONE BY ADULT.




Please keep this packaging since it contains important information

FCC ID CIXAL30108

## BATTERY REPLACEMENT

REPLACEMENT OF BATTÉRIES MUST BE DONE BY ADULT.

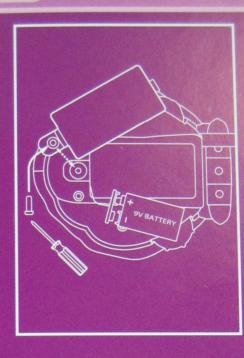

batteries in tire, batteries may explode or leak replace with new batteries. Do not dispose of screwdriver. Note polarity of batteries, remove and To replace batteries, unscrew cover using a Philips Each walkie talkie requires 2 x "9V" batteries (not included).

on.

- Non-rechargeable batteries are not to be recharged. Rechargeable batteries are to be removed from
- Rechargeable batteries are only to be charged under the toy before being charged.
- Different types of batteries or new and used batteries adult supervision.
- are not to be mixed.
- Batteries are to be inserted with correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited

Please keep this packaging since it contains important information.

responsible for compliance could void the user's authority to operate the equipment. CAUTION: Changes or modification not expressly approved by the party

Reorient or relocate the receiving antenna. try to correct the interference by one or more of the following measures: can be determined by turning the equipment off and on, the user is encouraged to equipment does cause harmful interference to radio or television reception, which guarantee that interference will not occur in a particular installation. If this may cause harmful interference to radio communications. However, there is no residential installation. This equipment generates, uses and can radiate radio designed to provide reasonable protection against harmful interference in a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are NOTE: This equipment has been tested and found to comply with the limits for a frequency energy and, if not installed and used in accordance with the instructions,

Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the

Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- may cause undesired operation. (2) this device must accept any interference received, including interference that

### Functions:

### **★TO SPEAK:**

In (ON) position, press and hold the (PUSH TO TALK) button. Then speak into Walkie Talkie to transmit voice.

# **★MORSE CODE:**


In (ON) position, press and hold (PUSH TO TALK) button. Then press (MORSE CODE) button to transmit message.

### **★ON/OFF**:

Turn counter clockwise for (ON) position.
Turn clockwise to turn (OFF).

# \*FOR BEST PERFORMANCE:

Use within 50 feet - 100 feet of each other.

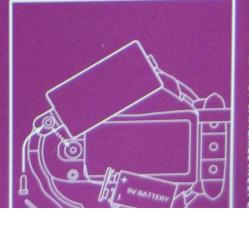

Each walkie talkie requires 2 x "94" ba To replace batteries, unscrew cover screwdriver. Note polarity of batter replace with new batteries. Do not batteries in fire, batteries may expl

- Non-rechargeable batteries are
- Rechargeable batteries are to be the toy before being charged.
- Rechargeable batteries are only tagget
   adult supervision.
- Different types of batteries or new are not to be mixed.
- Batteries are to be inserted with a
- Exhausted batteries are to be ren
   The supply terminals are not to be
- The supply terminals are not to t

Please keep this packaging since it cont