


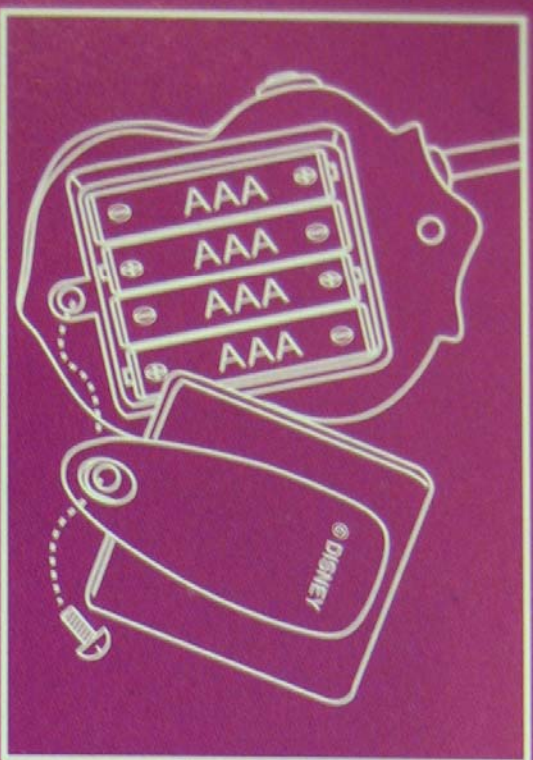

Battery Information/Replacement:

Each walkie talkie requires 4 "AAA"(R3) batteries (not included).

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

To replace batteries, unscrew cover using a Phillips screwdriver. Note polarity of batteries, remove and replace with new batteries.

CAUTION: Changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID CIXAL30383



Royal Walkie Talkies



Functions:

★ TO SPEAK:

In (ON) position, press and hold the (PUSH TO TALK) button. Then speak into Walkie Talkie to transmit voice.

★ ON/OFF/VOLUME:

Turn counter clockwise for (ON) position. Turn clockwise to turn (OFF). In (ON) position, adjust the volume level by turning down.

★ FOR BEST PERFORMANCE:

Use within 25 feet - 30 feet of each other.



Battery Information/Replacement:

Each walkie talkie requires 4 "AAA"(R3) batteries (not included).

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

To replace batteries, unscrew cover using a Phillips screwdriver. Note polarity of batteries, remove and replace with new batteries.

CAUTION: Changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID CIXAL30383



VISIT US ON THE WEB AT www.cditoys.com
Or Write: Creative Designs International, Ltd.
2540 Metropolitan Drive, Trevose, PA 19053
1-888-TOYS-CDI
Questions or comments (Please Call)

Made in China.
Please retain this address for future reference.
sometimes vary from the product enclosed.

© 2010 Creative Designs International, Ltd.,
Trevose, PA 19053.