


INITIAL SETUP

WALL/DESK USE

A wall mount bracket is included and can be installed if needed. Tightly coil the telephone cord around the four guides on the inside of the wall mounting bracket. Pull the telephone cord through the center opening on the wall mounting bracket. Refer to the drawing. The handset can be charged face out or face down, even when wall mounted.

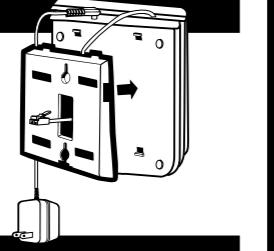

TONE/PULSE SWITCH

This switch tells the CP-750 to dial out with either touchtone or pulse signals to match the service you have with your local telephone company. The CP-750 is shipped with the **TONE/PULSE SWITCH** in the **TONE** position. If you do not have touchtone service, set the switch to **PULSE** on the back of the charging cradle.

TONE = for Touchtone systems
PULSE = for Rotary dialing or Pulse systems

RINGER ON/OFF

The CP-750 is shipped with the base and handset RINGER ON/OFF SWITCHES in the **ON** position. You can independently set the ringers of the CP-750 to **ON** or **OFF**.

STANDBY MODE

1 The CP-750 is in "Standby" mode whenever it is idle, waiting for a call. If the handset is in the charging cradle, the display will either be blank

OR

1 If you have new caller ID entries from recent unanswered calls, it will show the "NEW CALLERS" message with the number of new callers at the lower far right of the display screen. Press **CALLER ID** to view the names and numbers of "New Callers".

NOTE:
■ If the handset is in "Standby Mode" but not in the charging cradle, the display will go blank after a short time to conserve battery power.

TO PLACE A CALL

1 Pick up the handset and press **TALK**. The following display will be briefly shown. This display indicates that the handset is establishing contact with the charging cradle.

SCANNING CHANNELS...

2 A dial tone will be established. (In this example, CH03 is the current channel number of 40 available channels in your area.) Wait for dial tone and dial the phone number. The number will appear in the display as you dial.

VOLUME **CH03**

NOTE:
■ The LINE IN-USE INDICATOR on the charging cradle lights solid to show the handset is in use.

TO END A CALL

1 To hang up, press **TALK** or return the handset to the charging cradle.

NOTE:
■ When you return the handset to the charging cradle, you are hanging up the phone and returning to Standby Mode. The CP-750 is now ready to receive a call and the **CHARGING** light is solid to show that the battery is charging.

IF YOU MISDIALED A NUMBER

1 Press **TALK** twice ("off" and "on"). Wait for dial tone and dial the correct number.

TO RECEIVE A CALL

1 When the phone rings, pick up the cordless handset and press **TALK**. You will briefly see the "SCANNING CHANNELS" display, followed by the "VOLUME" display. Speak to the caller.

2 To hang up, press **TALK** on the handset or return the handset to the charging cradle.

HANDSET VOLUME CONTROL

Whenever the CP-750 is in "Talk" mode, the handset volume will be displayed.

1 Press the **DOWN** or **UP ARROW KEY** to adjust the volume.

CALL WAITING & CALLER ID

CALLER ID SERVICE OPTIONS

You must subscribe to a Caller ID service (available from most local telephone companies) in order to receive Caller ID information. Most Caller ID services offer the following two options:

1. Standard Caller ID with name and number

The name, phone number and local time (if available) of the incoming call are received after your phone rings.

2. Call Waiting Caller ID with name and number

The name, phone number and local time (if available) of the incoming call are received after your phone rings. If you are on the phone and receive another call, you will hear a tone, telling you there is a call waiting. The Call Waiting Caller ID information will appear on the display.

NOTE:
■ The display illustrations in the remainder of this section are presented with the assumption that your Caller ID service provides both name and number. If you have a number-only service, the name will be blank.

ANSWERING CALLER ID CALLS

When you receive a call, the CP-750 will receive the Caller ID information from your phone company within the first two rings. Caller ID information will display even if the ringer is set to off.

When all of the data is received, you will hear a low-high confirmation tone and the Caller ID information will appear on the display.

**SMITH JAN
1 310 555 1234
12:00 PM**

HANDSET / TELEPHONE OPERATION

2 When **TALK** is pressed, the handset volume returns to the volume level at which you programmed it (see PROGRAMMING THE CP-750, "Default Volume").

MODEM MONITOR™

When the CP-750 detects a modem in use on the line to which it is connected, the Modem Monitor™ feature prevents the CP-750 from going off-hook. When you attempt to make a call on the CP-750 and a modem is connected, you will hear the modem data through the handset. The data you hear is protected from interruption. The MODEM MONITOR™ INDICATOR on the base will flash slowly and when you attempt to go off-hook the handset will display:

MODEM IN USE

NOTE:
■ If you wish to override Modem Monitor™ after pressing **TALK** you can do so by pressing **9**. (You may also need to manually deactivate the modem activity at your computer or fax machine.)

DIALING A NUMBER USING THE SEND KEY (DISPLAY & DIAL)

Send-Key Dialing is extremely reliable because you can see the number you have entered before actually dialing it.

1

Make sure the CP-750 is in "Standby Mode". Without pressing the **TALK** button, enter the number you wish to dial. If you make a mistake, use **DELETE** to make changes. The last digit entered will be deleted. Each time **DELETE** is pressed, the previously entered digit will be erased.

2

After you have correctly entered the entire number you wish to dial, press **SEND**. The CP-750 will dial the number.

REDIAL

The CP-750 remembers the last number you dialed. The redial memory will hold up to 32 digits. Every time you dial a new telephone number, the redial memory is updated with that new number.

1

Press **TALK** and wait for a dial tone.

CHANGING CHANNELS MANUALLY

1 After **TALK** is pressed, the CP-750 selects the best of 40 available channels in your area. If you hear noise or interference while using the CP-750, press **CHANNEL** on the handset to change channels.

REDIAL WHEN BUSY

If you receive a busy signal after placing a call and you wish to try again immediately, there is no need to hang up the phone.

1

Press **REDIAL** while hearing a busy signal and the CP-750 will automatically hang up, reconnect, and dial the number again.

DISPLAY REDIALING

Display Redialing allows you to view the contents of the redial memory before dialing. This is useful if you aren't sure what number was last dialed on the CP-750.

1

Make sure the unit is in "Standby" mode. Press **REDIAL**. You will be able to view the last 15 digits of the last number dialed.

2

Press **SEND** to dial.

HOLD

You may place a call on hold while using the cordless handset.

1

Press **HOLD** to place a call on hold. The TALK INDICATOR will flash slowly.

PAGING THE HANDSET FROM THE CHARGING CRADLE

1 Press **PAGE** on the charging cradle. The base unit will issue beeps to confirm that the paging signal to the HS has been enabled. You will hear the handset ring.

NOTE:

■ You can place a call on hold for up to 5 minutes. During **HOLD**, do not return the handset to the charging cradle. Doing so will disconnect the caller.

BLOCKED" AND "UNAVAILABLE" MESSAGES

If a caller chooses to partially or completely "block" Caller ID information, a message will appear on the display indicating that the name and/or phone number has been blocked. If, for

any other reason, the name and/or number information is currently not available from your local phone company, an "Unavailable" message will appear on the display. The time and date information for the call will still be recorded into the CP-750's memory.

NOTE:
■ If you press **TALK** before you hear the Caller ID confirmation tone, the Caller ID information for that call will be lost.

ANSWERING CALL WAITING CALLER ID CALLS

When you receive a call, the CP-750 will receive the Caller ID information from your phone company within the first two rings. Caller ID information will display even if the ringer is set to off.

When all of the data is received, you will hear a low-high confirmation tone and the Caller ID information will appear on the display.

**SMITH JAN
1 310 555 1234
12:00 PM**

NOTE:
■ If you subscribe to a Call Waiting Caller ID service with your telephone company, the CP-750 will receive the Caller ID information from the second call.

NOTE:
■ If you press **TALK** before you hear the Caller ID confirmation tone, the Caller ID information for that call will be lost.

ANSWERING CALL WAITING CALLER ID CALLS

When you receive a call, the CP-750 will receive the Caller ID information from your phone company within the first two rings. Caller ID information will display even if the ringer is set to off.

When all of the data is received, you will hear a low-high confirmation tone and the Caller ID information will appear on the display.

**SMITH JAN
1 310 555 1234
12:00 PM**

NOTE:
■ If you subscribe to a Call Waiting Caller ID service with your telephone company, the CP-750 will receive the Caller ID information from the second call.

NOTE:
■ If you press **TALK** before you hear the Caller ID confirmation tone, the Caller ID information for that call will be lost.

ANSWERING CALL WAITING CALLER ID CALLS

When you receive a call, the CP-750 will receive the Caller ID information from your phone company within the first two rings. Caller ID information will display even if the ringer is set to off.

When all of the data is received, you will hear a low-high confirmation tone and the Caller ID information will appear on the display.

**SMITH JAN
1 310 555 1234
12:00 PM**

NOTE:
■ If you subscribe to a Call Waiting Caller ID service with your telephone company, the CP-750 will receive the Caller ID information from the second call.

NOTE:
■ If you press **TALK** before you hear the Caller ID confirmation tone, the Caller ID information for that call will be lost.

ANSWERING CALL WAITING CALLER ID CALLS

When you receive a call, the CP-750 will receive the Caller ID information from your phone company within the first two rings. Caller ID information will display even if the ringer is set to off.

When all of the data is received, you will hear a low-high confirmation tone and the Caller ID information will appear on the display.

**SMITH JAN
1 310 555 1234
12:00 PM**

NOTE:
■ If you subscribe to a Call Waiting Caller ID service with your telephone company, the CP-750 will receive the Caller ID information from the second call.

NOTE:
■ If you press **TALK** before you hear the Caller ID confirmation tone, the Caller ID information for that call will be lost.

ANSWERING CALL WAITING CALLER ID CALLS

When you receive a call, the CP-750 will receive the Caller ID information from your phone company within the first two rings. Caller ID information will display even if the ringer is set to off.

When all of the data is received, you will hear a low-high confirmation tone and the Caller ID information will appear on the display.

**SMITH JAN
1 310 555 1234
12:00 PM**

NOTE:
■ If you subscribe to a Call Waiting Caller ID service with your telephone company, the CP-750 will receive the Caller ID information from the second call.

NOTE:
■ If you press **TALK** before you hear the Caller ID confirmation tone, the Caller ID information for that call will be lost.

ANSWERING CALL WAITING CALLER ID CALLS

When you receive a call, the CP-750 will receive the Caller ID information from your phone company within the first two rings. Caller ID information will display even if the ringer is set to off.

When all of the data is received, you will hear a low-high confirmation tone and the Caller ID information will appear on the display.

**SMITH JAN
1 310 555 1234
12:00 PM**

NOTE:
■ If you subscribe to a Call Waiting Caller ID service with your telephone company, the CP-750 will receive the Caller ID information from the second call.

NOTE:
■ If you press **TALK** before you hear the Caller ID confirmation tone, the Caller ID information for that call will be lost.

ANSWERING CALL WAITING CALLER ID CALLS

When you receive a call, the CP-750 will receive the Caller ID information from your phone company within the first two rings. Caller ID information will display even if the ringer is set to off.

When all of the data is received, you will hear a low-high confirmation tone and the Caller ID information will appear on the display.

**SMITH JAN
1 310 555 1234
12:00 PM**

NOTE:
■ If you subscribe to a Call Waiting Caller ID service with your telephone company, the CP-750 will receive the Caller ID information from the second call.

NOTE:
■ If you press **TALK** before you hear the Caller ID confirmation tone, the Caller ID information for that call will be lost.

ANSWERING CALL WAITING CALLER ID CALLS

When you receive a call, the CP-750 will receive the Caller ID information from your phone company within the first two rings. Caller ID information will display even if the ringer is set to off.

When all of the data is received, you will hear a low-high confirmation tone and the Caller ID information will appear on the display.

IMPORTANT CORDLESS TELEPHONE INFORMATION

INTERFERENCE INFORMATION

Notice: This cordless telephone uses radio communications between the handset and the base unit, and may not ensure privacy of communication. Other devices including other cordless telephones may interfere with the operation of this cordless telephone or cause noise during operation. Cordless telephone equipment generates and receives radio waves and, if not installed and used properly, may pick up interference.

To prevent interference:

Avoid locations such as heating appliances, electrical equipment (e.g., fluorescent lamp, TV, radio, refrigerator, computer), places subject to direct sunlight, excessive dust, moisture, vibration, etc.

Locate the base unit in a high place in the house (such as the second floor) in order to receive the most effective communication range. Fully extend the base unit antenna. Telephones must not cause interference to any licensed radio service.

WARNING

To prevent fire or shock hazard, do not expose the set to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

CAUTION

1. Use batteries only intended for recharging. Use only the following battery pack: Nickel-Cadmium Rechargeable; 3.6 volts, 600 mAh.

2. Do not dispose of the battery in a fire. The cell may explode. Check with local codes for special disposal instructions.

3. Do not open or mutilate the battery. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.

4. Exercise care when handling the battery in order not to short the battery with conducting materials such as rings, bracelets, and keys. The battery or conductor may overheat and cause burns.



CONTAINS: NICKEL-CADMUM RECHARGEABLE BATTERY. MUST BE RECYCLED OR DISPOSED OF PROPERLY.

CHARGE THE HANDSET BATTERY

BEFORE USING THE CORDLESS TELEPHONE

The battery loses its charge during shipping and storage. Be sure to charge the battery before you use the CP-750 cordless telephone. Place the handset in the base unit. The CHARGING INDICATOR on the base will light. Leave the handset in the base unit for 12-15 hours.

DIGITAL SECURITY CODE

The Digital Security Coding System automatically resets a new personal security code, to one of over 64,000 combinations, every time you return the CP-750 handset to the base unit. (Whenever the handset is returned to the base unit, you will hear a beep.) The security code prevents unauthorized use of your telephone line, false rings and false dialing.

IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION INSTRUCTIONS

1. Never install telephone wiring during a lightning storm.
2. Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
3. Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
4. Use caution when installing or modifying telephone lines.

SAFETY PRECAUTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water: for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
5. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
6. Slots and openings in the cabinet and the back or bottom are provided for ventilation, to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on the bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in an enclosed environment unless proper ventilation is provided.
7. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be abused by animals or persons walking on it.
8. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
9. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
10. To reduce the risk of electric shock, do not disassemble this product, but take it to a qualified serviceperson when service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect re-assembly can cause electric shock when the appliance is subsequently used.
11. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - A. When the power supply cord or plug is damaged or frayed.
 - B. If liquid has been spilled into the product.
 - C. If the product has been exposed to rain or water.
 - D. If the product does not operate normally by following the operating instructions. Adjust only those controls, that are covered by the operating instructions because improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
 - E. If the product has been dropped or the cabinet has been damaged.
 - F. If the product exhibits a distinct change in performance.
12. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
13. Do not use the telephone to report a gas leak while near the leak.

SAVE THESE INSTRUCTIONS

ADDITIONAL INFO

HANDSET CHARGING INDICATOR

The HANDSET CHARGING INDICATOR lights solid when the handset is placed in the charger. Place the handset in the charger for 12-15 hours before the first use or when the battery begins to run low.

LIN-E-IN-USE INDICATOR

The LINE-IN-USE INDICATOR (located on the charging cradle) will light solid whenever the CP-750 is in "TALK" mode, whenever any other extension telephone on the same line is being used, or whenever the telephone cord is not properly plugged into the wall jack or telephone.

MOVING THE CP-750

Unplug the CP-750 from the wall outlet if you wish to move the unit. Place the handset in the charging cradle after relocating the CP-750. This will reset the CP-750's security code. All autodial, Caller ID and redial numbers will be saved.

POWER FAILURE/ NON-VOLATILE MEMORY

CASIO PHONEMATE's memory backup system maintains up to 20 autodial names and numbers and stored Caller ID information (up to 50 records) indefinitely until you erase them. This non-volatile memory does not require battery power.

TWO-LINE INSTALLATION

Two-line installations may require a two-line T-adapter for the CP-750 to operate correctly. The T-adapter allows you to connect your machine to Line 1 or Line 2. The CP-750 will only answer one line. (See Accessories Order Form.)

MULTI-LINE INSTALLATION

Installations with more than two lines, such as business PBX or Key Systems, may require a separate RJ11 jack for answering machines. Please contact your telephone equipment provider for additional information. (See Accessories Order Form.)

WARNING: Use only NiCd Rechargeable Battery Pack (3.6 volts 600 mAh.)

Handset battery life: 6.6 hours talk time, 7 days standby time.

CLEANING THE CP-750

CAUTION: Disconnect the CP-750 from the power outlet before cleaning.

Use a damp cloth or moist sponge only to clean: 1. The antenna.

2. The plastic cabinet of the handset and charging cradle.

3. The battery charging contacts on the handset.

A mild soap, like dishwashing detergent, will help remove grease or oil. Do not spray cleaners directly onto the unit. Cleaners should only be used on the plastic surfaces. Thoroughly dry all parts of the handset and charging cradle before re-using.


HANDSET BATTERY INSTALLATION

THIS UNIT IS SHIPPED WITH THE HANDSET BATTERY PACK INSTALLED.

If it becomes necessary to replace the battery pack:

1. Press down on the battery compartment cover and slide it toward the bottom of the handset.

2. Install the new battery pack with the red wire on the right side of the black wire (see drawing.)

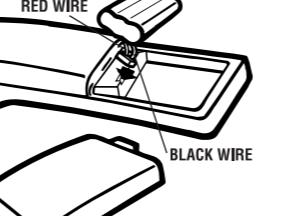

3. Replace the battery cover by sliding it up from the bottom.

4. Place the handset in the charging cradle and charge the battery pack for 12-15 hours.

Headset Jack / Belt Clip Included

The CP-750 handset has a 2.5mm jack for attachment of a headset (headset not included). The belt clip snaps into the back of the handset.

IMPORTANT FEATURES

Caller ID

If you subscribe to a Caller Identification Service (available from most local telephone companies), the CP-750 can display the name and phone number of incoming calls. With the Caller ID feature, you can see who is calling before you answer a call.

Call Waiting Caller ID

If you subscribe to a Call Waiting Caller ID service from your local telephone company, the CP-750 can display the name and number of an incoming call while you are already talking to another party on the cordless handset. NOTE: You must order the complete package that is known as "CALL WAITING/CALLER ID" from your local telephone company. If you simply order the two services of CALL WAITING and CALLER ID you may not receive Call Waiting Caller ID service.

Caller ID Memory

The CP-750 automatically stores the Caller ID names and numbers of the last 50 calls you have received.

Modem Monitor™ Connection Protection

Modem Monitor™ protects modem and fax connections when a call attempt is made from any phone that includes the Modem Monitor™ feature. It distinguishes between data and standard voice communication and allows for normal telephone operation.

Supertwist Nematic (STN) LCD

Advanced LCD technology in your CP-750 provides clear, multi-angle viewing of caller's name and phone number if you subscribe to Caller ID service from your local telephone company.

Autodial Memory Backup

CASIO PHONEMATE's memory backup system maintains up to 20 autodial names and numbers indefinitely until you erase them. This non-volatile memory does not require battery power.

Charging The Battery

Charge the battery for 12-15 hours before using the cordless handset for the first time. The handset is always charging while it is in the charging cradle and cannot be overcharged.

To charge the battery, first check the AC Adapter to see that it is connected correctly. Then, place the handset in the charging cradle. The CHARGING INDICATOR on the charging cradle lights solid to indicate that the CP-750 is charging.

Local Area Code Setting

If you are planning to use the Caller ID features on the CP-750 and you reside in a 7-digit dialing area, you may want to program your local area code into the handset's memory after you have charged the battery for the first time. The CP-750 uses this information to automatically dial stored Caller ID numbers correctly from a 7-digit dialing area. If you have 10 or 11 digit dialing in your area, leave the area code setting at 000. The CP-750 will prompt you to choose between 7, 10, or 11 digit dialing each time you make a caller ID call.

Headset Jack / Belt Clip Included


The CP-750 handset has a 2.5mm jack for attachment of a headset (headset not included). The belt clip snaps into the back of the handset.

CASIO
PHONE MATE

CP-750 EASY TO USE OWNER'S GUIDE
900 MHz CORDLESS PHONE WITH
CALL WAITING CALLER ID

INSTALLATION

1 PLUG the CP-750's telephone cord into a telephone wall jack. PLUG the other end of the cord into the back of the base unit.

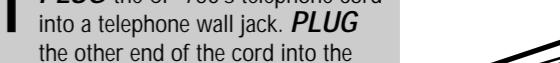

2 CONNECT the AC Adapter Plug into the AC Adapter Outlet on the back of the CP-750 charging cradle. LOOP the cord through the AC Adapter Cord Holder to prevent accidental disconnection.



3 PLUG the AC Adapter into an electrical wall outlet. Place the handset (with battery pack installed) in the cradle.



4 It may be necessary to set the TONE/PULSE SWITCH.



5 Raise the charging cradle antenna for clear reception.



REDFACIA RÁPIDA

INSTALACIÓN

1 ENCHUFE

el cordón de su CP-750 en un enchufe para teléfono en la pared. **ENCHUFE** el otro extremo del cordón telefónico al rededor de las cuatro guías en la parte inferior del soporte para empotrar. Haga pasar el cordón telefónico a través del orificio en el centro del soporte. Vea el dibujo. El auricular puede ser cargado en la posición mirando hacia afuera o boca abajo, aún si se empotra en la pared.

2 CONECTE

el enchufe del adaptador de CA en la entrada de tomacorriente para adaptador de CA que hay en la parte de atrás de la base para carga de su CP-750. **ENGANCHE** el cordón en el sujetador de cordón para evitar una desconexión accidental.

3 ENCHUFE

el adaptador de CA en un tomacorriente eléctrico de pared. Coloque el auricular (con su paquete de pilas ya instalado) en la unidad base para carga.

4 Puede que se necesite ajustar el interruptor selector para modo de operación TONES o de PULSES.

TONE = para servicio telefónico por tonos. **PULSE** = para servicio telefónico por pulsos.

5 Saque y extienda completamente la antena en la base para carga para lograr la mejor recepción.

USO EN PARED O ESCRITORIO

Se incluye un soporte para empotrar en pared si se desease. Enrolle en forma apretada el cordón telefónico al rededor de las cuatro guías en la parte inferior del soporte para empotrar. Haga pasar el cordón telefónico a través del orificio en el centro del soporte. Vea el dibujo. El auricular puede ser cargado en la posición mirando hacia afuera o boca abajo, aún si se empotra en la pared.

INTERRUPTOR SELECTOR TONES/PULSES

Este interruptor le indica a su CP-750 que la marcación de números es a través de tonos o por pulsos de acuerdo al tipo y servicios que tenga su compañía de servicios telefónicos. Su CP-750 es empacado con el interruptor TONE/PULSE (Tonos/Pulsos) en la posición para operación por tonos. Si usted no tuviera servicio telefónico por tonos, cambie el interruptor a la posición PULSE (Pulsos) en la parte posterior de la base para carga.

TONE = para servicio telefónico por tonos. **PULSE** = para servicio telefónico por pulsos.

TIMBRE ENCENDIDO/ APAGADO "ON/OFF"

Su CP-750 es empacado con los interruptores para el timbre en la base y el auricular en la posición encendido (ON). A su gusto, usted puede tener apagados o encendidos los timbres de su CP-750.

¡IMPORTANTE! CARGUE COMPLETAMENTE LA PILA DEL AURICULAR DE 12 A 15 HORAS ANTES DE USAR EL TELEFONO
El desempeño de la pila es determinado por la duración del primer ciclo de carga. Si usted se precipita a usar su teléfono antes de que la pila haya cargado completamente, usted reducirá el tiempo efectivo de uso por carga de su teléfono.
Instale la pila y conecte el teléfono como se muestra, luego coloque el auricular en la base para carga, con las teclas de números hacia abajo. El INDICADOR DE CARGA (CHARGE INDICATOR) en la base se encenderá. Deje el auricular en la base de 12 a 15 horas.

Some cordless telephones operate at frequencies that may cause interference to nearby TVs and VCRs; to minimize or prevent such interference, the base of the cordless telephone should be placed near or on top of a TV or VCR; and, if interference is experienced, moving the cordless telephone farther away from the TV or VCR will often reduce or eliminate the interference.

* This will be included in the manual *