



 
# Waterproof Shutter Remote

USER GUIDE


## Installing the Remote Battery

---


1. Use a coin to unlock the remote's back panel. Gently press the coin into the slot on the back panel and rotate one quarter turn counter-clockwise.



 2. Carefully remove the back panel and install the included battery with the positive (+) flat side of the battery face up.



 3. Reinstall the back panel. Use a coin to press and rotate the panel one quarter turn clockwise until the dots align and it clicks into place.



*Note: Be sure that the door is securely locked and sealed after closing.*

*Heads Up:* The battery may stop working at very low temperatures (-4°F/-20°C and below). It may work again after it warms back up.

## Pairing to Your GoPro

With the remote off and your camera in pairing mode, press the remote's Power button . The remote's status light will blink blue every 0.5 seconds to show that it's in pairing mode.



The status light will blink blue every 5 seconds if the pairing was successful.

To pair additional cameras (or re-pair your original camera), follow the same steps but press and hold remote's power button for 3 seconds to put it into pairing mode.

*Heads Up:* HERO11 and earlier cameras cannot be connected to the remote and the GoPro app at the same time.

## Turning the Shutter Remote On

Simply press the remote's Power button to turn it on. This will also turn on your camera if the remote and camera were connected within the previous 8 hours. If not, turn on your camera. They will pair automatically. The remote's status light will turn solid blue when scanning for your camera and will blink every 5 seconds after it connects.

## Recording With the Shutter Remote

1. With your camera on and connected to the remote, simply press the remote's Shutter button  to start capturing with the mode that's currently active on your camera.



2. Press the Shutter button again to stop recording.

*Heads Up:* The remote's status light will blink red to show that recording is in progress.

**PRO TIP:** If your camera's been off for less than 8 hours, you can press the remote's Shutter button to power on your camera and start recording with QuikCapture.

## Resetting the Shutter Remote

Press and hold the Power button for 8 seconds if you need to reset the remote.

## Low Battery Indicator

An alert on your camera's display will let you know when the remote's battery is running low. Replace the battery with a CR2032 coin cell battery. We recommend the GP CR2032 battery for the best performance.

 
## Turning Your Shutter Remote Off

Press and hold the remote's Power button for 3 seconds to turn it off. It will also turn off your GoPro if it's connected.

## Attaching the Shutter Remote to the Extension Pole

Use the remote's straps to attach it to the extension pole.


1. Wrap the remote's strap around the grip and thread the end through the loop on the other side of the remote.
2. Fold the strap back on itself and use the hook and loop fasteners to secure the strap.

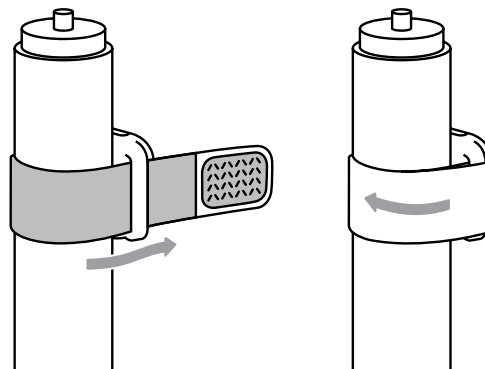

## Mounting Your Camera to the Extension Pole

### ATTACHING A CAMERA MOUNT

 
Attach either the mounting finger adapter or the ball joint adapter to the grip by screwing it clockwise onto the grip's 1/4-20 mount.

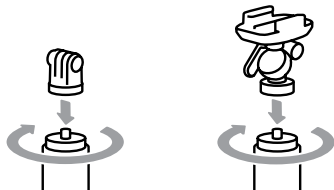

*Heads Up:* You can also attach your camera directly to the 1/4-20 mount.

### USING THE FINGER ADAPTER

 Interlace the mounting fingers of your GoPro with the mounting fingers on the mounting finger adapter and secure it with a thumb screw.

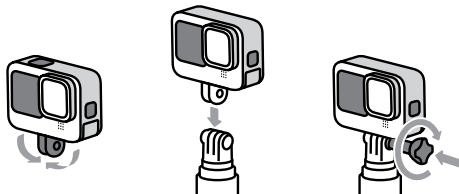


### USING THE BALL JOINT ADAPTER

1. Interlace the mounting fingers of your GoPro with the mounting fingers on a standard GoPro mounting buckle (not included) and secure it with a thumb screw.



## Mounting Your Camera to the Extension Pole

 2. Flip up the plug on the mounting buckle and slide the mounting buckle into the mounting base of the ball joint adapter until it clicks into place. Press the plug back down until it sits flush with the base.

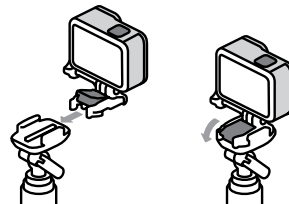

3. Flip open the lever on the ball joint adapter to adjust your capture angle.  
NOTE: Be sure the lever is unlocked when adjusting your camera's position. Rotating the ball joint with the lever locked could damage the mount.



4. Close the lever to lock in your camera's position. Tighten or loosen the lever as needed.




**PRO TIP:** Use a screwdriver to tighten the screw on the opposite side of the lever to more securely lock the ball joint in place if necessary.

## Using the Extension Pole

 ---

The extension pole can be extended all the way to 48in (122cm) and collapsed down to 10in (25cm).

**PRO TIP:** The extension pole and remote are both waterproof, but the remote will not work under water.

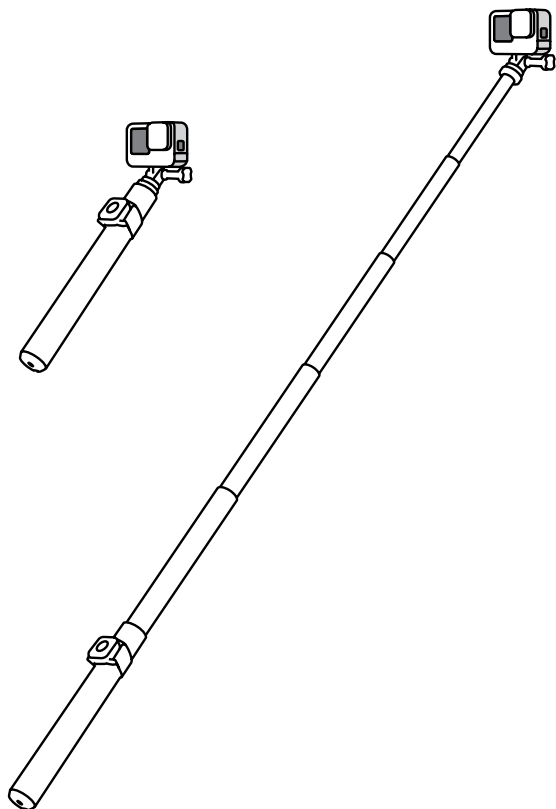

## Using the Wrist Strap Extension

---

Attach the wrist strap extension to the remote's strap to create a convenient wearable remote. Make sure that the hook patches on both straps are facing the same direction when connecting the straps.

