



FF180005 Photo


FPC PCB PW BG A

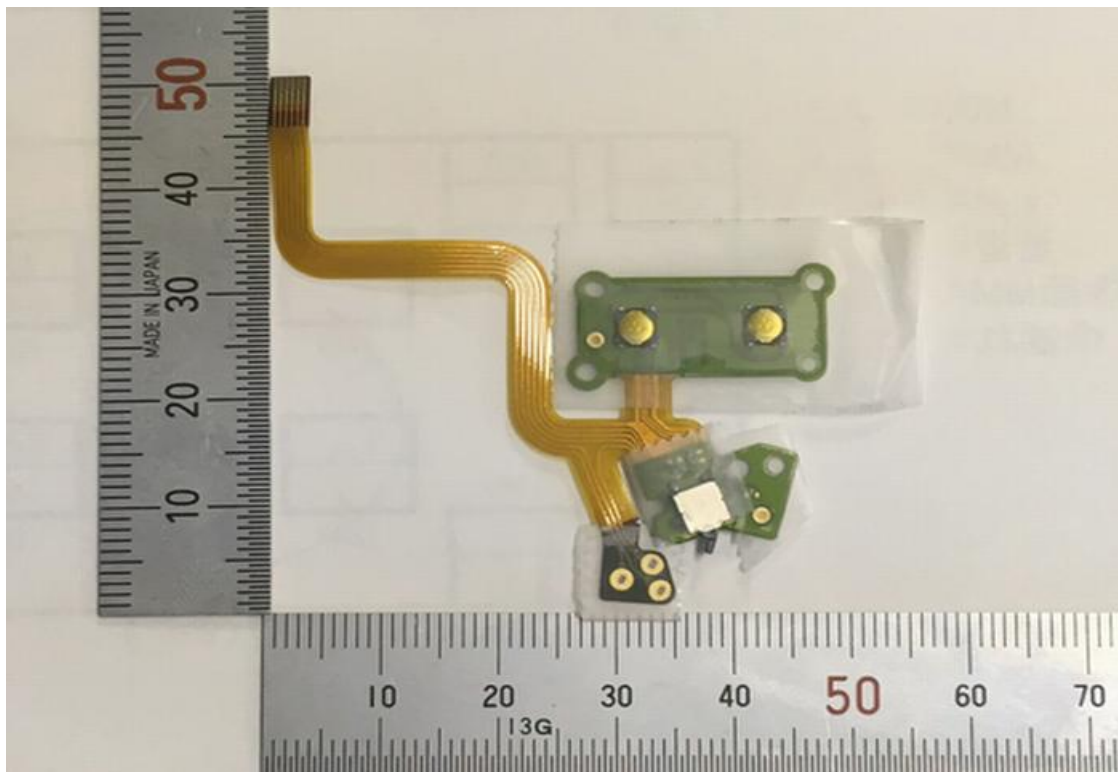


FPC PCB PW BG B

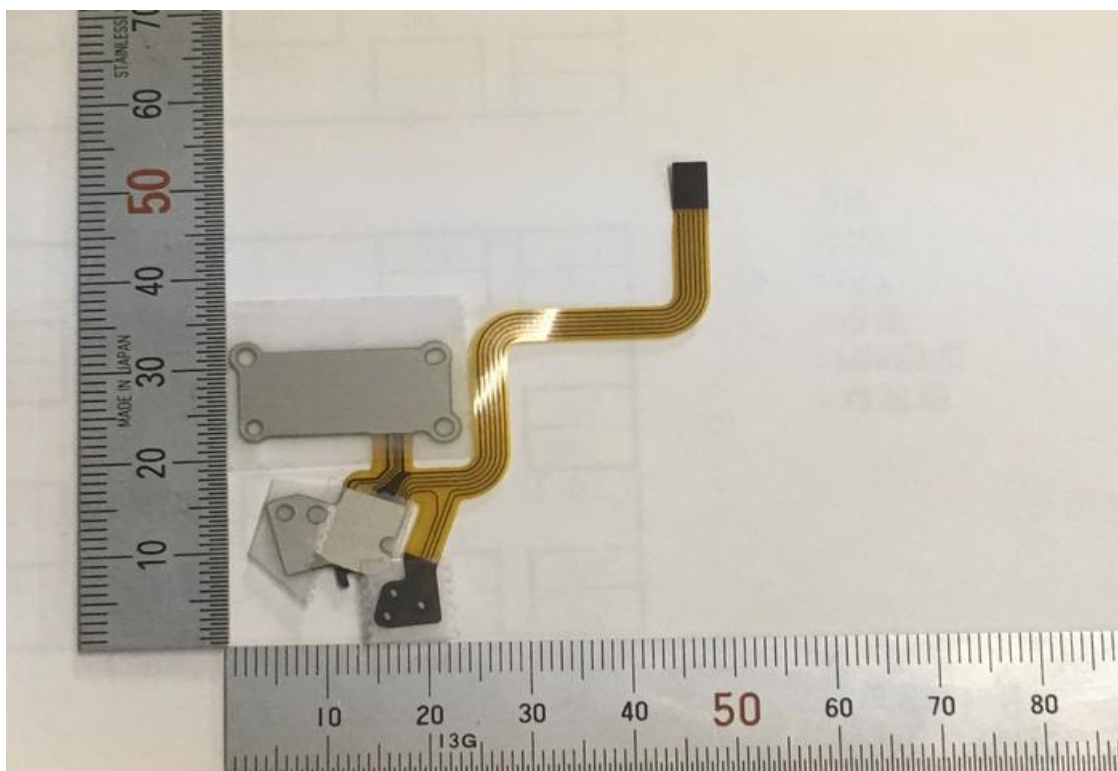


FPC REAR BG A

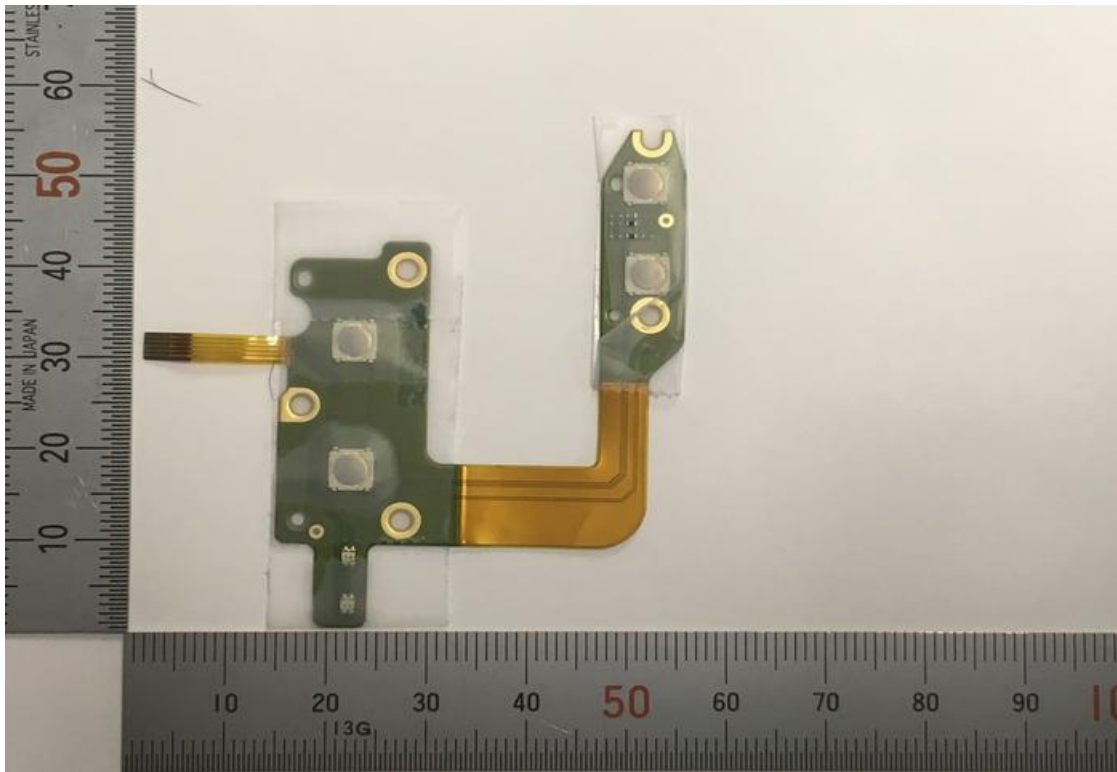


FPC REAR BG B

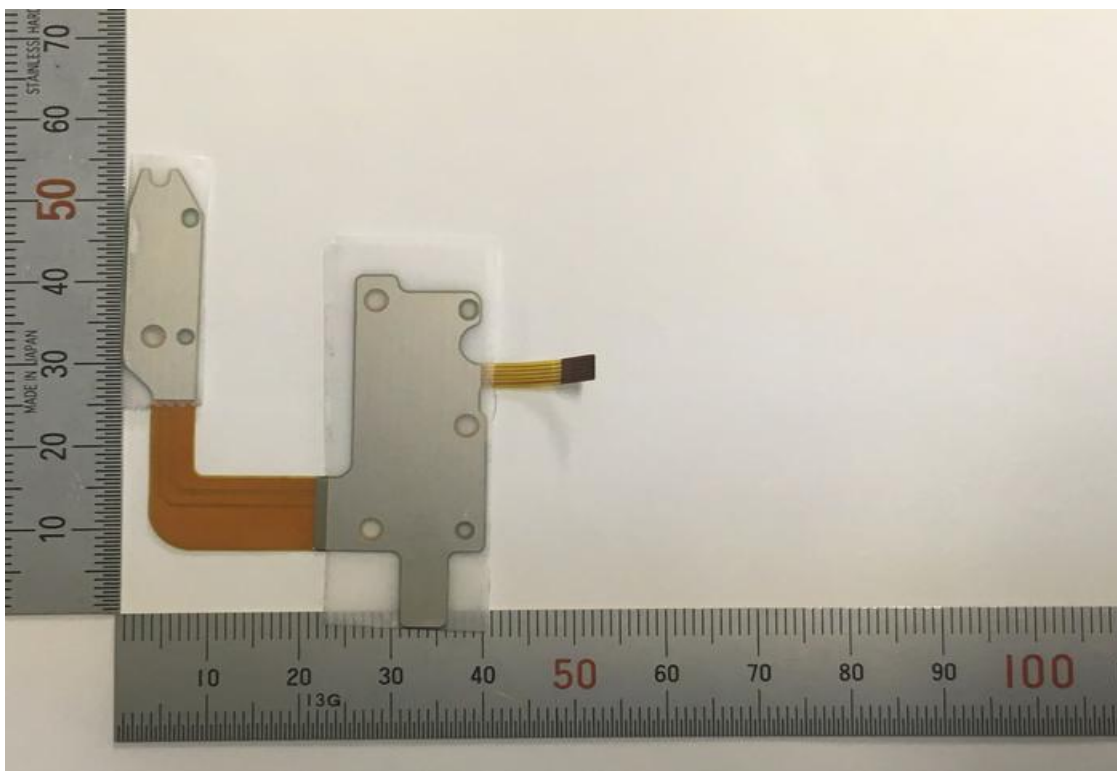


FPC EVF A

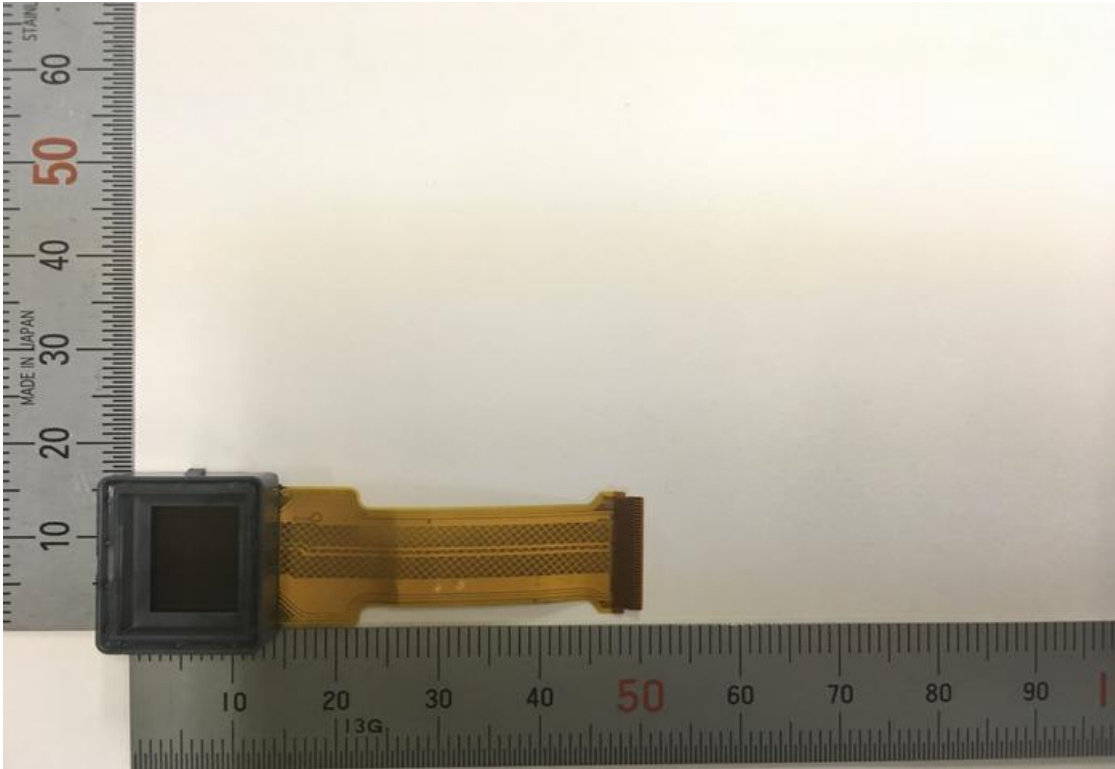


FPC EVF B

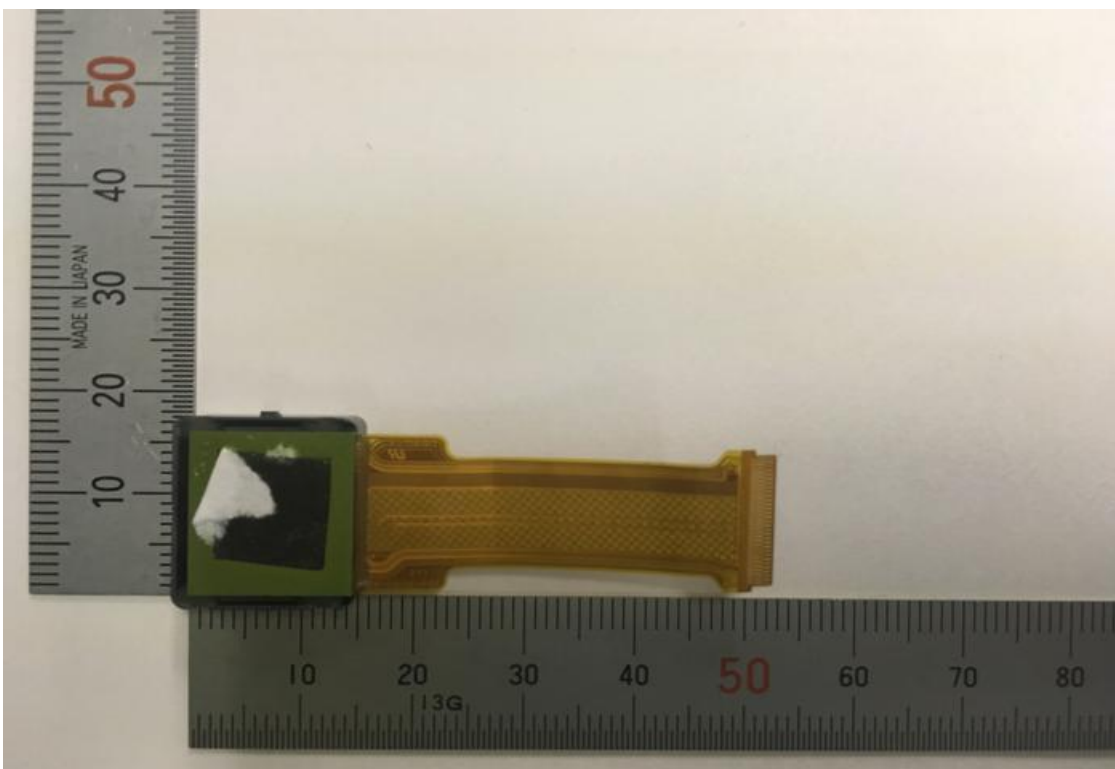


FPC FCMD BG A

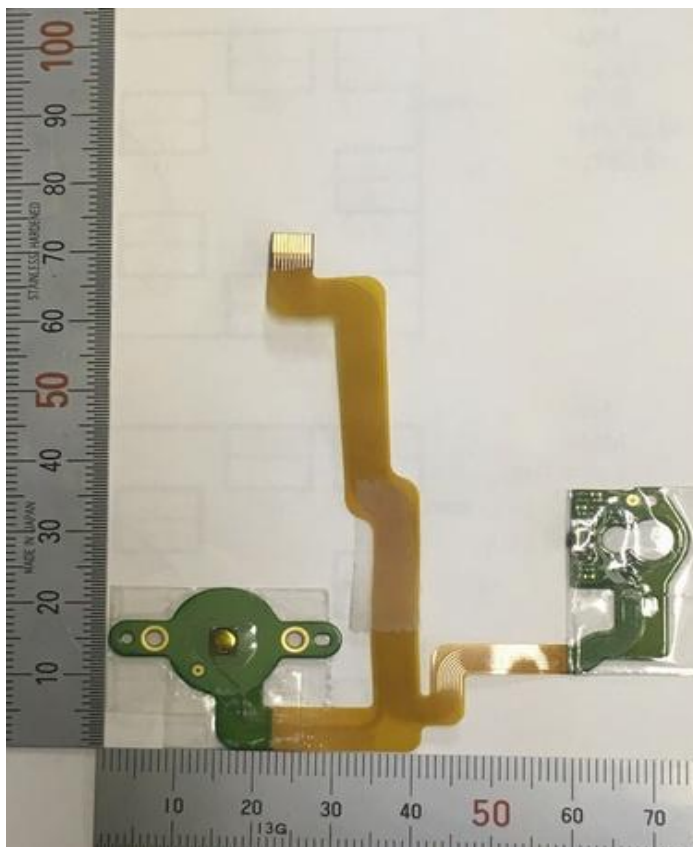


FPC FCMD BG B

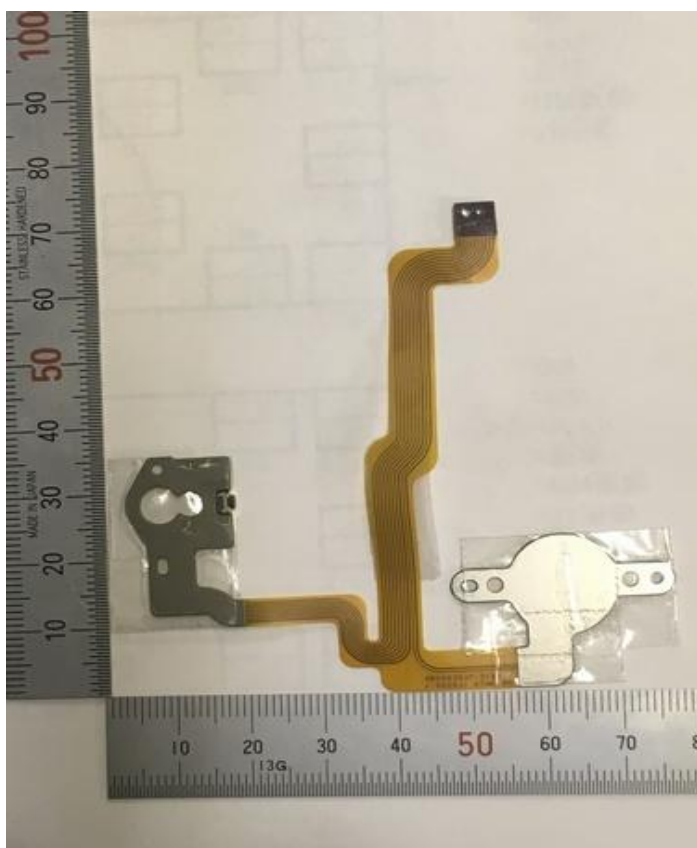

FPC FCMD A

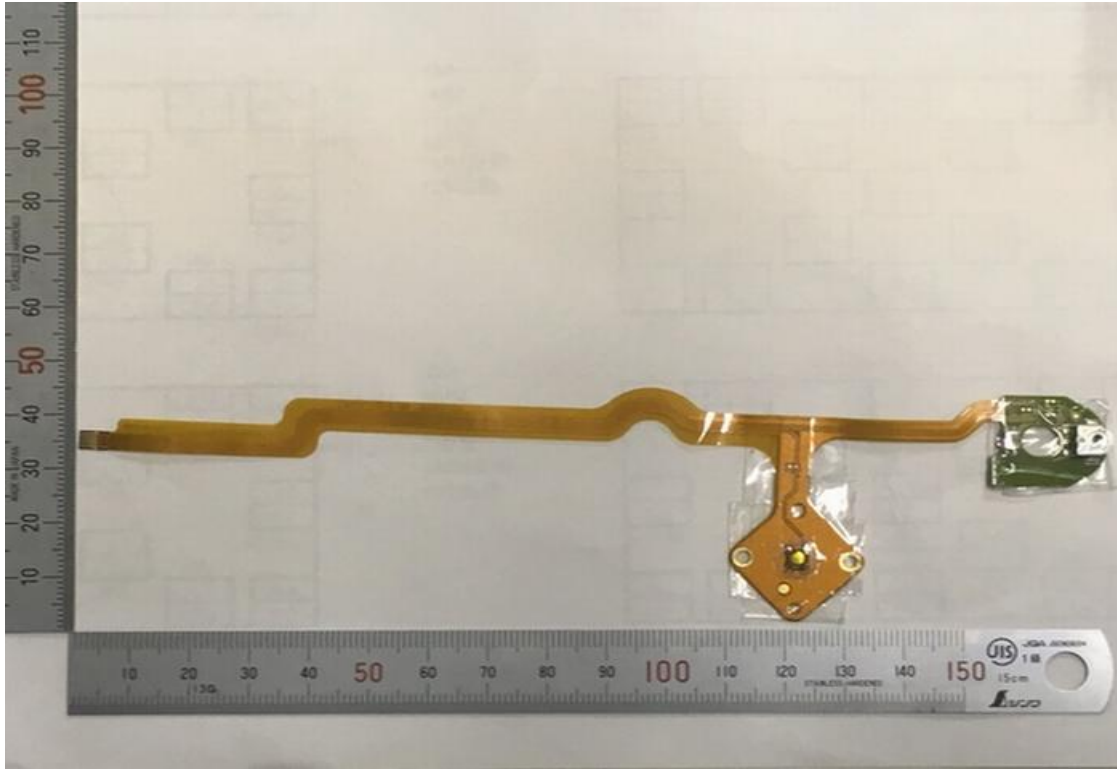


FPC FCMD B

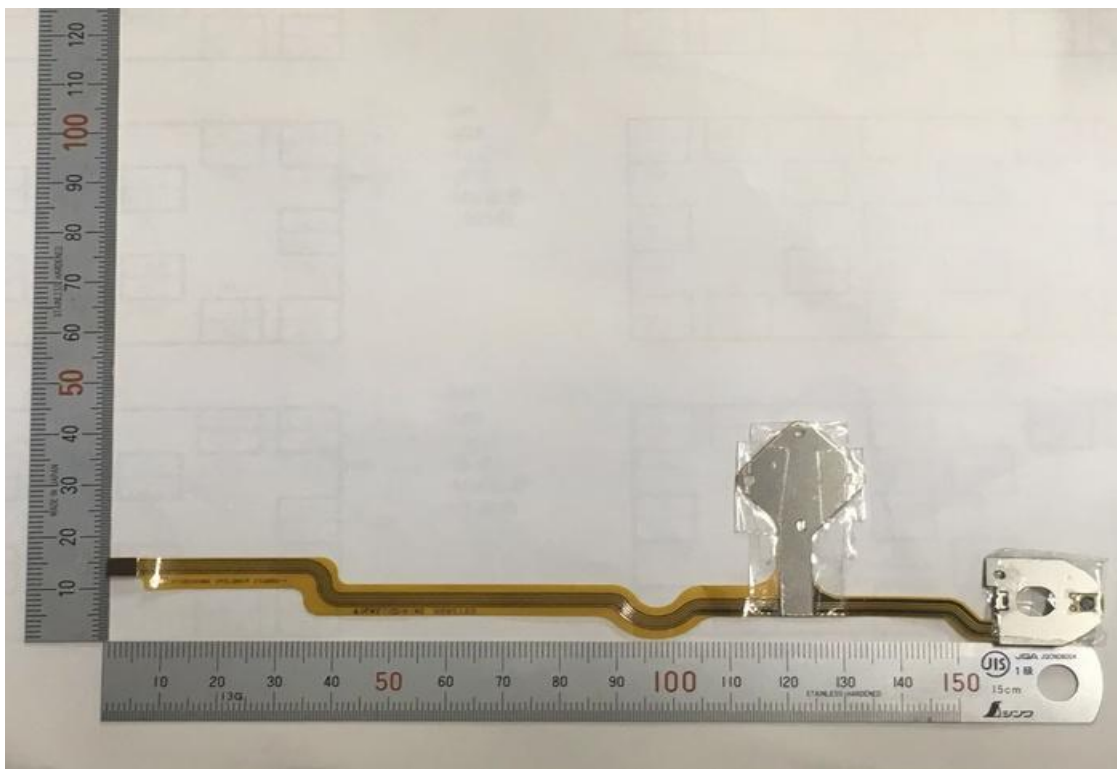


FPC LCD TILT A




FPC LCD TILT B

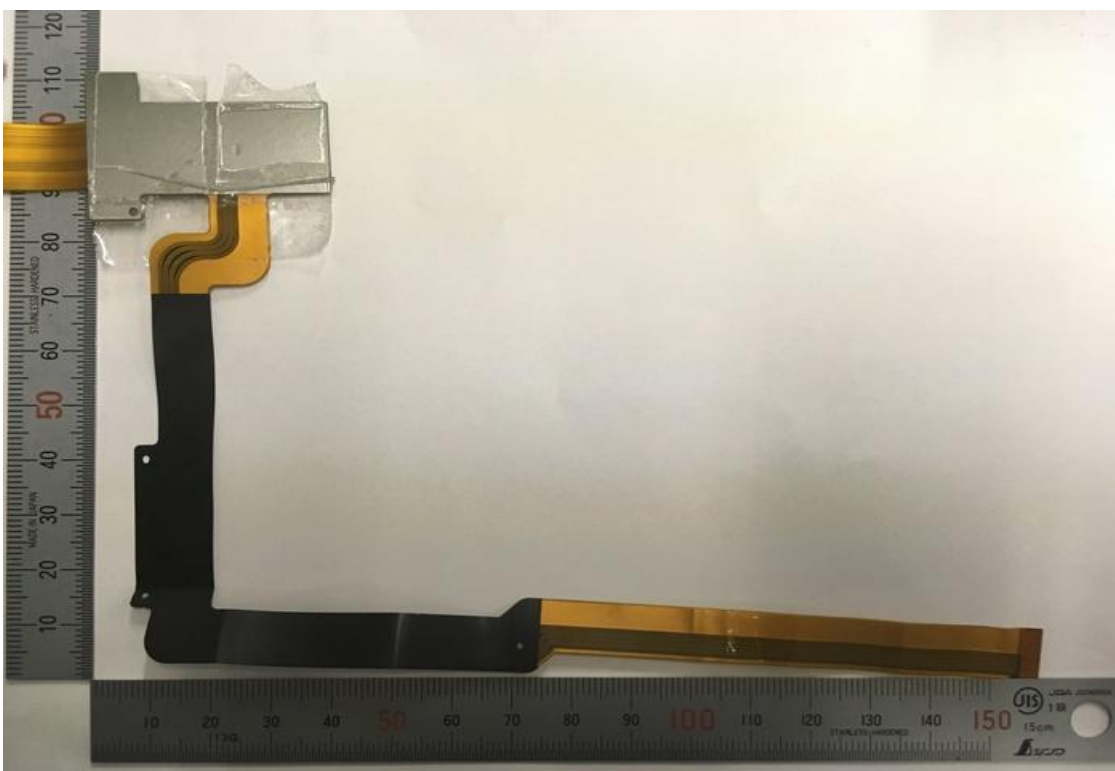


FPC TOP L A

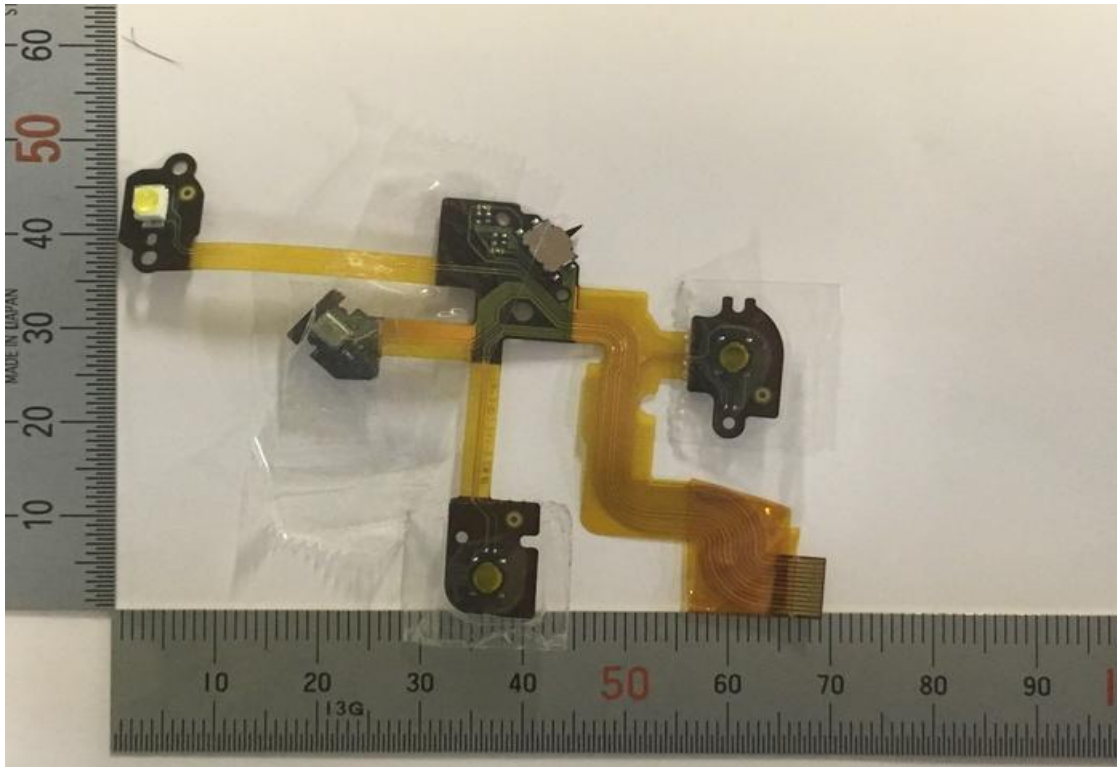


FPC TOP L B

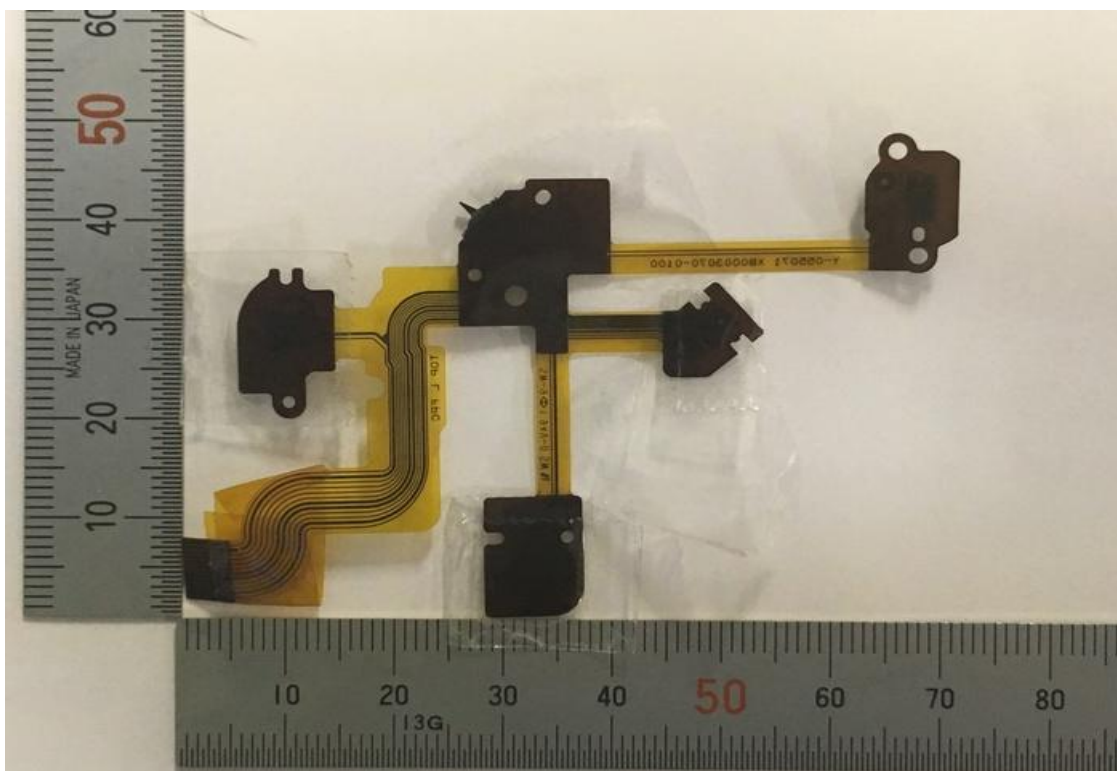


FPC WLAN GYRO A

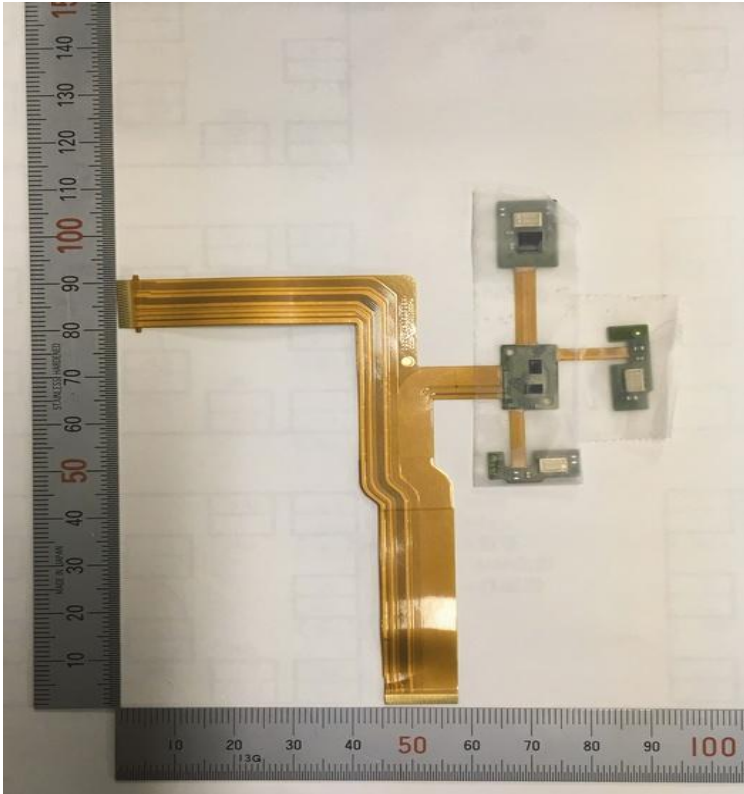


FPC WLAN GYRO B

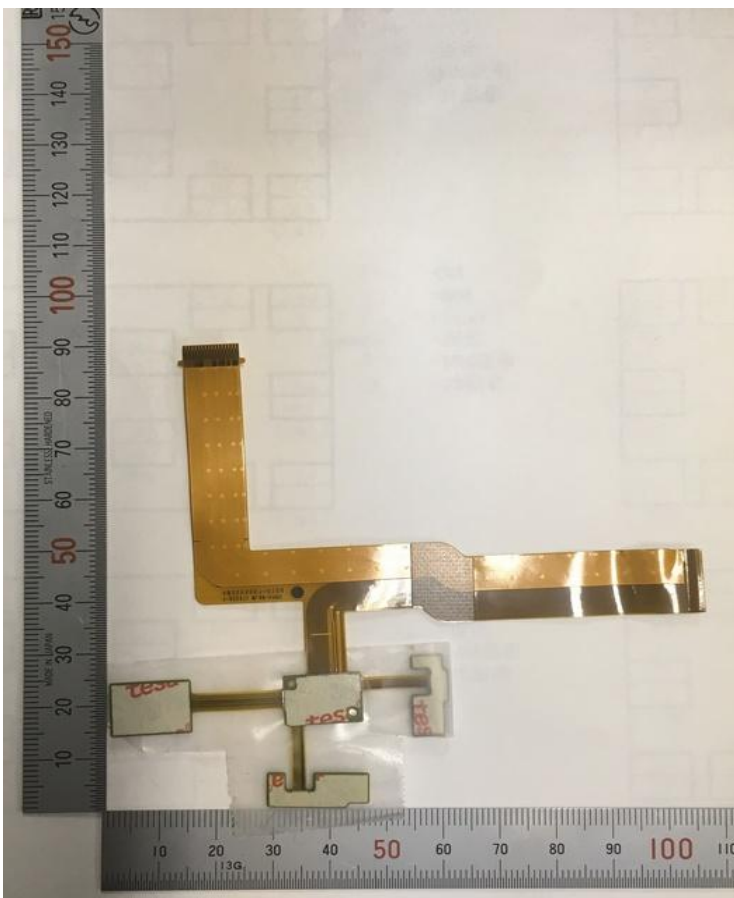


FPC AF/FPC PW/FPC COMMAND/FPC LCD TOP A

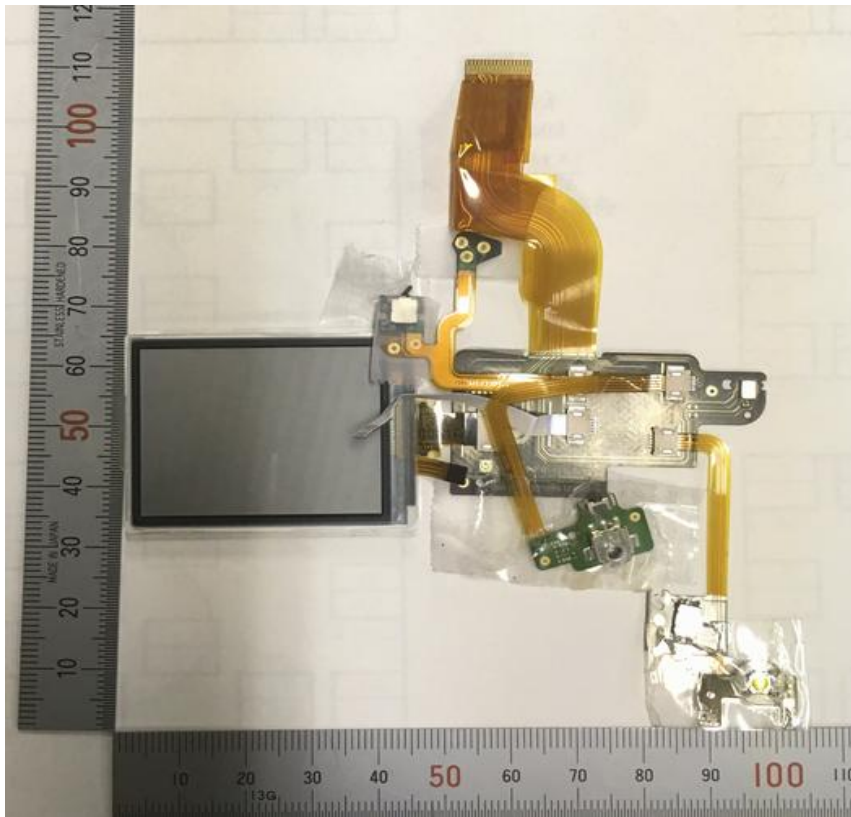


FPC AF/FPC PW/FPC COMMAND/FPC LCD TOP B

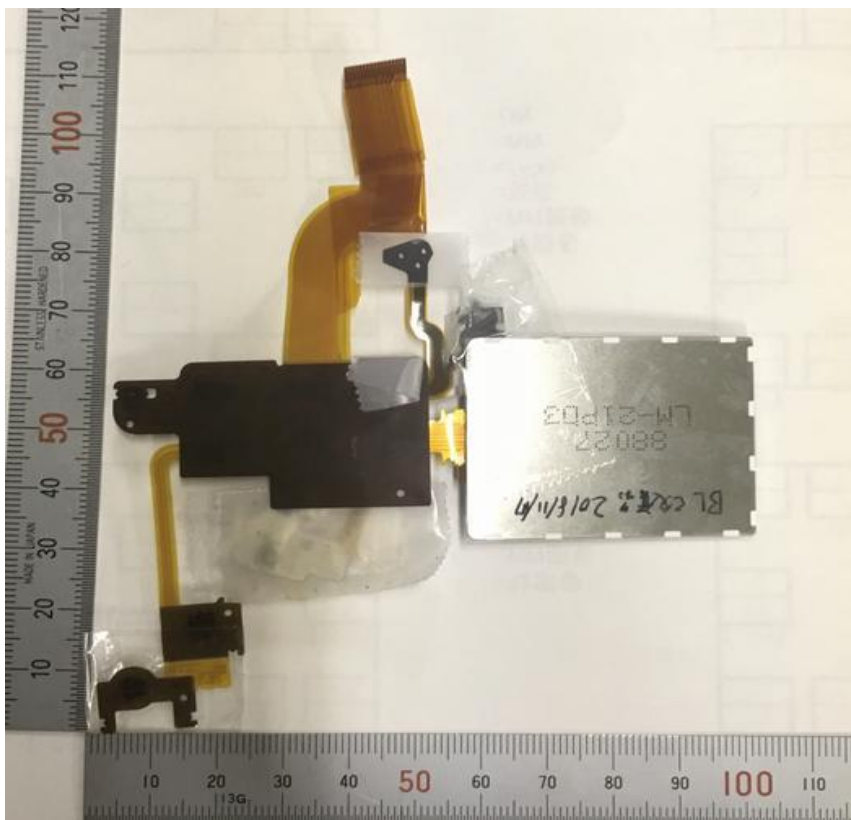


LCD A

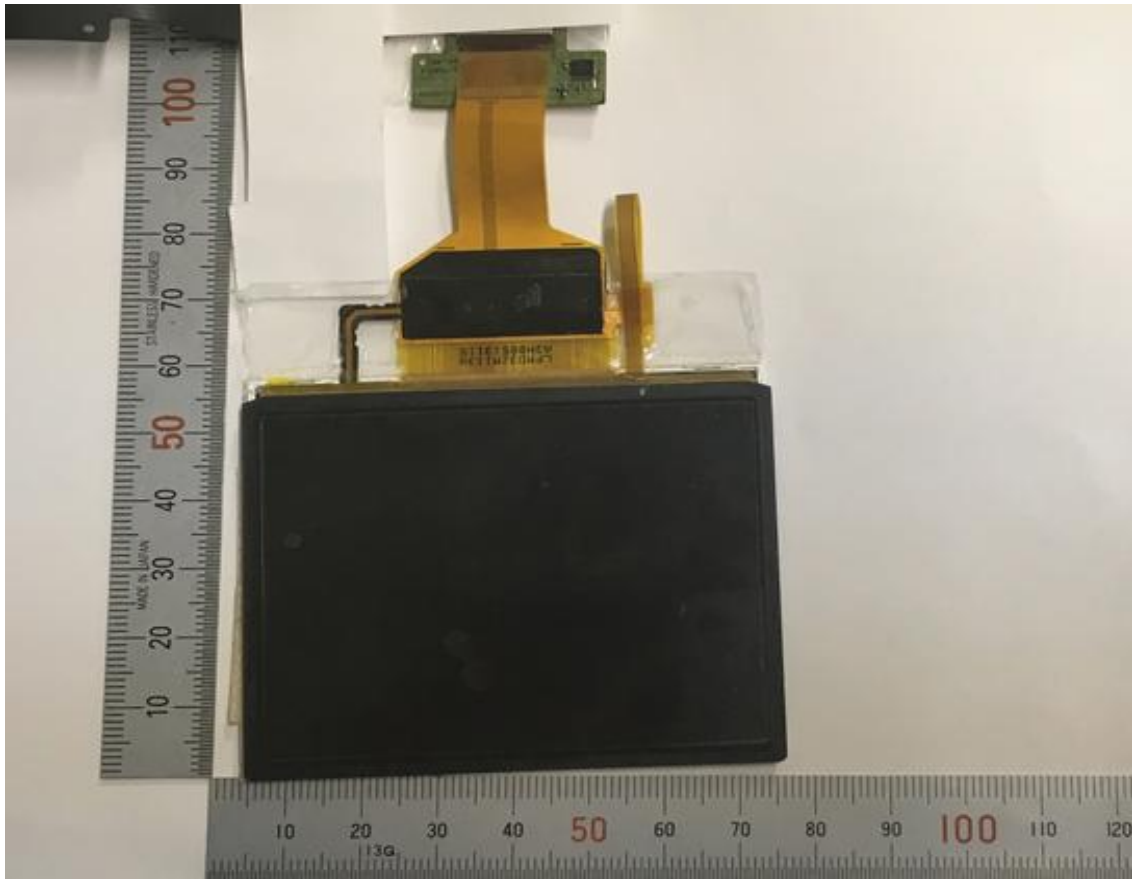


LCD B

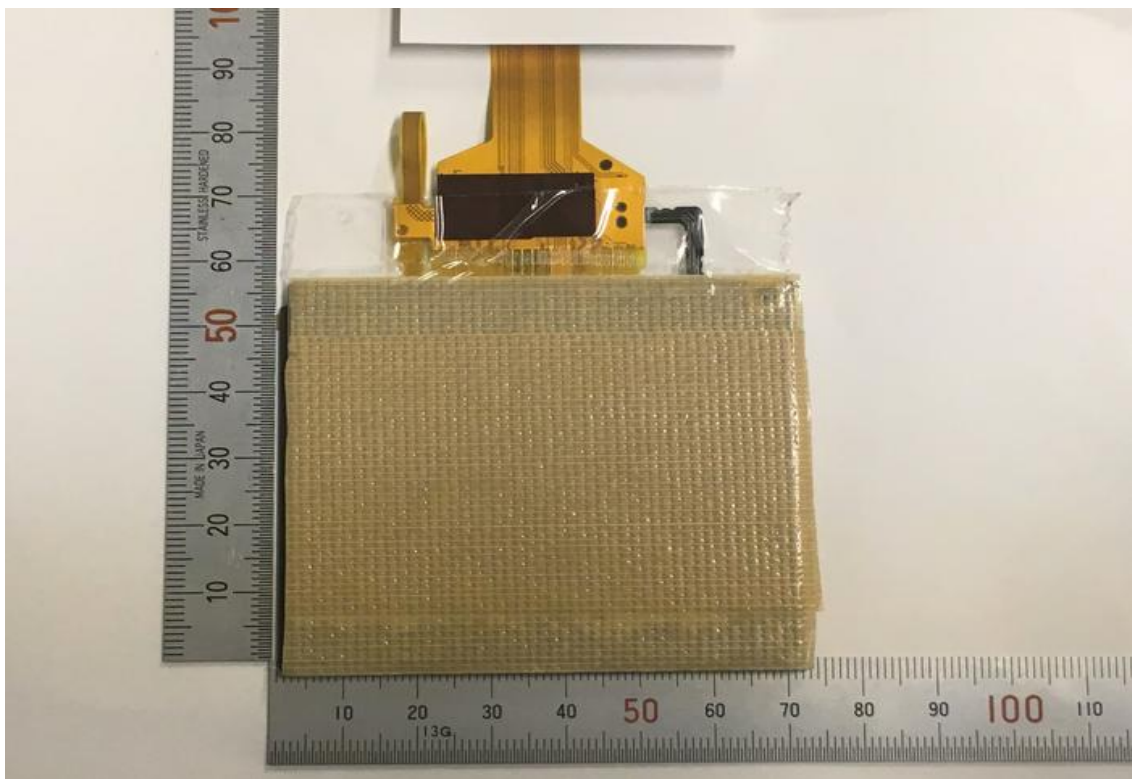


PWB MAIN A

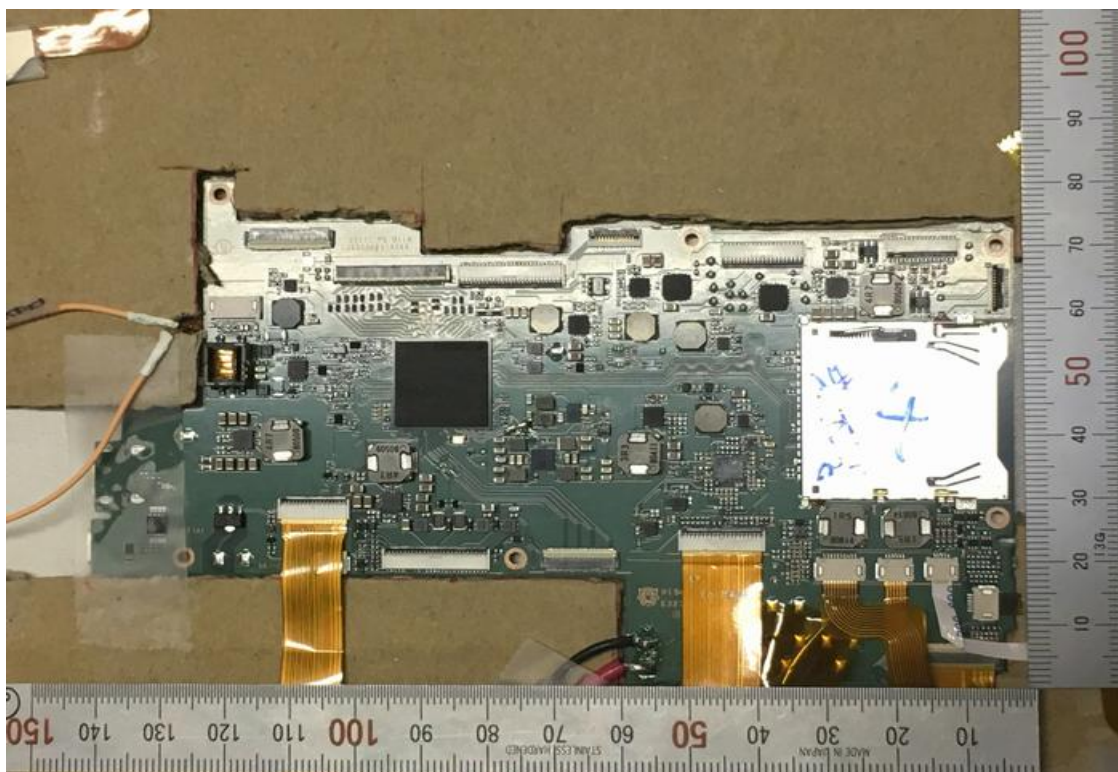


PWB MAIN B

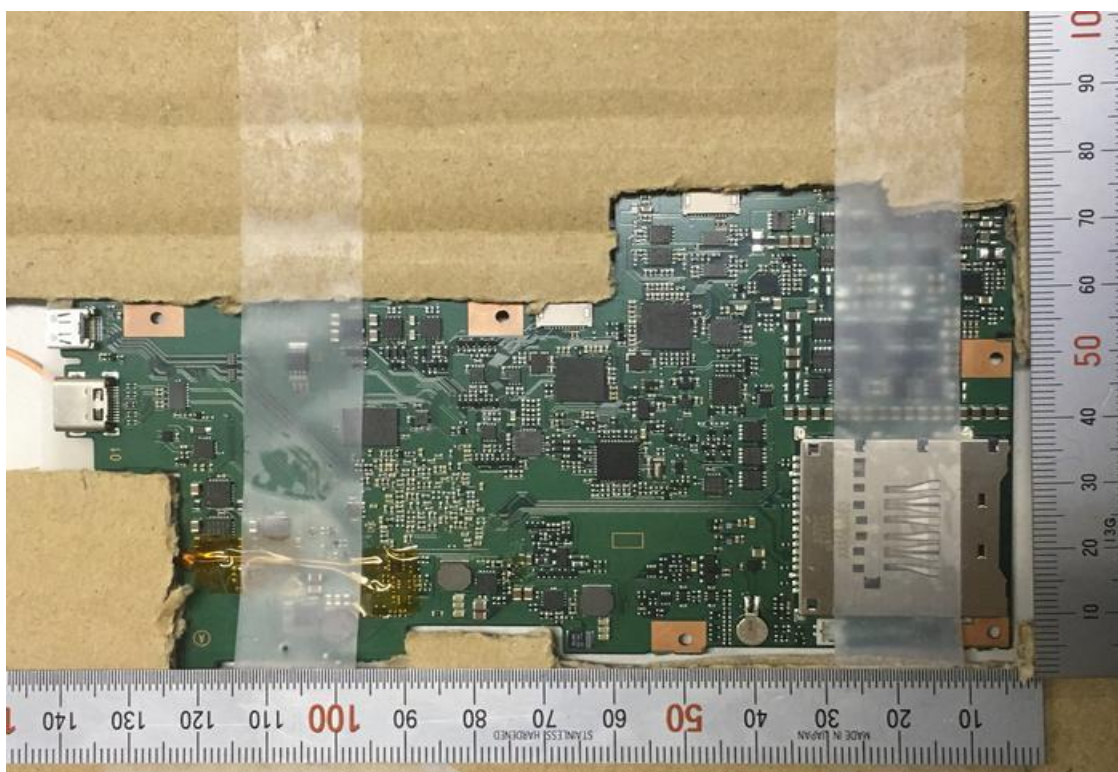


PWB REAR/FFC PWB Q/PWB Q/FFC PWB REAR BG/PWB REAR BG A
FFC PWB MIC/PWB MIC/FPC COMMOND /PWB Q BG A

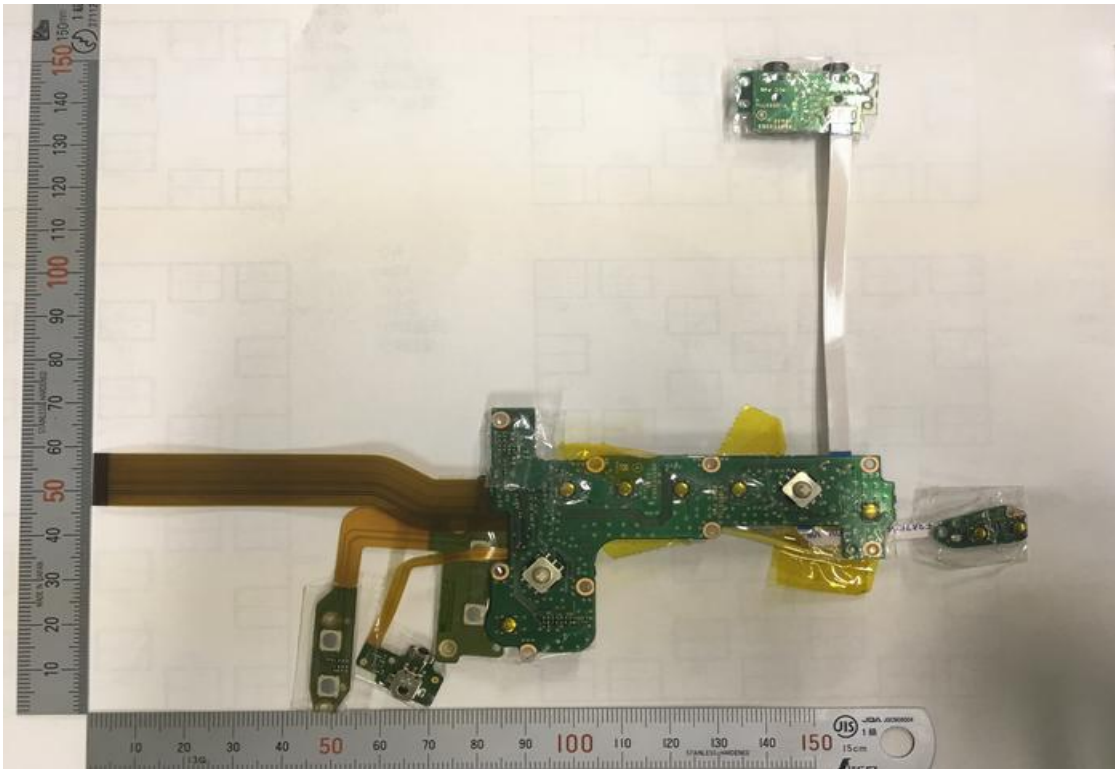


PWB REAR/FFC PWB Q/PWB Q/FFC PWB REAR BG/PWB REAR BG B
FFC PWB MIC/PWB MIC/FPC COMMOND /PWB Q BG B

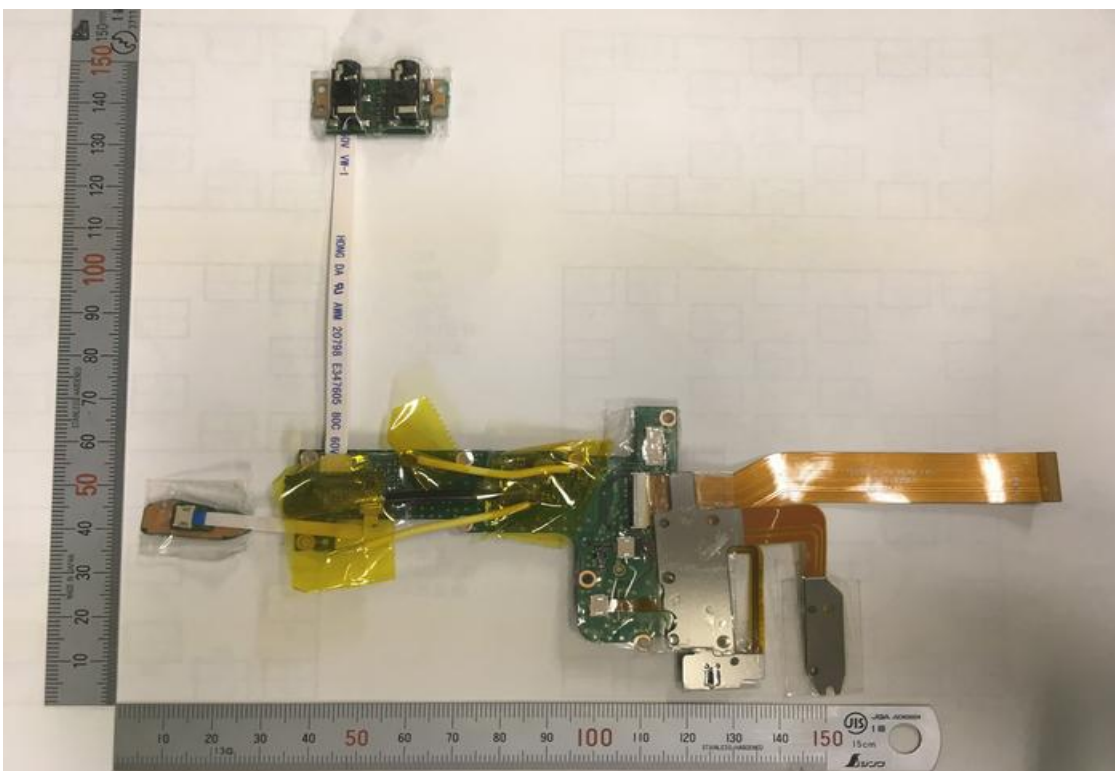


PWB RR JACK A

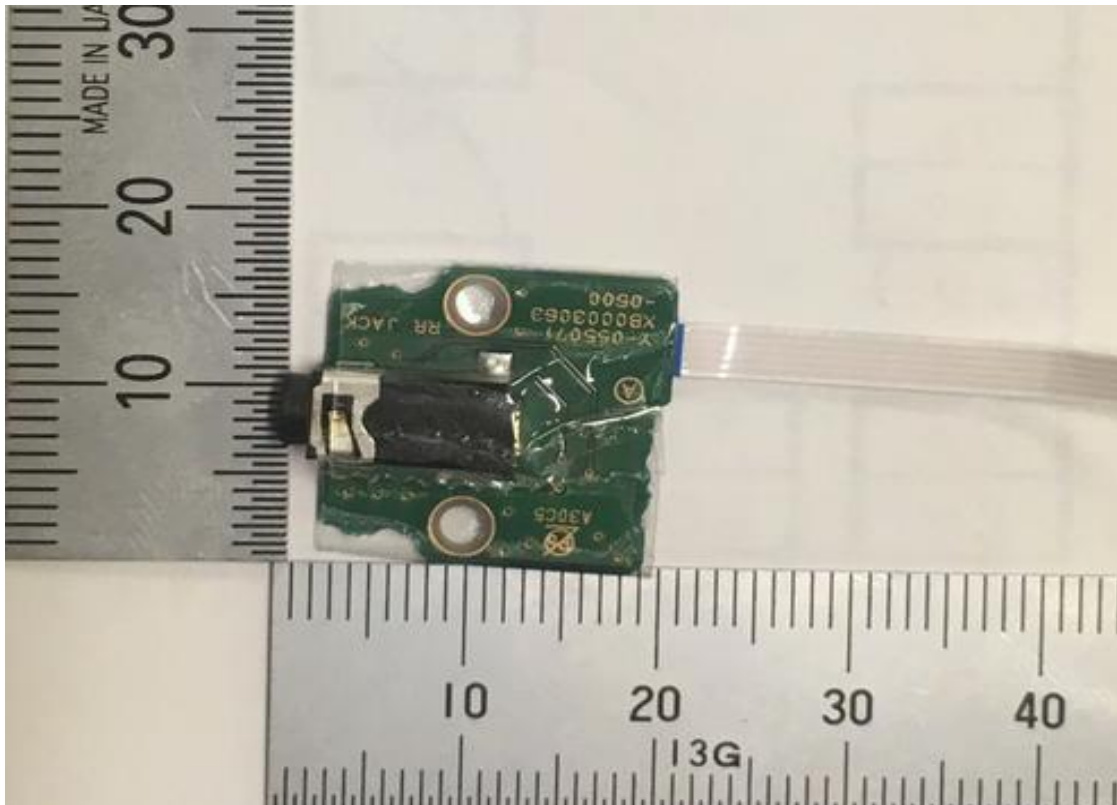


PWB RR JACK B

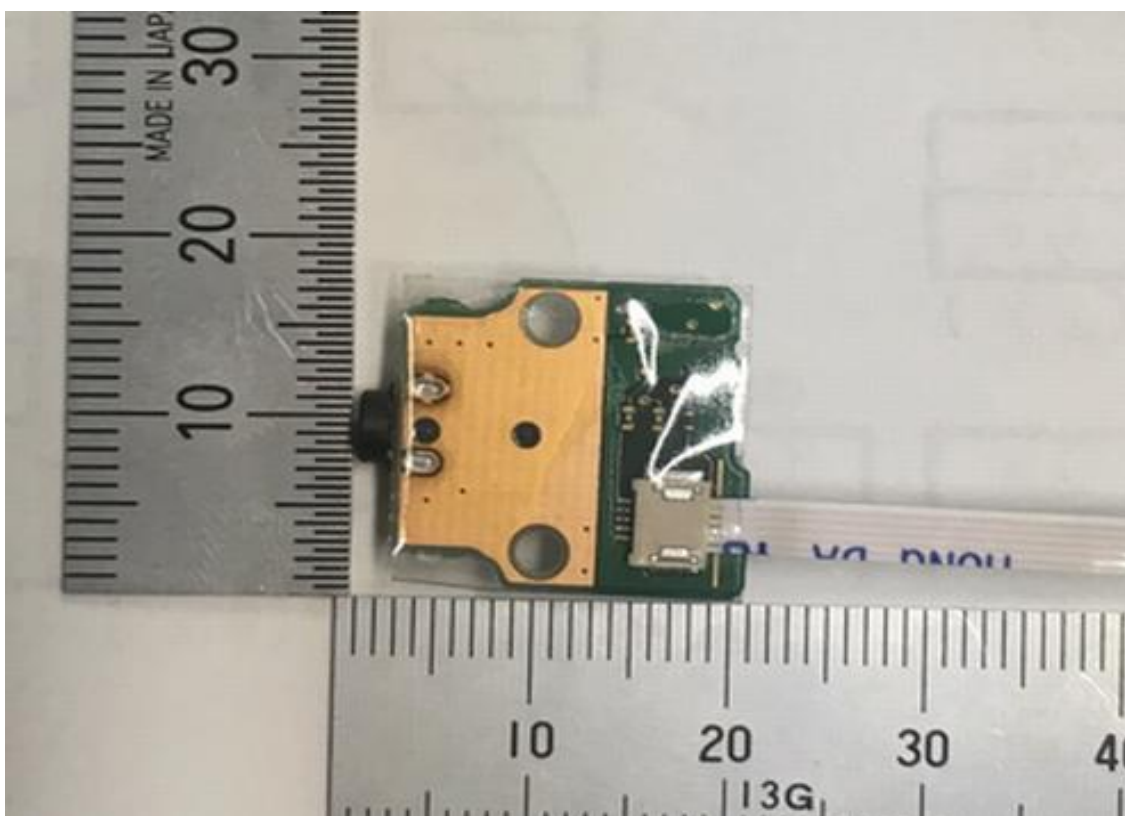


PWB RCMD.SUB/PCB MIC.SUB/PCB Q.SUB REAR A

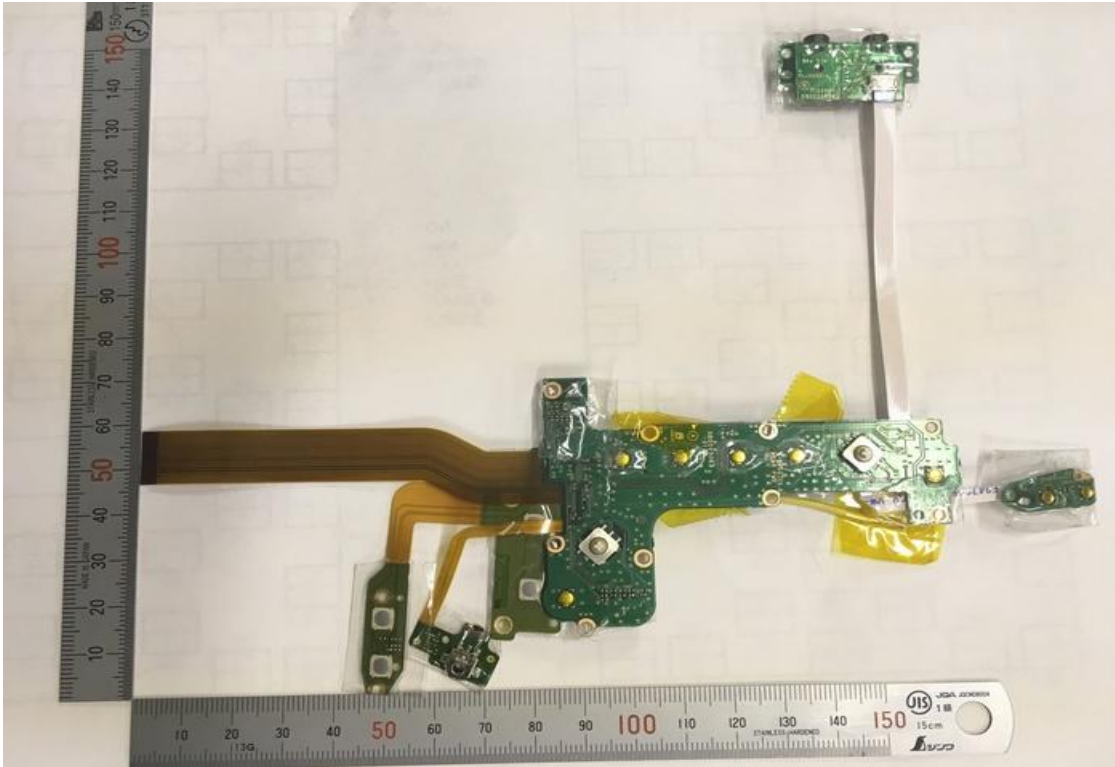


PWB RCMD.SUB/PCB MIC.SUB/PCB Q.SUB REAR B

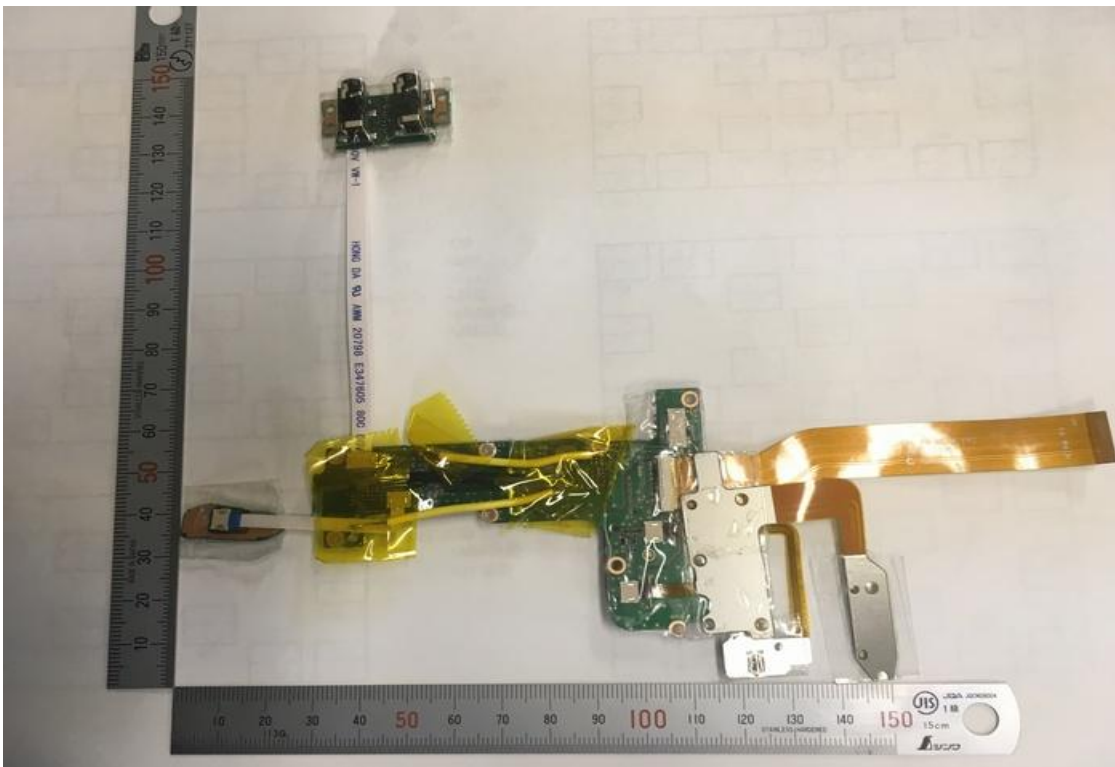


PWB TOP R A

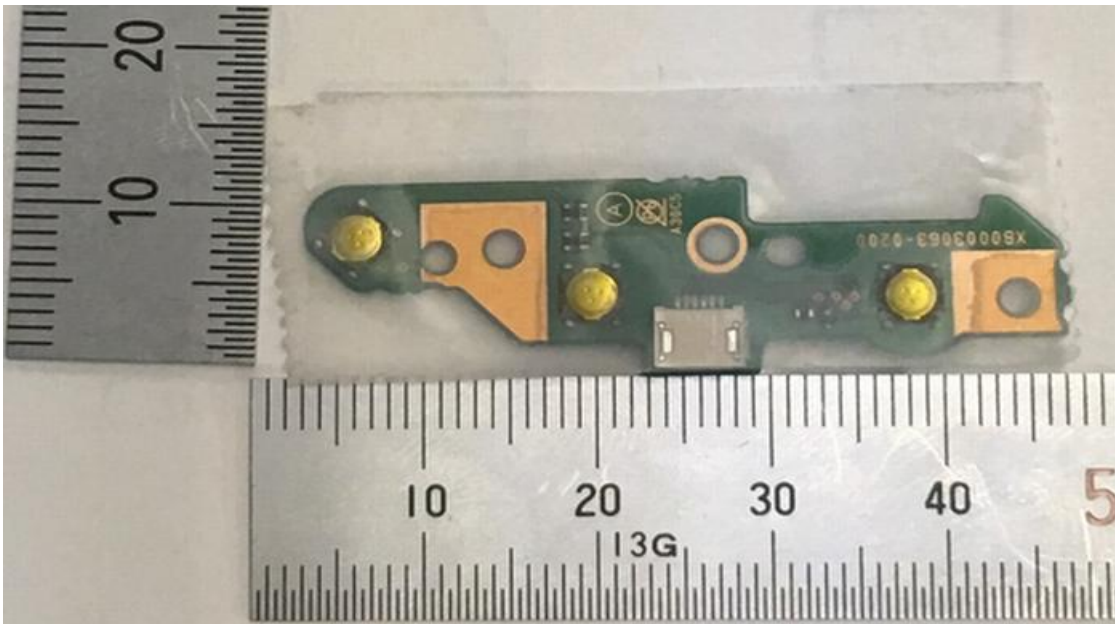

PWB TOP R B

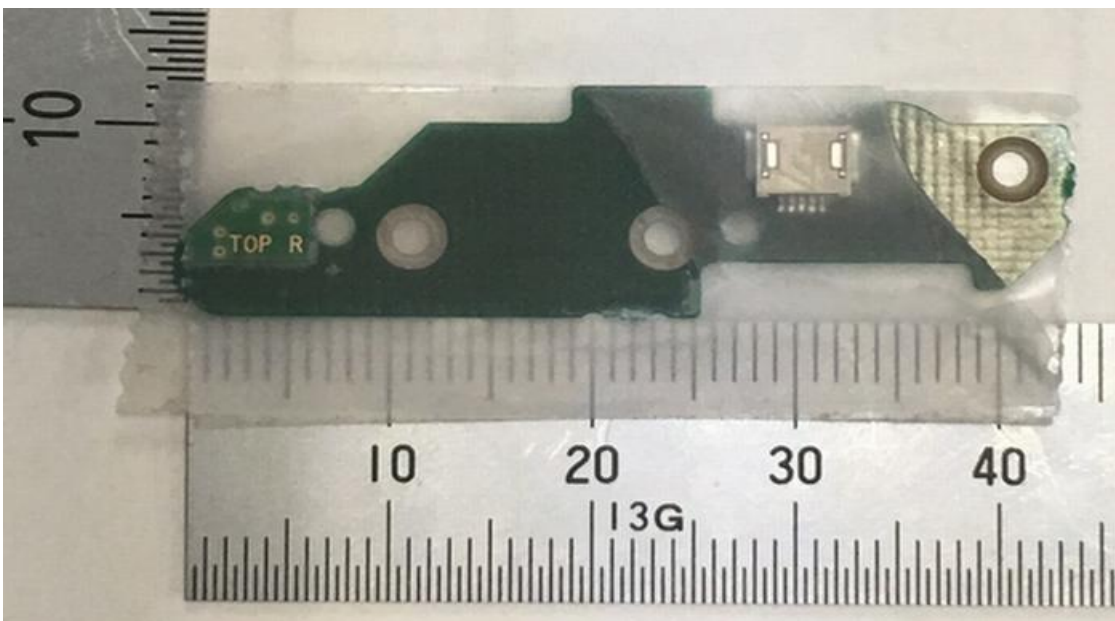

PWB WLAN A

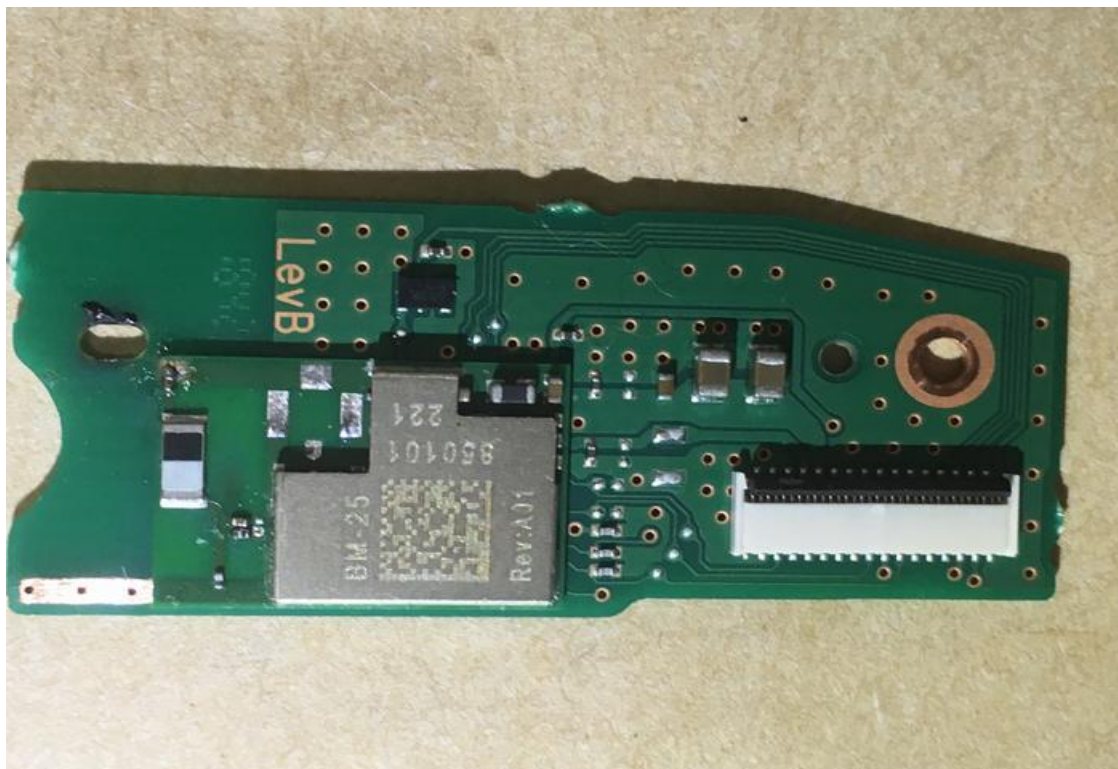

PWB WLAN B

