

PRECAUTIONS

Before using this product, carefully read this manual and retain it for future reference.

Safety:

This product has been designed with the highest concern for safety. However, any electrical device, if used improperly, has the potential of causing fire, electrical shock or personal injury. To help ensure accident-free operation, follow these guidelines:

1. Turn the iPlay Piano off immediately if the device functions in an abnormal manner, produces unusual sounds or smells, or becomes too hot.
2. Do not expose the iPlay Piano to high temperatures, low temperatures, high humidity, or direct sunlight.
 - a. Working temperature is between 0°C and +40°C.
 - b. Working humidity is between 20% and 80%.
3. Do not expose the iPlay Piano to dust, smoke, or steam.
4. Do not allow small particles to get into the iPlay Piano.
5. Do not place the iPlay Piano on surfaces that are unstable or subject to vibration.
6. Do not throw or drop the iPlay Piano.
7. When replacing the battery, make sure the iPlay Piano is turned off and the USB charging cable is unplugged.
8. Be secure when replacing the battery. If the battery is replaced incorrectly, or with an incorrect type, there is a risk of explosion.

9. Dispose of the replaced battery separately at your local waste recycling centre. Do not dispose of it in your household waste bin.

Cleaning:

1. For safety reasons, turn the iPlay Piano off and unplug the USB charging cable before cleaning.
2. Wipe surface gently with a damp cloth, and then dry with dry cloth.
3. Do not use solvents or other chemicals to clean the exterior of the iPlay Piano.

General:

Should the iPlay Piano exhibit unexpected behavior, turn it off. Turn it on again after a minute and reestablish the Bluetooth® connection with the iPod Touch, iPhone, or iPad.


USB specification: USB drive current = DC 5V, 500mA

Marking information is located at the bottom of the iPlay Piano.

See www.dreamcheeky.com for support and trouble shooting.

COMPATIBILITY

The iPlay Piano and iPlay Sound System app have been tested to be compatible with the following models and iOS:

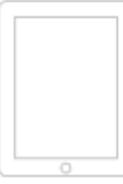							
iPod touch 3rd generation iOS 5.0 and above	iPod touch 4th generation iOS 5.0 and above	iPhone 4S iOS 5.0 and above	iPhone 4 iOS 5.0 and above	iPhone 3GS iOS 5.0 and above	iPad 3rd generation iOS 5.0 and above	iPad 2 iOS 5.0 and above	iPad 5th generation iOS 5.0 and above


ENCLOSED ITEMS

This product includes the following items:


- 1 x Dream Cheeky iPlay Piano
- 1 x Mini USB to USB charging cable

It also comes with:

- Free Dream Cheeky Sound System app
- Free Dream Cheeky Arcade app
- Instruction manual

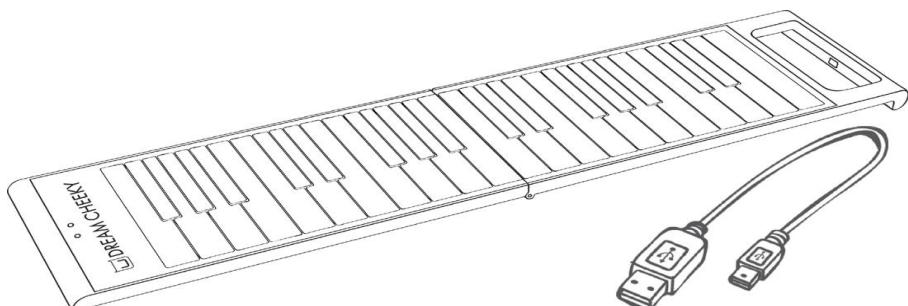

CHARGING YOUR iPLAY PIANO

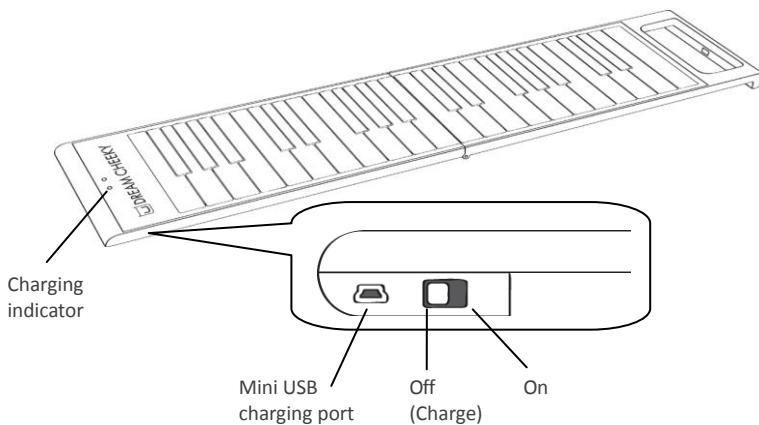

- Fold open the iPlay Piano.
- Make sure the power button is in the “Off (Charge)” position.
- Charge the iPlay Piano by plugging the charging cable into the mini USB charging port of the iPlay Piano and into your computer or power adapter.
- The charging indicator will glow in red when the battery is charging.
- Fully charge the iPlay Piano before first time use.
- The charging indicator will blink in red when the battery is low on power.

INSTALLING YOUR SOUND SYSTEM

There are several options to install the Dream Cheeky Sound System for Piano app on your iPod Touch, iPhone, or iPad:

Using your iPod touch, iPhone, or iPad

- Open the App Store app. Go to “search” and type in “Dream Cheeky Sound System for Piano”.
- Click on the Dream Cheeky Sound System for Piano app logo, which will take you to the Sound System app in the App Store.
- When the app is opened in the App Store, press “Free” and “Install” to install the app.
- The Sound System will now be available for use on the iPod Touch, iPhone, or iPad.


Using your computer

- Make sure the computer can be used for syncing your iPod Touch, iPhone, or iPad.
- Go to www.dreamcheeky.com in your web browser and click on “SUPPORT & DOWNLOAD”.
- Click on the app logo under the iPlay Piano picture, which will take you to the Dream Cheeky Sound System for Piano app in the App Store.
- Click on “View In iTunes” and allow iTunes to be opened. When the app is opened in iTunes, press “Free” and “Install” to install the app.
- The Sound System will be available for use on iPod Touch, iPhone, or iPad, when you sync it with iTunes on your computer.

Internet access required; fees may apply. The App Store is available in selected countries.

ESTABLISHING BLUETOOTH® CONNECTION

- Turn on Bluetooth® on your iPod Touch, iPhone, or iPad: Open the Settings app – Go to General – Go to Bluetooth® – Slide it to “ON”. Under “Devices”, your discovered Bluetooth® devices will show.

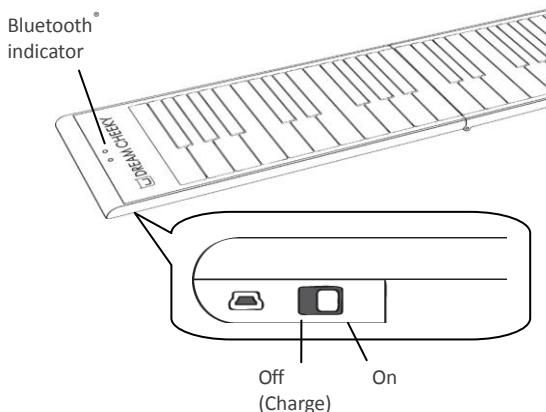

- Turn on your iPlay Piano by folding it open and sliding the power button into the “On” position.
- The Bluetooth® indicator will blink in blue to indicate the iPlay Piano is ready to be paired with your iPod Touch, iPhone, or iPad.
- Wait for the iPlay Piano to show under “Devices” in the Bluetooth® menu, it will show as “DC323”.
- Once “DC323” is listed, click on it to pair your iPlay Piano to your iPod Touch, iPhone, or iPad.
- When DC323 shows to be “Paired”, close the Settings menu.
- The Bluetooth® indicator will glow in blue to indicate pairing was successful.
- The first time the iPlay Piano is paired to a new device it can take a few minutes.

SETTING THE SOUND SYSTEM PREFERENCES

- Optional: Remove the protective film from the iPlay Piano.
- When the Bluetooth® connection is established, open the iPlay Sound System app.
- If the pairing was unsuccessful, the screen will show a message to connect your iPlay Piano via Bluetooth®. In this case follow the instructions under “ESTABLISHING BLUETOOTH® CONNECTION”.
- If the pairing was successful you will see the iPlay Sound System menu. Here you can:



- Adjust the Music volume and the iPlay Piano volume by sliding the volume buttons up or down, between 0 and 100;
- Adjust the Main volume with the general volume buttons on your iPod touch, iPhone, or iPad.
- Select an instrument by touching one of the Instrument buttons.
- When an instrument is selected, the button turns upwards and a red light turns on.
- Turn the mode button to select Free Play, Sheet Music, or Learning mode. A red light will turn on in front of the selected mode.

- After setting your preferences, you can go to the operating screen, by clicking “start”.
- Once the iPlay Sound System operating screen is opened, you can play the piano keys on your iPlay Piano.

TROUBLESHOOTING

If you need help with your iPlay Piano, please first check the following possible issues and solutions. If you can't find the answer you're looking for, please contact us on customerservice@dreamcheeky.com.


Questions

- Why does the battery last only last for a very short time after charging?
- From what distance can I connect the iPlay Piano to my iPod Touch, iPhone, or iPad?
- How long can I use the iPlay Piano before it runs out of battery power?
- Why can't my iPod Touch, iPhone, or iPad pair with the iPlay Piano?
 - The Blue light glows constantly:
 - The blue light is off:
 - The blue light is blinking:

Answers

- Make sure the battery is fully charged. The first charge will take about one hour.
- After longer use, you may need to replace the battery. See “replacing the battery” below.
- The further you move the iPlay Piano away from the iPod Touch, iPhone, or iPad, the more likely the connection will be lost. The control distance is most stable within 30 feet (10 meters).
- The battery life depends on the way the iPlay Piano is used. A fully charged battery will last approximately 5 hours on average use.
- It's recommended to charge the battery for an hour before first use and a few minutes before each use after that.
- Make sure the iPlay Piano is turned on and charged.
- Make sure Bluetooth® on the iPod Touch, iPhone, or iPad is turned on, see “establishing Bluetooth® connection” above.
- If the iPlay Piano's blue light isn't blinking: it's not ready to be paired.
- It's already paired to another iPod Touch, iPhone, or iPad. It can only be paired to one device. Disconnect it on the other device by turning off Bluetooth®.
- The light will stop blinking after a while. Turn the iPlay Piano off and turn it on again.
- The first time the iPlay Piano is paired with the iPod Touch, iPhone, or iPad, it can take a few minutes.
- If many other Bluetooth® devices show up in the Bluetooth® menu, it's more difficult to connect to the iPlay Piano. Turn off the other devices, or try it again in place with no other devices present.
- If you're asked to enter a PIN number, enter “0000”.
- If the above does not work, turn off your iPod touch, iPhone, or iPad. Turn it back on and try again.

REPLACING THE BATTERY

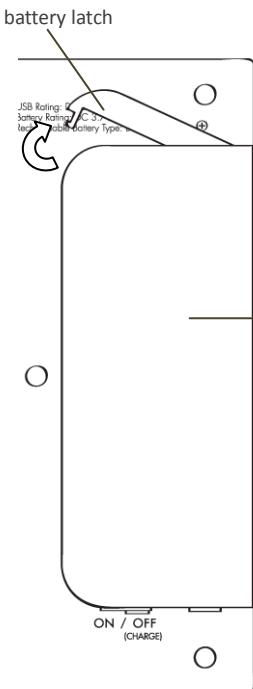

- The iPlay Piano uses a Rechargeable Lithium Battery BL-5C 1050mAH 3.7V.
- CAUTION.** There is **danger of explosion** if the battery is incorrectly replaced. Replace only with the same or equivalent type of battery.
- Don't expose the battery to excessive heat such as sunshine, fire or the like.
- To replace the battery, first **make sure the iPlay Piano is turned off** and the **USB charging cable is unplugged**.

battery box

rechargeable lithium battery

- Remove the latch by lifting pulling it at the rounded edge, away from the battery box.
- Slide the battery out of the battery box.
- Dispose of the battery separately at your local waste recycling centre. Do not dispose of it in your household waste bin.
- Slide a new Rechargeable Lithium Battery BL-5C 1050mAH 3.7V into the battery box.
- Make sure the position of the battery is the same as shown on the pictures in this manual.
- Close the latch.



"Made for iPod," "Made for iPhone," and "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance.

iPad, iPhone and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

© 2012 Dream Cheeky Ltd. All Rights Reserved.

Patent No.: 1101154.9M002

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC ID - COO323

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

