

SS7



USER MANUAL

Please read this manual before operating your
Tablet PC, and keep it for future reference.



Table of Contents

THANK YOU	3
Features	4
GETTING TO KNOW THE Tablet	5
About the Touchscreen	8
Protective Film	8
Touchscreen Actions	8
About the Orientation Sensor	9
Charging the Tablet.....	10
Inserting a Memory Card	10
Resetting the Tablet.....	11
GETTING STARTED	12
Turning the Tablet on and off	12
Turning the Screen On and Off (Standby)	13
Unlocking the Screen	13
Home Screen at a Glance	14
About Applications	15
Preinstalled Applications.....	15
Installing Applications	17
About Widgets	17
About Notifications	18
CONNECTING TO THE INTERNET	19
Requirements.....	19
Connect to a 3G network.....	20
Connect to a Wi-Fi network.....	21
BROWSING THE WEB.....	23
OPTIONAL CONNECTIONS.....	27
Connecting to a Computer	27
Connecting Headphones	28
SETTING THE SYSTEM OPTIONS	29
SPECIFICATIONS	30



Thank You

Congratulations on your purchase of a **ss7 Tablet**
This guide is provided to help you get started
quickly with your **Tablet**; please read it carefully and save
it for future reference.


Features

- ✦ Browse the Web.
Visit your favorite websites
- ✦ Check your e-mail
Keep in touch with friends and family
- ✦ Watch YouTube videos
Browse through the world's most popular video-sharing community
- ✦ Discover thousands of apps for Android
Games, applications, and more with Pre-installed Google Play Store
- ✦ Connect to the Internet wirelessly
High-speed Wi-Fi 802.11 b/g/n networking
- ✦ 3G network
- ✦ Bluetooth
Share files wirelessly
- ✦ Enjoy your media library anywhere
Portable powerhouse plays popular music, video, and photo formats
- ✦ microSD memory card reader
Increase your storage capacity (up to 32 GB supported)
- ✦ Built-in Dual-camera
Convenient front-facing and back-facing camera
- ✦ Automatic orientation detection
Read any way you want; the display adjusts automatically!
- ✦ Optional function
Support smart card reader and finger print scanner

Getting to know the Tablet

Unit at a Glance

	Name	Description
1	Receiver	To hear voice once you make a call
2	Camera	Front-facing camera

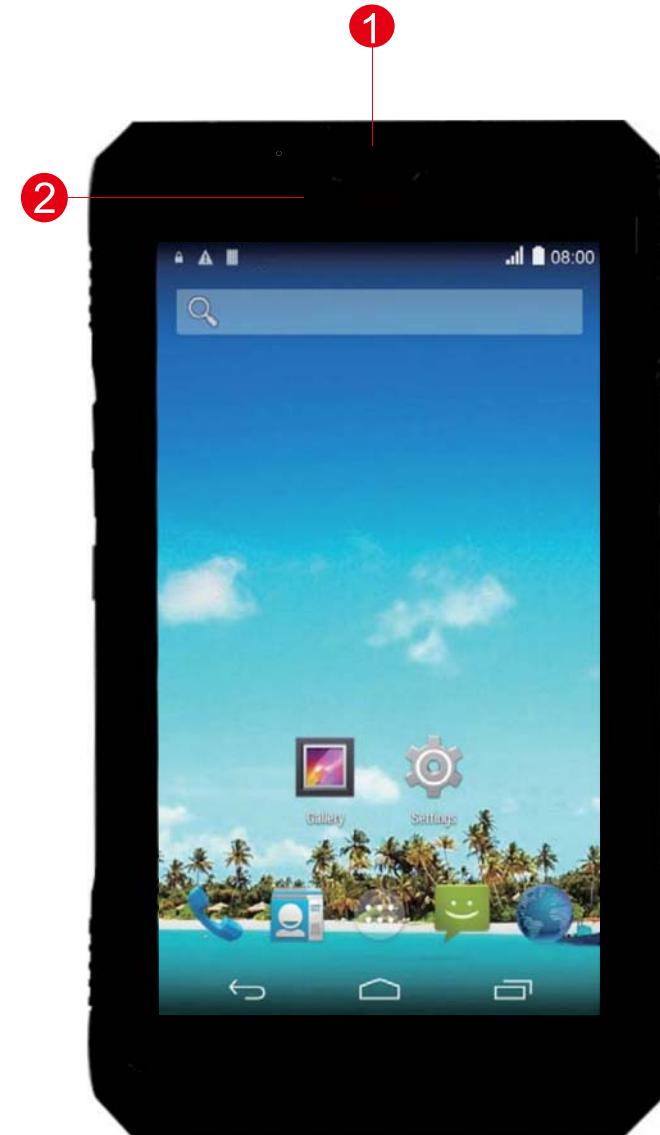

	Name	Description
3	SIM Card Slot and TF Card Slot	Insert SIM card to connect to 2G / 3G network (Support two SIM cards) Load external microSD memory card here
4	NFC	Standard NFC function
5	Speaker	Speaker output
6	Smart card read and finger print scan connector	Connect smart card reader and finger print scanner
7	Camera	Back-facing camera



Name		Description
7	Volume + Key	Press to increase the volume level.
8	Volume - Key	Press to decrease the volume level.
9	Power Key	Hard press to turn the unit on, or press gently to turn on/off the screen
10	USB	Charge or Connect to array of external peripherals through USB Port
11	Headphone Jack	Audio output connection for head-phones



About the Touchscreen-

Your Tablet comes equipped with an easy-to-use touch screen.

Our capacitive multi-touchscreen requires gentle fingertip touch on the glass screen to activate Tablet functions. Multiple fingers may be used to perform gestures (e.g. 2-finger picture zoom).



To avoid damaging the screen, do not touch it with excessive force or with any object other than your finger. For best response, make sure your hands are clean before using the touchscreen controls.

Protective Film

A thin film has been applied to the touchscreen to protect it during shipping. The protective film could be removed before use. If you want to remove it, simply take a corner of the film and peel it away from the screen.

Touchscreen Actions

You can control the functions of the Tablet by using the touchscreen in combination with the three touch keys located on the bezel. To control the Tablet with the

touchscreen, use your fingertip to manipulate icons, buttons, menu items, the on-screen keyboard, and other items displayed on the screen.


You can perform the following actions on the touchscreen using your fingertip.

Touch:	To activate an on-screen item (e.g., application icons, buttons, menu items, and the letter/symbols of the on-screen keyboard), simply touch them with your fingertip.
Touch and Hold:	Some on-screen items have an alternate action if you touch and hold it (e.g., opening an alternate menu, or to activate the drag function). To touch and hold an item, touch the item and do not lift your fingertip until the action occurs.
Drag:	Drag an on-screen item to change its position (e.g., an application icon on the home screen). To drag an item, touch and hold it for a moment, then without lifting your fingertip, move your fingertip on the screen until the item reaches its target destination.

Swipe:	Swipe up/down on the screen to scroll through a list. On some screens, you may be able to swipe left/right to change the view. To swipe, touch the screen and then quickly move your fingertip across the screen without lifting your fingertip. Do not pause on the screen with your fingertip at the initial point of contact or you may accidentally drag an item instead.
Double-tap:	Quickly tap the screen twice on a webpage or other application screen to zoom (the application must support the double-tap/zoom function). Within the browser, double-tapping a web page section will cause the browser to zoom and fit that section to the width of the screen.

About the Orientation Sensor

The Tablet contains a sensor that will automatically change the orientation of the screen as you rotate the Tablet. The sensor works best when the Tablet is rotated perpendicular to the ground (i.e., when the Tablet is held upright and not flat on its back).

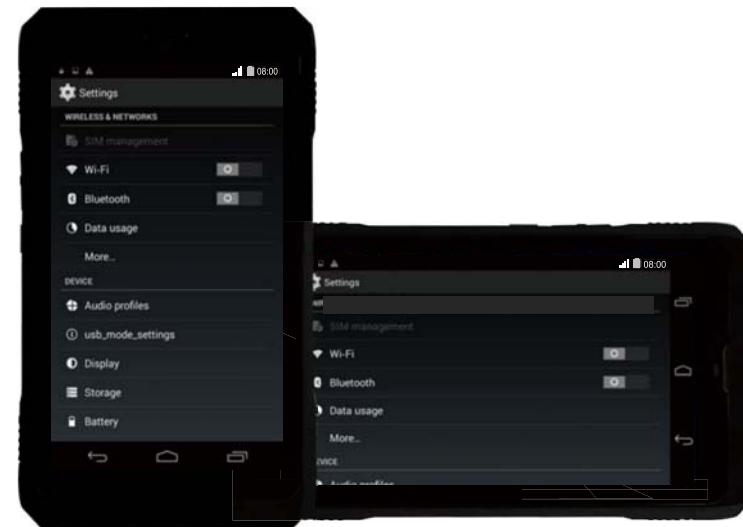

The orientation sensor can be turned on or off in the **Display** settings menu.

Charging the Tablet

The tablet comes with a built-in rechargeable lithium-polymer battery.

Before using the Tablet, the battery should be charged fully.

To charge the battery:

1. Plug one end of the included power adapter into an AC 100-240V outlet.
2. Plug the other end of the included power adapter into the Power Jack on the Tablet.
3. Disconnect the power adapter when the Tablet is fully charged.



The battery used in this device may catch fire or chemical burn if mistreated. Do not disassemble, incinerate, or heat the device. Do not leave the device in a place subject to direct sunlight, or in a car with its windows closed. Do not connect the device to a power source other than that which is indicated here or on the label as this may result in the risk of fire or electric shock.

Inserting a memory Card

The Tablet accepts microSD memory card. Insert a memory card into the microSD card slot to:

- ✦ Increase the memory capacity of your Tablet.
- ✦ Play media files stored on the memory card (e.g., music, video, or photo files).

To insert a memory card:

1. Align the memory card with the card slot. The metal contacts of the memory card should face down away from the LCD screen.
2. Slide the card into the spring-loaded slot. Push the card in until it clicks into place.




Do not attempt to insert objects other than a microSD memory card into the card slot. A compatible memory card should fit easily into the card slot; if you encounter resistance, check the alignment of the card. Do not attempt to force the card in.

Avoid touching the gold contacts of the memory card.

To release and remove a memory card:

UNMOUNT the memory card.

- a. Touch **Settings** to show the settings menu.
- b. Touch **Storage** to show the storage settings.
- c. Touch **Unmount SD card** to prepare the memory card for safe removal.

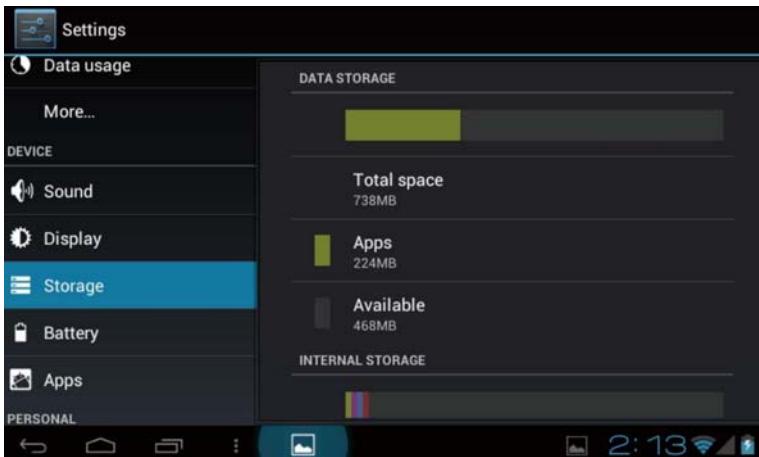

2. Push the card further into the slot until you hear a click. The card will spring out of the slot.
3. Grasp the card by its edge to remove it.



To avoid damage and data corruption, do not remove a memory card while data is being written to or read from the card. For example, do not remove a card while playing a music file stored on the card.

Resetting the Tablet

Reset the Tablet in case it freezes, not respond or otherwise malfunction.

1. Disconnect your Tablet if it is connected to a computer, or any other external peripheral.
2. Press and hold the POWER key for about 8 seconds to turn off the Tablet, and then press and hold the POWER key about 3 seconds to turn on the Tablet.

Getting Started


Turning the Tablet on and off

To turn the Tablet on:

- Press and hold the **Power** key until the LCD screen turns on. Wait until the Home screen appears; the Tablet is now ready for use.

To turn the Tablet off:

- Press and hold the **Power** key until the confirmation message appears.
- Touch **OK** to turn off the Tablet.

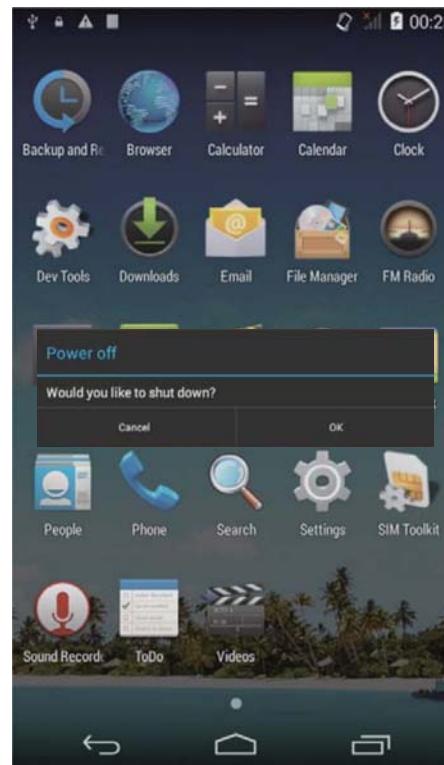

Turning the Screen On and Off (Standby)

When the Tablet is on, you can turn off the screen to conserve battery power. Simply press the **Power** key softly once to turn the screen off. Press the Power key again to turn the screen back on.




*To conserve battery power, the screen can be set to turn off automatically when the Tablet is not in use (between 15 seconds and 30 minutes). This **Sleep** option can be found in the **Display** menu.*


Unlocking the Screen

When the screen turns off, you will have to unlock the screen to turn it back on.

To unlock the screen, touch and drag the lock icon to the edge of the circle that appears.

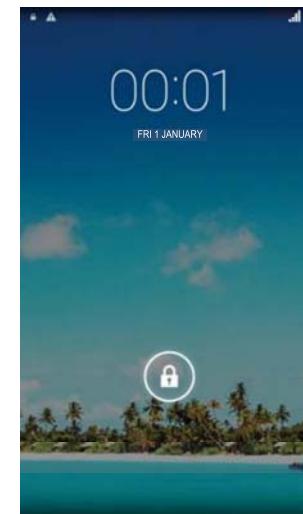

If a password has been set, enter the password to finish unlocking the screen. The Screen Unlock password can be set in the **Security** settings menu.

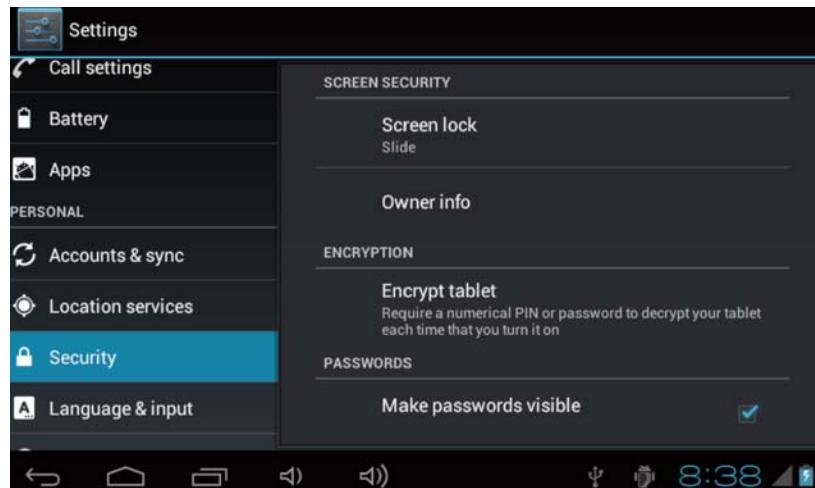


WARNING: Please write down your password lock pattern/PIN/Password at a safe place. Misplacing or forgetting this method will lock the user out. Recovering the unit will reset the device back to factory defaults.

ALL YOUR DATA & PROGRAMS WILL BE LOST.

Home Screen at a Glance

The home screen is the starting point for all of the features of your Tablet.

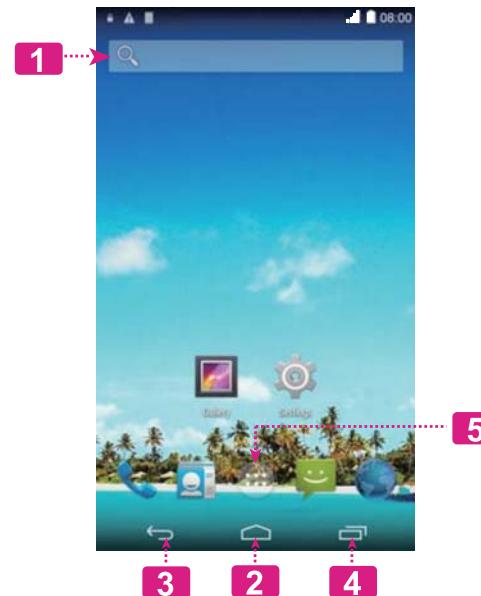

Name	Description
1 Search	Touch & type to search with browser.
2 Home Icon	Touch to go back to the central Home screen.
3 Back Icon	Touch to go back to the previous screen.

Name		Description
4	Recent Apps	Touch to display the list of thumbnail images of apps you have recently worked upon.
5	Icons	Touch an icon to open an application or folder.

About Applications


To open an application, touch the application icon on the screen.

Launcher screen: see the right picture

Preinstalled Applications

Some applications have been pre-installed on your Tablet for your convenience. These applications include:

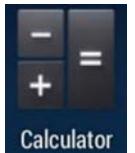

 Browser	Browse the web.
 Calendar	Display the calendar or record events and appointments to manage your schedule.
 Calculator	Perform simple mathematical operations.
 Camera	Take pictures or videos with the front & rear facing camera.
 Clock	View the current time, or set an alarm.
 Email	Check your e-mail.
 File Manager	View and manage files stored on the Tablet.
 Gallery	View and edit photos.
 Music	Play music.
 Settings	Access the Settings menu to adjust the Tablet options.

Installing Applications

You can also download and install additional applications from Google Play Store, the web browser, or other sources.

The Tablet must be set to allow installation of applications from non-Market sources. The Unknown sources option can be set in the **Application settings** menu.

Removing Widgets

Touch and hold the Widget until Remove icon appears of the screen, then drag the Widget to the Remove icon to remove it.

About Widgets

Widgets are self-contained applications that you can place on the another screen to access your favorite features.

Adding Widgets to another screen

1. Navigate to the another screen which you want to place the Widget on.
2. Touch **WIDGETS** to show all widgets, and then hold on a widget icon to add it to the another screen.

About Notifications

The icons that appear in the notification bar on the screen alerts you when new messages arrive or alarms or other application events occur.

View and respond to the notifications by opening the full Notifications panel.

- ◆ Touch the **Notification** bar to open the Notifications panel.

To respond to a notification:

Touch a notification in the list; the Notifications panel will close and the application associated with the notification will launch.

To close the Notifications panel:

- ◆ Touch any other area of screen except the Notifications panel or;
- ◆ Touch the **Back** icon.

→ Connecting to the Internet

This tablet can utilize Wi-Fi networks to connect to the Internet.

- ♦ Wireless Wi-Fi technology can provide Internet access at distances of over 300 feet; however, this distance can be affected by your surrounding environment and Wi-Fi router.

Requirements

In order to connect to the Internet, you will need:

An activated SIM card from your local Cellular Network Service Provider

A wireless router or access point with a broadband internet connection.

The wireless router must support Wi-Fi 802.11b/g connections. If the router supports 802.11n, make sure that it has been configured to accept 802.11b/g connections as well.



A minimum connection speed of 64 Kbps is recommended. Faster speeds will enable a better Internet experience.

You will need to know the name of your network (SSID), as well as the password or other credentials if your network is secured. These settings can usually be found on the administration webpage of your wireless router.

Please refer to your wireless router's documentation for help, or ask your network administrator for details.



You may encounter open Wi-Fi networks, or "hot spots." These networks are usually configured so that you can simply connect to them without needing to know its settings; the tablet will obtain all the information it needs from the router automatically.

Connect to a 3G network

If you want to connect to the Internet using a 3G data network through SIM:

- a. Touch System Settings
- b. Under Wireless and network settings touch →More →Mobile networks
- c. Check Data enabled, Check Data roaming
- d. Select the Access Point Name that works for your network



You are now connected to your 3G network.


Connect to a Wi-Fi network

The Notification bar displays icons that indicate your Tablet Wi-Fi status.

	Connected to a Wi-Fi network (waves indicate connection strength).
[no icon]	There are no Wi-Fi networks in range, or the Wi-Fi radio is off.

1. Turn on the Wi-Fi radio if it is not already on. To turn on Wi-Fi:

- a. Go to the Home screen:
Touch the **Home** icon.
- b. Touch **Settings**.
- c. Open the Wireless & networks menu:
Touch **WIRELESS & NETWORKS**.
- d. Open the Wi-Fi settings menu:
Touch **WiFi**.
- e. Make sure that the Wi-Fi option box is setted to ON: Touch and slide the block towards right to enable the **Wi-Fi** connection.

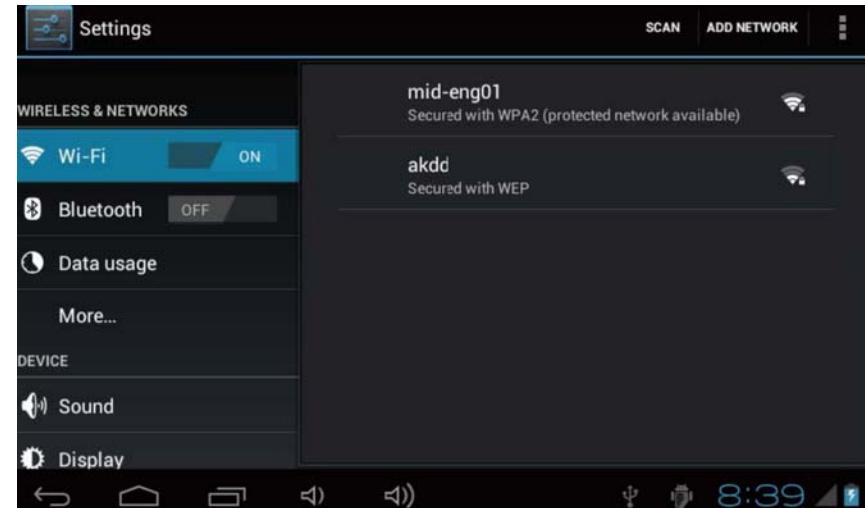

When Wi-Fi is on, the tablet will look for and display a list of available Wi-Fi networks.



If a network that you had connected to previously is found, the tablet will connect to it, automatically


*If you don't see your network in the list, you can force the tablet to re-scan. To scan for networks, tap the **SCAN** icon located on the top right corner of the screen.*

2. Select an available Wi-Fi network to connect :

In the same Wi-Fi settings menu above, touch a network in the list.

If the network is open, the tablet will prompt you to confirm connection to the network. Touch **Connect** to confirm.

If the network is secured (as indicated by a Lock icon), the tablet will prompt you to enter a password or other credentials. Touch the Wireless password box to show the on-screen keyboard and then use it to enter the password. Touch **Connect** to confirm.

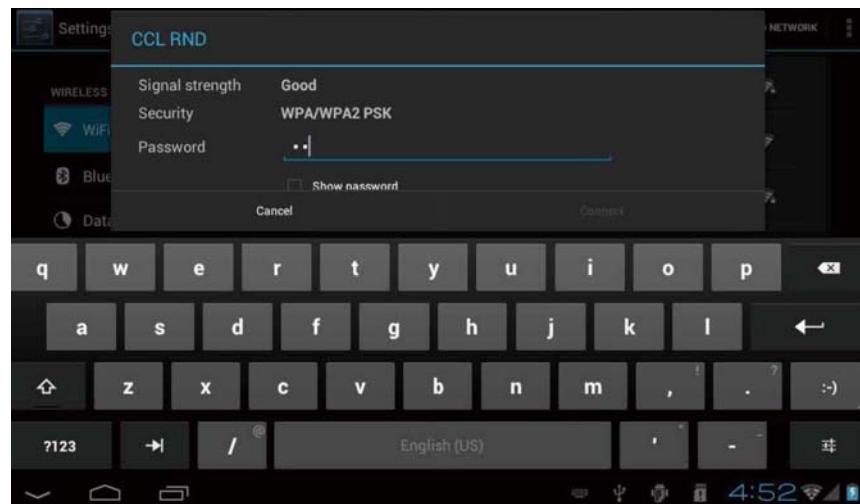

When you have successfully connected to a Wi-Fi network, the Notifications bar at the top of the screen will show a Wi-Fi signal indicator.






Browsing the Web

The Browser application lets you visit web pages and find information on the web, keep up with the news, your friends, or enjoy video from YouTube™, the world's most popular video-sharing community.

To use Browser, the Tablet must be connected to the Internet. Read the section "Connecting to the Internet" to learn how to connect to the Internet.

To open Browser, touch the Browser icon on the Home screen or in the Launcher.

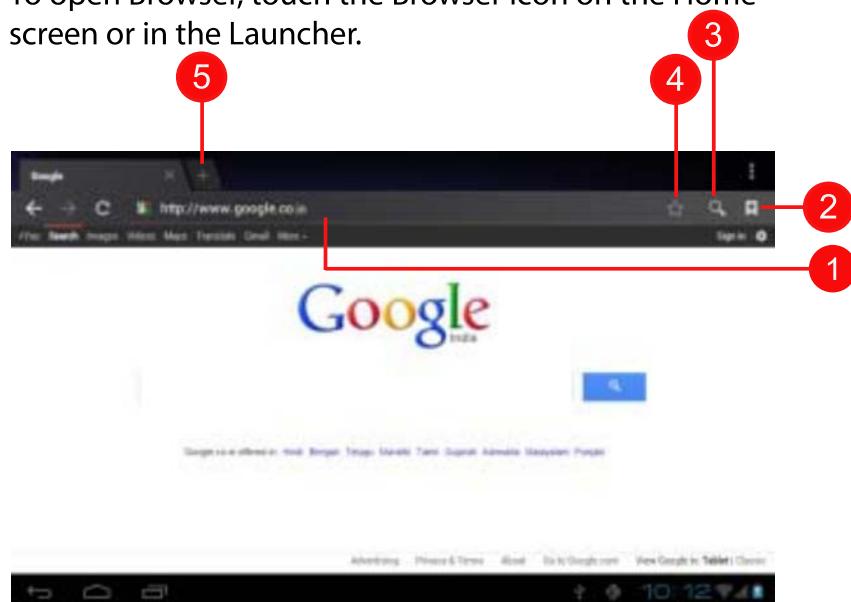

	Name	Description
1	Address Bar	Displays the address (URL) of the current page. Touch the bar to enter a new address or to search the web.
2	Go to Bookmarks icon	Touch to view bookmarks, to view your most visited sites, or to view your browser history.
3	Search icon	Touch to search with Google browser.
4	Add Bookmark icon	Touch to add bookmarks.
5	New Window (+)	Creates new browser window.

Some common browser actions are described below.

❖ **To go to a webpage.**

1. Touch the **Address bar** at the top of the Browser screen. The keyboard will open automatically. (If the Address bar is not visible, drag the page down to return to the top of the Browser screen.)



2. Use the keyboard to enter the address (URL) of the webpage (e.g., www.google.com).



3. Touch **Enter** key to open the webpage.

❖ **To bookmark a webpage** .

Bookmark your favorite webpages in order to visit them quickly without entering a URL.


1. Go to the webpage that you want to bookmark




2. Touch the **Add Bookmark** icon.



3. If desired, you can modify the name of the bookmark or its location (URL address). Otherwise, touch **OK** to finish adding the bookmark.

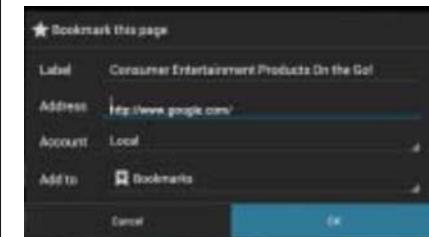


◆ **To go to a bookmarked webpage.**

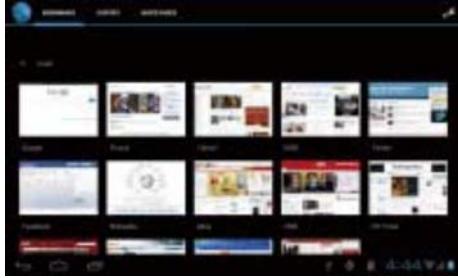1. Touch the Goto Bookmark icon.	
2. Touch a bookmark tile to open it.	

◆ **To delete a bookmarked webpage.**

1. Touch the Goto Bookmark icon.	
2. Touch and hold a bookmark tile to open the option menu.	

3. Touch "Delete bookmark".

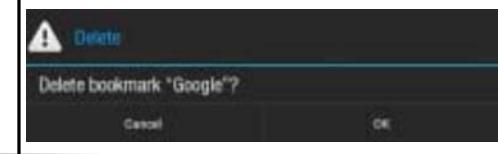

4. Touch "OK" to confirm.

Browser Menu

While viewing a webpage, touch the icon shown on the right to open the Browser Menu, the icon is located on the top right corner of the screen, the options are include:



- ◆ Refresh: Refreshes the current webpage.
- ◆ Forward: Goes to the next webpage.
- ◆ New tab: Opens the webpage in a new window, under a new tab.
- ◆ New incognito tab: Opens the webpage in a new window, and the pages you view in the new window will not appear in your browser history or search history.
- ◆ Share page: Use Email to send the webpage URL.
- ◆ Find on page: Search for content on the current page.

- ◆ Request desktop site: Opens desktop version of the web page.
- ◆ Save for offline reading: Saves the page onto the internal memory, so as you can read it even when the internet connection is disabled.
- ◆ Page info: View information about the current page, including the URL.
- ◆ Settings: Customize the Browser.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

Optional Connections

Connecting to a Computer

Connect the tablet to a computer to transfer files.

1. Connect your Tablet to the computer.

With the included USB cable:

- ◆ Plug the small end of the cable into the micro USB Hi-speed connector of the Tablet.
- ◆ Plug the large end of the cable into an available micro USB Hi-speed port on the computer.

When your tablet is connected, a USB icon will appear in the Notification bar.



- ◆ Touch the Notification bar to open the notifications panel.



The Tablet's "mass storage mode" is compatible with many operating systems including: Microsoft® Windows® XP, Vista, 7 or higher and Mac OS or Linux.

2. Mount the storage drive.

- ◆ Touch **USB connected** to mount the tablet's built-in storage, then touch "Turn on USB storage" and "OK" when prompted to confirm. When mounted, you can copy files to/from your computer or vice-versa.

Your tablet will be recognized by the computer as a Removable Storage drive. Drag and drop files between your tablet and the computer. To learn more about copying files, please refer to the documentation included with your computer or operating system.

Connecting headphones

Connect a pair of headphones (or earphones) to the Tablet to enjoy media in private.

Lower the volume level of the tablet before connecting headphones, and then slowly raise the volume to a comfortable listening level.

- ◆ The headphones must have a 3.5 mm (1/8 in) plug.
- ◆ When headphones are connected, speaker output will be disabled automatically.



Hearing experts advise against the constant use of personal stereos played at high volume. Constant exposure to high volumes can lead to hearing loss. If you should experience ringing in the ears or hearing loss, discontinue use and seek medical advice.

→ Setting the System options

Open the system settings menu to adjust how the Tablet looks and functions.




Many applications will have their own settings; refer to the documentation provided by the application developer to learn more.

To open the Settings menu:

1. Go to the Home screen,
2. Touch **Settings** to open the Settings menu.

The settings are grouped by category. Touch a category to open and adjust its settings on the right side.

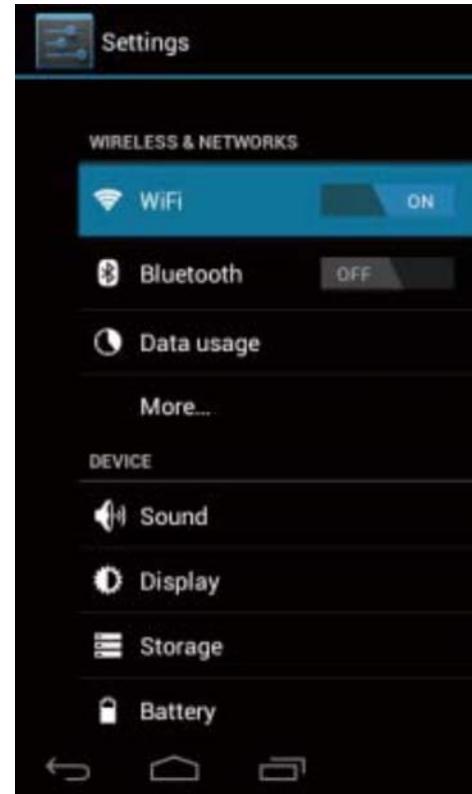

► Specifications

Processor	MTK6582(Quad Core)
Operating System	Android 4.4
Memory	8GB Built-In Memory
Expansion	32GB
Screen	7" IPS, Resolution 1024*600
RAM Memory	1GB DDR Built - In
WiFi	IEEE 802.11 b/g/n
USB	Normal USB 2.0 Port For USB Drives
Bluetooth	Bluetooth specification v2.1+EDR,3.0+HS and v4.1+HS compliant
3G	Built-In 3G - WCDMA (Data for Windows & Data/calling for Android)
Audio Output Jack	3.5mm Stereo Headphone Jack
Dual Camera	Back 5.0 Mega Pixels & Front 2.0 Mega Pixels
Speaker/Mic	Built-in Stereo Speaker & Microphone
G-Sensor	360° Gravity Induction For All Side Easy View
Flash Player / Language	Support Flash Player / Support Multiple Language
Power Adapter	Power Adapter AC100 * 240V(5V,2A),USB Charge Capable
Battery	Rechargeable Li-ion Polymer Big Capacity Battery 3500 mAh
Audio Files	WAV,MP3,MP2,AAC,AMR-NB,AMR-WB,MIDI,Vorbis, AAC-Plus,WMA,FLAC
Video Files	Support 1080P,MEPG 4,H.263/H.264, MKV,3GP,AVI
Photo Files	JPEG,BMP,GIF,PNG
Smart card read and finger print scan function	Option

FCC RF Exposure Information and Statement The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: Android handheld terminal (FCC ID: COQ-M07EM08) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.462W/kg and when properly worn on the body is 0.839W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 0 cm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.

Labelling requirements

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

Specific Absorption Rate (SAR) information:

This Tablet PC meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: Tablet PC (FCC ID: COQ-M07EM08) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.462W/kg and when properly worn on the body is 0.839W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 0 cm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.

Labelling requirements

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.