

KOMANDOTAB 2™ USER MANUAL

Intel Quad Core 10.1" Windows Tablet

Model: 13560

User Manual

Introduction

Thank you for purchasing the KOMANDOTAB 2™ which comes with faster Intel quad core new technology CPU, 2GB Faster DDR RAM for quick multi-tasking, 32GB of internal storage, Clear, Sharp and bigger screen size 10.1 inch and preloaded latest Windows 10 OS and office apps.

This user manual will help you understand the features and functions of your new tablet. Please read this user manual carefully before using the device. It is recommended to charge the device for 4-5 hours before the first use.


Contents

I.	Safety Precautions	2
II.	Buttons and Ports	3
III.	Desktop	4
IV.	Activating Windows, Setting up a Microsoft Account	5
V.	Start Menu and the Windows Store	6
VI.	Action Center and OneDrive	7
VII.	Task View, Start Screen and Restoring Windows	8
VIII.	FAQ	9-11
IX.	Specifications	12

Safety Precautions

1. This device is suitable for use in non-tropic areas below 2,000 meters.
2. Do not drop the device or apply strong force.
3. Avoid extended use in extreme cold, hot, humid or dusty environments. Avoid exposing the device to direct sunlight for extended periods of time.
4. Avoid using the device near strong magnetic fields and in static environments.
5. Keep the device away from water and other liquids. In the event that water or other liquids get on or into the device, power off the device immediately and ensure the device remains off and unplugged until fully dry.
6. Do not clean the device with any chemical or other liquid to avoid causing damage due to corrosion and moisture. Clean with a dry soft cloth only.
7. We are not responsible for loss of data due to malfunction, misuse, modification, or other accident.
8. Please back up your important data regularly to avoid loss.
9. Please do not attempt to disassemble or repair the product on your own, as it will void the warranty.
10. Do not attempt to change the battery on your own. Using an incompatible battery may cause explosion.
11. To reduce the risk of fire or electric shock, do not expose this device to rain or moisture. The device should not be exposed to dripping or splashing. Never place objects filled with liquids, such as vases, on the device.
12. Windows Software receives updates directly from Microsoft. The device will update automatically, or you may manually check to see if there are updates available from Microsoft.
13. We reserve the right to change the contents of this manual.

Buttons and Ports

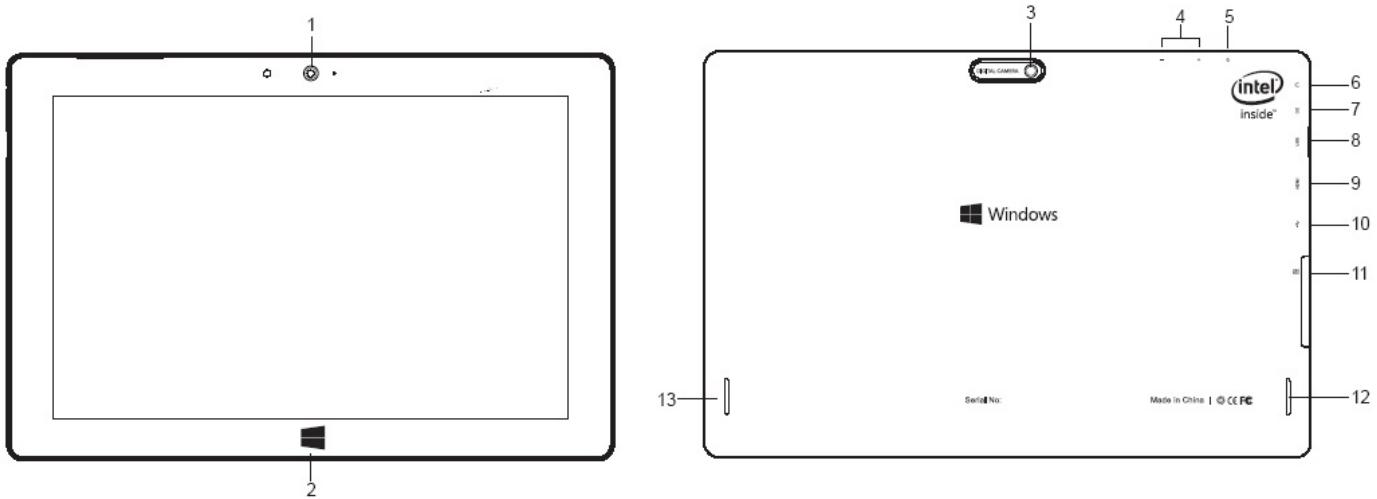

1. **Front Camera:** For taking photos and videos
2. **Windows (Start) button:** Return to the start screen or last program.
3. **Rear Camera:** For taking photos or videos.
4. **Volume + / - :** To adjust the volume
5. **Power:** Press briefly to enter standby mode or to wake up. To power off the device, long press the power button and slide down on the screen to pull up the shutdown menu.
6. **Headphone port:** Audio-out used to connect headphones or portable speaker using a 3.5mm connection.
7. **DC port:** Used to connect the power supply and recharge the device.
8. **USB port:** Used to connect USB accessories such as a keyboard, mouse, USB drive or other portable storage.
9. **HDMI port:** HDMI out used to connect the device to a TV or other HDMI input.
10. **MicroUSB port:** Used to connect USB devices using a microUSB cable or an OTG adapter. Can be used to connect the tablet to a PC for charging or transferring files.
NOTE: Charging is faster using the included AC adapter.
11. **TF card slot:** Used to insert a MicroSD (TF) card to expand the memory. Supports MicroSD cards up to 64GB.
12. **Speakers:** These are built-in speakers to listen to music, videos, and other audio on the device.

Desktop



1. Windows (Start) Icon

2. Search Bar

3. View all open windows

4. Browser

5. File Explorer

6. Windows Store (to download apps)

7. Battery

8. Wi-Fi

9. Volume

10. Action Center

11. Keyboard Settings

12. Date and Time Settings

Activating Windows

Activation of Windows is required. Your copy of Windows 10 should be activated automatically when connected to the Internet.

To check the activation status:

- Click on the **Windows (Start) Icon**.
- Click **Settings**
- Click **Update and Security**
- You can verify the activation status for your copy of Windows 10 under **Windows Activation**.

Setting up a Microsoft Account

Setting up a **Microsoft account** allows you to sign in and use the various features provided on your tablet, including: **OneDrive**, **Outlook.com**, **Xbox Live**, **Office 365**, **Skype** and more. Setting up a **Microsoft account** makes using your device easier. If you do not already have a **Microsoft account**, you can create one for free.

Some of the benefits include:

- You only have to sign in once. If you use a **Microsoft Account** to sign into Windows, you do not need to sign in again to use Microsoft related apps and services such as **Skype**, **Outlook.com**, **OneDrive** and more.
- You are connected and synched across all your Windows-based devices you sign in under.

You will be prompted to sign into your existing Microsoft Account when accessing Windows. You can click "**Sign up**" to create one if needed.

- To create a **Microsoft Account**, select **Sign Up** on the log in page.
- You can also go to **Microsoft.com/account**

NOTE: You can use your existing email address to sign up, even if it is not a Microsoft provided address. If you do not have an existing email address, you can click "get a new email address" to sign up for one.

If you just choose a Local Account, you will not get the benefits of only having to sign in once and having your settings synced across devices. Create a Microsoft Account to use these features.

Switching from a Local Account to a Microsoft Account

If you do sign in with a local account, you can choose to switch to a Microsoft account at any time.


- Click on the **Windows (Start) Icon**
- Click on **Settings**
- Click on **Accounts**
- Click **Sign in with a Microsoft Account** instead

Start Menu

The **Start Menu** is accessed by clicking the **Windows icon** in the lower left corner of the screen.

The **Start Menu** provides access to the **Apps** you have installed, system **Settings**, and other **important features**.

You can use **All Apps** to view all installed apps in a list. You can pin frequently used apps to the **Start menu** by holding your finger on the app icon for a few seconds and then choosing "Pin to Start" or "Pin to Taskbar."

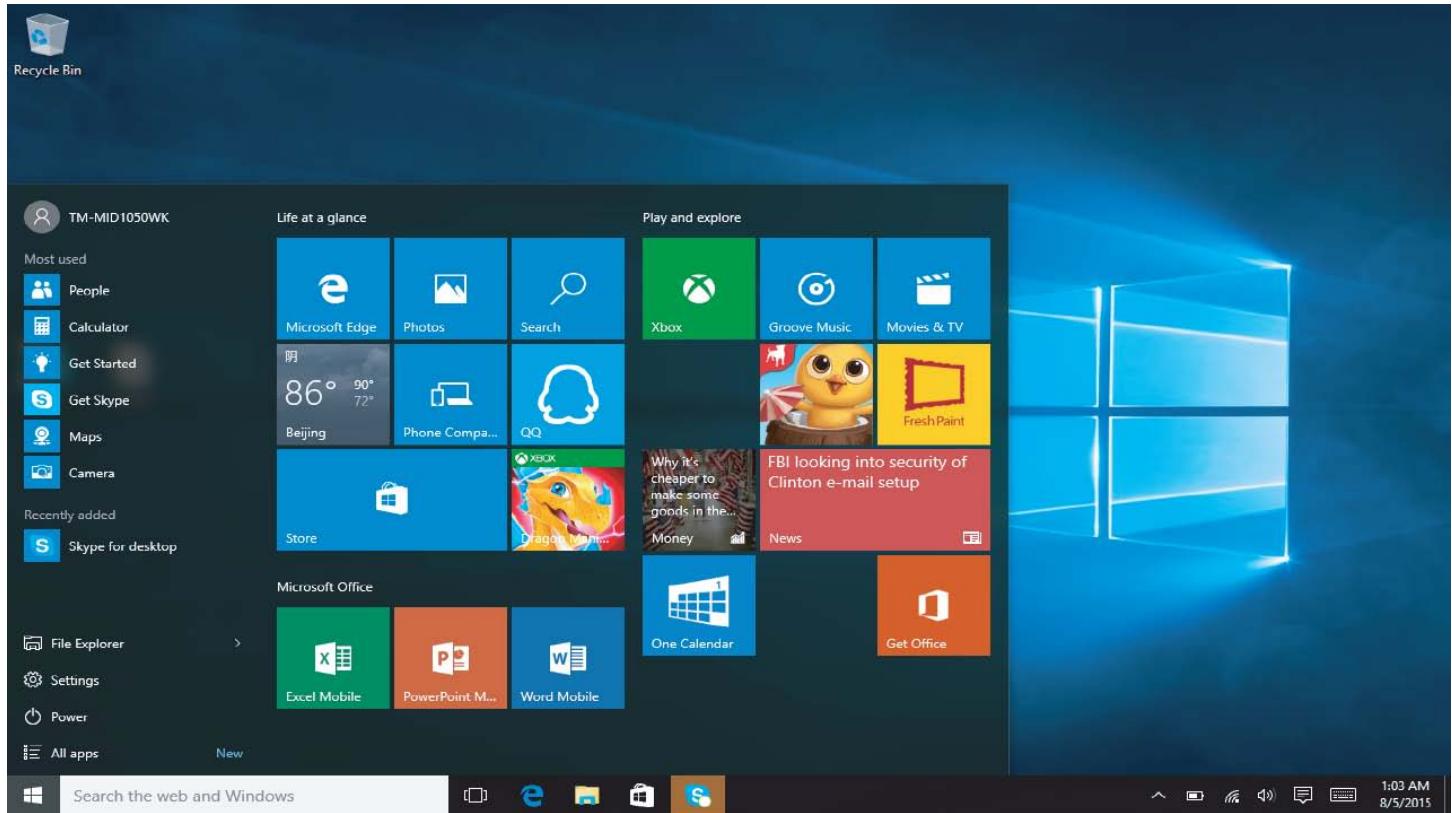

The Windows Store

The **Windows Store** is where you can install new apps for your device. To access the **Windows Store**, choose **Store** from the **Start Menu** or click the **shopping bag icon** in the toolbar at the bottom.


- Search for the app you wish to download
- Click the app to view more information
- Click **Install** if it is a free app, or **Buy** to purchase the app and install it.

NOTE: You need to be signed in to your Microsoft Account to install apps from the Windows Store.

Action Center

The **Action Center** is accessed by tapping the **notification icon** on the lower right.

The Action Center provides quick access to important notifications, and allows you to change some common settings.

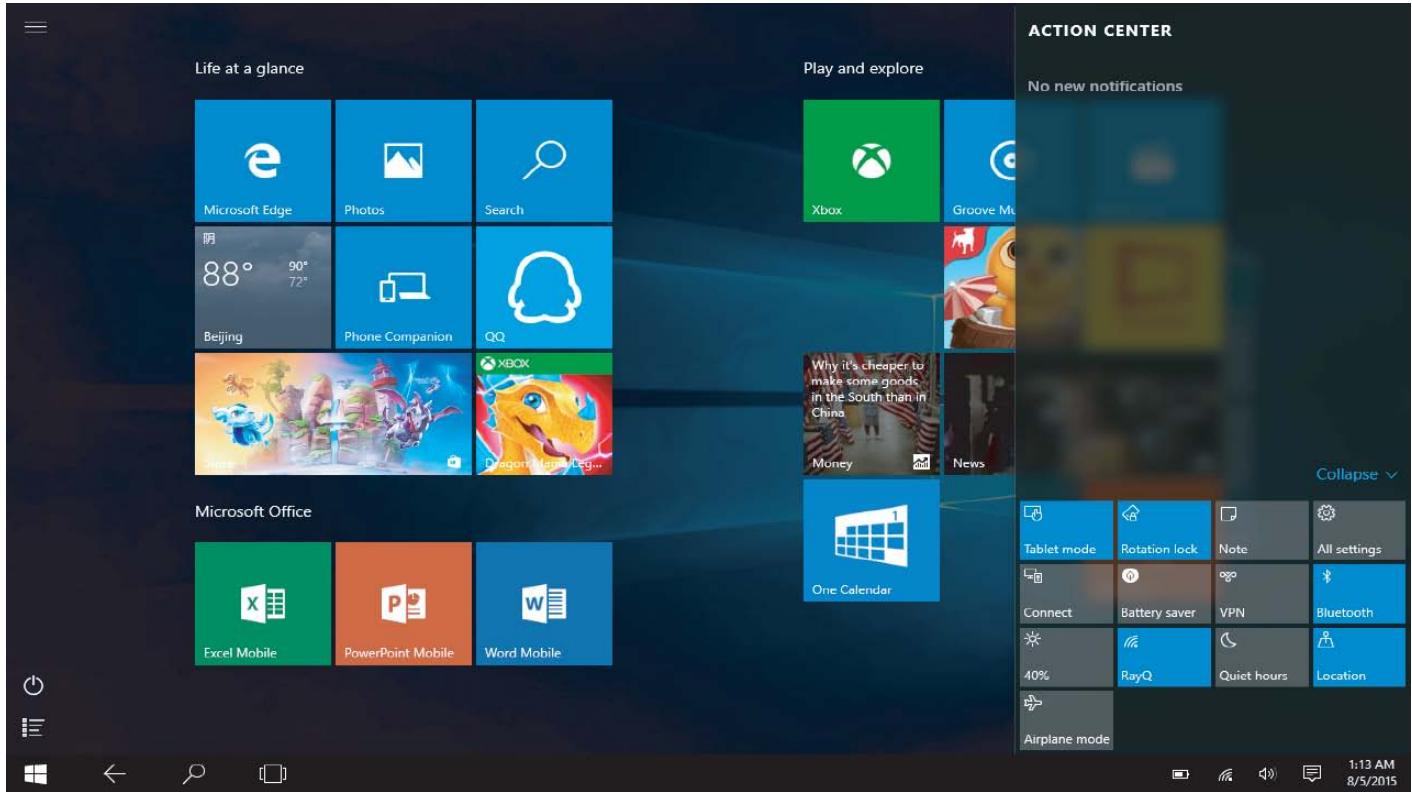

From the **Action Center**, you can turn **Airplane Mode** on or off. When **Airplane Mode** is on, all Wi-Fi and other connections are disabled.

One Drive

OneDrive is online cloud storage provided by **Microsoft**. When you create a Microsoft Account, you get some online storage free through **OneDrive**.

You can access **OneDrive** through the **Microsoft Edge** browser by going to <https://onedrive.com>

Sign in with your **Microsoft Account** if prompted.

By default, a local folder is also created for **OneDrive**.

You can find the **OneDrive** folder under **C:\Users\[ACCOUNT_NAME]\OneDrive** (where **[ACCOUNT_NAME]** is your username).

Task View

Task View allows you to quickly switch between and close open apps. To launch **Task View**, click the icon shown below on the bottom toolbar.



Start Screen

If you prefer using the full **Windows Start Screen** instead of the **Desktop View**, you can switch by using the steps below:

- Click on the **Windows (Start) Icon**.
- Click **Settings**
- Click **Personalization**
- Choose **Start** on the left
- To the right, turn the setting that says "**Use Start full screen**" to on.

You can also switch back the full **Windows Start Screen** to **Desktop View** by turning the option off.

NOTE: You may need to sign out and back in for these changes to take effect.

Restoring Windows

If your device is encountering errors which you have been unable to resolve, you can restore Windows to the original state.

- Click on the **Windows (Start) Icon**.
- Click **Settings**
- Click **Update and Security**
- Click **Recovery**
- Under **Reset this PC, click Get Started**

NOTE: If you want to keep any files, select **Keep my files**. If you do not wish to keep your files, or you have backed them up using an external method, click **Remove Everything**.

FAQ

1. When setting up or using the desktop version of Skype, you will need to switch the camera manually:

- Open **Skype**
- Go to **Tools -> Options -> Video Settings**
- From the "Select Webcam" drop-down menu, you can choose between either the front or rear cameras. Each camera will have a name similar to **OV2680** or **UNICAM Front / Rear** (may be different on your device)
- Select the camera you wish to use.

Note: Ensure you select the appropriate camera before making a video call.

2. Using Bluetooth to Send and Receive files:


- Click on the **Windows (Start) Icon**
- Click on **Settings**
- Click on **Devices**
- Click on **Bluetooth** and turn **Bluetooth ON**

After **Bluetooth** is turned **ON**, your tablet will begin to search for **nearby Bluetooth devices**.

NOTE: You will need to ensure that the device you wish to pair also has Bluetooth enabled and is visible to nearby devices.

- Once the search is complete, it will display available nearby devices. You can pair your tablet with another device by selecting it from the list.

NOTE: You may need to confirm a pass key on both devices to finish pairing.

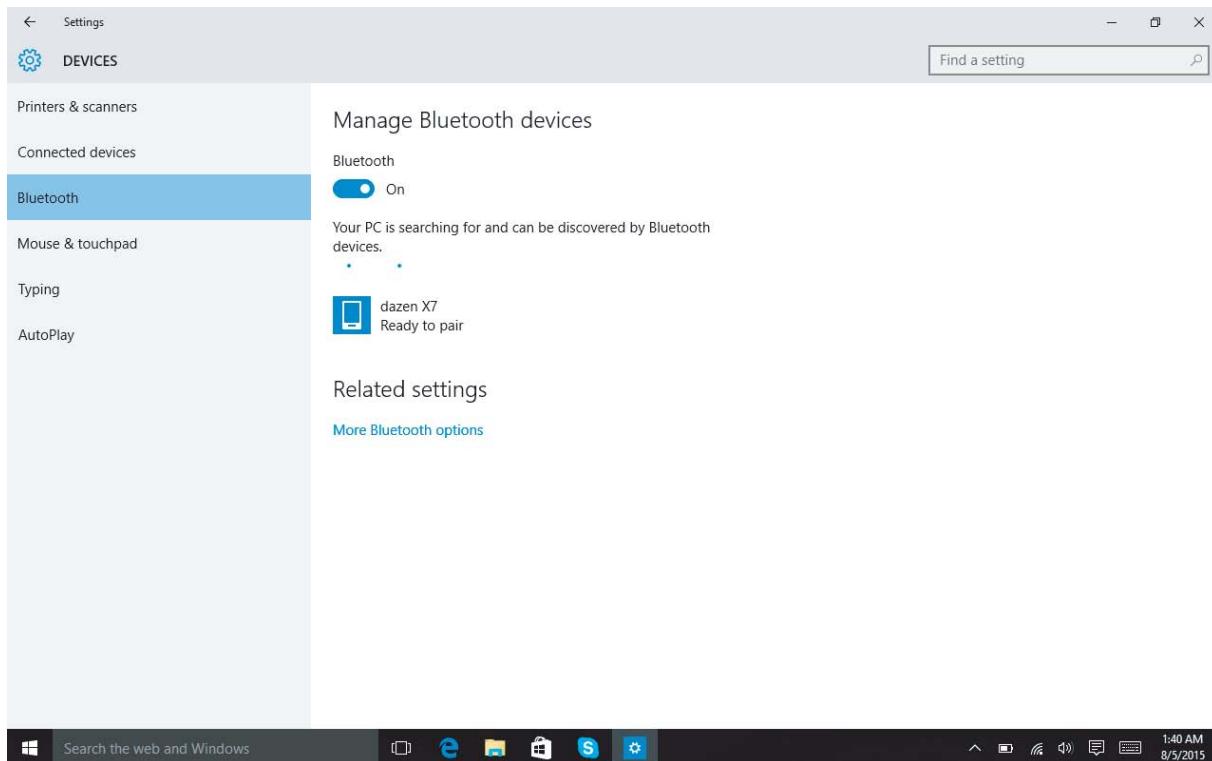

- After pairing the devices click on the **Bluetooth icon** on the taskbar, at the bottom-right.
- To transfer a file to your tablet, click on "receive a file." You will see a "waiting for connection" window.
- Go to your other device, select the file you wish to send and use the option to share or send via Bluetooth.
- Select the tablet from the list of paired devices to send.
- The tablet will begin downloading the file and will provide an option to save.

NOTE: The same process can be used to send files from tablet to other device.

3. Resizing Icons and Fonts in Desktop View:

- Click on the **Windows (Start) Icon**
- Click on **Settings**
- Click on **System**
- Choose **Display**

Here you can choose from 100%, 125%, 150% or click "custom sizing options".

NOTE: If you go over 150%, some menu options may no longer be accessible. It is recommended you use the magnifier tool instead if you need the font to be larger.

4. Shutting Down and Powering On:

When you shut down the PC, allow the PC to shut down completely. It is recommended to wait five minutes before turning it back on to ensure all internal hardware has completed the shutdown cycle.

5. Power Saver:

This device has a built-in rechargeable battery. We recommend you keep the screen brightness on medium and only turn it up when needed to conserve battery power.

To access the Power Saving options:

- Click the **battery icon** in the taskbar on the lower right
- Select "**Additional Power Settings**"
- Here you can "**Choose or Customize a Power Plan**"

6. VPN:

To setup a VPN on your device, go to **Settings -> Network & Internet -> VPN** and choose **Add a VPN Connection**.

7. Changing the Language and Keyboard Input Method:

- Click on the **Windows (Start) Icon**
- Click on **Settings**
- Click on **Time & Language**
- Choose **Region & Language**
- Choose **Add a language and select the language you want to use.**

After this, you will see the selected language in the list. Choose options to download the language pack if needed and to assign it as an input method for the keyboard.


8. Date and Time:

The correct date and time is required for many applications to function properly. Generally the date and time is set automatically when connected to the Internet. However, if this is not working properly or you are offline, you can set the time and date manually.

- Click on the **Windows (Start) Icon**
- Click on **Settings**
- Choose **Time and Language**

Here you can choose your time zone and, if needed, turn off automatic time and manually set it by clicking "change."

9. Using the Camera App:

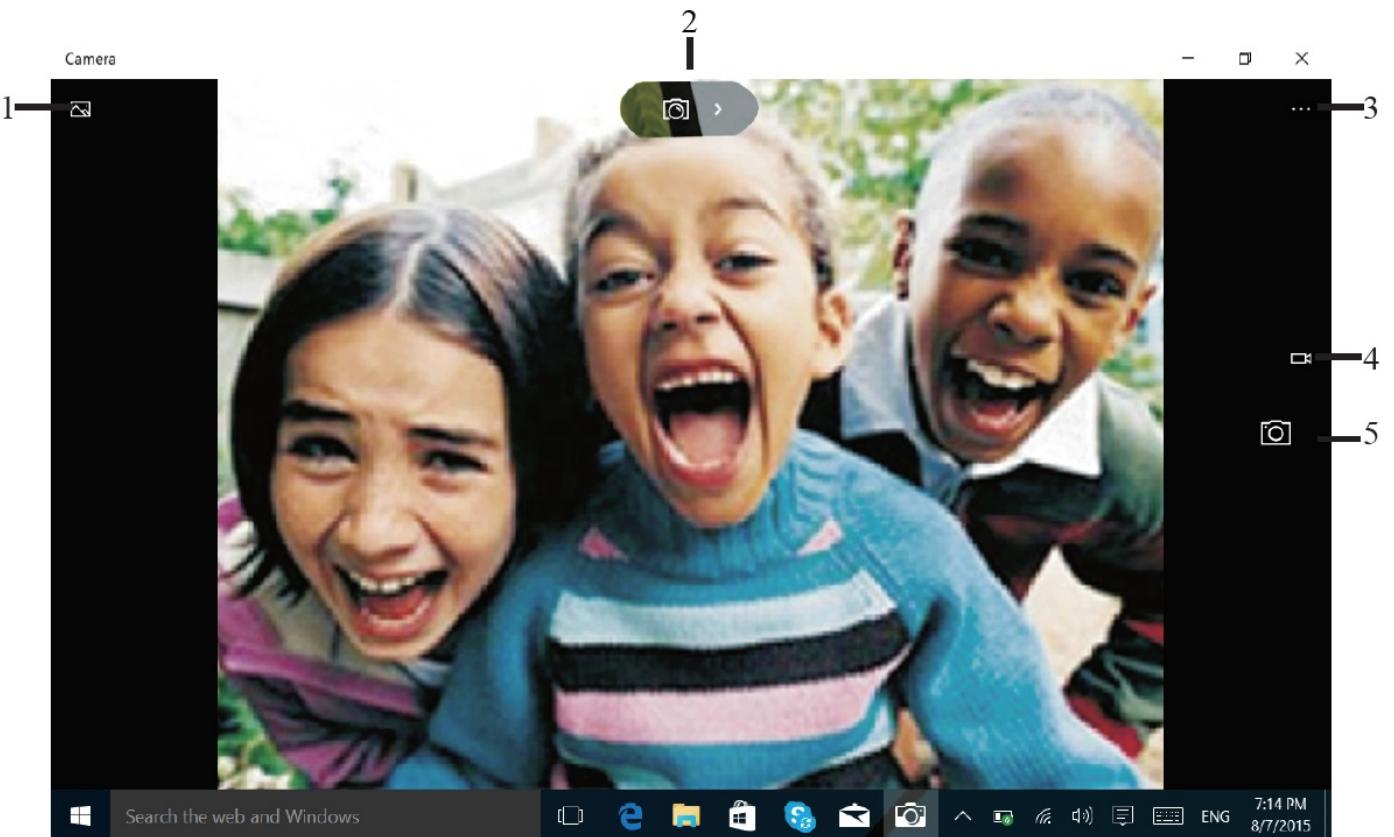

1. **Camera Roll:** Allows you to view pictures and videos recently taken.
2. **Change Camera:** Allows you to switch between the front and rear cameras.
3. **Settings:** Allows you to set a timer to take a photo or adjust other picture settings such as exposure.
4. **Change to Video mode**
5. **Tap the camera icon to take a photo.**

Specifications	
Product	10.1" Intel Quad Core Tablet with Windows 10 OS
Processor	Intel Baytrail-T 1.8 Ghz Atom (Quad Core) Z3735G/F
Operating System	Windows 10 OS
Memory	32 GB Built-in Memory
Expansion	microSD card slot (supports up to 64GB max)
Display Size	10.1" IPS Screen (1280 x 800)
Resolution	IPS Display 1280 x 800 dpi (High Resolution (G+P), Multitouch
RAM Memory	2 GB DDR3 Built-in (eMMC Fast Memory)
Input Keyboard	Detachable Keyboard with Built-in Track Pad
Wi-Fi / HDMI	IEEE 802.11 b/g/n, Built-in HDMI Port to connect to TV & Projectors
USB	USB 3.0 Port for USB Drives, HDD, and USB device connectivity
Bluetooth	Built-in Bluetooth V4.0 EDR
Audio Output Jack	3.5mm Stereo Headphone Jack
Dual Camera	Rear: 5.0 MP Front: 2.0 MP
Speaker / Mic	Built-in Stereo Speaker & Microphone
G-Sensor	360° Gravity Induction Sensor
Power Adapter	AC100 – 240V (DC 5V, 2.5 A), USB charging capability
Battery	Rechargeable Li-ion Polymer battery 6000 mAh
Playback / Standby	Music: Up to 10 hours (depends on volume and app used) Video: Up to 5 hours (depends on brightness, volume and app used) Web Browsing: Up to 6 hours (depends on brightness, Wi-Fi and apps used)
Audio Files	WAV, MP3, MP2, AAC, AMR-NB, AMR-WB, MIDI, Vorbis, RAW, FLAC, GSM, ALAC, MLAW
Video Files	Supports 1080P, MPEG 1/2/4, H.263/H.264, RMVB, WMV, MKV, MJPEG, 3GP, AVI TS
Photo Files	JPEG, BMP, GIF, PNG (Supports pictures up to 2592 x 1944 dpi)
E-Book Reader	ANSI / UNICODE TXT, EPUB, PBD, PDF, FB2, RTF

FCC Compliance Statement:

This device complies with Part 15 of the FCC rules. Operation is subjected to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

FCC RF Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.