



IMPORTANT SAFEGUARDS

Basic safety precautions should always be followed when using electrical appliances, including the following:

1. **Important: Read all instructions carefully before first use.**
2. Do not touch hot surface. Use handles or knobs.
3. Use only a level, dry, and heat-resistant surface.
4. To protect against electrical shock, do not immerse the cord, plug or the appliance itself in water or any other liquid.
5. Close supervision is necessary when the appliance is used by or near children.
6. Unplug from the outlet when not in use and before cleaning. Allow unit to cool completely before putting on or taking off parts and before cleaning.
7. If a wet sponge or cloth is used to wipe spills on a hot cooking area, exercise caution to avoid steam burns.
Some cleaners can produce noxious fumes if applied to a hot surface.
8. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
Contact IRIS USA, Inc customer service for examination, repair or adjustment.
9. The use of accessory attachments not recommended by IRIS USA, Inc may result in fire, electrical shock or injury.
10. Do not use outdoors.
11. Do not allow the power cord to touch hot surfaces or to hang over the edge of the counter or table.
12. Do not place on or near a hot burner or in a heated oven.
13. Do not use the appliance for other than its intended use.
14. Extreme caution must be used when moving the appliance containing hot oil or other hot liquids.
15. To disconnect, turn any controls to "Off" or "Stand by", then remove plug from the outlet.
16. Use only with a 120V AC power outlet.
17. Always unplug from the base of the wall outlet. Never pull on the cord.
18. Do not cook on the induction cooktop if any cracks in the glass surface occur.
Cleaning solutions or spills may leak through cracks and create a risk of electric shock. Contact IRIS USA, Inc customer service if this occurs.
19. If the cooktop surface is cracked, turn off the appliance immediately to avoid the possibility of electric shock and contact IRIS USA, Inc customer service.
20. Metallic objects such as knives, forks, spoons and lids should not be placed on the cook top to avoid heating.
21. This appliance is not intended to be operated with an external timer or separate control system.
22. Changes or modifications not expressly approved by IRIS USA, Inc may void the user's authority to operate this appliance.
23. Any other servicing should be performed by IRIS USA, Inc or an authorized service representative.
24. NOTE: This equipment has been tested and found to comply with the limits for a consumer ISM equipment, pursuant to Part 18 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
25. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - 1) Reorient or relocate the receiving antenna.
 - 2) Increase the separation between the equipment and receiver.
 - 3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - 4) Consult IRIS USA, Inc customer service or an experienced radio/TV technician for further help.
26. This equipment has been tested and found to comply with Part 18 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
27. Although current studies have shown induction cooktops pose no health problems, persons with pacemakers or similar medical devices should use caution and keep a minimum of at least two feet from the induction cooktop when using as to avoid possible interference from the magnetic field. It's advised to check with a doctor regarding your particular situation before first use.

SAVE THESE INSTRUCTIONS



IMPORTANT SAFEGUARDS

Short Cord Instructions

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. Longer extension cords are available and may be used if care is exercised in their use.
3. If a longer extension cord is used:
 - a. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
 - b. The longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled by children or tripped over unintentionally.



DO NOT DRAPE CORD.



KEEP AWAY FROM CHILDREN.

Polarized Plug


This appliance has a polarized plug (one blade is wider than the other); follow the instructions below:

To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.


THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY.

PARTS IDENTIFICATION

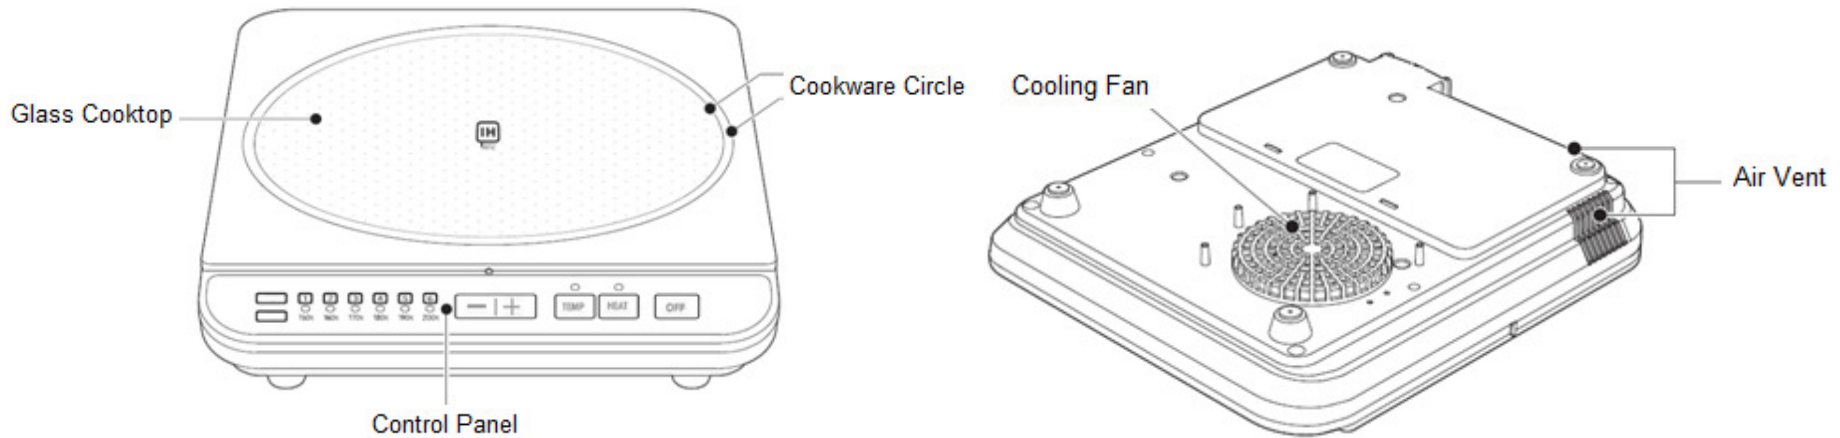

Control Panel

The **-** Button lowers the heat level or the temperature setting The **+** Button increases the heat level or temperature setting

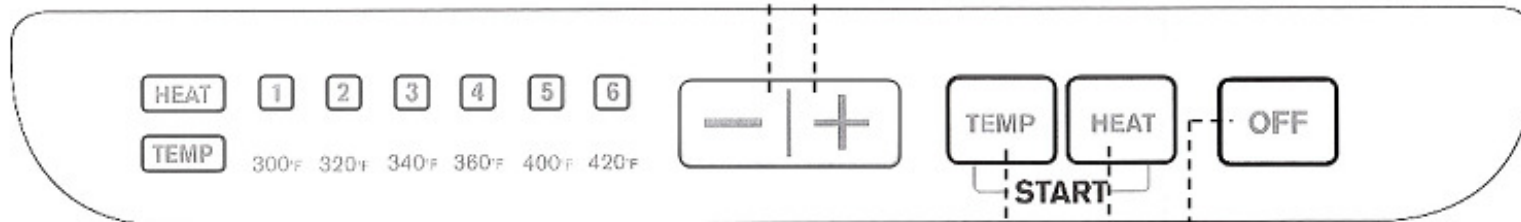

The TEMP Button starts the Temperature Mode
The HEAT Button starts the Heat Level Mode

The OFF Button cancels any Heat/Temperature setting and return to stand by mode.